

Operating Instructions.

▪ Articos 32 HD/DR+

TV.




233-31310.021


Contents

Remote control – TV functions	3	Daily handling	10 – 11	What to do if...	23 – 24
Control panel	4	Switching on/off	10	Technical data	25
Rear connections	5	Changing channels	10	Mechanical data	
Welcome	6	General menu operation	11	Electrical data	
Thank you		Adjusting the sound	11	Accessories	26
TV equipment		Adjusting the picture	11	Service addresses	27
Setup		Operation on the set	11	Code list	28 – 34
Cleaning		Modes of operation	12 – 16		
Disposal		TV mode	12		
For your own safety	7 – 8	Picture in picture	13		
Initial installation	9	EPG mode	14 – 15		
Batteries – for the remote control		Teletext mode	16		
Adjusting the remote control for operating the TV set		LOEWE Dialog	17		
Connection		Operating additional equipment	18 – 22		
Switching on		Video mode	18		
Initial installation		Logging in and connecting			
		AV equipment	19		
		Video playback	20		
		IR-Link	20		
		Operating other Loewe equipment with the remote control RC3	21		
		Switching over the remote control for operating equipment of other manufacturers			
		or for a Loewe DVD player	21		
		Using the drive buttons for VCR, DVD or for Digital Recorder Plus	21		
		Switching over the remote control – by code	21		
		– Step and set of the remote control	21		
		Switching over the remote control for operating a DVD recorder/player	22		
		Functions for the Loewe DVD player	22		
		Switching over the remote control for operating a video recorder	22		
		Functions for the Loewe video recorder	22		


Remote control – TV functions

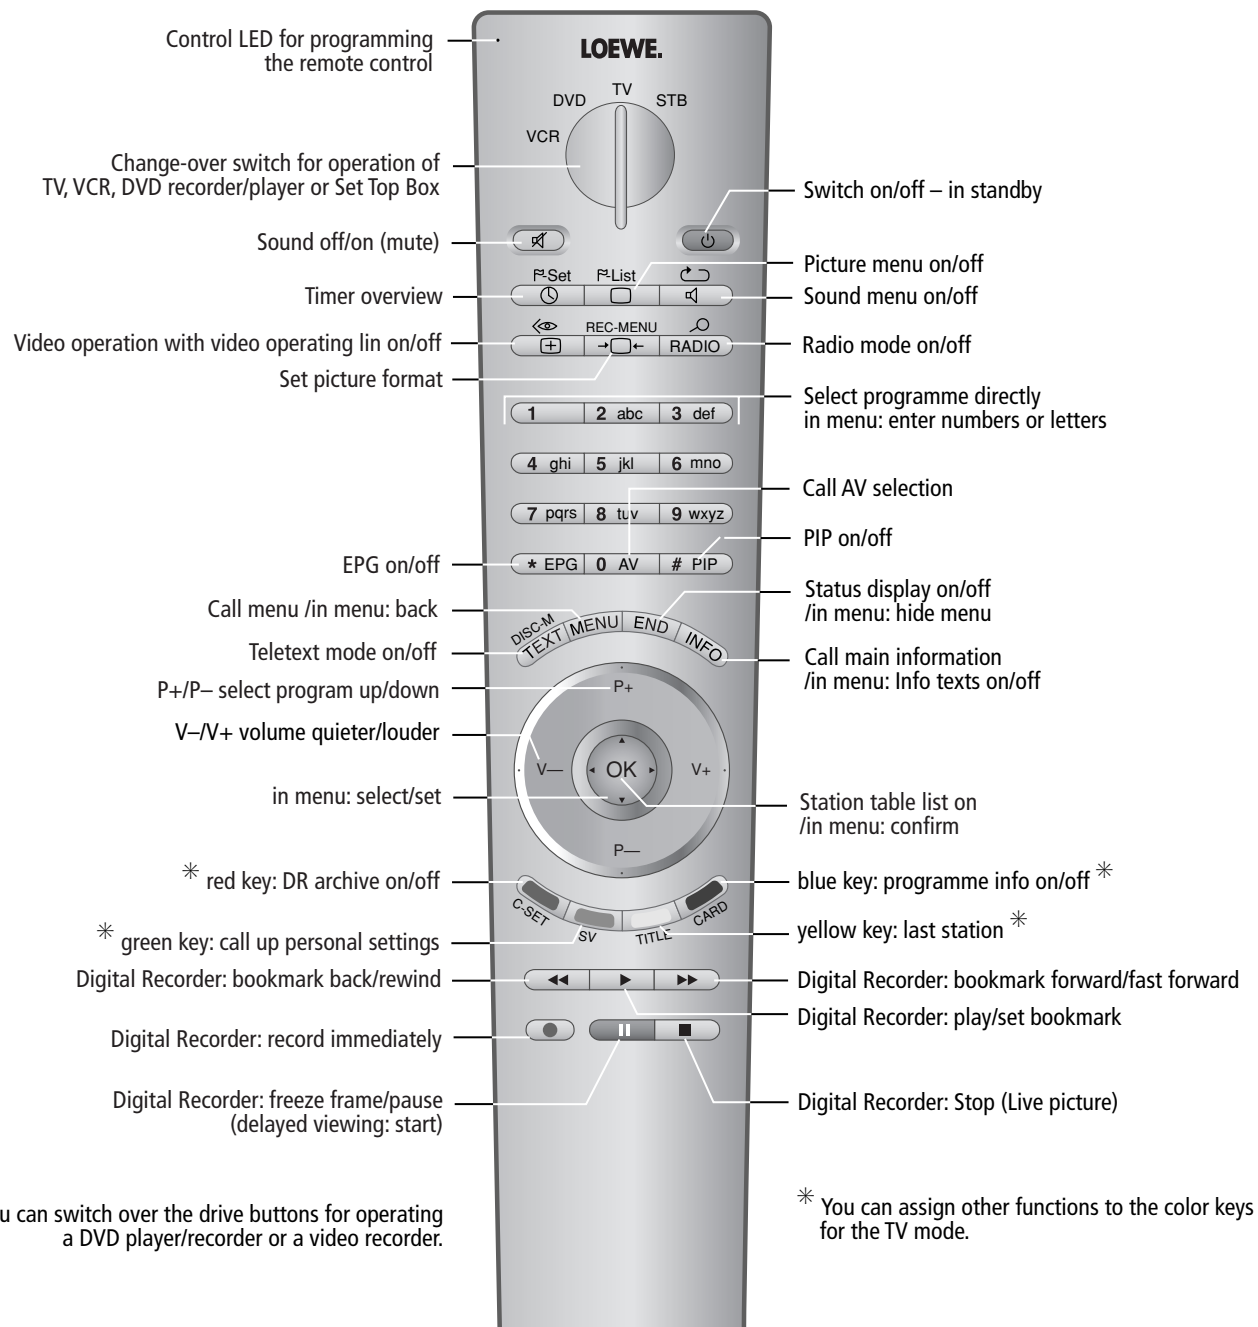

Control panel

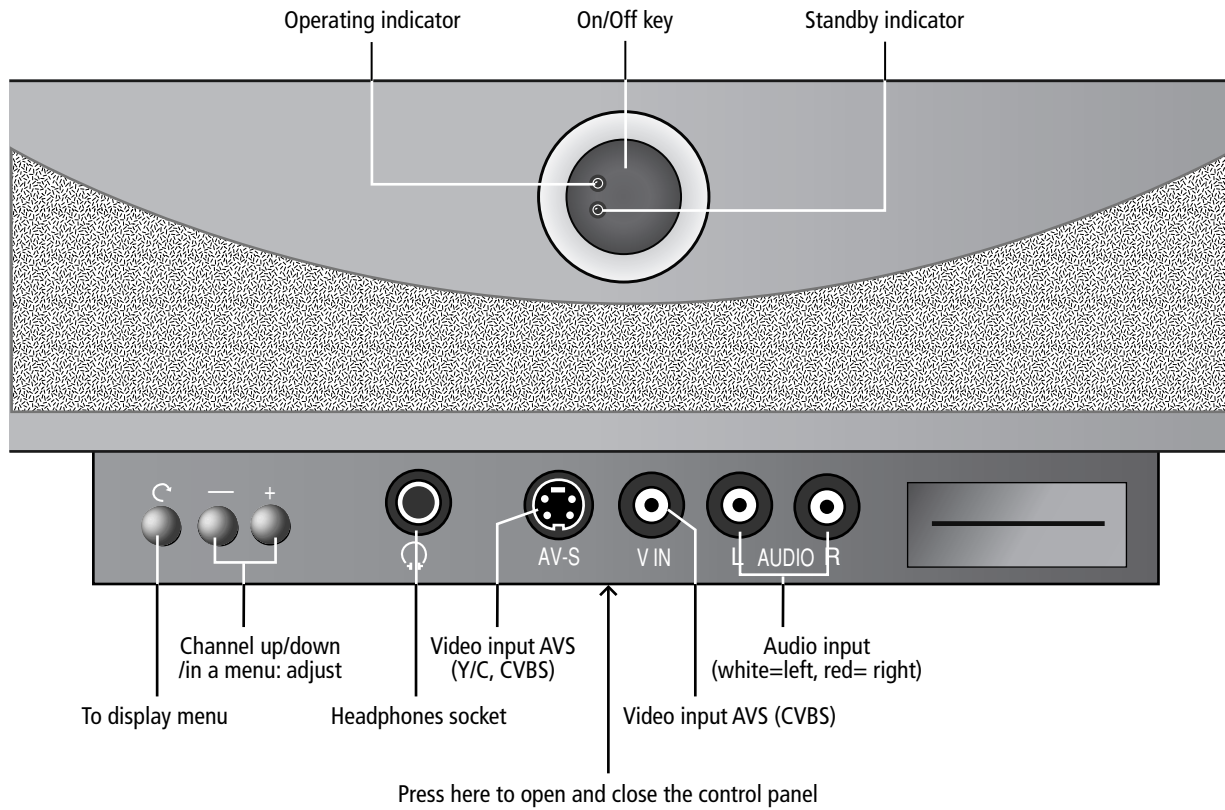

Rear connections

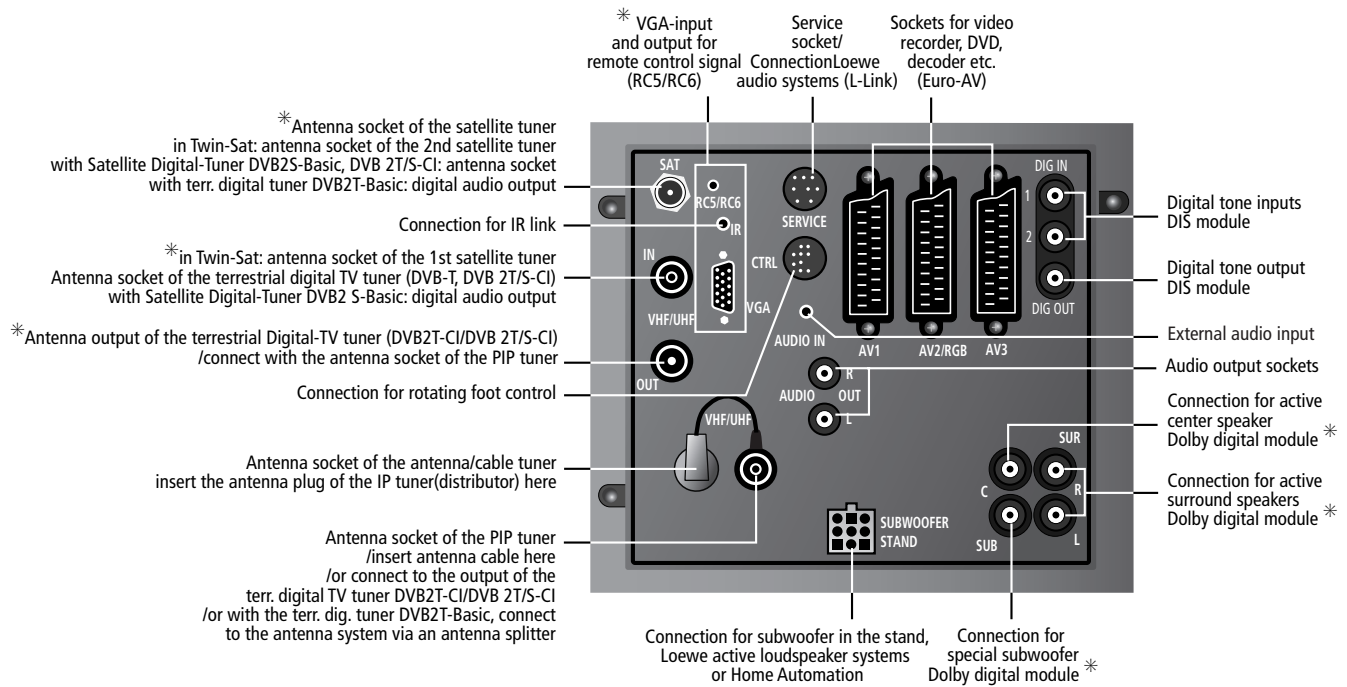

* can be retrofitted

Welcome

Thank you,

for choosing a Loewe product.
We are very happy to have you as a customer.

Loewe combines high quality in technology, design and user friendliness. This applies equally for TV, video and accessories. Neither the technology nor the design are an end in themselves but serve to give our customers pure watching and listening enjoyment. We have not allowed ourselves to be led astray by short-lived fashion trends in the design. You have, after all, purchased a high-quality piece of equipment which you don't want to get tired of looking at tomorrow or the day after.

About the set

We have designed the TV set in such a way that it is easy to operate with menus. If you need information about how to operate it, just display the info texts with the i button, you will soon get a grasp of the relationships.

You will find the answers to many technical questions in the index of your TV set. If it's a matter of operating the TV, you can access a function directly from the index. This saves you from having to read through detailed operating instructions and is the reason why this operating manual you are reading only explains the most important operating steps.

With the remote control, you can operate three Loewe units, this TV, a Loewe video recorder and a Loewe DVD player.

TV equipment

This operating manual describes the maximum equipment.

The illustrated menu contents may vary depending on the TV equipment.

Operation of the Digital Recorder and the DIS module are described in separate operating manuals.

You can find out what equipment your TV has in the main information – Technical spec. of TV set.

Setup

Have the contrast filter panel fitted to the front of the set by your dealer. Assembly instructions are enclosed with the panel.

The On/Off switch is combined in one unit with the display.

The control panel is integrated in the base of the set underneath the power switch and display unit. To move the control panel out, press it at the bottom. This unlocks and drops it down. The buttons and connections are now accessible. To close again, press the control panel up until it snaps in.

Please note that the feet of the TV set could leave marks on soft wood furniture (e.g. deal, pine, fir etc.) due to the weight and moving the set about.

The plastic material of the feet contains softeners which could in some cases etch the surfaces of furniture.

In such cases you should place a firm underlay about the same size as the base of the TV set underneath it.

Please also read and observe the safety instructions on the following pages.

Make sure no bright light or sunlight falls on the screen and impairs the picture by reflections.

Cleaning

Clean the TV set and the remote control only using with only a damp, soft, clean cloth (never use aggressive or abrasive cleaning agents).


A cleaning agent, special cloth and protective gloves are included with the set for cleaning the contrast filter screen. Spray the cleaning agent onto the screen and wipe with the special cloth until no smears remain.

For your own safety

For your own safety and in order to avoid unnecessarily damaging your TV set, please read and observe the following safety instructions:

- This TV set is designed exclusively for receiving and reproducing audio and visual (AV) signals.
- It is designed for the home or office and may not be used in rooms with high humidity (e.g. bathroom, sauna) or a high concentration of dust (e.g. workshops). If the unit is used in the open air ensure that it is protected against moisture (rain, dripping or splashing water, or dew). Do not place containers filled with water, such as vases, on the TV set. High moisture and dust concentrations produce creep currents in the set which can lead to danger of electric shock or fire.
The manufacturer's warranty is only valid for use of the TV set in the specified permissible environment.
- This set may only be connected to a power supply with the voltage and frequency specified on the rating plate using the enclosed power cable. The wrong voltages can damage the set.
- If the set is moved from a cold environment to a warm room, condensation forms on all parts of the set. Moisture produces creep currents in the set which can cause a fire. In this case, you should leave the set for a reasonable time to acclimatize (when the condensation on the screen has evaporated) before switching it on.

- Like every piece of electronic equipment, your TV needs air for cooling. Obstructing the air supply to the set can cause fires. The air vents on the back of the TV set must always be kept free. Do not leave newspapers or cloths lying on the TV set. The air supply is also impaired when the TV set is placed on a blanket or a thick pile carpet.

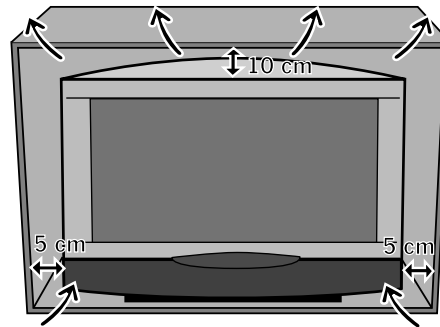


If the TV set is placed in a cabinet or on a shelf, at least 5 cm clearance at the sides and at least 10 cm at the top must be left to allow air to circulate.

Stand the TV set in a place where it is not exposed to direct sunlight or additional heating from radiators.

- Magnetic fields influence the picture quality of the TV set. Therefore, do not place loudspeakers or other magnetic sources immediately next to the TV set.

- Avoid dropping metal objects, needles, paper clips, liquids, wax or similar into the air vents at the back of the set. This causes short circuiting of the set and could start a fire. If anything should get inside the set, switch it off immediately, pull out the plug and call the after-sales service to check it.

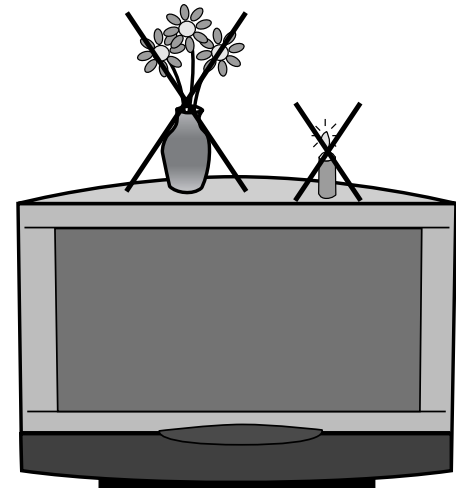


Do not place vases filled with water, lighted candles etc. on the top of the TV set.

For your own safety

- You should never attempt to remove the rear panel of the TV yourself. The set operates with high voltages which could be fatal. Leave repairs and servicing of your TV set to authorized TV technicians.
- Due to the picture tube, TV sets have their center of gravity fairly near to the front. The TV set therefore has a tendency to tip forward relatively easily which could cause injury to persons.
Only stand the TV set on a level, firm base. The set must stand on all feet. The TV should not overhang particularly when it is placed in a cabinet or on a shelf.
If the TV is placed on a stand, make sure this is larger than the surface area of the base of the TV.

When using turntables and drawer shelves, make sure they have a sufficient load capacity.

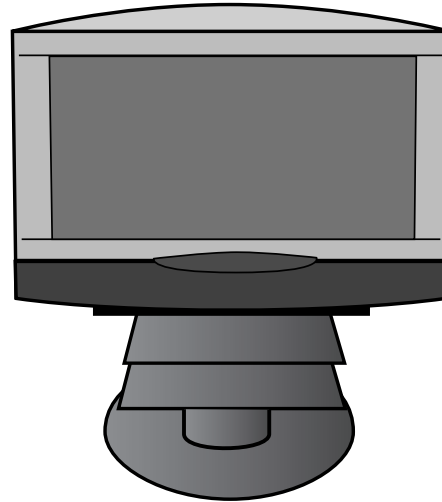

We recommend you to use only original parts, e.g. Loewe racks and stands.

If the TV set is placed on a console with castors, move the console carefully because the console and the TV could tip over. Consoles with castors may considerably reduce the stability of the sets placed on them so only use consoles specially designed and approved for the TV.
Never allow children to handle the TV set unsupervised.

Do not allow children to play close to the TV set, they could knock, push or pull it from the stand and injure someone.


- Do not place the TV anywhere where it may be exposed to vibrations because this can lead to overloading of materials.
- Do not leave the TV on unsupervised.
- Pull out the antenna and mains plugs during a thunderstorm. Surge voltages from lightning strikes can damage the set both through the antenna system and the mains. You should also pull out the antenna and mains plugs during long periods of absence.
- The mains plug of the TV must be easily accessible so that it can be disconnected from the mains quickly at any time.
- Lay the power cable so that it cannot be damaged. The power cable may not be kinked or laid over sharp edges, and may not be walked over or exposed to chemicals; the latter applies for the entire TV set. A power cable with defective insulation can lead to electric shocks and is a fire risk.
- When you pull out the mains plug, do not tug the cable but hold the housing of the plug. The cables in the mains plug could be damaged and cause a short circuit the next time it is plugged in.

Initial installation

Remote control

Batteries

To insert or change the batteries, press the point marked by an embossed arrow. Push the cover of the battery compartment down and remove it. Insert the batteries of the alkaline manganese type LR 03 (AAA) with the correct polarity (+/-).

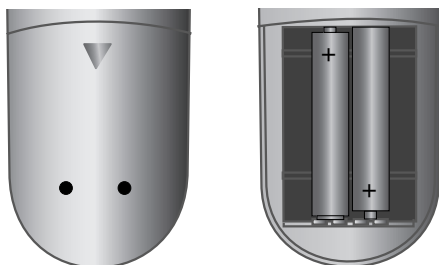


Then push the cover back on.


If the batteries are almost empty you will see the "low battery" message on the TV screen when you operate it. The batteries must then be changed.

Note on disposal of batteries:

The original batteries do not contain any pollutants such as cadmium, lead and mercury. Used batteries do not belong in the domestic waste. They must be taken to the appropriate collection points according to the national laws. Ask your dealer.

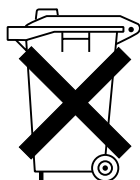

Adjust the remote control for operating the TV set

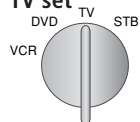

Turn the rotary switch to "TV".

See page 21 follow. for how to switch over the remote control for operating other equipment.

Connection

Mains

Connect the TV set to a 230V/50–60 Hertz outlet.

Antennas


Remove the rear cover from the unit by pulling it backwards. Clip the cables into the cable holders and feed them downwards, through the opening. Connect your antenna or cable system to the antenna socket of the PIP tuner.

Plug the antenna plug protruding from above the PIP tuner into the antenna socket of the VHF/UHF tuner.

If your TV set is equipped with the terrestrial digital tuner 2 T CI or 2 S/T-CI, connect your antenna system to the top socket of the DVB-T module (IN) and connect the bottom socket (OUT) to the antenna input of the PIP tuner. If when equipped with the terrestrial digital tuner 2 T-Basic a common antenna is used for digital and analog signals, connect the terrestrial digital tuner and the analog tuner to the antenna system via an antenna splitter.


If equipped with one or two satellite tuners, connect the SAT antennae to the SAT sockets (see figure on page 5).

Replace the cover.

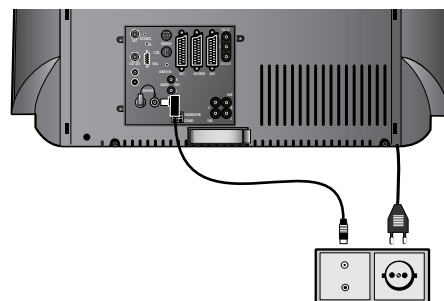

Switching on

 The display and the On/Off switch are combined in one unit.



Press the On/Off button so that it is pressed in.

Initial installation

Automatic programming of the TV set is started the first time you switch it on. Follow the menus. First you have to select the menu language for your set. Then you specify which antenna you have connected to your TV and in what country you are using it. Then you start the station search. The TV set searches for, stores and sorts all the stations which your antenna system receives. You then see a list of the stored stations in which you can mark your favorites. Finally log in your video recorders, decoders, Loewe audio system and Home Automation with the connection wizard and connect these to the TV set according to the illustrated connection plan.



Pressing the **OK** button in the direction of the arrow to select the settings



....confirm the settings with **OK**. You then move on to the next menu...



...press this button if you want information about the settings.

You can repeat initial installation at any time, e.g. after moving house. Call the index in the main information (i button). Then select the item "Repeat initial installation". Then start "Initial installation" with **OK**.

Daily handling

Switching on/off

Your TV set is equipped with an eco-standby power supply unit. The power consumption drops to low power in standby mode. If you want to save even more energy, switch the set off with the On/Off switch. However, please note that EPG data are then lost and timer recordings programmed on the Digital Recorder set will not be carried out.

However, please note that EPG data will be lost and programmed timer recordings for the Digital Recorder will not be performed.



If the TV is switched on, you can switch it off with the blue On/Off button on the remote control. The red standby LED on the set lights up. If the green LED also lights, a timer recording is in progress on the VCR or built-in digital recorder, EPG data is being acquired or radio mode without screen display is active.



From standby it is best to switch back on with the blue On/Off button or with a numeric key (station 0 – 9). The green operating LED then lights up.

 


When you switch on the TV with **OK**, you see the station table and can choose a station.




Switch on in the radio mode.

The display and the On/Off switch are combined in one unit.



 None of the indicators lights up when you switch off the TV set with the On/Off button on the set.



Switch on the TV set with the On/Off button on the set when it is switched off.

Changing channels



Channels up/down (only favorite stations if these are shown in the station table).

With the numeric keys on the remote control

The set has a dynamic memory with 220 (with DVB 1470) memory slots. If up to 9 stations are stored, you only need to enter one number, up to 99 two numbers, up to 999 three numbers and above 999 four numbers (please look in the station table to find out how many stations have been stored).

1-digit stations

Keep the button 0 – 9 pressed for one second, the channel then changes immediately.

Or press the button 0 – 9 briefly, the channel then changes after 2 seconds (changes immediately if only 9 stations are stored).

2-digit stations

Keep the second numeric key pressed for one second, the channel then changes immediately. Or press both numeric keys briefly, the channel then changes after 2 seconds (immediately when up to 99 stations are stored).

3-digit stations

Keep the third numeric key pressed for one second, the channel then changes immediately. Or press the three numeric keys briefly, the channel then changes after 2 seconds (immediately when up to 999 stations are stored).

 
4-digit stations

Press the four numeric keys briefly, the channel then changes immediately.

Depending on how many stations have been stored, you can place one or more zeros in front of the number and select for example station 7 = 07 or 007 or 0007.



long



short long



short short long




all short

With the station table



Call the station table with **OK**

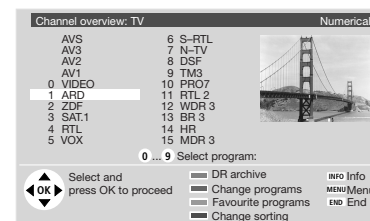

Mark the station (if possible the marked station is shown in the PIP picture)



Mark with numeric keys



Call the marked station



Sort alphabetically/numerically (blue button)



Display favorite stations only (yellow button)

Call Audio/Video programs – AV selection



for playing AV equipment (see also page 20).



Select AV socket or VIDEO for VCR station.

Daily handling

General menu operation

With the TV and picture menus, we show you how to navigate within the menus. Which buttons you can use for operation is shown at the bottom of the appropriate menu.

MENU Call the TV menu

OK Mark (white field)

OK Call the menu with **OK**

OK or ▶

Grey menu items cannot be selected

OK Set (setting value and bar)

OK Mark other menu items

OK Select (frame)

INFO Show/hide info texts

MENU Back to the previous menu level

END Hide all menus

TV menu

- Standard settings
- Picture
- Sound
- zap2text
- Connections
- Settings

INFO Info
MENU Back
END End

Picture

- Contrast
- Colour 32
- Brightness
- Picture format
- Sharpness
- Tint
- other ...

INFO Info
MENU Back
END End

Picture

- other ...
- Picture adjustment
- DNC off **on**
- DMI Plus
- AMD

INFO Info
MENU Back
END End

Picture

- other ...
- Picture adjustment
- DNC
- DMI Plus
- AMD

i DNC (Digital Noise Control)
With DNC you can eliminate or reduce picture interference, e.g. due to poor reception.

Adjusting the sound

Set the volume

OK Set the volume

other ...
Volume 36

with "others ..." you can select and ...

OK ... set other sound settings.

Listening mode Stereo Panorama Dolby Virtual
Loudness
Sound adjust
Volume

Mute

Sound off;
Sound on: press button again or adjust volume

Sound off **Sound on**

Other sound settings:

Call sound menu, or call TV menu using **MENU** ...

OK Mark "Sound"

OK and call with **OK**

OK Mark sound function

OK Set/select

TV menu

- Standard settings
- Picture
- Sound
- zap2text
- Connections
- Settings

Sound

- Sound via
- Listening mode Stereo Panorama Dolby Virtual
- Sound adjust
- Treble
- Bass
- Loudness
- other ...

Sound settings: Sound via the loudspeakers of the TV set or another system. Sound adjust, treble, bass, loudness and balance. Sound select for loudspeakers and headphones, AV output sound. Volume of the headphones, automatic volume and max. volume.

Adjusting the picture

Call the picture menu, or call the TV menu using **MENU** ...

OK Mark "Picture"

OK ... and call with **OK**

OK Mark picture function

OK Set/select

TV menu

- Standard settings
- Picture
- Sound
- zap2text
- Connections
- Settings

Picture

- Contrast
- Colour 32
- Brightness
- Picture format
- Sharpness
- Tint
- other ...

Picture settings: contrast, color, brightness, picture format, focus, color tone, picture adjustment, noise reduction (DNC), movement compensation (DMI), automatic picture size adaptation (AMD) and rotate picture.

Operation on the TV set

Changing channels on the TV set

+ Channel up

- Channel down

Volume, contrast and color

Press the function button until the desired function is marked

+ More volume, contrast or color

- Less volume, contrast or color

Mark (C)
Change (+, -)

Direct control on TV

- Volume 16
- Contrast
- Colour
- Station +/-
- Service

Modes of operation




TV mode

In initial installation and daily operation, the TV set is in TV mode. This is also the case when none of the other modes of operation such as Digital Recorder, EPG, Teletext, PIP, Video or Radio is selected.

Every one of these modes of operation has a menu which you can call with the **MENU**-button and with some color button assignments.

 
Function of the color buttons in TV mode

You can assign the functions of the four color buttons yourself. The following functions are set at the factory:


-  red: call DR archive
-  green: call standard values
-  yellow: call last viewed station
-  blue: call station info

You can assign other functions to the buttons in the TV menu "Settings" – "Function keys".

Status display



Main information

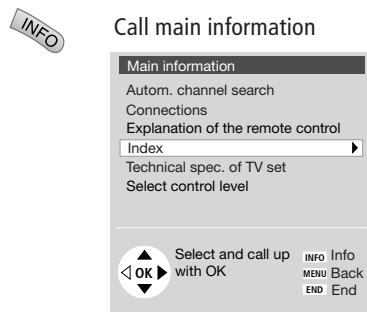


The **explanation of the remote control** shows the function of every button in different modes of operation of the TV set and the remote control.

The **index** answers many questions regarding all aspects of the TV. If it is a question about the operation, you have direct access to the operating function from the index.

Loewe TV sets are supplied in different models with different equipment. You can find out what equipment your TV has under the menu item "**Technical spec. of the TV set**".

When you have made all the settings and connections, you can switch over to "**Simplified control**" using "Select Mode". Then the "Settings" and "Connections" can no longer be launched in all modes of operation menus. Switch "Simplified control" back off when you want to make settings.

TV menu

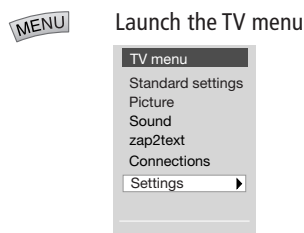

Standard values

You can save the setting for picture and sound you have made in this menu and launch them again later.

Connections

You will find information about this in the chapter "Logging in and connecting AV equipment" on page 19.

zap2text

Some stations use this service. If teletext pages are referred to during a program, the TV set saves and/or displays this page number. You call the teletext page with the **TEXT** button from the display during the program or from this menu.

Some **settings** in the TV menu:

Child lock

Use the child lock if you want to prevent your children watching after a certain time, once or daily, all or certain programs.

On-screen displays

You can define duration and position of the displays, the content of the program and status display and activate or deactivate zap2text as a display.

Timer functions

You can have your TV switch on and off at specific times or have yourself reminded by a signal tone.

Time and date

When you receive teletext, the TV records the right date and time settings. The time serves as information for timer recordings, timer functions and EPG. If you do not receive teletext you should set the date and time and not switch the TV off with the mains button as the settings will then be lost.

Language

If "your" menu language is not set, you have to select the "Language" menu in a language you cannot understand:

Press the **MENU**-button (TV menu), mark the last menu item (settings), press the **OK** button and mark the last menu item (Language) under "other ..." and press the **OK** button.

Now select the right language and confirm with **OK**.

Modes of operation


Picture in Picture (PIP)


Standard PIP functions:

In standard PIP, a PIP picture is displayed in the current TV picture. The frame round the PIP picture is initially green in standard PIP.

 # PIP Show/hide PIP picture


PIP picture as still frame

 The frame around the PIP picture must be green. If it is not, press the green button.


 Press the red button to freeze the PIP picture.

Press again – moving picture.


Changing the station of the PIP picture

 The frame around the PIP picture must be green. If not, press the green button.

Then select the station as normal.

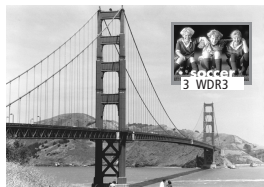

Changing the station of the TV picture

 The frame around the PIP picture must be white. If it is not, press the green button.

Then select the station as normal.



Station scan



The frame around the PIP picture must be green. If it is not, press the green button.



Start the station scan with the blue button. The PIP frame turns blue.

The programs now change automatically. Stop the program scan with the blue button. The PIP frame turns green again.

Changing PIP picture/TV picture



The frame around the PIP picture must be green. If it is not, press the green button.



Change the pictures with the yellow button.

Position of the PIP picture



Call the PIP menu with the MENU-button.



Select "Position"



Select the symbols for the position



Hide the PIP menu

Resolution of the PIP picture



In the PIP menu, select "Resolution"



Set to "large" or "small".

Split screen



In the PIP menu, select "Type"



Select the symbol for Split Screen.




Hide the PIP menu

The picture on the right is the PIP picture and has no sound. The vertical line represents the color of the frame around the PIP picture.

Setting "iPIP"

Switch on PIP, call the PIP menu with the MENU button.

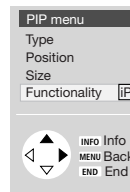

Mark "Functionality"



Select "iPIP"



Hide menu

iPIP function:

In iPIP the TV picture currently displayed becomes the PIP picture. Select another program for the TV picture and keep your eye on the PIP picture. In this way you can temporarily "ban" commercials or parts of programs to the PIP picture. In iPIP, the frame round the PIP picture is orange.

 # PIP PIP picture on/off

The PIP picture becomes a TV picture again when you switch off PIP.

Modes of operation


EPG mode

EPG is the electronic station guide for TV programs. With this system, you can easily find the programs that interest you (sorted according to time, day, topics and programs). You can memorize programs and program recordings.


A wizard is activated the first time you use EPG (not with DVB) which guides you through the necessary settings. Then run the data acquisition (see next page).

Using the EPG

★ EPG Switch EPG on/off

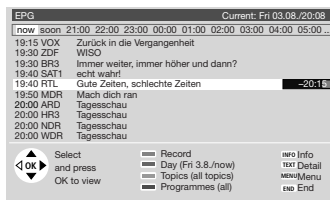


The first line is framed initially in green. The **green frame** stands for **time and date**, with the green button you switch between time and day or, if the frame has a different color, back to the green frame. With the arrow buttons ◀ ▶ you select: now, later, the time or day for starting stations. The list of stations below is updated accordingly. With the buttons ▼ ▲ you mark a station you want to watch (now running), memorize or record.

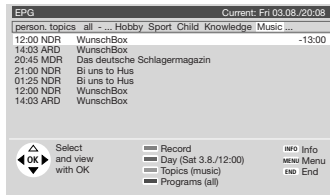

The frame turns yellow when you press the yellow button. The **yellow frame** means you can **select topics**. With the arrow buttons ◀ ▶ you choose between personal topics, all topics and the individual main topics such as Film, News, Show, Music etc. The list of stations below is updated

accordingly. With the ▼ ▲ buttons, you mark a station you want to watch (a program currently running), memorize or record.

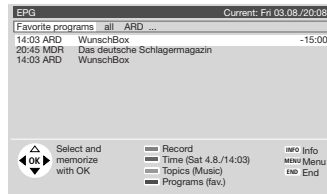

The frame turns blue when you press the blue button. The **blue frame** signifies **station selection**. Use the arrow buttons ◀ ▶ to choose between your favorite stations, all stations or the station just set. You can select another individual station by moving to "..." with ▶, marking a station in the list and storing it with OK.

The respective current settings are shown next to the operating notes for the color buttons.

Direct input of time

You can also enter the time directly with the numeric keys of the keypad. After entering the first digit, the time is displayed first next to the symbol of the green button by asterisks and is then replaced by the entered numbers, e.g. 2100. If the entered time has already passed, its entry is used for the following day.

Watch or memorize a station

You memorize the station marked with the ▼ ▲ buttons by pressing the OK-button. A + sign is set in front of the program title for noting. At the start of the broadcast, this program is switched off or you see a message.

Programming a VCR or Digital Recorder (DR) recording

You prepare the program marked with the ▼ ▲ buttons for recording by pressing the red button. For "Timer recording" select DR (Digital Recorder") or VCR and whether a single recording is to be made or a serial is to be recorded. A red dot is displayed in front of the program title. If a program is already marked by a red dot, you can delete the timer data again (the red dot disappears).

Calling detailed information

If detailed information about the selected station is available, you will see the TEXT-button displayed additionally. You can call the detailed information with this button.

Other functions in the EPG menu:

Call the EPG menu with the MENU key.

List of memorized programs

You will find the stations you have memorized in a list, also DVB radio stations.

Switch on TV at memo

You can have the TV switched on automatically from standby at the time of the memorized program. If you are not in at the time, a safety prompt makes sure the TV switches off again after 5 minutes.

Indicate/start memorized station

If the TV is already on when the memorized program starts you can have the start of the program indicated or the TV switched over immediately.

Short info lines

Short infos are broadcast for many programs. Set how many lines this information should have or switch the short info lines off.

EPG entry

If you want to start EPG operation, you can retain your last settings for topic and program selection or start with all topics and all programs.

Modes of operation

EPG settings

If you want to change the provider or want to have other programs evaluated, you can do this in the EPG menu.


Provider search



EPG on/off




Call EPG menu

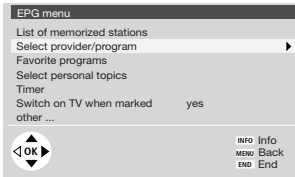

Mark "Provider/Select station"



Call

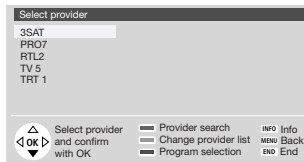

Start provider search (green button). This may take some time.



Mark the provider




Save the provider

This is followed by a station search and a list of TV stations is displayed which transmit data. Move on to the provider selection with the OK-button.

If the stations offered are what you want, move on to the station selection with the blue button.

Performing station selection for EPG

Select the stations here for which information is to be collected.

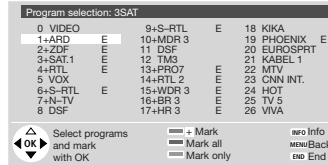

Stations marked by + are favorite stations. The provider supplies information for stations marked by E (terrestrial, cable and analog satellites) and D (digital), these are already marked (blue letters).



Mark the station/Remove the marking



red: Only mark favorite stations



green: Mark all stations



yellow: Only mark this station



Back to the EPG menu


Switching data acquisition on/off



Mark "Data acquisition" in the EPG menu under "other"



Select data acquisition off/on

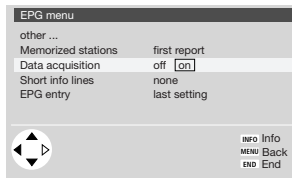


If, for example, you do not receive any EPG providers (analog TV) and no DVB is installed in the TV set, you should switch off the data acquisition.

Performing data acquisition

The data must be collected first after these settings or every time the TV is switched off. To do this, select the program which you have defined as a provider and leave it switched on for about one hour or switch the TV set to standby mode. The green LED lights up in addition to the red LED after about two minutes. Data acquisition takes about one hour, in sets with a DVB module a little longer. The data are automatically collected between 2 and 5 in the morning when the TV is switched off to standby.

Defining personal topics

You will find the programs that interest you faster when you define your personal topics. Mark "Select personal topics" in the EPG menu and put together your list of personal topics.

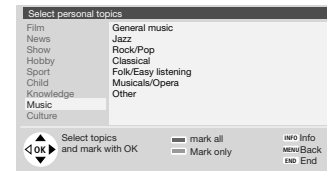

TV radio mode

Switch the TV radio mode on and off by pressing the **RADIO** button. If at least one satellite tuner and possibly a DVB module are installed in your TV set, you will be able to receive radio stations. If none of these additional modules is installed, you can only select the audio inputs and play back through these with the station table or the **▼ ▲** buttons.

Modes of operation

Teletext mode

Teletext transmits information such as News, Weather, Sport, Program Previews and Subtitles.

 
TEXT Teletext on/off





Many stations use the TOP operating system, some use FLOF (e.g. CNN). Your TV supports both these systems. The pages are divided into general topics and topics. After switching on the teletext, up to 3500 pages are stored for fast access.


Selecting pages with the colored buttons


The colored bars (in TOP) or the colored writing (in FLOF) in the last line but one show you which colored buttons to use to scroll to general topics and topics.



 red: back to previously viewed page (not with FLOF)

 green: forward to next page (not with FLOF)

 yellow: to the next topic (only in TOP and FLOF)

 blue: to the next topic (only in TOP and FLOF)

More functions for page selection



 
Mark a specified page number on the page (Page Catching)




Launch



Scrolling in stored sub-pages. In the bottom line you will see which sub-pages you can already launch.



Launch contents page 100

 

The TOP table is a general list of teletext. You can only launch the table on channels which use the TOP operating system.



Launch the TOP table



Mark a general topic



Select the Topics column



Mark menu items



Display page

1 2 7 pqrs Enter the page number directly

Displaying teletext pages

0 AV


Stop self-turning pages (HOLD)

9 wxyz

zoom: top half – bottom half – normal size

PIP

TV picture on/off (Split text)

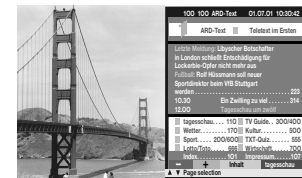


Programming timer recordings

If the remote control is set to "TV" (no equipment combination), you call the program pages of the current station in teletext mode with the Record button **•**. Select the program you want to record with **▼ ▲** and confirm with **OK**. For "Timer data" select DR (Digital Recorder) or VCR and whether a single recording is to be made or a serial is to be recorded. Confirm with **OK**.

Teletext menu

MENU

Launch teletext menu

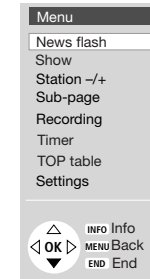

Here you will find functions such as "New message", "Reveal" hidden information, switch to other, enter 4-digit sub-page number directly, program video timer recordings via teletext and launch the Timer overview.

In the settings you will find menus to define the preview pages, subtitle pages and personal teletext pages.

LOEWE Dialog

The TV has simplified operation for the most important functions, the LOEWE Dialog. A few key clicks give you the information you want.


You should have already made a few settings before using the LOEWE Dialog to provide selection possibilities.

You should have made the EPG settings described on page 15 and run the EPG data entry. The Digital Recorder archive should also already contain recordings. You should have defined a few personal teletext pages. In all these cases you then have a useful selection. No LOEWE dialog is displayed with NTSC reception.

You call the LOEWE Dialog with the arrow buttons on the remote control when no menu is displayed.



Press one of the arrow buttons ▲ ▼ ◀ ▶ for about 1 second.

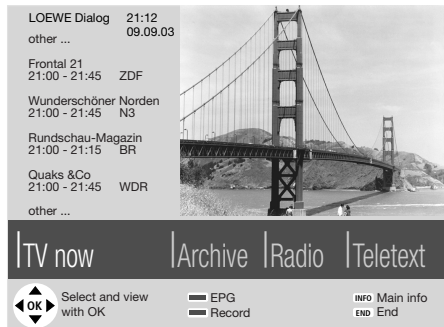

The TV program just selected is shown as a small picture (the live picture).

The blue bar shows you the selectable functions. The function on the left is active. You can move the function you want to perform to the left or right with the arrow buttons ◀ ▶. Above the selected function you see a selection which you can navigate with the arrow buttons ▲ ▼ and view with **OK**.

The selection of programs currently running acquired by the EPG system is displayed in **TV-now**. If no EPG is received, a **program info** of the station currently being received is displayed.

With **Archive** – the selection of recorded programs in the DR archive is displayed. If no Digital Recorder is installed, the **Index** is displayed in place of the archive, that is the index with the selection of initial letters.

With **Radio** – the selection of programs of the satellite radio is displayed. If you have switched over to TV radio mode, LOEWE Dialog cannot be called. If you do not receive satellite radio (no satellite tuner/DVD module), **Favorites** are displayed in place of Radio, that is favorite programs you have defined.

With **Teletext** – the selection of personal teletext pages is displayed.

This is how you select with the example of the "TV now" function:

Mark the desired station with the arrow buttons ▲ ▼, the name turns blue. Other stations can be displayed with "others...". Press the **OK** button to watch the station.


You can call LOEWE Dialog with the ▲ ▼ ◀ ▶ buttons so that the desired function is ready for selection on the left:




Call TV now ▲




Call Archive ▼

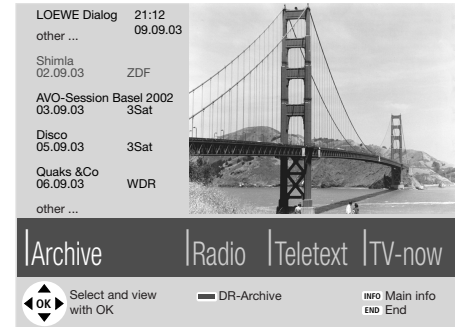

Call Teletext ◀

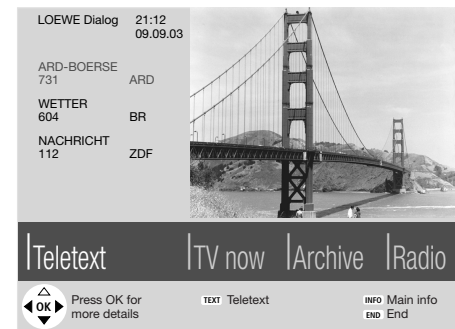

Call Radio ▶

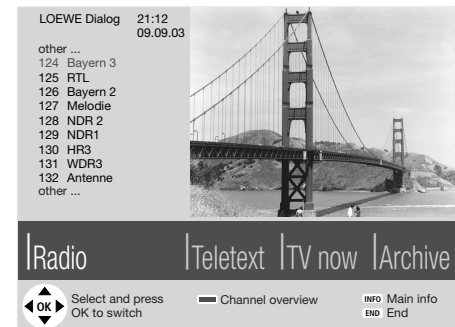

Operation of additional equipment

Video mode


You can operate Loewe video recorders and DVD players with the video control bars even if they are hidden. The VCR's must be connected to the Euro AV sockets (Scart) and logged in under the "Connections" menu.

Digital Link must be switched on on the Loewe video recorder. Only then can you use the control bar. You also need Digital Link or Digital Link Plus for timer recordings of satellite programs controlled by the TV set.

You can display up to three control bars but they are only displayed by logged in VCR's and DVD players.



Show/hide video control bar:

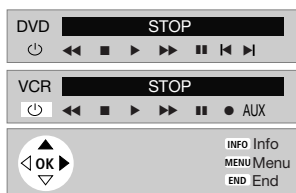

Select the video control bar if for example several VCR's or a DVD player are connected.



Select function



Switch VCR/DVD on/off



Select video input (Euro-AV socket) on the VCR



Rewind (only for VCR) or Scan in rewind



Stop (STOP)



Playback (PLAY)



Fast forward (only for VCR) or Scan in fast forward



Pause (PAUSE)



Next chapter (only for DVD)



Previous chapter (only for DVD)



Record



Perform selected function

When you start a recording, the program you have just selected is recorded. You cannot switch over to another channel, it is locked. You can only switch over when the recording has finished.


Exceptions:

1. You have installed several tuners (not PIP tuners) in the TV set, then you can watch another channel with the second tuner.
2. You can also watch the signal via an AV connection (e.g. DVD player or a second VCR).
3. In a VCR with Digital Link Plus the VCR tuner is used for the recording (not for satellite programs).

Video menu



Show the Video menu

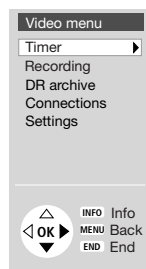

The Video menu provides you with the following options:

You can change and delete timer data or program new recordings in the "Timer" menu. The "Record" menu gives you the option for timer programming by EPG, teletext or manually.

You can call the archive list with "DR Archive" if a Digital Recorder is built in.

In the "Connections" menu you can log other AV equipment on or off. In the "Digital Link Plus transfer" menu the station data of the TV set (not satellite stations) are transmitted to the Digital Link Plus VCR.

In the Settings menu you can enter the record lead and follow on time and serial recording tolerance.

Digital Link Plus VCRs have the possibility for transferring the station data from the TV set to the VCR via the Euro-AV cable (not for satellite stations). Every time you change the station memory of the TV, you are asked whether you want to make a data transfer.

The receiver unit of the VCR is always used for recording with a Digital Link Plus video recorder (not satellite stations) and the tuner of the TV set is available for watching TV.

Loewe VCRs also have **Digital Link**, a system for controlling Loewe VCRs via the Euro-AV cable. If the Loewe VCR only has Digital Link, the TV tuner is used for recording. If you have installed your Loewe VCR in a concealed place, you can operate the Loewe VCR with the remote control.

Digital Link must be switched on on the video recorder.

Only use fully wired Euro-AV cables, otherwise Digital Link or Digital Link Plus will not work.

Operating additional equipment


Logging in equipment

You have already logged in and connected all connected devices (video recorders, camcorders, DVD player, DVD recorder, Loewe audio system, Pay-TV decoders, Loewe home automation, door intercom) with the connection wizard when you put it into operation for the first time. If you want to connect further or different devices, you have to call the connection wizard in the TV menu – "Connections".

Connecting video/DVD recorders

In addition to the connection via the Euro-AV socket, you also have to connect the antenna (only for antenna or cable systems) through the video/DVD recorder to the TV set. The antenna signal is then available both to the tuner in the VCR and the TV tuner.

If a DVB-T module is installed, connect the VCR to the IN socket of the DVB-T module using the antenna cable, if a DVBT 2 Basic tuner is installed via an antenna splitter, also connect the terrestrial tuner.

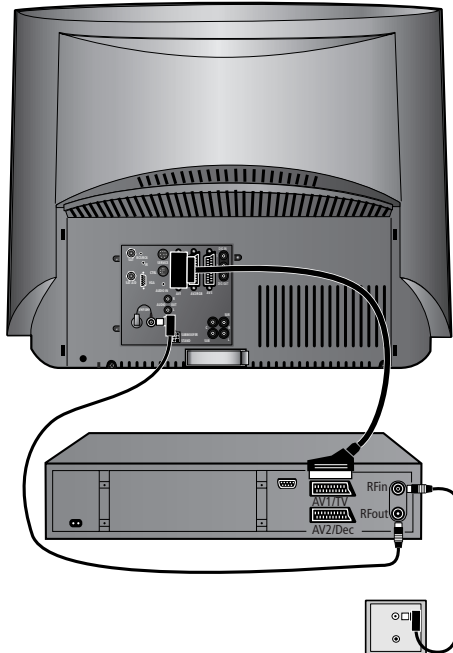

Search for and store the VCR station (if there is no Euro AV cable)

Switch on the test station on the VCR or insert a recorded tape and start playback.

Then call program 0 on the TV set (set ex-factory to channel 36). Select the first menu item (VCR) in the AV selection list.

To prevent "normal" TV stations being found in the search, pull out the antenna plug from the antenna input of the VCR temporarily (the cable to the antenna system).

Call the TV menu

Mark "Settings"

Call

Mark "Stations"

Call


Mark "Manual setting"

Call

Mark "Range" and Select "UHF"

Mark "Channel"

Enter channel 30

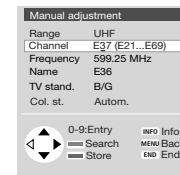


Search for channel (blue button)

When the station is found:



Store (red button)

A list of the stored stations is displayed

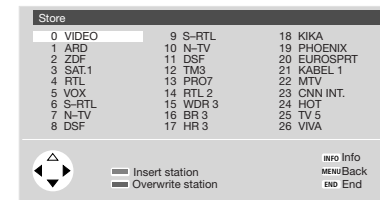

Overwrite program (program 0 marked)



Hide menus

Plug the antenna plug back into the VCR.

If you now get interference because a TV station is transmitting on the same channel as the VCR station, you have to change the transmitting station on the VCR (see operating instructions of the VCR) and search for the VCR station on the TV again.

Operating additional equipment

Video playback

There are several ways to see the picture and hear the sound of the VCR, DVD player or camcorder on your TV:

1. Use the Euro-AV sockets on the TV and VCR.
This is the best way to get a good picture and sound quality. For camcorders and digital cameras it is best to use the front sockets AVS.
If you are playing back from a VCR with Digital Link Plus, the VCR picture is shown on the current station slot.
If you are playing back from a standard VCR, DVD player, camcorder or digital camera, select the AV socket to which the video signal is connected in the AV selection list (button **0 AV**) or the station table.
Video recorders emit a switching voltage during playback which the TV set can decode (can be activated in the connection wizard or set Settings – AV Settings – Allow switching voltage to “Yes” in the TV menu). Then the VCR picture is shown on the current station slot as in Digital Link Plus VCR's.
2. You can also control logged-in Loewe VCRs and DVD players with the video menu bar. See page 18 for more details.
3. Use the antenna connection between the VCR and the TV. The sound is only transmitted in mono. Select the first menu item, e.g. VIDEO, in the AV selection.

Calling an AV program in the AV selection list

0 AV Call AV selection list

AV Selection VIDEO AV1 AV2 AV3 AVS




Select AV socket or VIDEO for VCR station.

Now you will see the playback from the connected AV unit.

Calling an AV in the station table



Call the station table

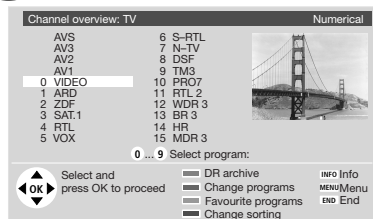

In the numeric sorting you will always find the AV sockets at the top of the list without station numbers.



Mark the AV socket



Call the marked AV socket

Now you will see the playback from the connected AV unit.

IR Link

 
Your TV set has a socket for an IR Link (IR) and a cable with a jack and IR emitting diode is also supplied.

This enables you to control most other remotely controlled devices, such as a concealed d-Box or a video from a different manufacturer, by using the TV set's remote control. Insert the jack of the infrared emitting diode cable into the IR socket on the back of your TV. The infrared emitting diode on the end of this cable must be placed in front of the concealed device. For transmission, the TV must be switched on. You can order a nap strip from your dealer (Loewe spare parts no. 29337.001) to help lay the cables. The burl tape is self-adhesive; remove the protective film. Affix the burl tape on the wall of the shelf or cabinet and press the cable into the burl tape. The burl tape can be split into several pieces using a knife. To operate the concealed video recorder, point the infrared remote control at the TV set.

Operating additional equipment

Operating other Loewe equipment with the RC3 remote control

You can operate various Loewe equipment with this remote control. Further information can be found on the next page.




Select VCR, DVD or a Set Top Box with the switch.

Default options are Loewe video recorders, Loewe DVD recorders and the d-box common in Germany for STBs (Set Top Box). For operation of a Loewe DVD player the remote control must be switched over (see next column).

Use the drive buttons in TV- and STB position for VCR, DVD or Digital Recorder

You can switch over the six drive buttons both for TV and STB for operating a VCR or DVD player/recorder. Operation of the built-in Digital Recorder Plus is specified ex-factory.

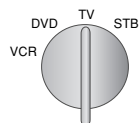


First turn the switch to the main function TV or STB.



Press the **END** and *** EPG** buttons at the same time (5 secs). The display at the top left of the remote control flashes twice.



 Enter the numbers 988 one after the other. The display again flashes twice.



Now turn the switch to the required function for the drive buttons. DVD, VCR or TV if the Digital Recorder is to be used.



Press the **# PIP** button to complete the setting. The display flashes twice.

Switching over the remote control for operating equipment of other manufacturers or for a Loewe DVD player

 
You can switch over the remote control for VCRs, DVD players and Set Top Boxes if the infrared code of the equipment type is listed in the code list or is in the code memory of the RC3.

Switching over is done on the one hand by entering a four-digit code and on the other hand the remote control suggests codes which you can test on the equipment.

If you cannot find the equipment in the code list, try a suggestion from the remote control. Even if the manufacturer of the equipment is included in the code list, it is possible that it cannot be operated. Not all functions on the RC3 are available for this equipment.

Switching over the remote control – with code input – e.g. to the Loewe DVD player

Look for the code number of your equipment in the code list. The list is sorted according to equipment type – DVD, VCR, STB – and alphabetically according to manufacturer. You will find one or more code numbers next to the manufacturer name.



Using the switch select whether you want to switch over to a VCR, DVD player or a Set Top Box.



Press the **END** and *** EPG** buttons at the same time (5 secs). The display at the top left of the remote control flashes twice.



Enter the four numbers from the code list one after the other (0539 for Loewe DVD player). The display flashes once after each number is entered. Twice after the last number.

 
If the number was incorrect, the display flashes for longer. The code number has not been accepted.

Once the code has been accepted with two flashes, you can test the functionality of the device you have just programmed.

If the device cannot be operated or is difficult to operate, repeat the code input with the next code from the list. If no other codes are specified for this manufacturer, try a code suggested by the remote control.

Switching over the remote control – with the suggestions by the remote control

Switch on the device to which you want to set the remote control. Standby is not sufficient!



Using the switch select whether you want to switch over to a VCR, DVD player or a Set Top Box.



Press the **END** and *** EPG** buttons at the same time (5 secs). The display at the top left of the remote control flashes twice.



Enter the numbers 991 one after the other. The display flashes once after each number is entered.



Press the **# PIP** button to select the first code.

Hold the remote control pointed towards the device you want to switch over to. Watch the device.



Now press the **▶** (Play) or **⏻** (On/Off) button on the remote control. Wait a moment for the reaction of the device. If the device does not react, the code is incorrect.



Press the **# PIP** button to call the next code.



 
Press the **▶** (Play) or **⏻** (On/Off) button again.



If the device reacts, press the *** EPG** button to confirm the code.


Operating additional equipment

Switching over the remote control for operating a DVD recorder/player




At the factory the infrared code and the functionality is preset for the Loewe DVD recorder, see previous page for how to switch over to the DVD player.

Functions for the Loewe DVD player

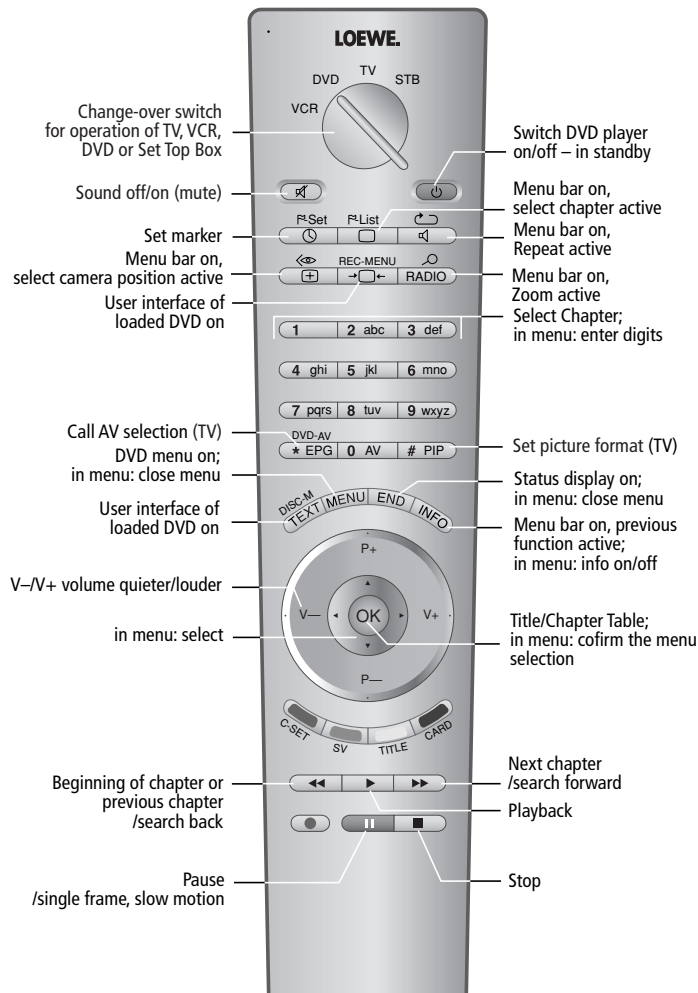


 Switching over the remote control for operating a video recorder



At the factory the infrared code and the functionality is preset for the Loewe video recorder.

Functions for the Loewe video recorder

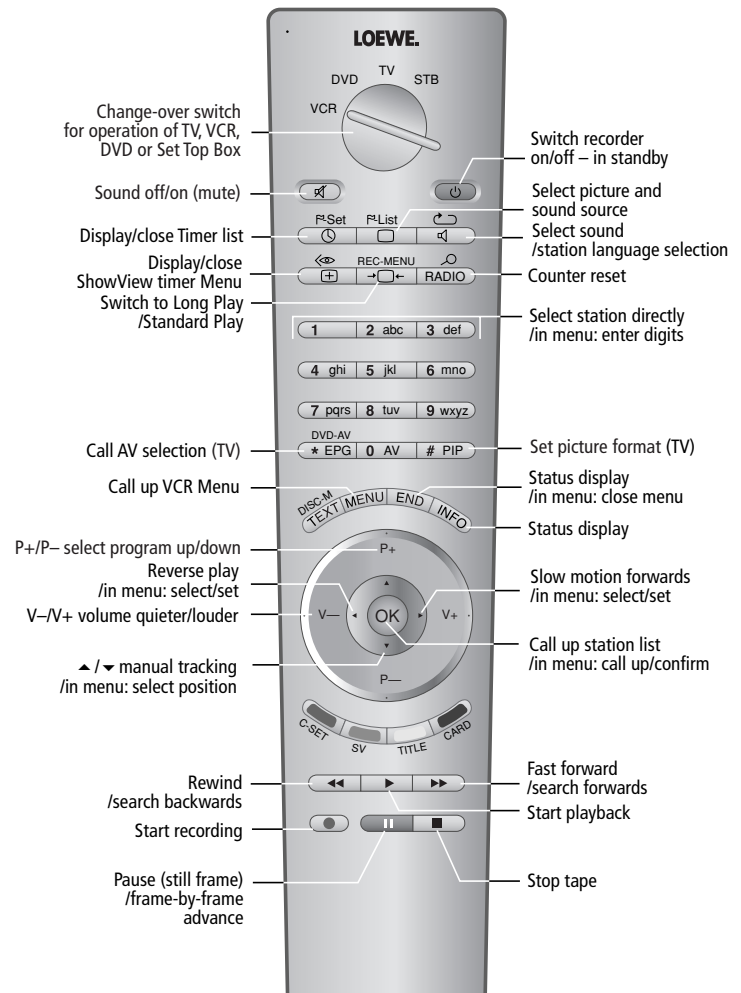

What to do when...

Problem	Possible cause	Remedy
Various menu items cannot be called (shown in gray) or the menus for the EPG and teletext modes of operation cannot be called	"Simplified control" activated in main information	Deactivate "Simplified control" in the main information. Press the INFO -button, select "Select control level" and call with OK . Set the "Simplified control" to "no".
Record and Timer are not displayed in the video menu	No VCR or DVD recorder logged in and no digital recorder installed	Log in VCR in the TV menu – Connections.
"Connections" for example cannot be called in the video menu (grayed out)	a) A timer recording is currently in progress b) You are recording from the TV set with the video bar	a) Wait until the timer recording has ended or clear the timer b) Wait until you stop recording
The "Stations" item in the TV menu and the "Autom. channel search" item in the main information cannot be called	The child lock is activated. If these menus were accessible, children could still set the programs.	Deactivate program-related child lock: Switch off child lock or enter PIN in the TV menu – Settings.
Control of the Loewe VCR with the video control bar and the timer does not work or does not work properly	a) The VCR's Digital Link function is not activated or not possible b) Euro-AV cable not connected c) Video recorder not logged in	a) Activate Digital Link in the VCR (see operating instructions of the VCR) b) Connect the Euro-AV cable c) Log in the VCR
General problems with connecting external devices through an AV input	a) The device is not logged in in the "Connections" menu or is connected differently to shown in the connection diagram b) The AV norm is set incorrectly c) The AV signal is set incorrectly	a) Compare the connection diagram with the actual installation in the "Main information" under "Connections" and connect as shown if necessary b) Set the correct norm c) Set the correct AV signal If "Automatic" is set for AV norm or AV signal, this can lead to wrong detection in the case of non-standardized signals. In this case the norm and signal must be set according to the operating instructions of the external device.
Picture shifted horizontally	The TV set is in the Southern hemisphere (e.g. Australia, South Africa)	Set the horizontal position: a) Call the main information with INFO b) Call Index – Set picture – Horizontal displacement c) Set horizontal picture position

What to do when...

Problem	Possible cause	Remedy
Connection of a decoder does not work or does not work properly	<ul style="list-style-type: none"> a) The signal is not decoded because the correct decoder programs have not been selected in the TV menu – Connections b) The sound is missing in decoder mode because the wrong decoder sound is allocated in the TV menu – Connections 	<ul style="list-style-type: none"> a) Follow the instructions in the TV menu – Connections again and select the appropriate decoder programs b) Follow the instructions in the TV menu – Connections again and select the right sound source (decoder, TV or Autom.), see instructions of the decoder
No sound through the TV loudspeakers	<ul style="list-style-type: none"> a) The item "Sound from..." in the Sound menu under "Sound" is not set to "TV" b) Nothing is inserted in the 9-pole cube socket on the back of the set 	<ul style="list-style-type: none"> a) Change the setting to "TV" b) Either a dummy plug with bridges, Loewe Concertos, the transmitter for the home automation or a subwoofer must be plugged into the cubic socket
All menus appear in the wrong language	The wrong menu language has been set	Set your menu language: <ol style="list-style-type: none"> 1. Switch off picture-in-picture (PIP) and switch off all on-screen displays (END button) 2. Call the TV menu (MENU button) 3. Select the last menu item and press OK 4. Select the last menu item on the last page and press the OK button 5. Now select the right language and... 6. ...confirm with OK
Digital Link Plus does not work	<ul style="list-style-type: none"> a) The VCR has not been logged in as a Digital Link Plus device or has been connected to the wrong socket b) The Euro-AV cable is not fully wired (Pin 10 not wired) c) Some video recorders can only take over the stations from the TV in initial installation d) All or some terrestrial or cable stations are stored at station slots ≥ 99 	<ul style="list-style-type: none"> a) Log in the Digital Link Plus VCR under "Connections" and connect according to the diagram b) Change the Euro-AV cable c) Reinstall the original state (ex-factory) of the VCR (see operating instructions of the VCR) d) Sort the terrestrial and cable stations so that they are between 1 and 99
Various characters are displayed incorrectly in teletext	The wrong character set is set in the teletext menu	Set the right character set: Teletext menu – Settings – Character set – Standard or the appropriate character set.

Technical data

Mechanical data

Articos 32 HD/DR+	Part number 63450.42
Dimensions (cm)	86x67,5x57,5 (wxhxd)
Weight (kg)	64
Picture tube	Real Flat-Line HD
Format	16:9
Screen size	81 cm, visible 76 cm

Electrical data

Chassis name	Media Plus (Q2550H)
Image refresh frequency	PAL/SECAM 100 Hz
	PAL 60/NTSC 60 Hz proscan
Full Digital 100	AMD/DMM/DMM/DNC
Power supply	220V up to 240V/50–60Hz
Power consumption in operation	approx.170 Watt
	Standby <2 Watt
	Sat-Record-Mode <60 Watt
Ambient temperature	5° – 40° Celsius
Tuner VHF/UHF/ cable (Hyperband 8 MHz)	42 MHz – 860 MHz
Station memory*	220/with DVB: 1470
TV norms	B/G, I, D/K, L, L', M, N
Color norms	PAL, SECAM, NTSC, NTSC 4.43
Sound norm	FM, AM, Nicam mono/stereo/2-sound
Audio rated output	2 x 15 Watt / 4 Ohm
Audio music output	2 x 40 Watt / 4 Ohm
Teletext	HiText (Level 2.5)

Connections

Mini-DIN (Front)	Video IN	Y/C (S-VHS/Hi8)
Cinch (Front)	Video IN	CVBS (VHS/8mm)
Cinch (Front)	Audio IN	L/R
Jack 6.3 mm (Front) headphones		32–200 Ohm
IEC sockets	75 Ohm	antenna/cable/DVB-T*
F-socket	75 Ohm*	SAT and SAT A/D
AV 1	Video IN/OUT	Y/C (S-VHS/Hi8)
	Video IN/OUT	CVBS (VHS/8mm)
	Audio IN/OUT	L/R
AV 2	Video IN/OUT**	Y/C (S-VHS/Hi8)
	Video IN/OUT	CVBS (VHS/8mm)
	Video IN	RGB
	Audio IN/OUT	L/R
AV 3	Video IN	Y/C (S-VHS/Hi8)
	Video IN/OUT***	CVBS (VHS/8mm)
	Video IN	RGB or YUV
	Audio IN/OUT***	L/R
Cinch	Audio OUT	level adjustable/fixed
Jack 3,5 mm	Audio IN	L/R
Jack 3,5 mm		IR-Link OUT
Jack 2,5 mm*		RC5/RC6 OUT
D-Sub 15-pole*		VGA IN
9-pole cube socket		home automation or Loewe active loudspeaker system
Mini-DIN 8-pole*		Service/audio system (L-link)
Cinch*	Centre OUT	Centre Signal
Cinch*	Subwoofer OUT	LFE Signal
Cinch*	Surround OUT	L/R
Cinch	Dig. Audio IN 1	Multichannel Signal
Cinch	Dig. Audio IN 2	Multichannel Signal
Cinch	Dig. Audio OUT	Multichannel Signal

* depending on equipment and type of set or retrofittable

** OUT only in Digital Link Plus video recorders

*** OUT monitoring picture and sound

Accessories available

Motor Unit

A table turning foot for your Articos which can be rotated by $\pm 40^\circ$. Turning is implemented with the remote control.

Cube Systems 1 and 2

Rack systems with four video screens and integrated Motor Unit. Each rack has a cable for an IR Link.

Loewe audio systems and active loudspeaker systems

A combination of a Loewe TV set, a Loewe audio system and a Loewe loudspeaker system provides an excellently adapted Home Cinema system with the advantages of high operating comfort, matching design and adapted technology.

Home automation

Control of light switches, dimmers, blinds etc. with the TV menu.

RC1 Remote control

Bi-directional system remote control to operate all Loewe products, such as TVs, VCRs, DVDs and audio systems.

Single-/Twin-Sat-Tuner und Digital-TV Decoder (satellite or terrestrial)

Your TV set can be retrofitted with an integrated SAT 6 or TWIN-SAT 6 and a digital TV decoder. A combination of the two components enables you to receive analogue and digital satellite programmes.

The Digital TV 1 Sat / Twin Sat and the Digital-TV upgrade kit 2 S-Basic upgrade kit enables you to receive all unencoded digital satellite programmes.

All uncoded digital terrestrial programs can be received with the Digital-TV upgrade kit 2 T-Basic.

The following modules are available for reception of coded (and uncoded) digital TV programs (e.g. Premiere):

The Digital-TV upgrade kit 2 Sat/Twin-Sat-CI P for satellite reception and the Digital-TV upgrade kit 2 T-CI for terrestrial Digital-TV programs. In addition, the Digital TV upgrade kit 2 T/S-CI is available for reception of satellite and terrestrial coded TV programs.

All modules are integrated in the TV set and are operated by the remote control/menu control of the TV.

Dolby Digital Decoder

For multichannel playback from DVD players in Dolby Digital cinema quality. A Dolby Digital is integrated.

Loewe Video Recorders

Loewe video recorders are specially adapted in design, user guidance and technical characteristics to Loewe TV sets with the result that daily handling of the equipment is made much simpler.

Loewe DVD Players and DVD Recorders

The DVD Players and DVD Recorders from Loewe are characterized by form and color which match Loewe TV sets, adapted user guidance and technology. A combination of the two devices forms a system which offers many advantages.

Service addresses

Australia

International Dynamics Australasia Pty Ltd.
129 Palmer Street
AUS - Richmond, Victoria 3121
Tel. 03-94 29 08 22
Fax 03-94 29 08 33

Austria

Loewe Austria GmbH
Parkring 10
A-1010 Wien
Tel 01-51 63 33 034
Fax 01-51 63 33 032

Benelux

Loewe Opta Benelux NV/SA
Uilenbaan 84
B-2160 Antwerpen
Tel. 0902-88 00 2
Tel. 03-270 99 30
Fax 03-271 01 08
Loewe Opta Nederland B.V.
Ravenswade, 54A1
NL-3439 LD Nieuwegein (Utrecht)
Tel. 0900-20 20 180
Fax 030-280 33 27

CIS

Service Center Loewe
ul. Verkhnyaya Maslovka, d. 29
RUS-125083 Moscow
Tel. 095-212 50 43, 956 67 64
Fax 095-212 47 10

Cyprus

L&M Euroappliances Ltd
P.O. Box 23426
Kennedy Avenue 1A&B
CY-Nicosia
Tel. 02-42 05 10
Fax 02-42 87 70

Czech Republic

TIPA sdružení
Dolní nám. 9
CZ-746 01 Opava 1
Tel: 0553-62 49 44
Fax: 0553-62 31 47

Denmark

Kjaerulff 1 Development A/S
Vestre Stationsvej 9
DK-5000 Odense C
Danmark
Tel. 0661-354 80
Fax 0661-354 10

France

Loewe France S.A.
11 rue de la Durance
F-67100 Strasbourg Cédex 1
Tel. 03-88 79 72 50
Fax 03-88 79 72 59

Germany

Loewe Opta GmbH
Kundendienst Zentrale
Industriestraße 11
D-96317 Kronach
Tel. 09261-990
Fax 09261-95411

Great Britain

LinnSight Ltd.
PO Box 8465
Prestwick
UK - KA 7 2YF
Tel. 01292-47 15 52
Fax 01292-47 15 54

Greece

SOUND HELLAS S.A.
Kleanthous Str. 10
GR-54642 Thessaloniki
Tel. 2310-856 100
Fax 2310-856 300

Hungary

Basys Magyarorszagi KFT
Epitok utja 2-4
H-2040 Budaörs
Tel. 023-415 637/121
Fax 023-415 182

Israel

RIF TRADING LTD
29 Izhak Sade Street
ISR-Tel Aviv 67213
Tel. 03-62 40 555
Fax 03-62 40 303

Italy

Loewe Italiana srl
Lago del Perlar, 12
I-37135 Verona
Tel. 045-82 51 611
Fax 055-82 51 622

Malta

Mirage Holdings Ltd
Flamingo Complex
Cannon Road
M-Qormi
Tel. 22 79 40 00
Fax 21 44 59 83

Marocco

SOMARA S.A.
377, Rue Mustapha El Maani
MA-20000 Casablanca
Tel. 02-22 20 308
Fax 02-22 60 006

Norway

CableCom AS
Østre Kullerød 5
N-3214 Sandefjord
Tel. 033-48 33 48
Fax 033-44 60 44

Poland

Piotech
ul. Boh. Getta Warszawskiego 18
PL-81-609 Gdynia
Tel./Fax 058-62 43 467 / 058-62 45 009

Portugal

Videoacustica
Comercio e Representacoes de
Equipamentos Electronicos S.A.
Estrada Circunvalacao
Quinta do Paizinho, Arm. 5
P-2795-632 Carnaxide
Tel. 21-42 41 770
Fax 21-41 88 093

Slovenia

Jadran Trgovsko Podjetje
Partizanska cesta 69
SL-6210 Sezana
Tel. 057-310 441
Fax 057-310 442

South Africa

THE SOUNDLAB PTY LTD
P.O. Box 31952
Kylami 1684
Republic of South Africa
Tel. 011-46 64 700
Fax 011-46 64 285

Spain

Gaplasa S.A.
Conde de Torroja, 25
E-28022 Madrid
Tel. 91-748 29 60
Fax 91-329 06 71

Sweden

Canseda AB
Amalia Jönssons Gata 19
S-421 31 Västra Frölunda
Tel. 031-70 93 760
Fax 031-47 65 15


Switzerland

Telion AG
Rütistrasse 26
CH-8952 Schlieren
Tel. 01-732 15 11
Fax 01-730 15 02

Turkey

Enkay Elektronik Servis Müdürlüğü
Alemdag Cad. Site Yolu No.: 10
Ümraniye/ Istanbul
Tel. 0216-523 15 94/96
Fax 0216-523 16 58

Printed in Germany
4/08.04/5,0
Subject to modification.

 The code number 3001 cancels out a secret code and with it the child lock. Please keep it in a safe place.

VCR									
Adyson									0072
Aiwa	0307	0000	0209	0348	0352	0037			
						0041			
Akai	0106	0315	0041	0352	0240				
Akashi						0072			
Akiba						0072			
Akura						0072	0041		
Alba	0278	0072	0209	0352	0000	0315			
					0348	0081			
Allorgan						0240			
Allstar						0081			
Amstrad			0000	0278	0072				
Anitech						0072			
Ansonic						0000			
Aristona						0081			
ASA						0037	0081		
Asuka	0072	0037	0081	0000	0038				
Audiosonic						0278			
AVP					0352	0000			
AWA		0037	0278	0642	0043				
Baird	0106	0278	0104	0041	0000				
Basic Line			0278	0209	0072				
Bestar						0278			
Black Diamond					0642	0278			
Black Panther						0278			
Blaupunkt			1562	0226	0081				
Blue Sky	0037	0209	0348	0072	0352	0278			
						0000			
Bondstec						0072			
Brandt					0041	0320			
Brandt Electronique						0041			
Brinkmann					0209	0348			
Bush	0072	0278	0315	0209	0352	0000			
					0348	0081			
Carena					0209	0081			
Carrefour						0045			
Casio						0000			
Cathay						0278			
CGE					0041	0000			
Cimline					0072	0209			
Clatronic					0072	0000			
Combitech						0352			
Condor						0278			
Crown					0278	0072			
Cyrus						0081			
Daewoo	0278	0642	0209	0348	0352	0045			
Dansai						0072	0278		
Daytron							0278		
de Graaf					0042	0081	0104	0048	
Decca	0000	0041	0081	0067	0348	0209			
Deitron						0278			
Denko						0072			
Diamant						0037			
Domland							0209		
Dual					0041	0081	0278	0000	
Dumont						0000	0081	0104	
Elbe						0278	0038		
Elcatech							0072		
Elin						0240			
Elsay						0072			
Elta						0072	0278		
Emerson						0072	0045	0000	
ESC						0278	0240		
Etzuko							0072		
Fast							0897		
Ferguson					0041	0320	0000	0278	
Fidelity						0000	0072	0240	
Finlandia	0104	0081	0042	0000	0048	0384			
Finlux			0000	0081	0104	0042			
Firstline	0072	0209	0348	0043	0037	0045			
						0042	0278		
Fisher					0047	0104	0038		
Flint							0209		
Frontech							0072		
Fujitsu							0000		
Funai							0000		
Galaxi							0000		
Galaxis							0278		
GE							0320		
GEC							0081		
General Technic							0348		
Genexxa							0104		
Goldhand							0072		
GoldStar							0037	0000	
Goodmans	0000	0072	0240	0278	0037				
		0081	0348	0209	0352	0642			
Graetz					0041	0104	0240		
Granada	0104	0048	0081	0240	0037	0226			
						0042	0000		
Grandin		0072	0037	0000	0278	0209			
Grundig	0081	0347	0226	0320	0348	0072			
Haaz						0348	0209		
Hanimex							0352		
Hanseatic		0037	0209	0278	0081	0038			
Harwood								0072	
HCM								0072	
Hinari	0072	0209	0352	0041	0278	0240			
Hisawa						0209	0352		
Hischito							0045		
Hitachi	0042	0041	0000	0240	0081	0104			
								0384	
Hornophone								0081	
Hypson			0072	0209	0278	0352			
Imperial						0000	0240		
Ingersoll							0209	0240	
Inno Hit				0240	0278	0072			
Interbuy							0037	0072	
Interfunk							0081	0104	
Internal								0278	
International								0278	0037
Intervision		0000	0278	0037	0209	0348			
Irradio						0072	0037	0081	
ITT		0106	0041	0384	0104	0240			
ITT Nokia								0048	
ITV							0278	0037	
JMB							0209	0352	
Joyce								0000	
JVC						0041	0067	0384	
Kaisui								0072	
Kambrook								0037	
Karcher								0278	
Kendo	0106	0209	0315	0348	0072	0037			
Kenwood						0041	0038		
KIC							0000		
Kimari								0047	
Kneissel			0352	0209	0348	0037			
Kolster						0209	0348		
Korpel								0072	
Kuba								0047	
Kuba Electronic								0047	
Kuwa								0226	
Kyoto								0072	
Lenco								0278	
Leyco								0072	
LG						0037	0000	0278	
Lifetec								0209	0348
Loewe		0081	1562	0226	0866	0037			
Logik			0240	0072	0106	0209			
Lumatron								0278	
Luxor	0106	0043	0072	0104	0047	0048			

Goodmans	1284	0455	Labgear					1296	OctalTV									1294
Gradiente		0887	LaSAT	0607	0115	0132	0157	0299	Okano									0668
Granada		0455	Lenco			0713	0115	0607	OnDigital	0751	0329	0241	0867	0133				
Grandin		0084	Lenson					0501	Optex									0834
Grundig	0173	0847	Lexus					0200	Optus								0879	0853
	0750	0879	LG					1075	Orbitech	1099	1100	0200	0501	0157				
Hanseatic		0605	Lifesat			0605	0299	1043	Origo									0497
Hänsel & Gretel		0132	Logix					1017	Ouralis									1205
Hauppauge		1294	Lorenzen	0299	1294	0607	0742	0132	Oxford									0668
HDT		1011	Luxor					0573	Pace	0455	0847	0887	1175	0241	0867			
Heliocom		0607	M&B1					0605		0123	1323	0791	0795	0720	0497	0200		
Helium		0607	Manata			0710	0668	0713						0853	0710	1423		
Hirschmann	0396	0882	Manhattan1083	0455	0710	0668	0834	1017	Packsat									0710
	0573	1085	Marantz					0200	Palcom									0299
Hitachi		0455	Maspro			0750	0713	0173	Palladium								0571	0501
HNE		0742	Matsui				0710	0173	Palsat									0501
Houston		0668	Max					0607	Panasat									0879
Humax		1176	MB					0605	Panasonic			0847	1104	0455	1320			
Huth	0132	0607	Mediabox					0853	Panda			0455	0607	0173	0834			
Hyundai		1011	Mediacom					1206	Patriot									0668
ID Digital		1176	MediaSat					0501	Philips	0200	1114	0853	0455	0750	0710			
Imex		0084	Medion			0713	0299	1043			0668	0571	0173	0133	1336			
Ingelen		0396	Medison					0713	Phonotrend					0863	1017	1200		
International		0132	Mega					0200	Pioneer					0329	0853	0352		
Interstar		1105	Metronic	0713	1215	0084	0885	1205	Planet						0871	0396		
Intervision		0628	Metz					0173	Polytron							0396		
Invideo		0871	Micro			0607	0501	0713	Praxis							0511		
IRTE		0609	Micro electronic					0713	Preisner			0132	0396	1101	1113			
Italtel		0871	Micro Technology					0713	Premiere	0853	1114	1127	0723	1111	1176			
ITT Nokia		0573	Micromaxx					0299			1195	1100	0249	0658	1435			
JOK		0710	Microtec					0713	Primacom						1111			
JVC		0571	Minerva					0571	Profile						0668	0710		
K-SAT		0713	Mitsubishi					0455	Promax							0455		
Kamm		0713	Morgan's			0200	0713	0132	Prosat							0628		
Kaon		1300	Motorola					0856	Prosonic							0742		
KaTelco		1111	Multichoice				0642	0879	Pye							0571		
Kathrein	0658	0249	Multitec					0157	Pyxis							0834		
	0713	0668	Myryad					0200	Quadral			0628	0668	0710	1323			
Kathrein Eurostar		0115	Mysat					0713	Quelle					0607	0742	0115		
Kiton		0114	Netgem					1322	Radiola							0200		
Klap		0668	Neuhaus			0501	0713	0834	Radix					0396	1113	0882		
Konig		0607	Neusat					0713	RFT							0200		
Koscom		0834	Nikko				0713	0723	Roadstar							0713		
Kreiling	0658	0249	Nokia	1023	1114	0751	1127	0723	Rover						0628	0713		
Kreiselmeyer		0173		0573	1223	0455	1723	1310	Saba			0710	0885	0115	0607			
Kyostar		0132	Nordmende					0455	Sabre						0455			
L&S Electronic		1043	Nova					0879	Sagem					0820	1114	1253		

Samsung	0863	1243	1343	0853	1206	1017
					1293	1292
SAT						0501
Sat Control						1300
Sat Partner						0501
Sat Team						0713
Satcom				0605	0607	
Satec				0713	0834	
Satline						0628
Satstation						1083
Schneider		0710	0668	0157	1206	
Schwaiger	0605	0157	0607	0885	1111	
					0132	1075
SCS					0115	0299
Seemann						0396
SEG		0605	0742	0114	1087	
Seleco						0871
Septimo					1205	0885
Siemens						0173
Skantin						0713
Skinsat						0501
SKR						0713
Sky		0847	0856	0887	1014	
SKY+						1175
Skymaster	0713	0605	0157	1200	1085	1075
0628						
Skymax						0200
SkySat			0157	0605	0713	
SL					0132	0742
SM Electronic		0157	0713	1200	1075	1085
Smart	0132	0299	1101	0882	0396	1113
						0115
						0713
Sony		0282	0847	0853	0455	
SR						0132
Starland						0713
Strong		0879	0853	1105	1159	1300
Sunsat						0713
Sunstar						0132
Tantec						0455
Tatung						0455
Teac						1322
Tecatel						1200
TechniSat	0200	1099	1100	1195	0501	1322
Technosat						1206
Technowelt					0607	0885
Techsan						1017
Techwood						0114

Telasat					0605	0115	0607
Teleciel							1043
Telecom							0713
Telefunken							0710
Teleka		0396	0750	0501	0607	0834	
Telesat						0605	0607
Telestari	0501	1099	1100	0114	0200	0157	
Teletech							0114
Televés					0455	0501	0132
Thomson	0455	0713	0853	0115	0607	1291	
					0820	0668	0710
							1046
Thorn							0455
Tokai							0200
Tonna		0455	0668	0501	0713	0834	
Topfield							1206
Toshiba							0455
TPS						0820	1253
Triasat							0501
Triax	0501	0115	0200	0396	0713	0853	
					0114	1296	1291
							0132
Turnsat							0713
Twinner						0132	0713
UEC							0879
Uher							0157
Unisat							0200
Universum		0173	0571	0607	0299	0115	
						0742	1087
Van Hunen							0299
Variosat							0173
Ventana							0200
Vestel							0742
VH-Sat							0299
Viasat					1323	1023	0820
Visionic							1105
Visiosat						0710	0713
Wetekom					0157	0605	0501
Wewa							0455
Wisi	0173	0396	0299	0455	0501	0607	
							0834
Worldsat				0710	0114	0123	0668
XCOM						0123	0668
XSat					0668	0713	0123
Xtreme							1300
YES							0887
Zehnder		1075	0742	0114	0115	0419	
Zenith							0856
Zeta Technology							0200
Zinwell							1176

Cable Box (STB)	
Austar	0276
BT	0003
Canal Plus	0443
Comcrypt	0443
Decsat	0423
Filmnet	0443
France Telecom	0817
General Instruments	0276
Jerrold	0003 0276
Kabelvision	0003
Macab	0817
Melita	0003
MNet	0443
Mr Zapp	0817
Noos	0817
NTL Cabletoll	0276
Ono	1068
Optus	0276 1060
Pace	1068 1060
Philips	0817 0286
PVP Stereo Visual	0003
Sagem	0817
Tele+1	0443
Telepiu	0443
Tudi	0286
United Cable	0003
Visiopass	0817