


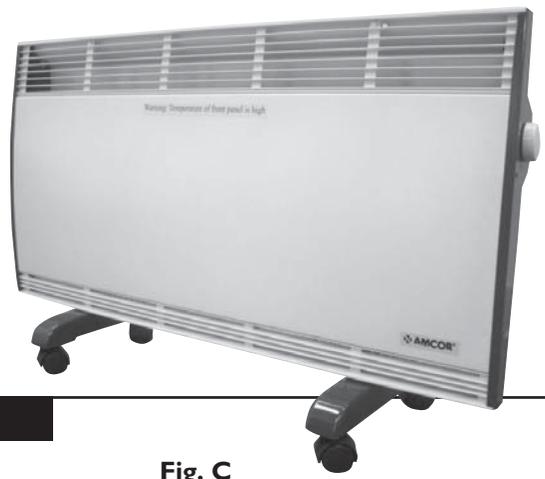

Model AHM8

Wall Mountable/Portable Heater WHEEL INSTRUCTIONS

For more information, please see the enclosed Owner's Manual, or call 1-866-361-2233, or visit www.amcorgroupusa.com



Installing Wheels

Fig. A



As shown in Figure A, the two wheel sets come with looped clips that snap into the unit.

Fig. B

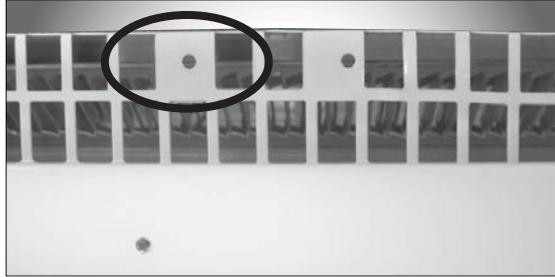


Figure B displays the back of the unit where the wheel sets are set in place, directly over the screw holes on the unit.

Fig. C



As shown in Figure C, you must align the looped clips in the open slots bordering the hole set on the unit. The wheel sets should then click in place as shown in Figure C as well.


NOTE: The supported block side of the wheel sets aligns with the back side lip of the unit.

Fig. D



Figure D shows the successful completion of the aligned looped clips inserted into the open slots after they have "clicked" into place.

Fig. E

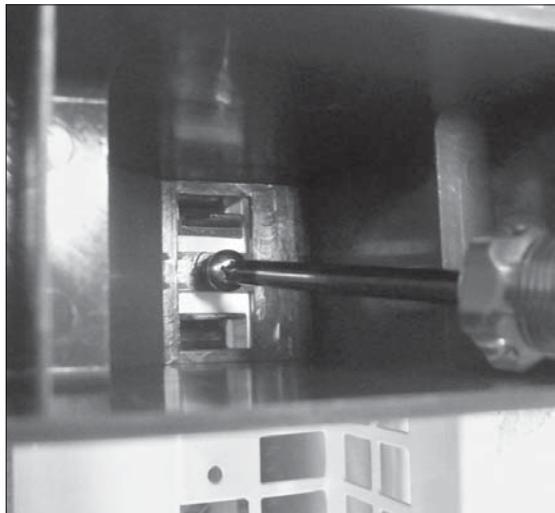

With a small Phillips-head screwdriver, take the provided screw and secure the wheel set into place. Example shown in Figure E.

Fig. F



Figure F displays the successful completion and the security of the completed wheel set. The mobility of your new Amcor AMH-8 Portable heater is now complete and you are now free to move it around your room.

Removing Wheels

Make sure the unit is unplugged and cooled before taking the following steps.

Turn the unit over.

With a Phillips head screwdriver, please remove the screw.

Please do not attempt removing the wheel sets out immediately; they are locked into place by the looped inserts.

As shown in Figure G, push the loops outward to remove them off the locked position. This will then free the wheels so that you may remove them from the unit easily.

Make sure you place the wheel sets and screws in a safe place for future use.

Fig. G

