

COBY®

MP-705

Super-Slim MP3 & Video Player with Touchpad Control



QUICK SETUP GUIDE

Thank you for choosing a COBY MP3 player!

This guide will cover how to get started playing music with your COBY player. For more information about your player and its features, please consult the Instruction Manual or visit us on the web at www.cobyusa.com.

Requirements

Make sure you have the following items ready to start playing music on your COBY MP3 player.

Coby MP3 Player, Headphones, and USB Cable

- ✦ If your COBY uses a rechargeable battery, make sure that it has been fully charged.
- ✦ Connect the headphones to the headphone jack on your COBY.

Computer with USB support

- ✦ Most modern computers come equipped with a USB port. Please check with the computer manufacturer if you are not sure that your computer has USB support.

Windows Media Player 11 (WMP11)

- ✦ The directions in this guide are given for WMP11, but you may use any media management software on your computer.

Getting Started with **MUSIC** Transfer

To start playing music, you will need to:

- ✦ Music files on your computer
- ✦ Transfer the music files to your COBY player
- ✦ Start music playback on your COBY player



Windows Media Player 11 (WMP11)

If your computer does not have Windows Media Player installed, please download the latest version of Windows Media Player (WMP) from Microsoft's website.

<http://www.microsoft.com/windows/windowsmedia/player/download/download.aspx>

The current version available is Windows Media Player 11.

After you have followed Microsoft's instructions to install WMP on your computer, you will be ready to put music files on your computer.

! *For more information about how to use the features of WMP, press the F1 key on your keyboard while the program is running.*

Put MP3 Music Files on Your Computer

If you **already** have MP3 or WMA music files on your computer, transfer them by:

- a) Locate your music files.
- b) Locate the MP3 Player under “MY Computer”. The MP3 player will be listed as a “COBY 705.

 


If you are running on Windows XP, the unit will appear as a

- d) Transfer your existing music files (Copy and Paste or Drag and Drop) in the Coby705 “Media” Folder.

If you do not have music files:


1) Launch the WMP11 program.

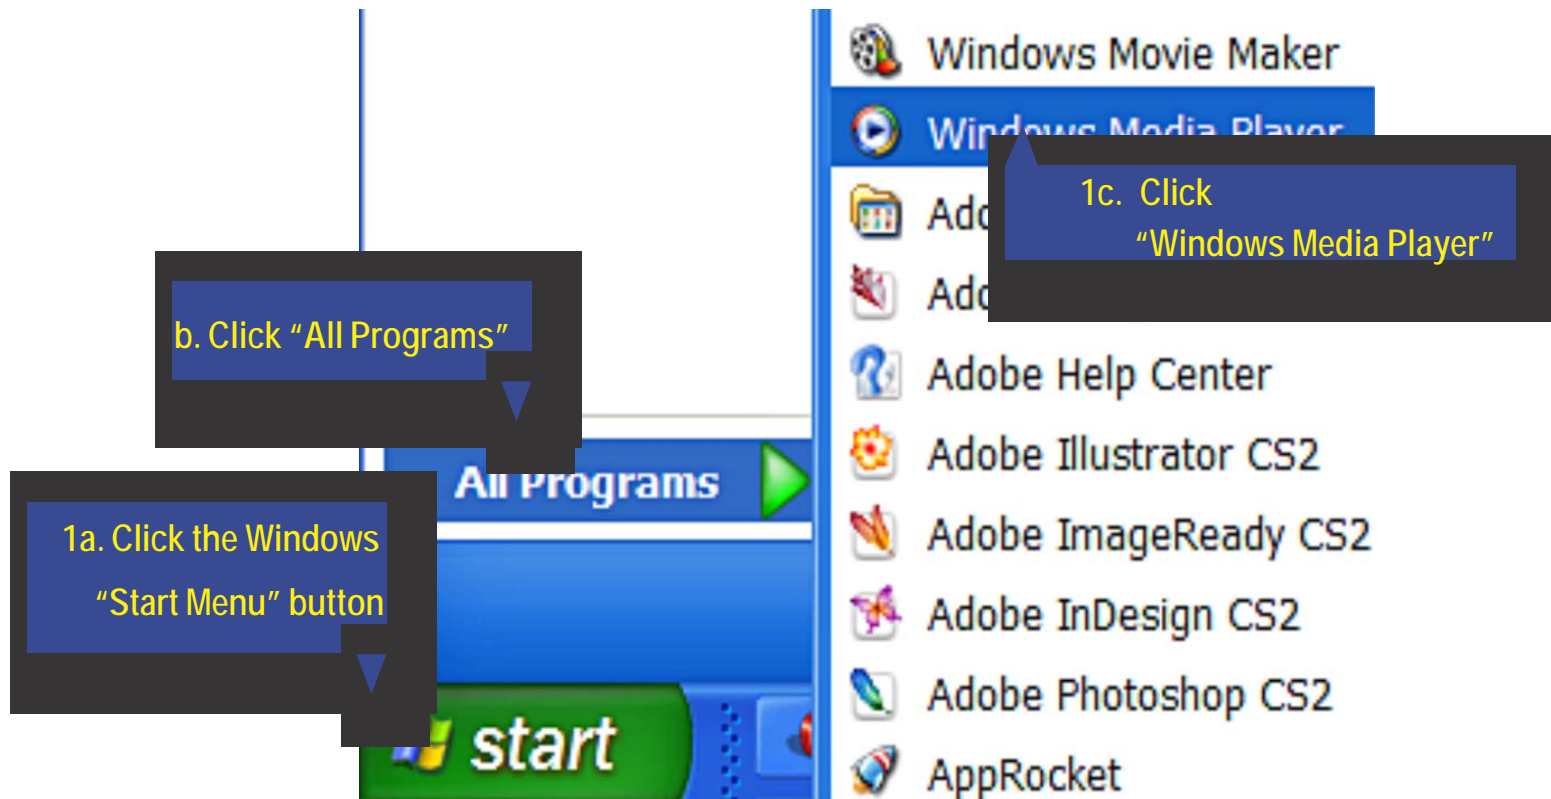

2) Put an audio CD into the CD-ROM drive of your computer.

If your computer has an internet connection, WMP will automatically retrieve and display the album information.

 - ✦ Click the checkboxes to select which tracks to rip. To rip the entire album, check all of the boxes.

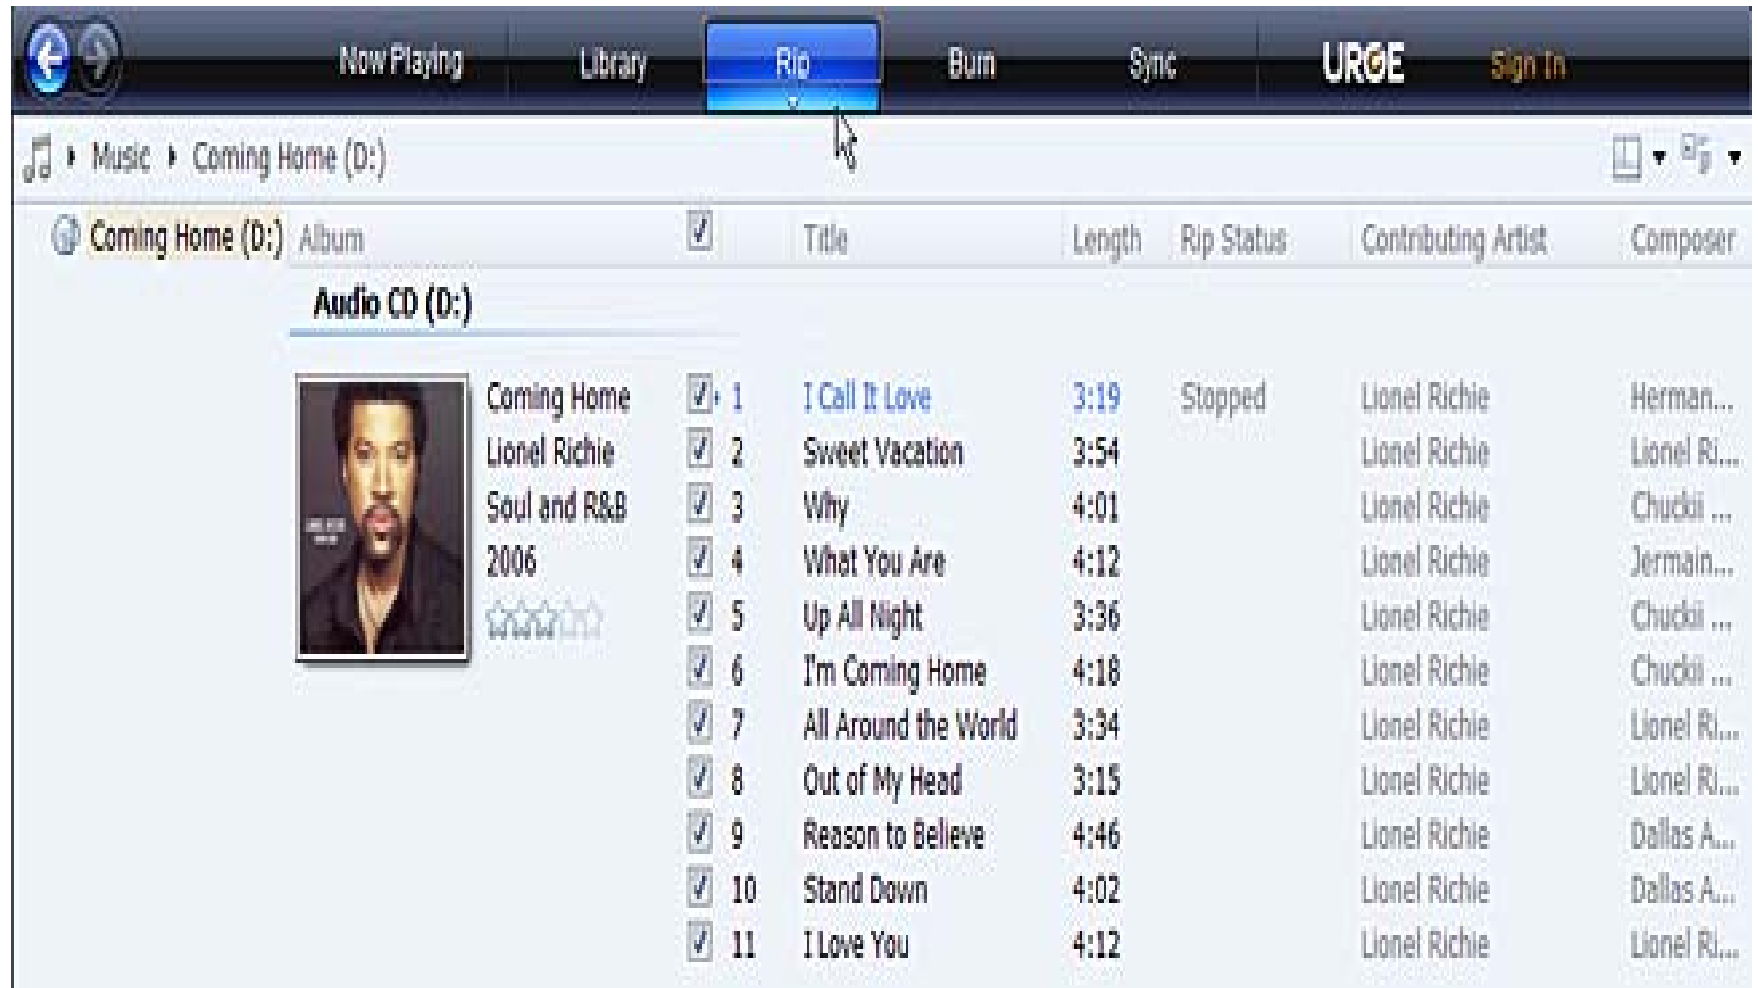

The screenshot shows the Windows Media Player interface in the 'Rip' mode. The top navigation bar includes 'Now Playing', 'Library', 'Rip', 'Burn', 'Sync', 'URGE', and 'Sign In'. The 'Rip' button is highlighted. Below the navigation bar, the breadcrumb path is 'Music > Coming Home (D:)'. The main area displays the album 'Coming Home (D:)' with a checkmark icon. The album cover for Lionel Richie's 'Coming Home' is shown on the left. The track list is as follows:

Album	✓	Title	Length	Rip Status	Contributing Artist	Composer
Coming Home	✓	1 I Call It Love	3:19	Stopped	Lionel Richie	Herman...
Lionel Richie	✓	2 Sweet Vacation	3:54		Lionel Richie	Lionel Ri...
Soul and R&B	✓	3 Why	4:01		Lionel Richie	Chucki ...
2006	✓	4 What You Are	4:12		Lionel Richie	Jermain...
★ ★ ★ ★ ★	✓	5 Up All Night	3:36		Lionel Richie	Chucki ...
	✓	6 I'm Coming Home	4:18		Lionel Richie	Chucki ...
	✓	7 All Around the World	3:34		Lionel Richie	Lionel Ri...
	✓	8 Out of My Head	3:15		Lionel Richie	Lionel Ri...
	✓	9 Reason to Believe	4:46		Lionel Richie	Dallas A...
	✓	10 Stand Down	4:02		Lionel Richie	Dallas A...
	✓	11 I Love You	4:12		Lionel Richie	Lionel Ri...

3) Set the Rip Options (optional).

- ✦ Click the “Rip” button to set the Rip options. The recommended Rip settings are:
 - ✧ Select “Format > mp3”
 - ✧ Select “Bit Rate > 128 Kbps”
 - ✧ Select “More Options” to change the directory to which WMP saves your ripped music files. WMP will save your music to your “My Documents > My Music” folder by default.



4) Start ripping the CD.

- ✦ Click the “Rip” button and select “Rip” to start converting the audio CD to MP3/WMA digital music files.



- ✦ The ripping process will take a few minutes to complete. WMP will save the converted music files to your “My Documents > My Music” folder by default.



Transfer MP3/WMA Files to Your COBY Player

 
Once you have MP3 or WMA digital music files on your computer, transfer them to your COBY player in order to listen to music anywhere.

Use WMP11 to transfer (sync) music from your computer to your COBY MP3 player.


1) Launch the WMP11 program.

2) Connect your COBY player to a USB port on the computer.

✦ WMP11 will detect your COBY player automatically.

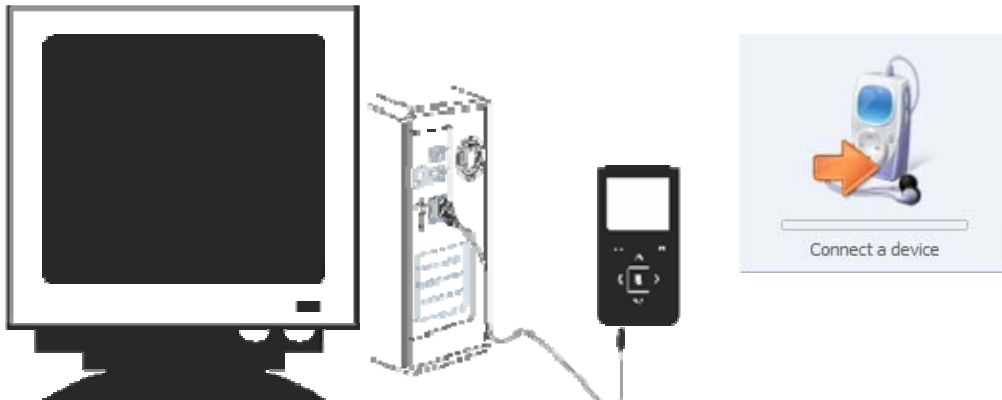

 3) Browse your music library to choose songs to sync.

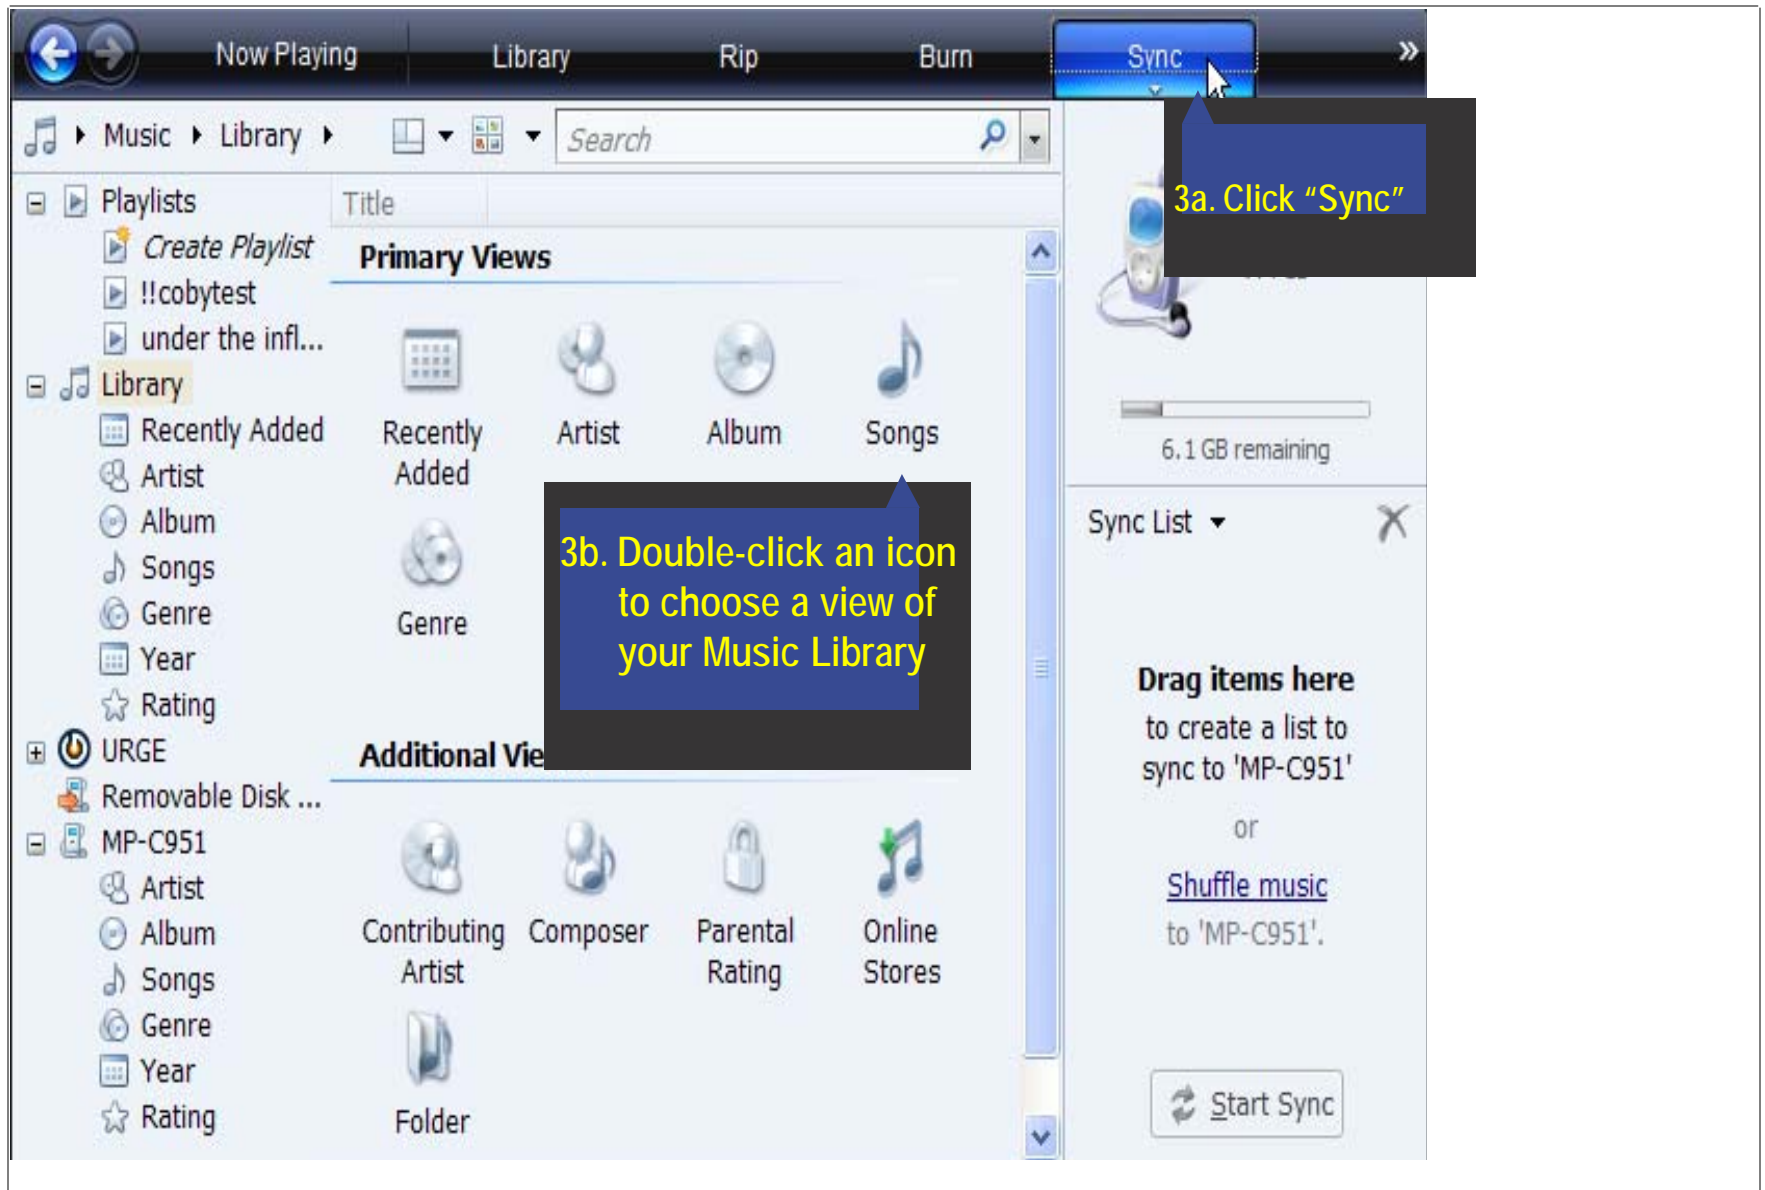

4) Select songs to sync to your COBY player.

The screenshot shows the iTunes Sync window. The search bar at the top contains the text "lion". The left sidebar shows a list of albums, including "Germs" and "Lionel Richie". The main area displays a list of songs from the "Lionel Richie" album, with several tracks selected. The right sidebar shows a Coby MP-C951 device with 7.4 GB of storage and a "Sync List" containing various tracks. A "Start Sync" button is visible at the bottom right.

4a. Type in the Search bar to quickly find a Song

4b. Click on a track to select it for synchronization. To select multiple tracks, hold CTRL or SHIFT and click on the track.

4c. Drag the selected tracks here to add them to the Sync List

4d. Click "Start Sync" to transfer the Sync List to your COBY player

5) Disconnect your COBY player from the computer.


Once the sync process is complete, unplug your player from the USB port of the computer. Now you're ready to listen to music on your COBY player.

The screenshot shows the URGE software interface during a sync process. The top navigation bar includes buttons for 'Now Playing', 'Library', 'Rip', 'Burn', and 'Sync'. The main window displays the 'Sync Results' for device 'MP-C951'. A table lists the files added to the device, all of which are 'Synchronized to device'. The right-hand panel shows the device icon, name 'MP-C951', model 'Generic', and size '7.4 GB'. A progress bar indicates '6 GB remaining'. A message at the bottom right states 'You can now disconnect 'MP-C951'.' and a 'Start Sync' button is visible.

Title	Status	Playlist
Files You Added		
Many Rivers To Cross	Synchronized to device	Files You Added
Homeland and Hip Hop	Synchronized to device	Files You Added
Damaged Goods	Synchronized to device	Files You Added
Two-Headed Boy	Synchronized to device	Files You Added
05 - 53rd & 3rd	Synchronized to device	Files You Added
The Illest (ft. Jean Gr...	Synchronized to device	Files You Added
Hater's Anthem	Synchronized to device	Files You Added
Hustler's Ambition	Synchronized to device	Files You Added
Holla (Ft. Dr.Dre)	Synchronized to device	Files You Added
Mos Def & Talib Kweli...	Synchronized to device	Files You Added
Revolution 909	Synchronized to device	Files You Added
Daft Punk Is Playing A...	Synchronized to device	Files You Added

Start Listening to Music on Your COBY Player

 
Now that you have transferred music to your COBY player, you're ready to take your music with you anywhere.

- ✦ Disconnect the MP3 player from the computer. Connect the supplied earphones to the headphone jack.
- ✦ Turn the player on, slide the  switch to the right and hold it until the screen turns on.
- ✦ Start the playback on your COBY player by entering the "Music" menu.

Music browser Controls

When you choose MUSIC mode from the Main menu, you will see the Music Browser screen.

You can choose to browse your music by artist, Album, Tracks & Genre.

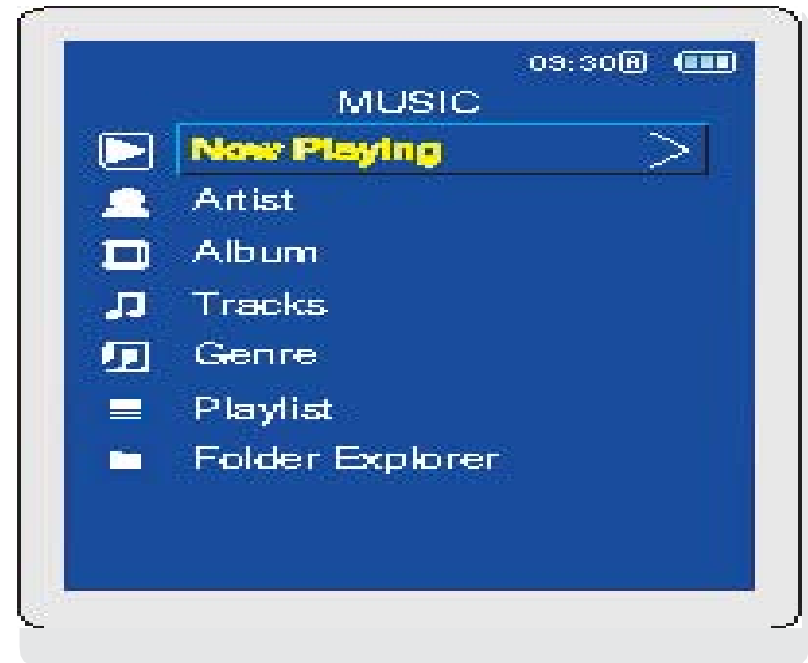

For more information about how to control your COBY MP3 player, please consult the Instruction Manual.

Getting Started with **VIDEO** Transfer

 
Install the conversion software (MTV Converter)

1. Insert the supplied installation CD in your CD/DVD drive.
2. **Double-Click** on the “**My Computer**” icon on your desktop, your **CD/DVD drive**, **video converter5.11(only english)** Folder, and the “**Setup**”
3. Follow the on-screen instructions to complete the installation.



Converting Video

To start the conversion software, Go to:

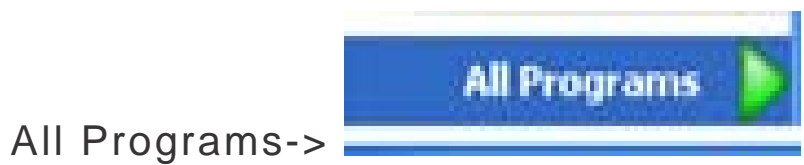





MP3 Player Utilities 5.11 → VideoConverter2.9 →

 


The Conversion software screen will appear (see below)

Connect the MP3 player to your computer.


Use this screen to add video conversion jobs to the queue.


1. Click on this  icon to locate the files on your computer that needs to be converted.
2. Click on the  icon to select an Output location where the converted video will be saved.
3. Click the  icon to start the file conversion.
4. To transfer the converted files to the MP3 player, check this option
5. Click on the  icon and select the "Video" Folder. This will transferred the converted files in the

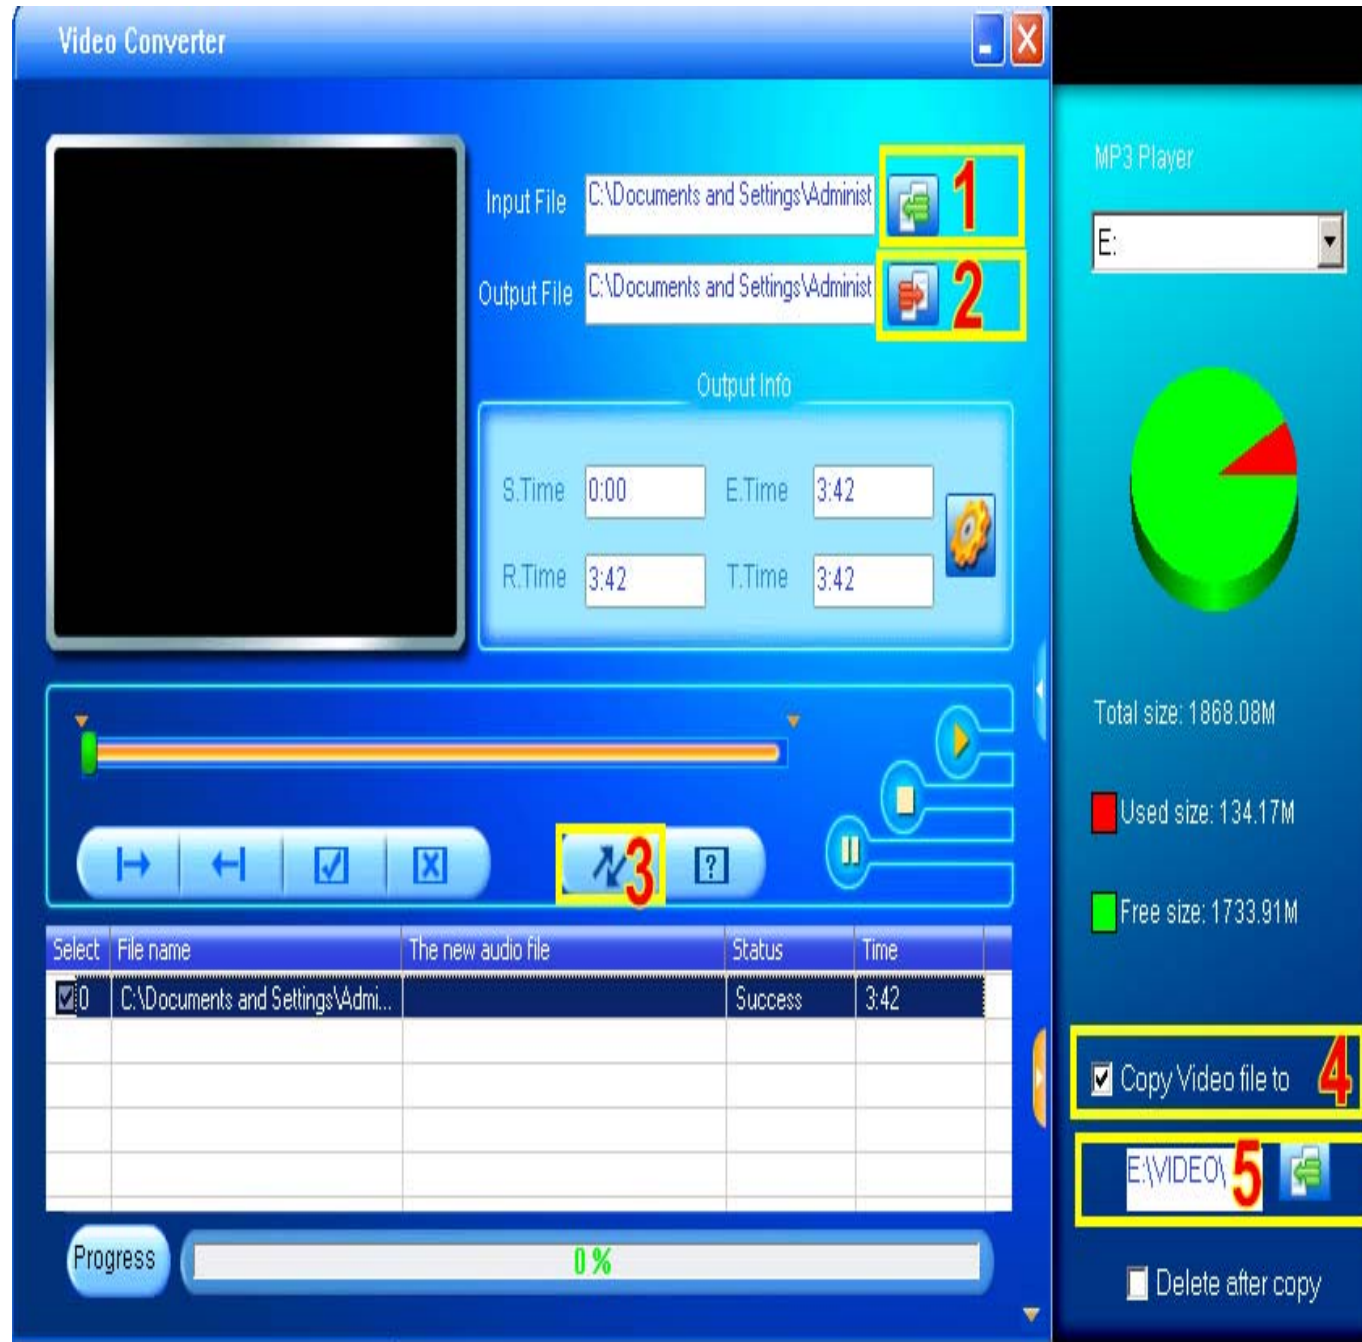

The screenshot shows the Video Converter application window. It features a central video preview area, input/output file fields, and a control panel with a progress bar and playback buttons. A table at the bottom displays conversion results. On the right, an MP3 Player interface shows a pie chart of storage usage and a file list.

Video Converter


Input File: C:\Documents and Settings\Administ  **1**

Output File: C:\Documents and Settings\Administ  **2**

Output Info

S.Time: 0:00 E.Time: 3:42

R.Time: 3:42 T.Time: 3:42

 **3**

Select	File name	The new audio file	Status	Time
<input checked="" type="checkbox"/>	0	C:\Documents and Settings\Admi...	Success	3:42


Progress: 0%


MP3 Player

Total size: 1868.08M

Used size: 134.17M

Free size: 1733.91M

Copy Video file to  **4**


E:\VIDEO\  **5**

Delete after copy

MP3 player Video Folder.

 
Start Listening to Music on Your COBY Player

Now that you have transferred Videos to your COBY player, you're ready to take your music video with you anywhere.

- ✦ Disconnect the MP3 player from the computer. Connect the supplied earphones to the headphone jack.
- ✦ Turn the player on, slide the  switch to the right and hold it until the screen turns on.
- ✦ Start the playback on your COBY player by entering the "Movies" menu.



When a movie is playing, hold the player horizontally

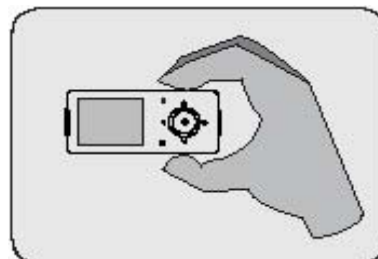

Transfer **PHOTO** files to Your COBY Player


1. Connect the player to your computer with the supplied USB 2.0 cable.
2. Double-click on the “MY COMPUTER” icon on your desktop.
3. The player will be listed as “COBY 705 or Removable Disk”.

 


4. Locate your JPEG image files.
5. Copy and Paste or Drag and Drop your JPEG files in the Removable Disk “PICTURES” folder. Done.

Start Viewing Pictures on Your COBY Player


Now that you have transferred pictures to your COBY player, you're ready to take your pictures with you anywhere.

- ✦ Disconnect the MP3 player from the computer.
- ✦ Turn the player on, slide the  switch to the right and hold it until the screen turns on.
- ✦ Start the playback on your COBY player by entering the “PHOTOS” menu.

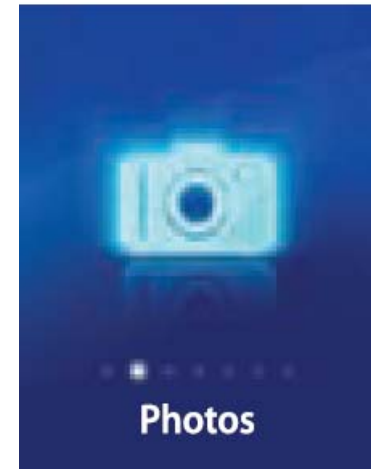

For more information about how to control your COBY MP3 player, please consult the Instruction Manual.

To **DELETE** files from Your COBY Player

1. Connect the player to your computer with the supplied USB 2.0 cable.
2. Double-click on the “MY COMPUTER” icon on your desktop.
3. The player will be listed as “COBY 705 or Removable Disk”. 
4. Double-click on the COBY 705 or Removable Disk, Select The Folder where the content is located (Music, Video, Pictures), Select the file and press “Delete”.



For more information about how to control your COBY MP3 player, please consult the Instruction Manual.

If you have a problem with this device, please read the troubleshooting guide on the user manual or visit us on the web at www.cobyusa.com for Frequently Asked Questions (FAQs). If these resources do not resolve the problem, please contact Technical Support.

Phone: 800-727-3592

Weekdays 8:00AM–9:00PM EST

Weekends 9:00AM–5:30PM EST

Weekdays 8:00AM–5:30PM EST