




DVD DIGITAL THEATER SYSTEM

TH-M606/TH-M603


Consists of XV-THM606, SP-PWM606, SP-THM606F, SP-THM606C and SP-THM606S/ Consists of XV-THM603, SP-PWM603, SP-THM606F, SP-THM606C and SP-THM606S

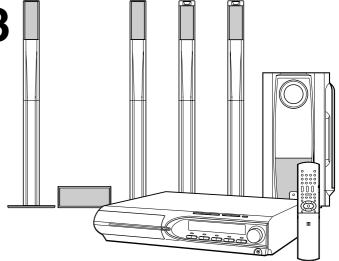

The figure is for the TH-M606.

TH-M505/TH-M501


Consists of XV-THM505, SP-PWM505, SP-THM505F. SP-THM505C and SP-THM505S/ Consists of XV-THM501, SP-PWM501, SP-THM303F, SP-THM303C and SP-THM303S

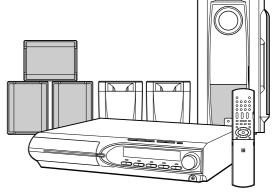

The figure is for the TH-M505.

TH-M303/TH-M301

Consists of XV-THM303, SP-PWM303, SP-THM303F, SP-THM303C and SP-THM303S/ Consists of XV-THM301, SP-PWM301, SP-THM303F, SP-THM303C and SP-THM303S

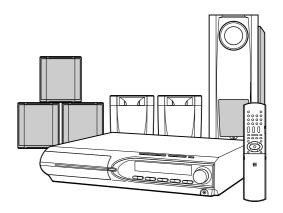











AV COMPU LINK Digital Direct Progressive Scan

For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No

Serial No.





The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT FOR LASER PRODUCTS

- 1. CLASS 1 LASER PRODUCT
- CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
- CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- 4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

CAUTION : Visible and invisible	ADVARSEL: Synlig og usynlig	VARNING : Synlig och	VARO: Avattaessa ja suojalukitus
laser radiation when open and			
interlock failed or defeated.			
AVOID DIRECT EXPOSURE TO			
BEAM. (e)	stråling. (d)	strålen. (s)	kohdistumista suoraan itseesi. (f)

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

- 1. Do not remove screws, covers or cabinet.
- 2. Do not expose this appliance to rain or moisture.

CAUTION — ©/I button! (XV-THM606/ XV-THM603/ XV-THM505/ XV-THM501/ XV-THM303/ XV-THM301)

Disconnect the mains plug to shut the power off completely (the STANDBY lamp goes off).

The O/I button in any position does not disconnect the mains line.

- When the system is on standby, the STANDBY lamp lights red.
- When the system is turned on, the STANDBY lamp goes off. The power can be remote controlled.

CAUTION (SP-PWM606/ SP-PWM603/ SP-PWM505/ SP-PWM501/ SP-PWM303/ SP-PWM301)

The power supply to the subwoofer is linked to the center unit. The POWER ON lamp on the subwoofer lights green when the power is turned on.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

For Canada

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

For Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.



TH-M606: 48.8 kg/108 lbs TH-M603: 42.1 kg/93 lbs TH-M505: 32.0 kg/71 lbs

TH-M501: 31.7 kg/70 lbs TH-M303: 26.2 kg/58 lbs TH-M301: 26.2 kg/58 lbs

CAUTION!

To avoid personal injury or accidentally dropping the unit, have two persons unpack, carry, and install the unit.

Table of contents

Playback	22
Basic playback	
One Touch Replay	
Fast-forward/fast-reverse search	
Skip to the beginning of a desired selection	24
Locating a desired title/group using number buttons	25
Playing back a bonus group	
Advanced operations	26
Using the surround mode	26
Using the on-screen bar	
Playing from a specified position on a disc	
Using the file control display	
Resume Playback	
Selecting a view angle	
Selecting the subtitle	
Selecting the audio	
Special picture playback	
Program Playback	
Random Playback	
Repeat Playback	
Tray lock	
Sound and other settings	
<u>-</u>	
Setting DVD preferences	38
Menu description	
•	
Tuner operations	42
Preset tuning	
Selecting the FM reception mode	
Reducing the noise of AM broadcast	
-	40
AV COMPU LINK remote control	4.4
system	
References	
Maintenance	
TOUDIESHOOHIIO	4.5

Specifications46

Notes on handling

■ Important cautions

Installation of the system

 
- Select a place which is level, dry and neither too hot nor too cold; between 5°C and 35°C (41°F and 95°F).
- Leave sufficient distance between the system and the TV.
- Do not use the system in a place subject to vibration.

Power cord

- Do not handle the power cord with wet hands!
- A small amount of power is always consumed while the power cord is connected to the wall outlet (center unit only).
- When unplugging the power cord from the wall outlet, always pull on the plug, not the power cord.

To prevent malfunctions of the system

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the system.
- Do not use any non-standard shape disc (like a heart, flower or credit card, etc.) available on the market, because it may damage the system.
- Do not use a disc with tape, stickers, or paste on it, because it may damage the system.



Note about copyright laws

Check the copyright laws in your country before recording from the discs. Recording of copyrighted material may infringe copyright laws.

Note about copyguard system

The discs are protected by copyguard system. When you connect the system to your VCR directly, the copyguard system activates and the picture may not be played back correctly.

Safety precautions

Avoid moisture, water and dust

Do not place the system in moist or dusty places.

Avoid high temperatures

Do not expose the system to direct sunlight and do not place it near a heating device.

When you are away

When away on travel or for other reasons for an extended period of time, disconnect the power cord plug from the wall outlet.

Do not block the vents

Blocking the vents may damage the system.

Care of the cabinet

When cleaning the system, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents including disinfectants. These may cause deformation or discoloring.

If water gets inside the system

Turn the system off and disconnect the power cord plug from the wall outlet, then call the store where you made your purchase. Using the system in this condition may cause fire or electrical shock

Supplied accessories

Check to be sure you have all of the supplied accessories. The number in parentheses is the quantity of the pieces supplied. If anything is missing, contact your dealer immediately.

- Remote control (1)
- Batteries (2)
- FM antenna (1)
- AM loop antenna (1)
- Power cord (1)
- System cord (1)
- Composite video cord (1)
- Speaker cords (TH-M606/TH-M603/TH-M505 only) For satellite (front left/right) and center speakers (3) For satellite speakers (surround left/right) (2)
- Screws (with washer) (TH-M606/TH-M603 only) M5 x 20 mm (13/16 inch):

For satellite speakers (8)

Playable disc types

This system has been designed to play back the following discs: DVD VIDEO, DVD AUDIO, Video CD (VCD), Super Video CD (SVCD), Audio CD (CD), CD-R and CD-RW.

- This system accommodates the NTSC system, and also can play discs recorded with PAL system. Note that the PAL video signal on a disc is converted to an NTSC signal and output.
- This system can also play MP3, WMA, JPEG and MPEG4 files recorded on CD-Rs and CD-RWs. (pp. 22)
- This system can also play finalized DVD-R/-RWs recorded in DVD VIDEO format. However, some discs may not be played because of their disc characteristics or recording conditions.

Discs you can play:

DVD VIDEO	CD		
VIDEO WIDEO	DIGITAL AUDIO		
DVD AUDIO	CD-R		
AUDIO AUDIO/VIDEO	DIGITAL AUDIO Recordable		
	CD-RW		
VCD	CD-RW		
VCD OSC Video CD OGRAL VOCEO	CD-RW COMPACT COMPA		
OSG Video CD	COMPACT COMPACT DIGITAL AUDIO		

DVD Logo is a trademark of DVD Format/Logo Licensing Corporation.

Region code of DVD VIDEO

DVD VIDEO players and DVD VIDEO discs have their own Region Code numbers. This system can play back DVD VIDEO discs whose Region Code numbers include the system's Region Code, which is indicated on the rear panel.

Example of playable DVD:









If a DVD with an improper Region Code number is loaded, "REGION CODE ERROR!" appears on the TV screen and playback cannot start.

- The following discs cannot be played back: DVD-ROM, DVD-RAM, SACD, CD-ROM, CD-I (CD-I Ready), Photo CD, etc.
 - Playing back these discs will generate noise and damage the speakers.
- On some DVD VIDEOs, DVD AUDIOs, VCDs or SVCDs, their actual operation may be different from what is explained in this manual. This is due to the disc programming and disc structure, not a malfunction of this system.

Notes on CD-R and CD-RW

- User-edited CD-Rs (Recordable) and CD-RWs (Rewritable) can be played back only if they are already "finalized".
- This system can play CD-Rs or CD-RWs recorded on a personal computer if they have been recorded in the audio CD format. This system can also play CD-Rs or CD-RWs if MP3, WMA, JPEG or MPEG4 files are recorded on them.

However, some discs may not be played back because of their disc characteristics, recording conditions, or damage or stain on them.

Especially, the configuration and characteristics of an MP3, WMA, JPEG or MPEG4 disc are determined by the writing (encoding) software and hardware used for recording. Therefore, due to the software and hardware used, the following symptoms may occur:

- Some discs may not be played back.
- Some tracks on an MP3 or WMA disc may be skipped or may not be played back normally.
- Some files on a JPEG or MPEG4 disc may be played back distortedly.
- Before playing back CD-Rs or CD-RWs, read their instructions or cautions carefully.
- CD-RWs may require a longer readout time. This is caused by the fact that the reflectance of CD-RWs is lower than that of regular CDs.

Notes on MP3/WMA/JPEG/MPEG4 discs

- MP3/WMA/JPEG/MPEG4 discs (either CD-R or CD-RW) require a longer readout time. (It differs due to the complexity of the directory/file configuration.)
- When making an MP3/WMA/JPEG/MPEG4 disc, select ISO 9660 Level 1 or Level 2 for the disc format.
- This system supports "multi-session" discs (up to 20 sessions).
- This system cannot play "packet write" discs.
- The system can only play MP3/WMA/JPEG/MPEG4 files with the following file extensions;

MP3: ".MP3", ".Mp3", ".mP3" and ".mp3"

WMA: ".wma", ".WMA" and any uppercase and lowercase combination (such as ".Wma")

combination (such as ".Wma")

JPEG: ".jpg", ".jpeg", ".JPG", ".JPEG" and any uppercase and lowercase combination (such as ".Jpg")

MPEG4: ".asf", ".ASF" and any uppercase and lowercase combination (such as ".Asf")

- If different type of files (audio (MP3/WMA), still picture (JPEG), and video (MPEG4) files) are recorded on a disc, set the FILE TYPE setting in the PICTURE menu to the appropriate setting for the data to be read. (Fig. 9g. 39)
- The system recognizes up to 150 tracks (files) per group, 99 groups per disc, and the total number of the tracks (files) that the system can play is 1000. For example, if you set FILE TYPE to AUDIO (Fig. 39) and play a disc that contains 500 MP3 tracks, 200 JPEG files, and 600 WMA tracks, the system can play 500 MP3 tracks and the first 500 of 600 WMA tracks.
- Some MP3/WMA/JPEG/MPEG4 discs may not be played back normally because of their disc characteristics or recording conditions.

Notes on MP3/WMA discs only

- The system supports MP3 files recorded with a bit rate of 32 320 kbps and a sampling frequency of 16 kHz, 22.05 kHz, 24 kHz*, 32 kHz, 44.1 kHz, or 48 kHz.
- If the tag information (album name, artist, and track title, etc.) is recorded on a disc, it appears in the file control display on the TV screen. (pp. 30)
- We recommend to record each piece of material (song) at a sample rate of 44.1 kHz and at a data transfer rate of 128 (96*) kbps.
- Some tracks may be skipped or may not be played back normally.
 - * For WMA only

Notes on JPEG discs only

- We recommend to record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a longer time to be displayed.)
- This system can only play baseline JPEG files.
- Some files on a JPEG disc may be played back distortedly.

Notes on MPEG4 disc only

- The system supports the types of simple profile as MPEG4 files (MPEG4 SP).
- The system supports MPEG4 files recorded with the maximum bit rate of 384 kbps and an audio codec of G.726. (To play the MPEG4 file, it is required that G.726 formatted audio data is contained in that file.)
- The maximum size of the played picture is at a 352 x 288 pixel resolution (CIF).
- Some files may be skipped or may not be played normally.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.


"CONSUMÉRS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525P AND 625P DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER."

USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE BY A CONSUMER ENGAGING IN PERSONAL AND NON-COMMERCIAL ACTIVITIES.


Description of parts and controls

The illustrations of the center unit and the subwoofer used in this manual are of TH-M606 unless otherwise noted.

Front panel (center unit)

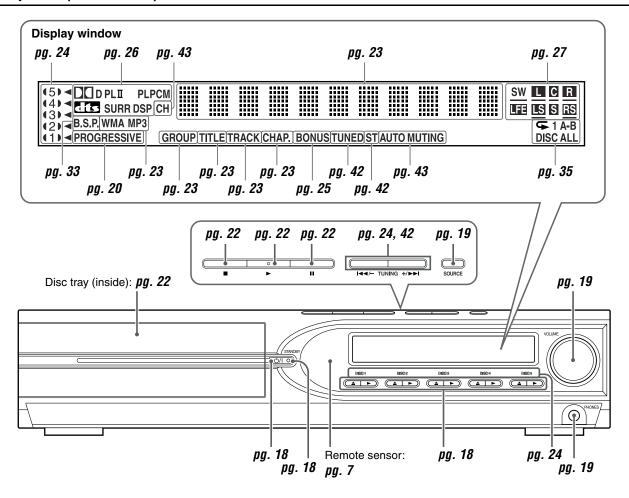


Rear panel (center unit)

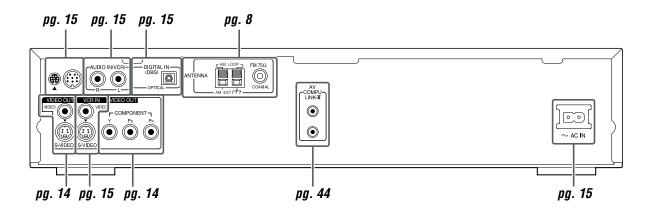


Powered subwoofer

SP-PWM606/SP-PWM505/SP-PWM501

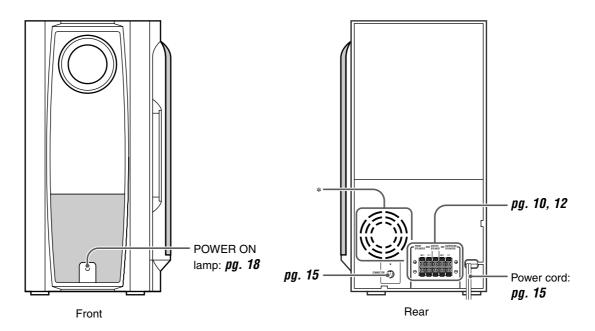

SP-PWM603/SP-PWM303/SP-PWM301

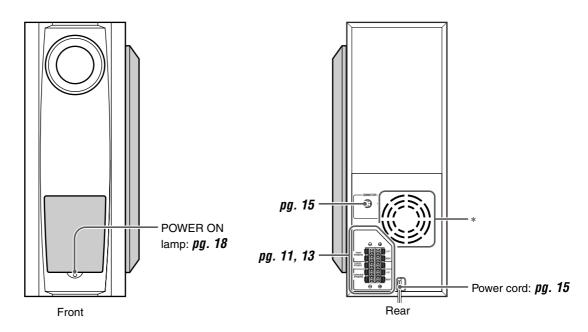


^{*} Do not block the ventilation openings.


NOTE

• For safety reasons, always ensure that there is sufficient space behind the powered subwoofer.

Remote control

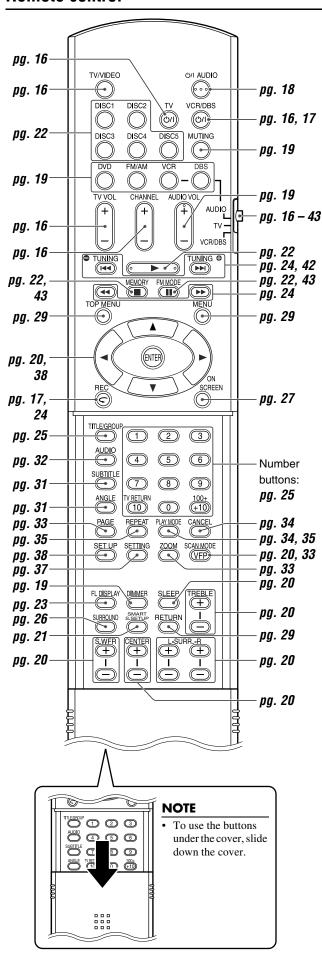

Putting batteries in the remote control

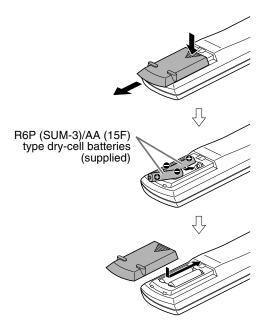

If the range or effectiveness of the remote control decreases, replace both batteries.

CAUTION

• Do not expose batteries to heat or flame.

Operating the system from the remote control


Aim the remote control directly to the front panel of the center unit.

• Do not hide the remote sensor.


Connecting the FM and AM antennas

■ AM loop antenna

Setting up supplied AM loop antenna

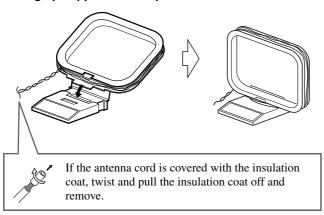

Connecting AM loop antenna

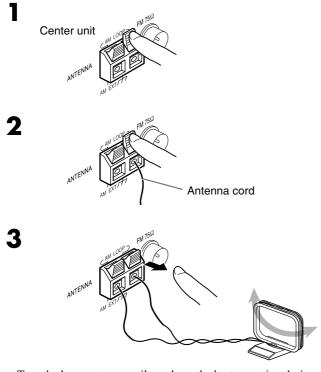


 Turn the loop antenna until you have the best reception during AM broadcast program reception.


NOTE

 Make sure the antenna conductors do not touch any other terminals, connecting cords and power cords. This could cause poor reception.

If reception is poor

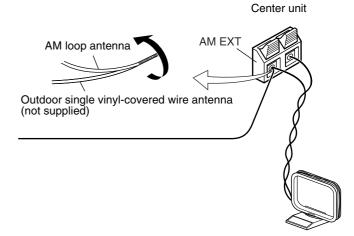


■ FM antenna

 

If reception is poor

Center unit

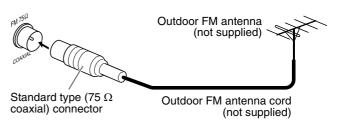


NOT

 We recommend that you use coaxial cable for the FM antenna as it is well-shielded against interference.

Assembling the front and surround speakers

The following procedure explains the front speaker assembly. The assembly of both the front and surround speakers are done in the same manner.

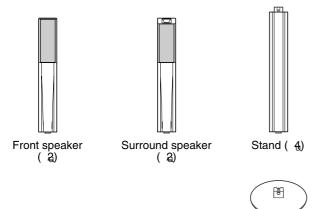


NOTE

The stands and the base plates are commonly used for both front and surround speakers assembly.


Before assembling —

- Prepare a Phillips screwdriver (not supplied).
- Take care not to drop the base plate while assembling; otherwise, it may cause damage to the floor or injury.

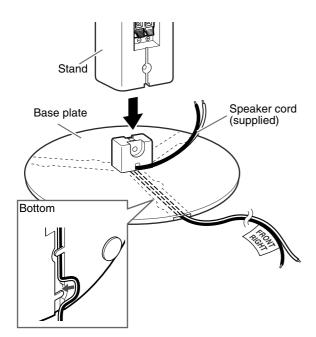


- You can route the speaker cords through one on the three grooves on the base plate depending on the speaker layout.
- Depending on the installing condition, you can assemble the front and surround speakers without the stands. In such a case, attach the speaker directly to the base plate instead of the stand.


2

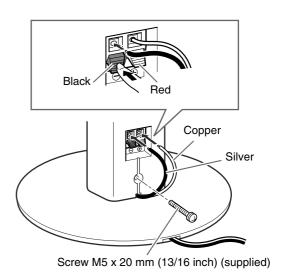

Base plate (4)

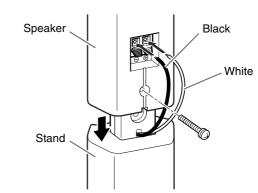


Completion

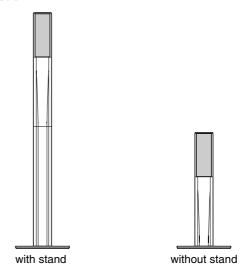


This page is for **TH-M606**

Connecting the satellite (front, center, surround) speakers

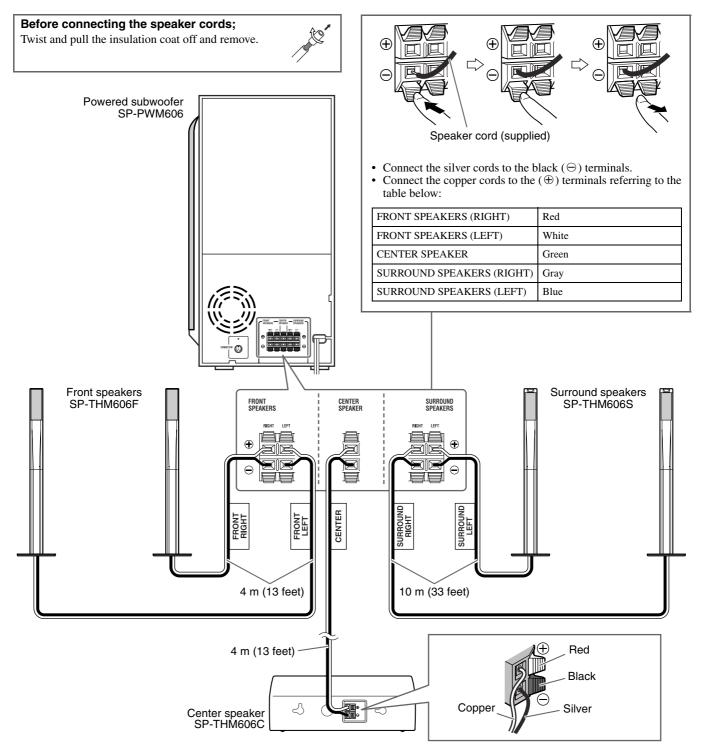


- When you connect speakers other than the supplied ones, use speakers with the same speaker impedance (SPEAKER IMPEDANCE) indicated near the speaker terminals on the rear of the powered subwoofer.
- DO NOT connect more than one speaker to one speaker terminal.

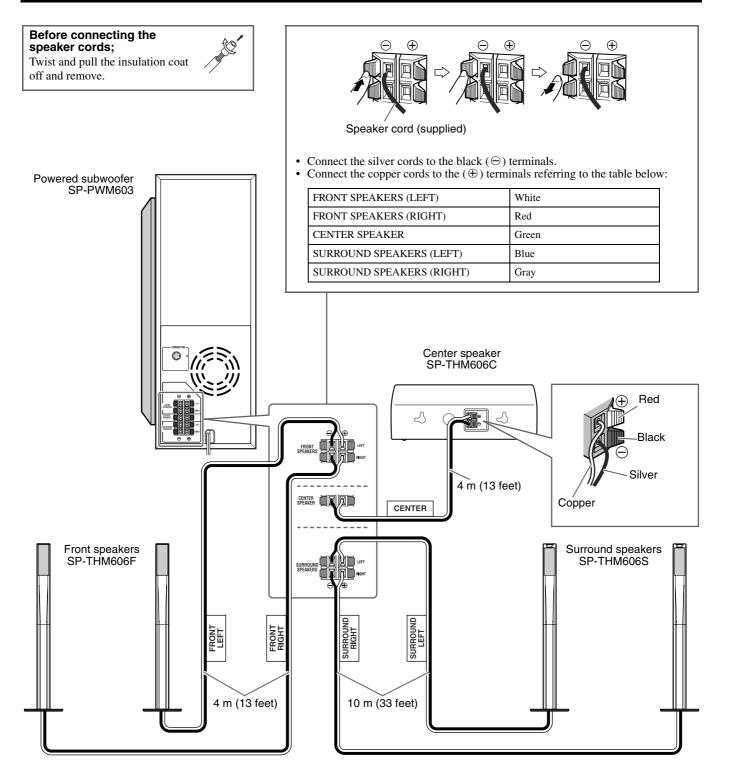


- When you connect speakers other than the supplied ones, use speakers with the same speaker impedance (SPEAKER IMPEDANCE) indicated near the speaker terminals on the rear of the powered subwoofer.
- DO NOT connect more than one speaker to one speaker terminal.

Note that the illustration below is for TH-M505.

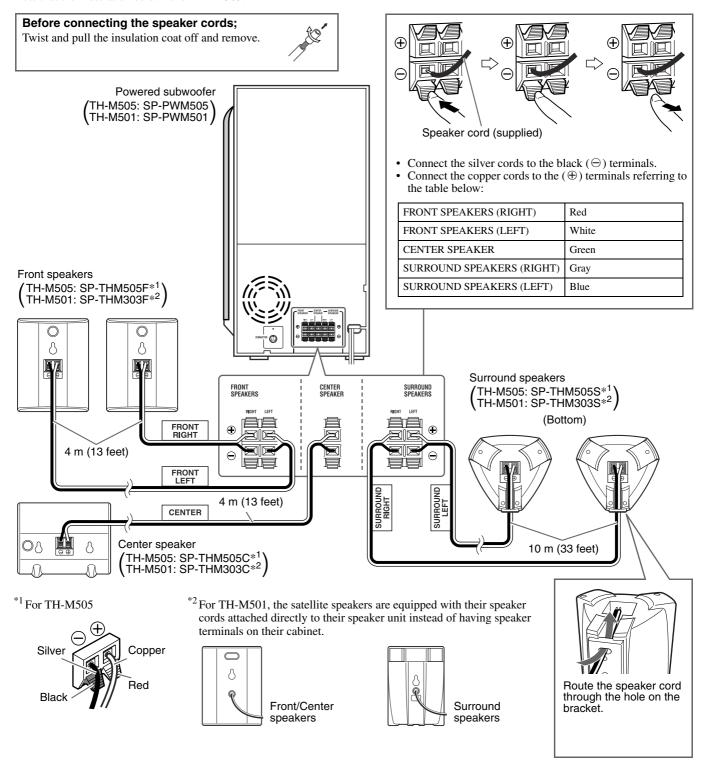


- When you connect speakers other than the supplied ones, use speakers of the same speaker impedance (SPEAKER IMPEDANCE) indicated near the speaker terminals on the rear of the powered subwoofer.
- DO NOT connect more than one speaker to one speaker terminal.
- When installing the satellite speakers on the wall;
 - Be sure to have them installed on the wall by a qualified personnel.
 DO NOT install the satellite speakers on the wall by yourself to avoid unexpected damage from their falling off the wall due to incorrect installation or weakness in wall structure.
 - Care must be taken in selecting a location for speaker installation on a wall. Injury to personnel or damage to equipment may result if the speakers installed interfere with daily activities.

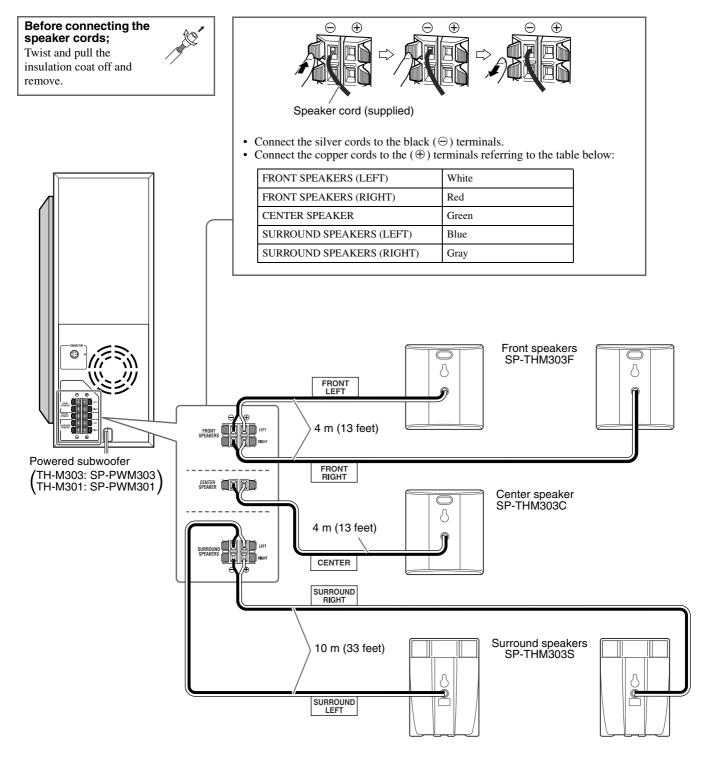

- When you connect speakers other than the supplied ones, use speakers of the same speaker impedance (SPEAKER IMPEDANCE) indicated near the speaker terminals on the rear of the powered subwoofer.
- DO NOT connect more than one speaker to one speaker terminal.
- When installing the satellite speakers on the wall;
 - Be sure to have them installed on the wall by a qualified personnel.
 DO NOT install the satellite speakers on the wall by yourself to avoid unexpected damage from their falling off the wall due to incorrect installation or weakness in wall structure.
- Care must be taken in selecting a location for speaker installation on a wall. Injury to personnel or damage to equipment may result if the speakers installed interfere with daily activities.

Speaker layout

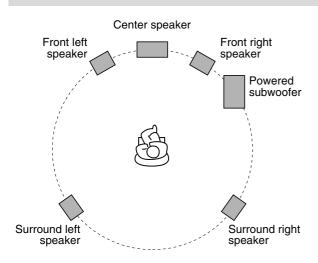

NOTE

- Although the satellite speakers and the powered subwoofer are magnetically shielded, the TV screen may appear mottled. In this case, keep enough distance between the speakers and the TV.
- The speakers are magnetically shielded to avoid color distortions on TVs. However, if not installed properly, they may cause color distortions. So, pay attention to the following when installing the speakers.
 - When placing the speakers near a TV set, turn off the TV's main power switch or unplug it before installing the speakers. Then wait at least 30 minutes before turning on the TV's main power switch

Some TVs may still be affected even though you have followed the above. If this happens, move the speakers away from the TV.

- · Place the satellite speakers on a flat and level surface.
- Be sure to place the powered subwoofer to the TV's right. If you place the powered subwoofer to the TV's left, keep sufficient distance between them to prevent the TV screen from appearing mottled.


For TH-M606/TH-M603 only:

Do not lean against the satellite speakers, as the speakers could fall down or break, possibly causing injury. Especially be careful not to let children lean against them.

Connecting a TV


- You can get better picture quality in the order Component video > S-video > Composite video.
- Distortion of picture may occur when connecting to the TV via a VCR, or to a TV with a built-in VCR.
- You need to set "MONITOR TYPE" in the PICTURE menu correctly according to the aspect ratio of your TV. (pg. 39)

To connect a TV equipped with the component video input jacks

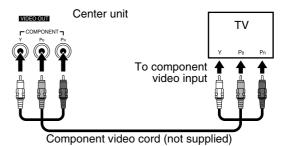


- If your TV supports progressive video input, you can enjoy a high quality picture by setting the progressive scan mode to active. (F pg. 20)
- If the component video input jacks of your TV are of the BNC type, use a plug adapter (not supplied) to convert the pin plugs to BNC
- The component video signals can be output only when you select "DVD" as the source to play. (pg. 19)

■ To connect a TV equipped with the composite or Svideo jacks

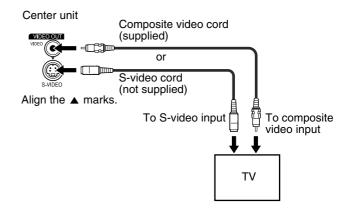

Connecting the powered subwoofer

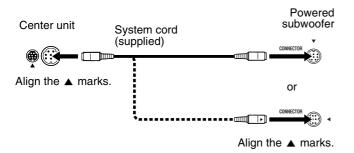


NOTE

 The way of connecting the system cord varies depending on the type of the powered subwoofer.

Connecting to an analog component

You can enjoy the sound of an analog component.

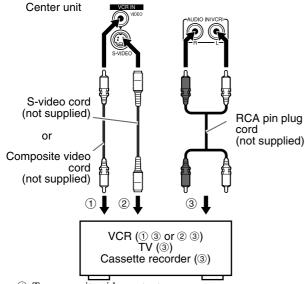


- ① To composite video output
- ② To S-video output
- 3 To audio output

NOTE

 The signals input to the VIDEO jack of the VCR IN jacks will be output only from the VIDEO jack of the VIDEO OUT jacks, not from the S-VIDEO jack of the VIDEO OUT jacks.

Connecting to a digital component

You can enjoy the sound of a digital component.

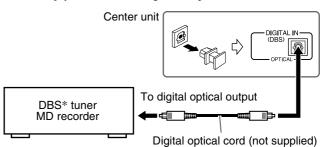


* DBS = Direct Broadcasting Satellite

NOTE

 Only digital audio signals can be input when selecting "DBS" as the source to play. (pp 9. 19) When connecting a video component such as a DBS tuner, operate this system to listen to the sound.

Connecting the power cord


Make sure that all other connections have been completed.

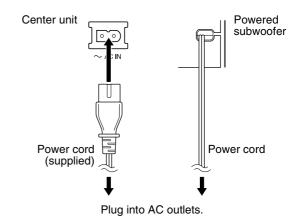

- Disconnect the power cord before cleaning or moving the system.
- Do not pull on the power cord to unplug the cord. When unplugging the cord, always grasp and pull the plug so as not to damage the cord.

Operating external components with the remote control

The buttons described below are used on pages 16 and 17.

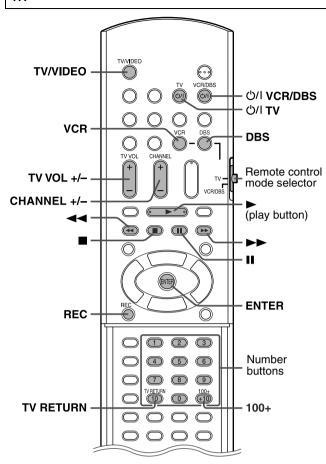

NOTE

- · Manufacturers' codes are subject to change without notice.
- Set the codes again after replacing the batteries of the remote control.

Operating the TV

■ To set the manufacturer's code

You can operate a JVC TV without setting the manufacturer's code.

- Slide the remote control mode selector to TV.
- **2** Press and hold O/I TV.

 Keep the button pressed until step 4 is finished.
- 3 Press ENTER.

4 Press number buttons (1-9, 0) to enter the manufacturer's code (2 digits).

Examples: For a Hitachi TV: Press 1, then 0. For a Toshiba TV: Press 0, then 8.

Manufacturer	Code	Manufacturer	Code
JVC	01	Samsung	12
Hitachi	10	Sharp	06
Magnavox	02	Sony	07
Mitsubishi	03	Toshiba	08
Panasonic	04, 11	Zenith	09
RCA	05		•

5 Release ७/। TV.

If there is more than one code listed for corresponding brand, try each one until you enter the correct one.

■ Operation

Aim the remote control at the TV.

IMPORTANT

Before using the remote control to operate a TV;

• Set the remote control mode selector to TV.

The following buttons are available:

O/I TV: Turns TV on and off.
TV VOL +/−: Adjusts the volume.

TV/VIDEO: Selects the input mode (either TV or

VIDEO).

CHANNEL +/-: Changes the channels. 1-10, 0, +10 (100+): Selects the channel.

TV RETURN: Alternates between the previously selected

channel and the current channel.

Operating the DBS tuner or CATV converter

- To set the manufacturer's code
- Slide the remote control mode selector to VCR/DBS.
- 2 Press DBS.
- **3** Press and hold O/I VCR/DBS. Keep the button pressed until step 5 is finished.
- 4 Press ENTER.

5 Press number buttons (1-9, 0) to enter the manufacturer's code (2 digits).

Examples:

For a GI Jerrold product:

Press 0, then 1.

For a Sony product:

Press 2, then 0.

Manufacturer	Code
Echostar	21
GI Jerrold	01, 02, 03, 04, 05, 06, 07, 08
Hamlin	15, 16, 17, 18
Pioneer	13, 14
RCA	19
Scientific Atlanta	09, 10
Sony	20
Zenith	11, 12

6 Release O/I VCR/DBS.

If there is more than one code listed for your brand, try each one until you enter the correct one.

Operation

Aim the remote control at the DBS tuner or CATV converter.

IMPORTANT

Before using the remote control to operate a DBS tuner or CATV converter;

 Set the remote control mode selector to VCR/DBS.



The following buttons are available:

U/I VCR/DBS: Turns DBS tuner or CATV converter on and

off.

CHANNEL +/-: Changes the channels. 1-10, 0, +10 (100+): Selects the channel.

Operating the VCR

- To set the manufacturer's code
- Slide the remote control mode selector to VCR/DBS.
- **2** Press VCR.
- 3 Press and hold O/I VCR/DBS.

Keep the button pressed until step 5 is finished.

4 Press ENTER.

5 Press number buttons (1-9, 0) to enter the manufacturer's code (2 digits).

Examples:

For a Philips VCR:

Press 0, then 9.

For an NEC VCR:

Press 2, then 5.

Manufacturer	Code	Manufacturer Code		
JVC	01, 02, 03	Philips	09	
Emerson	11, 26	RCA	05, 06	
Fisher	29	Samsung	24	
Funai	10, 14, 15, 16	Sanyo	21, 22, 23	
Gold Star	12	Sharp	27, 28	
Hitachi	04	Shintom	30	
Mitsubishi	13	Sony	18, 19, 20	
NEC	25	Zenith	08	
Panasonic	07, 17			

6 Release ७/। VCR/DBS.

If there is more than one code listed for your brand, try each one until you enter the correct one.

Operation

Aim the remote control at the VCR.

IMPORTANT

Before using the remote control to operate a VCR:

 Set the remote control mode selector to VCR/DBS.

2 Press VCR.

The following buttons are available: O/I VCR/DBS: Turns VCR on and off.

▶ (play button): Starts playback.■ : Stops operation.

■ : Stops operation.

■ : Pauses playback.

► : Fast forwards video tape.

■ : Rewinds video tape.

REC: Press this button together with ► (play button) to

start recording or together with **II** to pause

recording.

CHANNEL +/-: Changes the TV channels on the VCR.

NOT

When operating a VCR or DBS tuner/CATV converter;

 The source setting of VCR or DBS remains after you have changed the remote control mode selector to AUDIO or TV. When operating VCR or DBS tuner/CATV converter again, it is not necessary to press VCR or DBS after setting the remote control mode selector.



 
Basic operations

The buttons on the remote control are used to explain most of the operations in this manual. You can use the buttons on the center unit same as on the remote control for operations unless otherwise noted.


IMPORTANT

Before using the remote control for the following operation;

Set the remote control mode selector to AUDIO.





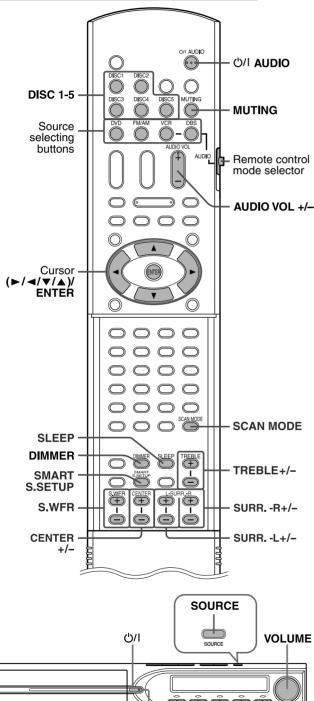

STANDBY

PHONES




Turning the system on/off

On the center unit:

Press U/I.

When DVD is selected as the source (F pg. 19), the following messages will appear on the TV screen.

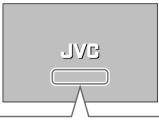

- "OPEN"/"CLOSE":
 - Appears when opening or closing the disc tray.
- "NOW READING":
- Appears when the system is reading the disc information.
- "REGION CODE ERROR!":
 - Appears when the Region Code of the DVD VIDEO does not match the code the system supports. The disc cannot be played back.
- "NO DISC":
- Appears when no disc is loaded.
- "CANNOT PLAY THIS DISC":
 - Appears when unplayable disc is loaded.

NOTE

- The STANDBY lamp turns on when the power is turned off and turns off when the power is turned on.
- The power supply to the subwoofer is linked to the center unit. The POWER ON lamp on the subwoofer lights green when the power is turned on.
- A small amount of the power is consumed even when the power is turned off (center unit only). This is called standby mode and the STANDBY lamp lights in this mode. Unplug the power cord from the AC outlet to turn the power off completely.
- You can also turn on the system by pressing the following buttons;
 - One of **≜** buttons on the center unit
 - One of the source selecting buttons on the remote control
 - One of the DISC (1-5) ▶ buttons or ▶ on the center unit. You can use the same buttons on the remote control except after pressing FM/AM.

Selecting the source to play

On the remote control:

Press one of the source selecting buttons (DVD, FM/AM, VCR or DBS).

DVD: To play back a disc (DVD VIDEO, VCD etc.). (F pg. 22)

FM/AM: To tune in an FM or AM station. (F pg. 42)

Each time you press the button, the band alternates

between FM and AM.

VCR: To select the source from a component connected to the

VCR IN jacks and AUDIO IN (VCR) jacks. (F pg. 15)

DBS: To select the source from a component connected to the

DIGITAL IN (DBS) jack. (F pg. 15)

On the center unit:

Press SOURCE repeatedly until the source name you want appears on the display window.

NOTE

- When AM, FM or DBS is selected as the source, the system does not output video signals.
- · It may take time to change the source.

Adjusting the volume [VOLUME]

CAUTION

Always set the volume to minimum level before starting any source.
 If the volume is set at its high level, the sudden blast of sound could permanently damage your hearing and/or blow out the speakers.

On the remote control:

Press AUDIO VOL + or -.

On the center unit:

Turn VOLUME.

Listening with headphones (not supplied)

CAUTION

Be sure to turn down the volume;

- Before connecting or putting on headphones as high volume may damage both the headphones and your hearing.
- Before disconnecting headphones as high volume may be suddenly output from the speakers.

While connecting a pair of headphones to the PHONES jack on the center unit, the system automatically cancels the surround mode (F) pg. 26) currently selected, deactivates the speakers, turn the subwoofer's power off, and activates the headphone mode. "HEADPHONE" appears on the display window.

Headphone mode

When using the headphones, the following signals are output regardless of your speaker setting:

- For 2 channel sources, the front left and right channel signals are output from the headphones.
- Multi-channel signals are down-mixed and output from the headphones.
- (DVD AUDIO) When the disc prohibits down-mixing, only the front left and right channels are output from the headphones. In this case, "L/R ONLY" appears on the display window for a few seconds.

Turning off the sound temporarily [MUTING]

Press MUTING.

To restore the sound

Perform one on the following:

- · Press MUTING again.
- Press AUDIO VOL +/- (or turn VOLUME on the center unit).

Adjusting the brightness of the indications [DIMMER]

Press DIMMER.

Each time you press the button, the brightness level changes.

Sleep Timer [SLEEP]

The system turns off automatically when the specified period of time has passed.

Press SLEEP.

Each time you press the button, the shut-off time changes. Example:



To check the remaining time

Press SLEEP once.

To change the remaining time

Press SLEEP repeatedly.

To cancel

Press SLEEP repeatedly until "SLEEP OFF" appears.

• Turning off the power also cancels the Sleep Timer.

Adjusting the output level of the subwoofer and center/surround speakers [SUBWFR, CENTER, SURR L/R]

Press S.WFR +/- to adjust the subwoofer. Press CENTER +/- to adjust the center speaker.

Press SURR.-L +/- to adjust the surround left speaker.

Press SURR.-R +/- to adjust the surround right speaker.

NOTE

- You can also make adjustments by using the setup menu shown on the TV screen. (Ppg. 39)
- The adjustments take effect for all sources.
- You cannot make this adjustment when FM or AM is selected as the source.

Adjusting the treble sound [TREBLE]

Press TREBLE +/-.

NOTE

• The adjustments take effect for all sources.

Changing the scan mode

The system can be accommodated to your TV's scan mode.

NOTE

- To use the system in PROGRESSIVE mode, it is required that the center unit is connected to the TV by using a component video cord (not supplied). (pp. 14)
- While DVD is selected as the source and stopped

Press and hold SCAN MODE for 2 seconds.

"INTERLACE" or "PROGRESSIVE" appears on the display window.

• INTERLACE: Select this when your TV supports the

interlaced video input only.

• PROGRESSIVE: Select this when your TV equipped with

component jacks supports the progressive

video input.

You can get better picture quality in PROGRESSIVE mode than in INTERLACE mode.

3 Press ENTER while the selected mode is displayed.

When "PROGRESSIVE" is selected, the PROGRESSIVE indicator lights on the display window.

NOTE

- Although the picture may be distorted when you press ENTER, this
 is not a malfunction of the system.
- "INTERLACE" is selected at your purchase.
- There are some progressive TVs and High-Definition TVs that are not fully compatible with this system, resulting in an unnatural picture when playing back a DVD VIDEO in the progressive scan mode. In such a case, change the scan mode to "INTERLACE".
 To check the compatibility of your TV, contact your local JVC customer service center.
- All JVC progressive TVs and High-Definition TVs are fully compatible with this system.

Optimizing the speaker settings [Smart Surround Setup]

NOTE

- When you change the positioning of the speakers or listener, or replace the supplied speakers with other ones, perform Smart Surround Setup again.
- While DVD is selected as the source and stopped
- Take your position where you listen to the sound.
- **2** Press and hold SMART S.SETUP.



"SETTING UP" flashes on the display window.

3 Press ENTER, press Cursor ▼/▲ to select the distance between the front speakers and the listening position, then press ENTER.



- 4 Press Cursor ▼/▲ to select START, then press ENTER.
- **5** Clap your hands over your head once.
- Make sure that "COMPLETED!" appears on the TV screen, then press SMART S.SETUP.

The system detects your clapping sound through the satellite speakers, then automatically makes the best settings for each speaker. "COMPLETED!" appears on the TV screen when Smart Surround Setup completes.

When "FAILED!" appears on the TV screen

The system could not detect the clapping sound correctly. In such a case, follow the instructions that appears on the TV screen.

 When the system detects the clapping sound as "FAILED!" three times, set the distance (DISTANCE) and the output level (LEVEL) manually (Fig. 39).

To cancel

Press SMART S.SETUP.

NOTE

- You need to set the subwoofer's output level (LEVEL) manually.
 (IF pg. 20 or 39)
- In step 2, "SW ERROR" appears on the display window if the center unit and the powered subwoofer are not connected correctly by using the supplied system cord.

Playback

• The icon such as shows the types of discs the operation is

IMPORTANT

Before using the remote control for the following operation;

- Set the remote control mode selector to AUDIO.
- Press DVD.



The buttons described below are used on pages 22 to 25. **DISC (1-5)** DVD (play button) Remote control mode selector **ENTER** 1 2 (3) TITLE/GROUP **4 5 6** Number buttons 7 8 10 0 FL DISPLAY Disc lamps (TH-M606/TH-M603/TH-M505/ TH-M501 only)

DISC (1-5) ≜/▶

 
Basic playback

Press the desired DISC (1-5) ▲ on the center unit.



• The system turns on and the disc tray comes out.

2 Place a disc.





3 Press DISC (1-5).

For MP3/WMA disc

The file control display (F pg. 30) appears on the TV screen.

For JPEG disc

Each file (still pictures) is shown on the TV screen for about 3 seconds (slide-show). When stopping playback, the file control display (F pg. 30) appears on the TV screen.

For MPEG4 disc

Pressing TOP MENU or MENU shows the file control display (F pg. 30) on the TV screen during playback.

■ To pause playback

Press II.

To return to playback, press ► (play button).

■ To stop

Press ■.

On-screen guide icons

During DVD VIDEO playback, the following guide icons may appear for a while on the TV screen;

- appears at the beginning of a scene containing multisubtitle languages.
- appears at the beginning of a scene containing multi-audio languages.
- appears at the beginning of a scene containing multi-angle views.
- (Play), (Pause), / (Fast forward/ (Slow-motion forward/ reverse): appears when you perform each operation.
- O: the disc cannot accept an operation you have tried to do.


NOTE

 
- Up to 5 discs can be loaded.
- You can also start playback by pressing ► (play button) or DVD.
- The system plays back available discs sequentially until you stop playback or until the disc loaded on the DISC 5 tray reaches to the end.
- (For JPEG) The system cannot accept operations even though you
 press any buttons before the entire picture appears on the TV screen.
- If you do not want the on-screen guide icons to appear, see page 40.

■ Playback information on the display window DVD VIDEO


Example:

When a DVD VIDEO encoded with Dolby Digital 5.1ch is played

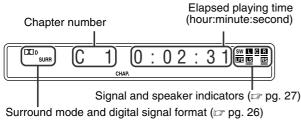




DVD AUDIO

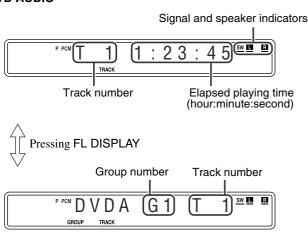

VCD/SVCD/CD

Example:

 When a CD is played back



^{*1} VCD indication appears for VCD/SVCD.


NOTE

When a VCD or SVCD with PBC function is played, the elapsed playing time does not appear, but "PBC" appears.

MP3/WMA disc


Example:

When an MP3 disc is played back

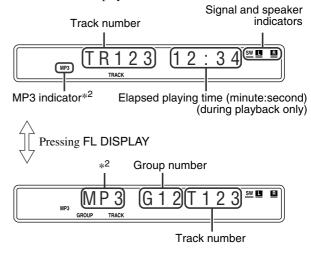



*2 WMA indicator lights for WMA disc.

 JPEG disc



MPEG4 disc

 

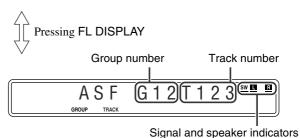

NOTE

 
- You can change the time information mode (except for MP3/WMA/ JPEG/MPEG4). (
 pg. 28)
- You can also check the playback information on the TV screen.
 (pg. 27)

■ Disc information on the display window

The disc indicators on the display window show the current status of the corresponding disc tray.

Example:

When the discs are loaded to disc trays 1, 2 and 5, and the disc in the disc tray 5 is selected.



Currently loaded disc number

About the disc lamps (For TH-M606/TH-M603/TH-M505/TH-M501)

The disc lamps on the center unit also show the disc status. Only the disc lamp currently selected lights.

■ Screen saver

A TV screen may burn out if a static picture is displayed for a long time. To prevent this, the system automatically dims the screen if a static picture is displayed for over 5 minutes (the screen saver function).

- Pressing any button will cancel the screen saver function.
- If you do not want to use the screen saver function, see page 39.

One Touch Replay

You can move back the playback position by 10 seconds from the current position.



■ During playback

On the remote control:

Press ←.

NOTE

- This function works in the same title.
- This feature may not work for some discs.

Fast-forward/fast-reverse search

■ During playback



On the remote control:

Press ▶▶ or ◄◄.

Each time you press the button, the search speed changes (\times 2, \times 5, \times 10, \times 20, \times 60).

To return to normal speed playback

Press ► (play button).

On the remote control and the center unit:

Press and hold ▶▶ or ◄◄.

Continuously pressing $\blacktriangleright \blacktriangleright \mid$ or $\mid \blacktriangleleft \triangleleft$ increases the fast-forward/reverse search speed ($\times 5$ $_{\circ} \times 20$).

NOTE

- The operation with ►►I or I◄◄ above is available for a disc other than MPEG4 disc.
- When a DVD VIDEO, VCD, SVCD, or MPEG4 disc is played back, no sound comes out during fast-forward/reverse search.
- When a DVD AUDIO or CD is played back, sound is intermittent and low during fast-forward/reverse search.
- · This feature may not work for some discs.

Skip to the beginning of a desired selection

■ Using **▶▶**|/|**◄◄** buttons

■ For DVD VIDEO (chapter): During playback For VCD/SVCD (track):



During playback without PBC function
For DVD AUDIO/CD/MP3/WMA/JPEG/MPEG4 (track/file):
During playback or while stopped

Press ▶▶ or I◄◄ repeatedly.

NOTE

- When playing back an MP3/JPEG disc, you can make operations using the file control display. (Fig. 30)
- This feature may not work for some discs.

Using number buttons on the remote control

■ For DVD VIDEO (title, chapter): While stopped, the title number is selected. During playback, the chapter number is selected.

For DVD AUDIO (track):

During playback or while stopped

For VCD/SVCD (track):

During playback without PBC function

For CD/MP3/WMA/JPEG/MPEG4 (track/file):

During playback or while stopped

Press number buttons (0-10, +10) to select the desired number.

• For details on using the number buttons, see "How to use the number buttons" below.

How to use the number buttons

To select 3: Press 3.

To select 14: Press +10, then 4. To select 24: Press +10 twice, then 4. To select 40: Press +10 three times, then 10. Or press +10 four times, then 0.

Locating a desired title/ group using number **buttons**

stopped











■ During playback or while

Press TITLE/ GROUP.

" or "" is shown in the title/group display area in the display window.

Example:

During DVD VIDEO playback

1:23:45

2 While the display window shows " " or ", use number buttons (0-10, +10) to enter the desired title or group number.

The system starts playback from the first chapter/track/file of the selected title/group.

• For details on using the number buttons, see "How to use the number buttons" above.

• This feature may not work for some discs.

Playing back a bonus group

Some DVD AUDIOs have a special group called "bonus DVD group" whose contents are not open to the public. The AUDIO bonus group is always assigned to the last group of a disc. To play back a bonus group, you have to enter the specific "key number" (a password). The way of getting the key number depends on the disc. After getting the key number, you can play back the bonus group by following the procedure below.

■ While the BONUS indicator lights up on the display window

Select the bonus group.

For selecting the group, see "Locating a desired title/group using number buttons" described above. The key number entry indication appears.

On the TV



On the display window



f 2 Press number buttons (0-9) to enter the key number, then press ENTER.

When you enter the correct key number, playback starts and the BONUS indicator goes off.

• If you enter the wrong number, reenter the correct number.

To clear the key number entry

Perform whichever one of the following:

- Press ■.
- Open the disc tray.
- Turn off the system.

- If you specify a track in the bonus group for Program Playback, the key number entry indication in step 1 appears for entering the key
- · In Random Playback, tracks in the bonus group are not played back.

Advanced operations


 The icon such as shows the types of discs the operation is available for.

IMPORTANT

Before using the remote control for the following operation;

- Set the remote control mode selector to AUDIO.
- 2 Press DVD.
- There are exceptions in the operation mentioned above. In such a case, follow each instruction.

The buttons described below are used on pages 26 to 37.

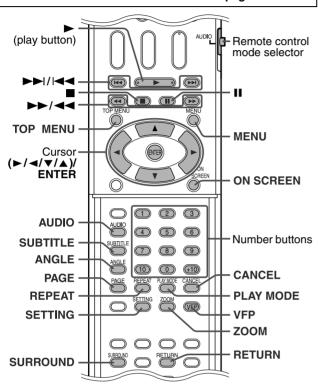

Using the surround mode

■ Auto Surround (AUTO SURR)

Used to reproduce the sound as it is recorded without any conversion (downmixing or simulation, etc.). For example, a multichannel source is automatically reproduced in multichannel audio.

■ Dolby Surround

Dolby Pro Logic II*1

Dolby Pro Logic II has a newly developed multichannel playback format to decode all 2 channel sources — stereo source and Dolby Surround encoded source — into a 5.1 channel.

Dolby Pro Logic II has two modes — Movie mode and Music mode:

• Pro Logic II Movie (PL II MOVIE)

Suitable for reproduction of Dolby Surround encoded sources bearing the mark $\square\square$

• Pro Logic II Music (PL II MUSIC)

Suitable for reproduction of any 2 channel stereo music sources.

Dolby Digital*1

Used to reproduce multichannel soundtracks of the software encoded with Dolby Digital (DDDDDD).

■ DTS Digital Surround*²

Used to reproduce multichannel soundtracks of the software encoded with DTS Digital Surround (

DTS Digital Surround (DTS) is another discrete multichannel digital audio format available on CD and DVD software.

Available Surround modes for each input signal

The $\sqrt{\text{marks show available surround modes.}}$

Mode	Surround off	Auto Surround	Dolby Surround			DTS Digital Surround	Linear PCM	Packed PCM	DSP
Signal	SURR OFF	AUTO SURR	PL II MOVIE*3	PL II MUSIC*3	Dolby Digital	DTS	LPCM	PPCM	ALL CH ST.*3
Dolby Digital (Multichannel)	V	$\sqrt{}$	_	_	$\sqrt{}$	_	_	_	_
Dolby Digital (2 channel)	V	V	√	√	_	_	_	_	V
DTS Digital Surround (Multichannel)	V	V	_	_	_	V	_	_	_
DTS Digital Surround (2 channel)	V	V	V	V	_	_	_	_	V
Analog (VCR) or Linear/Packed PCM (2 channel)	V	V	V	V	—	_	_	_	V
Linear/Packed PCM (Multichannel)	V	V	_	_		_	√	V	

- Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "MLP Lossless", and the double-D symbol are trademarks of Dolby Laboratories.
- *2 "DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.
- *3 You can select these modes by pressing SURROUND.
 (FF pg. 27)

■ All Channel Stereo (DSP)

All Channel Stereo (ALL CH ST.) mode can reproduce a larger stereo sound field using all the connected (and activated) speakers. All Channel Stereo can be used while reproducing 2 channel stereo source.

Normal stereo sound







Indicators on the display window

Digital signal format indicators

Lights when DVD AUDIO packed PCM signals PPCM:

comes in.

LPCM: Lights when Linear PCM signal comes in. Lights when Dolby Digital signals come in. DDD: Lights when DTS Digital (Surround) signals dts ·

come in.

No indication: No digital signal indicator lights when analog

signals come in.

Dolby Surround/DSP mode indicators

DDPLII: Lights when Dolby Pro Logic II mode is activated. DSP: Lights when All Channel Stereo mode is activated.

Source signal indicators, etc.

Light to indicate the incoming signals.



L: Lights when the left channel signal comes in.

C: Lights when the center channel signal comes in.

R: Lights when the right channel signal comes in.

III: Lights when the LFE channel signal comes in.

Lights when the surround left channel signal comes in.

ES: Lights when the surround right channel signal comes in.

S: Lights when the monaural surround channel signal or 2 channel Dolby Surround signal comes in.

SW: Always lights.

The channel with "—" shows that the corresponding speakers are reproducing the channels' sound.

If the channels' sound decoded into 5.1 channel is reproduced, only "—" lights.

Selecting the surround mode

The system is set up to automatically select the optimal surround mode for input signal from digital multichannel software. When playing back 2 channel source, you can select the desired surround mode manually.

IMPORTANT

Before using the remote control for the following operation;

• Set the remote control mode selector to AUDIO.



■ When playing back digital multichannel software (except during SURR OFF mode)

The appropriate multichannel surround mode (Dolby Digital, DTS Digital Surround or Linear/Packed PCM) is automatically selected.

■ When playing back 2 channel source

You can select either mode of Dolby Pro Logic II (PL II MOVIE/ PL II MUSIC) or the DSP (ALL CH ST.) mode.

Press SURROUND repeatedly to select the desired mode.

The surround mode is turned on and the current surround mode appears on the display window.

Each time you press the button, the surround mode changes.

For details on each mode, see page 26.

To turn off the surround mode

Press SURROUND repeatedly until SURR OFF appears on the display window.

Storing adjustments — auto memory

When you turn the power off, the system memorizes the current surround mode. The memorized mode is automatically recalled when you turn the power on.

NOTE

- When FM or AM is selected as the source, you cannot select any surround mode.
- For a down-mixing prohibited DVD AUDIO disc, the system continues to output multi-channel signals with "MULTI CH" shown on the display window even if the surround mode is turned off during playback. On the other hand, the system outputs only the front left and front right channel signals with "LR ONLY" shown on the display window when you start playback with the surround mode having been set to "SURR OFF".

Using the on-screen bar

You can check disc information and you can use some functions using the on-screen bar.

Showing the on-screen bar

■ Whenever a disc is loaded












Press ON SCREEN.

Each time you press the button, the on-screen bar changes as follows on the TV screen.


Example:

During DVD VIDEO playback

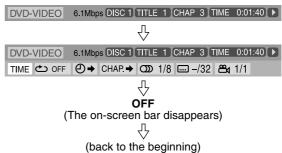


• The currently selected item shows green.

 
■ Contents of the on-screen bar during playback **DVD VIDEO**




DVD AUDIO

 


VCD

 

SVCD

 

CD

 

MPEG4*



- * 8 15 are not available.
- 1 Shows disc type.
- 2 Shows current transfer rate (Megabits per second).
- 3 Shows disc number.
- 4 Shows current title (for DVD VIDEO) or group (for DVD AUDIO) number.
- 5 Shows current chapter number (for DVD VIDEO) or track number (for other type of discs).
- 6 Shows time information. See "Changing the time information" below.

- 7 Shows playback status.
 - appears during playback.
 - / (1): appears during fast forward/reverse.
 - / d: appears during playback in forward slow-motion/ reverse slow-motion.
 - M: appears when paused.
 - appears when stopped.
- 8 Select this to change time information (6). See "Changing the time information" below.
- Select this for Repeat Playback. (F pg. 35)
- 10 Select this for time search function. (F pg. 30)
- 11 Select this for chapter (for DVD VIDEO) or track (for DVD AUDIO) search function. (pg. 29)
- Select this to change audio language, channel, or stream. (F pg. 32)
- 3 Select this to change subtitle language. (F pg. 31)
- 14 Select this to change view angle. (F pg. 31)
- 15 Select this to change the page. (F pg. 33)
- 16 Shows Playback Mode status.
 - PROGRAM: appears during Program Playback. (pg. 34) RANDOM: appears during Random Playback. (pg. 35)
- 17 Shows Repeat Mode status. (13 pg. 35)

Changing the time information

You can change the time information in the on-screen bar on the TV screen and the



display window of the center unit.

- During playback
- Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

- 2 Press Cursor ►/◄ to highlight TIME.
- **3** Press ENTER repeatedly to select the desired information.

Example:

When elapsed playing time of disc is selected.

TOTAL 1:25:58

- TIME: Elapsed playing time of current chapter/track
- REM: Remaining time of current chapter/track
- TOTAL: Elapsed time of disc
- T. REM: Remaining time of disc

4 Press ON SCREEN.

The on-screen bar disappears.

Playing from a specified position on a disc

You can start playing a title, chapter or track you specify. You can also play a disc from specified time.

Locating a desired scene from the DVD menu

DVD VIDEOs generally have their own menus which show disc contents and you can display them on the TV screen. You can locate a desired scene by using these menus.

 


■ Whenever a DVD VIDEO is loaded

Press TOP MENU or MENU.

The menu appears on the TV screen.

Example:



Normally, a DVD VIDEO which contains more than one title will have a "top" menu which lists the titles. Press TOP MENU to show the title menu.

Some DVD VIDEO may also have a different menu which is shown by pressing MENU.

See the instructions for each DVD VIDEO regarding its particular menu.

2 Use Cursor ►/◄/▼/▲ to select a desired item.

3 Press ENTER.

 With some discs, you can also select items by entering the corresponding number using number buttons.

Locating a desired scene using a VCD/ SVCD menu with PBC

 
A VCD or SVCD recorded with PBC has its own menus such as a list of contained songs. You can locate a specific scene by using these menus.



■ During playback with PBC function

Press RETURN repeatedly until the menu appears on the TV screen.

Example:



2 Press number buttons (1-10, +10) to select the number of the desired item.

• For details on using the number buttons, see "How to use the number buttons" (FF pg. 25).

To return to the menu

Press RETURN.

When "NEXT" or "PREVIOUS" is shown on the TV screen:

- To go to the next page, press ▶►1.
- To return to the previous page, press ►.

NATE

- If you want to play a PBC-compatible VCD/SVCD without using the PBC function, perform any of the following:
- Start playback by pressing number buttons while stopped.
- Press ►►I repeatedly until the desired track number is displayed, then start playback by pressing ► (play button).
 The track number appears on the display window instead of
- To activate the PBC function when playing a PBC-compatible VCD/ SVCD without using the PBC function, perform any of the following:
 - Press TOP MENU or MENU.
 - Press twice to stop playback, then press ► (play button).

Locating a desired chapter/track using the on-screen bar

■ During playback

Press ON SCREEN twice.





The on-screen bar appears on the TV screen.

Press Cursor ►/ < to highlight CHAP. → / TRACK → .

3 Press ENTER.

Example:

During DVD VIDEO playback



4 Press number buttons (0-9) to enter the desired chapter number.

Example:

To select 8: Press 8.

To select 10: Press 1, then 0.
To select 20: Press 2, then 0.
To select 37: Press 3, then 7.

To correct a misentry

Repeat step 4.

5 Press ENTER.

6 Press ON SCREEN.

The on-screen bar disappears.

NOTE

• You can select up to the 99th chapter/track.

Locating a desired position by specifying the time

■ For DVD VIDEO/DVD AUDIO: During playback

DVD DVD VCD SVCD CD

For VCD/SVCD:

While stopped or during playback without PBC function For CD:

During playback or while stopped

When specifying the elapsed playing time from the beginning of the disc

Perform the following procedure while stopped.

When specifying the elapsed playing time from the beginning of the current title/track

Perform the following procedure during playback.

Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

2 Press Cursor ►/◄ to highlight ④→.

 
3 Press ENTER.



4 Use number buttons (0-9) to enter the time.

Example:

To play back from a point 2 (hours): 34 (minutes): 08 (seconds) elapsed



To cancel a misentry

5 Press ENTER.

6 Press ON SCREEN.

The on-screen bar disappears.

NOTE


 You can specify time in hours/minutes/seconds for DVD VIDEO/ DVD AUDIO and in minutes/seconds for VCD/SVCD/CD.

Using the file control display

You can search and play desired groups and tracks/files using the file control display on the TV screen.



Current group /total group Playback mode (PROGRAM, number RANDOM, REPEAT)

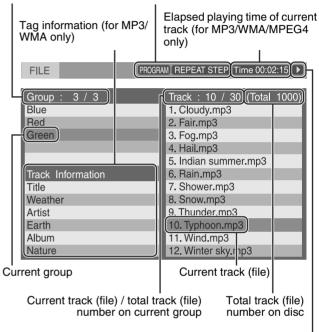

Playback status

The file control display appears automatically during playback (MP3/WMA) or while stopped.

■ For MP3/WMA:
During playback or while stopped
For JPEG/MPEG4:
While stopped

Press Cursor ►/◄/▼/▲ to select the desired group/track/file.

• For MP3/WMA, playback starts from the selected track.

2 Press ► (play button) or ENTER.

- Track playback/slide-show starts from the selected track/ file.
- When you press ENTER for JPEG, only the selected file is played back.

NOTE

- During playback, you can locate the desired track/file by pressing
 ▶►//◄◄ or Cursor ▲/▼.
- You can also check playback information on the display window.
 (IF pg. 23)
- Some group, track and file names may not be displayed correctly depending on recording conditions.
- The order of groups, tracks and files may be displayed differently from the order displayed on your personal computer.

Resume Playback

When Resume Playback is set to "ON" (pg. 40) and you stop playback by the following





operations, the position where playback has been stopped is stored. ("RESUME" appears on the display window.)

- Turning off the power (F pg. 18)
- Pressing once
- Changing the source (F pg. 19)

To start playback from the stored position

Press ► (play button) or DVD.

 There may be a case where ► (play button) does not work after changing the source.

To clear the stored position

Press ■ again or open the disc tray with the playback disc.

Selecting a view angle

During playback of a disc containing multi-view angles



When using the ANGLE button:

Press ANGLE.

Example:

The first view angle is selected out of 3 view angles recorded.



2 Press ANGLE repeatedly or press Cursor ▼/▲ to select the desired view angle.

When using the on-screen bar:

- Press ON SCREEN twice.
 - The on-screen bar appears on the TV screen.
- 2 Press Cursor ►/ < to highlight 🕾 1/3.
- 3 Press ENTER.



- 4 Press Cursor ▼/▲ to select the desired view angle.
- **5** Press ENTER.
- **6** Press ON SCREEN.

The on-screen bar disappears.

NOTE

• During DVD AUDIO playback, this feature is available only for the video part.

Selecting the subtitle

■ During playback of a disc containing subtitles in several languages



When using the SUBTITLE button:

Press SUBTITLE.

Example (DVD VIDEO):

"ENGLISH" is selected out of 3 subtitle languages recorded.



 Each time you press SUBTITLE, subtitle appears and disappears alternately.

2 Press Cursor ▼/▲ to select the desired subtitle.

For SVCD

 An SVCD can contain up to four subtitles. Pressing SUBTITLE changes the subtitles regardless of whether the subtitles are recorded or not. (Subtitles will not change if no subtitle is recorded.)

When using the on-screen bar:

Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

- 2 Press Cursor ►/ < to highlight = 1/3.
- 3 Press ENTER.



- 4 Press Cursor ▼/▲ repeatedly to select the desired subtitle.
- **5** Press ENTER.
- **6** Press ON SCREEN.

The on-screen bar disappears.

NOTE

- Some subtitle or audio languages are abbreviated in the pop-up window. See "The language codes list" (F pg. 38).
- During DVD AUDIO playback, this feature is available only for the video part.

Selecting the audio

■ During playback of a disc containing audio in several languages



When using the AUDIO button:

Press AUDIO.

Example (DVD VIDEO):

"ENGLISH" is selected out of 3 audio languages recorded.



2 Press AUDIO repeatedly or press Cursor ▼/▲ to select the desired audio.

When using the on-screen bar:

Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

2 Press Cursor ►/< to highlight [∞] 1/3.

3 Press ENTER.



- 4 Press Cursor ▼/▲ to select the desired audio.
- **5** Press ENTER.
- Press ON SCREEN.

The on-screen bar disappears.

NOTE

- Some subtitle or audio languages are abbreviated in the pop-up window. See "The language codes list" (pg. 38).
- "ST", "L" or "R" is displayed when playing a VCD or SVCD respectively representing "stereo", "left sound" and "right sound".

Special picture playback

Frame-by-frame playback

■ During playback

Press II repeatedly.

Each time you press the button, the still picture advances by one frame.



To return to normal playback

Press ► (play button).

During DVD AUDIO playback, this feature is available only for the video part.

Playing back in slow-motion

- During playback
- Press II at the point DVD AUDIO SVCD where you want to start playback in slow-motion from.

The system pauses playback.

2 Press ▶►.

• Playback in forward slow-motion starts.

For DVD VIDEO/DVD AUDIO only:

• To play back in reverse slow-motion, press ◀◀.

Each time you press the button, the playback speed become

Example: On the TV



To return to normal playback

Press ► (play button).

NOTE

- Sound cannot be heard during slow-motion playback.
- During DVD AUDIO playback, this feature is available only for the video part.

Selecting browsable still picture recorded on DVD AUDIO

Most DVD AUDIOs include browsable still pictures (B.S.P.), which usually appear by turns automatically during playback according to the playback sequence. You can change the picture (turn the page) manually when the current group/track has selectable pictures (pages).

 During playback and while the B.S.P. indicator lights up on the display window

When using the PAGE button:

Press PAGE repeatedly to select a desired still picture.

When using the on-screen bar:

Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

2 Press Cursor ►/< to highlight PAGE

3 Press ENTER.



- **4** Press Cursor **▲**/▼ to select the desired still picture.
- **5** Press ENTER.
- **6** Press ON SCREEN.

The on-screen bar disappears.

Zooming in

During playback or while paused



Press ZOOM.

Each time you press ZOOM, scene magnification changes.

While zoomed in, press Cursor ►/◄/▼/▲ to move zoom-in area.

To return to normal playback

Press ZOOM repeatedly to select ZOOM OFF.

NOTE

- The number of the magnification steps varies depending on the disc type.
- During slide-show playback of a JPEG disc, zooming in is not available. In such a case, press II to pause slide-show playback, then zoom in.
- During DVD AUDIO playback, this feature is available only for the video part.
- During MPEG4 playback, there may be a case where Cursor ►/◄/
 ▼/▲ does not work in step 2 above.

Changing the VFP setting

The VFP (Video Fine Processor) function enables you to adjust



the picture character according to the type of programming, picture tone or personal preference.

■ During playback

Press VFP.

The current VFP settings appear on the TV screen.

Example:



2 Press Cursor ►/< repeatedly to select the VFP mode.

- NORMAL: Normally select this.
- CINEMA: Suitable for movies.

When you select "NORMAL" or "CINEMA", press VFP to complete the setting.

USER 1 and USER 2:

You can adjust parameters that affect picture appearance.

Only when selecting "USER 1" or "USER 2" in step 2, proceed to perform the following operation;

3 Press Cursor ▼/▲ repeatedly to select a parameter you want to adjust.

Adjust gradually and confirm picture appearance results are as preferred.

GAMMA:

Controls brightness of neutral tints while maintaining brightness of dark and bright portions.

• BRIGHTNESS:

Controls screen brightness.

· CONTRAST:

Controls screen contrast.

• SATURATION:

Controls screen color depth.

• TINT:

Controls screen tint.

• SHARPNESS:

Controls screen sharpness.

4 Press ENTER.

Example:



- 5 Press Cursor ▼/▲ to change the setting.
- **6** Press ENTER.

The current VFP settings appear again.

- **7** Repeat steps 3 to 6 to adjust other parameters.
- 8 Press VFP.

NOTE

 
 Although the setting display disappears in the middle of the procedure, the setting at that time will be stored.

Program Playback

■ While stopped



Press PLAY MODE repeatedly until program window appears on the TV screen.



USE NUMERIC KEYS TO PROGRAM TRACKS. USE CANCEL TO DELETE THE PROGRAM.

2 Follow the instructions that appears on the TV screen to program the desired chapters/ tracks.

- For details on using the number buttons, see "How to use the number buttons" (F pg. 25).
- The content's numbers that you have to specify for programming varies depending on the disc type:
 - DVD VIDEO: Titles and chapters
 - · VCD, SVCD, CD: Tracks
 - · DVD AUDIO, MP3, WMA:

Groups and tracks

- Before you program the tracks in bonus group on a DVD AUDIO, perform the procedure of "Playing back a bonus group" (Pp. 25) to turn off the BONUS indicator on the display window.
- You can specify the chapters/tracks whose number is up to 99.

To clear the programs one by one from the last entered number

Press CANCEL repeatedly.

To clear all programs

Press ■.

You can also clear the program by turning off the system.

3 Press ► (play button).

If all of the programmed tracks/files have been played back, playback stops and the program window appears again. Note that program setting remains.

To check the program contents

During playback, press \blacksquare . Playback stops and the program window appears.

To quit the Program mode

While stopped, press PLAY MODE repeatedly until both program window and RANDOM disappear from the TV screen.

NOTE

- There may be a case where bonus group on a DVD AUDIO cannot be played.
- The Resume function cannot be used with Program Playback.
- Program Playback may not work for some discs.

Random Playback

You can play titles or tracks on a disc in random order.



■ While stopped

Press PLAY MODE repeatedly until RANDOM appears on the TV screen.

2 Press ► (play button).

 When more than one discs are loaded, the system starts Random Playback of the next disc after completing current disc playback.

To quit Random mode

While stopped, press PLAY MODE repeatedly until both program window and RANDOM disappear from the TV screen.

You can also clear the Random mode by turning off the system.

NOTE

 
 The same title/track will not be played back more than once during Random Playback.

Repeat Playback


Repeating the current selection or all discs

■ For DVD VIDEO:
During playback
For VCD/SVCD:
During playback without PBC function or stopped
For DVD AUDIO/CD/MP3/
JPEG/MPEG4:

During playback or stopped



 When using the REPEAT button: Press REPEAT.



Each time you press REPEAT, the Repeat mode changes.

Display window	TV screen	Meanings		
	REPEAT GROUP*	Repeats the current group for DVD AUDIO/MP3/WMA/JPEG/MPEG4 disc.		
Ç	ئ TITLE	Repeats the current title for DVD VIDEO.		
	REPEAT DISC*	Repeats all tracks on the current disc for VCD/SVCD/CD/MP3/WMA/JPEG/MPEG4.		
← ALL	REPEAT ALL*	Repeats all the available discs.		
G 1	REPEAT TRACK	Repeats the current track for DVD AUDIO/VCD/SVCD/CD/MP3/WMA/MPEG4 disc.		
	CHAP	Repeats the current chapter for DVD VIDEO.		
No indication	₾ OFF	Repeat mode is off. The system plays back all available discs normally.		

^{*} During playback of a JPEG disc, "REPEAT GROUP", "REPEAT DISC" and "REPEAT ALL" do not appear on the TV screen.

NOTE

 When the Program mode is active with a DVD AUDIO, VCD, SVCD, or CD, the Repeat mode changes in the same manner.
 Note that, however, in the " mode the system repeats all the programmed tracks, instead of all tracks on the disc.

When using the on-screen bar (except for MP3/WMA/JPEG/MPEG4 disc):

Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

 ${f 2}$ Press Cursor lacksquare /lacksquare to highlight lacksquare \circ F .

3 Press ENTER.



- 4 Press Cursor ▼/▲ repeatedly to select the Repeat mode.
- **5** Press ENTER.
- **6** Press ON SCREEN.

The on-screen bar disappears.

To cancel Repeat Playback

Select "OFF" in step 4.

Repeating a desired part [A-B Repeat]

You can repeat playback of a desired part by specifying the beginning (point A) and ending (point B).



- During playback
- **1 Press ON SCREEN twice.**The on-screen bar appears on the TV screen.
- 2 Press Cursor ►/< to highlight ⇔ off.
- 3 Press ENTER.



- 4 Press Cursor ▼/▲ repeatedly to select "A-B".
- 5 Press ENTER at the beginning of the part you want to repeat (point A).



6 Press ENTER at the end of the part you want to repeat (point B).

A-B Repeat Playback starts.

7 Press ON SCREEN.

The on-screen bar disappears.

To cancel

Select "OFF" in step 4, then press ENTER.

NOTE

- When playing back a DVD VIDEO, A-B Repeat Playback is possible only within the same title.
- "A-B" cannot be selected during Program and Random Playback.

Tray lock

You can lock trays and prohibit the unwanted disc ejection.

On the center unit ONLY:

While the system is turned off



- The system turns on and "LOCKED" appears on the display window
- If you try to eject discs, "LOCKED" appears to indicate that trays are locked.

To cancel

Carry out the same operation again.

 The system turns on and "UNLOCKED" appears on the display window.

Sound and other settings

IMPORTANT

Before using the remote control for the following operation;

Set the remote control mode selector to AUDIO.



NOTE

Before you start operation;

There is a time limit when doing the following steps. If the setting is cancelled before you finish, start from step 1 again.

Press SETTING.

Example:

BAL: CENTER

2 Press Cursor ▼/▲ to select the item you want to set.

• BAL (Balance):

You can adjust the balance between the front left and front right speakers.

DEC (Decode):

When you play an external source (DBS is selected as a source) that was encoded with Dolby Digital or DTS Digital Surround, the following symptoms may occur;

- No sound comes out at the beginning of playback.
- Noise comes out while searching for or skipping chapters or tracks.

AUT/PCM (Auto/PCM):

Normally select this. The system automatically detects the incoming signals.

DOLBY D: Select this if the symptoms above occur when playing a disc (or software) encoded with

Dolby Digital.

DTS: Select this if the symptoms above occur when

playing a disc (or software) encoded with DTS

Digital Surround.

• M. OUT (Monitor Out):

Select the video output jack type by which you watch DVD playback after connecting your TV. (F pg. 14) Set the video output to use AV COMPU LINK remote control system. (F pg. 44)

VIDEO: To watch DVD playback via the VIDEO jack. To watch DVD playback via the S-VIDEO jack. COMPNT (component):

To watch DVD playback via the COMPONENT

• DiscIll (For TH-M606/TH-M603/TH-M505/TH-M501): When you select DVD as the source and leave the system in stop mode for 5 minutes, the disc lamps starts illuminating.

3 Press Cursor ►/◄ to make an adjustment or selection.

VIDEO OUT jacks.

Example:

BAL: R - 5

The adjustment is set and display automatically disappears a few seconds later.

NOTE

When "DOLBY D" or "DTS" is selected, if a signal encoded with another digital format comes in, you cannot listen to the sound. (The DIDIGITAL or dis indicator flashes.)

Using the setup menus

 
 You can change the language used in the setup menus. See "Menu description" below.

Basic operation on the setup menus

IMPORTANT

Before using the remote control for the following operation;

- Set the remote control mode selector to AUDIO.
- 2 Press DVD.



■ While stopped

1 Press SET UP.



2 Follow the instructions that appears on the TV screen.

Menu description

\Lambda:Language menu (LANGUAGE)

■ MENU LANGUAGE

Some DVDs have their own menus in multiple languages.

• Select the initial language*.

■ AUDIO LANGUAGE

Some DVDs have multiple audio languages.

• Select the initial audio language*.

■ SUBTITLE

Some DVDs have multiple subtitle languages.

• Select the initial subtitle language*.

■ ON SCREEN LANGUAGE

- Select the language shown on the TV screen when operating this system.
- * When the language you have selected is not recorded to a disc, the original language is automatically used as the initial language.

NOTE

 See the following "The language codes list" for the codes of each language, such as "AA", etc.

The language codes list

AA	Afar	IK	Inupiak	RN	Kirundi
AB	Abkhazian	IN	Indonesian	RO	Rumanian
AF	Afrikaans	IS	Icelandic	RU	Russian
AM	Ameharic	IW	Hebrew	RW	Kinyarwanda
AR	Arabic	JI	Yiddish	SA	Sanskrit
AS	Assamese	JW	Javanese	SD	Sindhi
AY	Aymara	KA	Georgian	SG	Sangho
ΑZ	Azerbaijani	KK	Kazakh	SH	Serbo-Croatian
BA	Bashkir	KL	Greenlandic	SI	Singhalese
BE	Byelorussian	KM	Cambodian	SK	Slovak
BG	Bulgarian	KN	Kannada	SL	Slovenian
BH	Bihari	KO	Korean (KOR)	SM	Samoan
BI	Bislama	KS	Kashmiri	SN	Shona
BN	Bengali, Bangla	KU	Kurdish	SO	Somali
ВО	Tibetan	KY	Kirghiz	SQ	Albanian
BR	Breton	LA	Latin	SR	Serbian
CA	Catalan	LN	Lingala	SS	Siswati
CO	Corsican	LO	Laothian	ST	Sesotho
CS	Czech	LT	Lithuanian	SU	Sundanese
CY	Welsh	LV	Latvian, Lettish	SV	Swedish
DA	Danish	MG	Malagasy	SW	Swahili
DZ	Bhutani	MI	Maori	TA	Tamil
EL	Greek	MK	Macedonian	TE	Telugu
ЕО	Esperanto	ML	Malayalam	TG	Tajik
ET	Estonian	MN	Mongolian	TH	Thai
EU	Basque	МО	Moldavian	TI	Tigrinya
FA	Persian	MR	Marathi	TK	Turkmen
FI	Finnish	MS	Malay (MAY)	TL	Tagalog
FJ	Fiji	MT	Maltese	TN	Setswana
FO	Faroese	MY	Burmese	TO	Tonga
FY	Frisian	NA	Nauru	TR	Turkish
GA	Irish	NE	Nepali	TS	Tsonga
GD	Scots Gaelic	NL	Dutch	TT	Tatar
GL	Galician	NO	Norwegian	TW	Twi
GN	Guarani	OC	Occitan	UK	Ukrainian
GU	Gujarati	OM	(Afan) Oromo	UR	Urdu
HA	Hausa	OR	Oriya	UZ	Uzbek
HI	Hindi	PA	Panjabi	VI	Vietnamese
HR	Croatian	PL	Polish	VO	Volapuk
HU	Hungarian	PS	Pashto, Pushto	WO	Wolof
HY	Armenian	PT	Portuguese	XH	Xhosa
IA	Interlingua	QU	Quechua	YO	Yoruba
IE	Interlingue	RM	Rhaeto-Romance	ZU	Zulu

:Picture menu (PICTURE)

■ MONITOR TYPE

You can select the monitor type to match your TV when you play DVDs recorded in the picture's height/width ratio of 16:9.

• 16:9 (Wide television conversion)

Select this when the aspect ratio of your TV is 16:9 (wide

• 4:3 LB (Letter Box conversion)

Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

• 4:3 PS (Pan Scan conversion)

Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars do not appear, however, the left and right edges of the pictures will not be shown on the screen.







Fx : 16:9

Fx : 4:3 | B

NOTE

• Even if "4:3 PS" is selected, the screen size may become "4:3 LB" with some DVDs. This depends on how DVDs are recorded.

■ PICTURE SOURCE

When you set the scan mode to PROGRESSIVE (F pg. 20), you can obtain optimal picture quality by selecting whether the content on the disc is processed by field (video source) or by frame (film source).

Normally set to "AUTO".

AUTO

Used to play a disc containing both video and film source

This system recognizes the source type (video or film) of the current disc according to the disc information.

If the playback picture is unclear or noisy, or the oblique lines of the picture are rough, try to change to other modes.

FILM

Suitable for playing back a film source disc.

VIDEO

Suitable for playing back a video source disc.

■ SCREEN SAVER (127 pg. 24)

You can activate or deactivate Screen Saver function.

■ FILE TYPE

When several types of files are recorded on a disc, you can select which files to play. If you have changed FILE TYPE setting, be sure to turn the power off, then turn the power on to enable the new setting.

• AUDIO

Select this to play MP3/WMA files.

• STILL PICTURÉ

Select this to play JPEG files.

VIDEO

Select this to play MPEG4 files.

🕽: Audio menu (AUDIO)

■ D. RANGE COMPRESSION

(Dynamic range compression)

You can enjoy low level recorded sound clearly at night even at a low volume when listening to the sound with Dolby Digital.

AUTO

Select this when you want to enjoy surround sound with its full dynamic range (no effect applied).

Select this when you want to fully apply the compression effect (useful at midnight).

• When you play a multichannel Dolby Digital source with the surround mode is off, the setting of D. RANGE COMPRESSION is set to ON automatically.



🚏: Speaker setting menu (SPK. SETTING)

■ Level menu (LEVEL)

CENTER SPEAKER/SURROUND RIGHT SPEAKER/ SURROUND LEFT SPEAKER/SUBWOOFER

While monitoring the test tone, adjust the center and surround speakers volume as much as that of the front speakers.

TEST TONE*

Outputs the test tone.

RETURN

Returns to the SPK. SETTING menu.


- * The test tone comes out of all of the activated speakers in the following sequence:
 - ⇒ Front left speaker ⇒ Center speaker ⇒ Front right speaker ⇒ Surround right speaker ⇒ Surround left speaker ⇒ (back to the beginning)

NOTE

Before you turn on the test tone, be sure to select AUTO SURR as the surround mode. (F pg. 26)

■ Distance menu (DISTANCE)

Example:

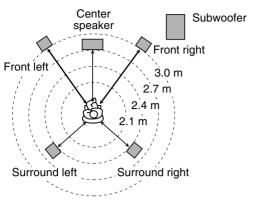

In this case, set the distance of each speaker as follows;

Distance of front speakers: 3.0 m/10 ft
Distance of center speaker: 2.7 m/9 ft
Distance of surround speakers: 2.4 m/8 ft

FRONT SPEAKER/CENTER SPEAKER/SURROUND SPEAKER

Adjust the distance from the listening position to the speakers.

Within the range from 0.3 m/1 ft to 9.0 m/30 ft. (by 0.3 m/1 ft)

RETURN

Returns to the SPK. SETTING menu.



■ RESUME

You can activate or deactivate Resume Playback function. ($\ensuremath{ \mathbb{Z} pg. 31})$

■ ON SCREEN GUIDE

You can activate or deactivate the on-screen guide icons. ($\ensuremath{\mathbb{LF}}$ pg. 22)

■ Parental lock menu (PARENTAL LOCK)

You can restrict playback of a DVD VIDEO containing violent scenes that is not suitable for your other family members.

 This setting takes effect only for DVDs containing the Parental Lock level information — Level 1 (most restrictive) to Level 8 (least restrictive).

COUNTRY CODE

Select this when you set the code for your resident. (pg. 41)

SET LEVEL

Select this when you set the level of restriction.

PASSWORD

This item is selected automatically when some changes are made on Parental Lock setting. Enter a four-digit number as your password with number buttons 0-9, then press ENTER.

 If you have failed to enter your correct password three times, you cannot select an item other than EXIT. In such a case, press ENTER to exit the mode, then try the setting again.

EXIT

Returns to OTHERS menu.

- Be sure to exit the Parental Lock setting mode after entering your password. Otherwise, the changes you made won't be stored.
- If you forget your password, enter "8888" instead of your password.

NOTE

 When you enter wrong passwords three times, you can only select EXIT

Country/Area codes list for Parental Lock

AD	Andorra	ER	Eritrea		Lao People's Democratic	RW	Rwanda
AE	United Arab Emirates	ES	Spain	LA	Republic	SA	Saudi Arabia
AF	Afghanistan	ET	Ethiopia	LB	Lebanon	SB	Solomon Islands
AG	Antigua and Barbuda	FI	Finland	LC	Saint Lucia	SC	Seychelles
ΑI	Anguilla	FJ	Fiji	LI	Liechtenstein	SD	Sudan
AL	Albania	FK	Falkland Islands (Malvinas)	LK	Sri Lanka	SE	Sweden
AM	Armenia		Micronesia (Fedelated States	LR	Liberia	SG	Singapore
AN	Netherlands Antilles	FM	of)	LS	Lesotho	SH	Saint Helena
AO	Angola	FO	Faroe Islands	LT	Lithuania	SI	Slovenia
AQ	Antarctica	FR	France	LU	Luxembourg	SJ	Svalbard and Jan Mayen
AR	Argentina	FX	France, Metropolitan	LV	Latvia	SK	Slovakia
AS	American Samoa	GA	Gabon	LY	Libyan Arab Jamahiriya	SL	Sierra Leone
AT	Austria	GB	United Kingdom	MA	Morocco	SM	San Marino
AU	Australia	GD	Grenada	MC	Monaco	SN	Senegal
AW	Aruba	GE	Georgia	MD	Moldova, Republic of	SO	Somalia
ΑZ	Azerbaijan	GF	French Guiana	MG	Madagascar	SR	Suriname
BA	Bosnia and Herzegovina	GH	Ghana	МН	Marshall Islands	ST	Sao Tome and Principe
BB	Barbados	GI	Gibraltar	ML	Mali	SV	El Salvador
BD	Bangladesh	GL	Greenland	MM	Myanmar	SY	Syrian Arab Republic
BE	Belgium	GM	Gambia	MN	Mongolia	SZ	Swaziland
BF	Burkina Faso	GN	Guinea	MO	Macau	TC	Turks and Caicos Islands
BG	Bulgaria	GP	Guadeloupe	MP	Northern Mariana Islands	TD	Chad
BH	Bahrain	GO	Equatorial Guinea	MO	Martinique	TF	French Southern Territories
BI	Burundi	GR	Greece	MR	Mauritania	TG	Togo
BJ	Benin		South Georgia and the South	MS	Montserrat	TH	Thailand Code Language
BM	Bermuda	GS	Sandwich Islands	MT	Malta	TJ	Tajikistan
BN	Brunei Darussalam	GT	Guatemala	MU	Mauritius	TK	Tokelau
BO	Bolivia	GU	Guam	MV	Maldives	TM	Turkmenistan
BR	Brazil	GW	Guinea-Bissau	MW	Malawi	TN	Tunisia
BS	Bahamas	GY	Guyana Guyana	MX	Mexico	TO	Tonga
BT	Bhutan	HK	Hong Kong	MY	Malaysia	TP	East Timor
BV	Bouvet Island	IIIX		MZ	Mozambique	TR	Turkey
ъν		HM	Heard Island and McDonald Islands	NA	Namibia	TT	Trinidad and Tobago
ВW	Rotewana						
BW	Botswana	LIN	Honduras	1			_
BY	Belarus	HN	Honduras Creatia	NC	New Caledonia	TV	Tuvalu
BY BZ	Belarus Belize	HR	Croatia	NC NE	New Caledonia Niger	TV TW	Tuvalu Taiwan
BY BZ CA	Belarus Belize Canada	HR HT	Croatia Haiti	NC NE NF	New Caledonia Niger Norfolk Island	TV TW TZ	Tuvalu Taiwan Tanzania, United Republic of
BY BZ CA CC	Belarus Belize Canada Cocos (Keeling) Islands	HR HT HU	Croatia Haiti Hungary	NC NE NF NG	New Caledonia Niger Norfolk Island Nigeria	TV TW TZ UA	Tuvalu Taiwan Tanzania, United Republic of Ukraine
BY BZ CA CC CF	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic	HR HT HU ID	Croatia Haiti Hungary Indonesia	NC NE NF NG	New Caledonia Niger Norfolk Island Nigeria Nicaragua	TV TW TZ	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda
BY BZ CA CC CF	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo	HR HT HU ID IE	Croatia Haiti Hungary Indonesia Ireland	NC NE NF NG NI NL	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands	TV TW TZ UA	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying
BY BZ CA CC CF CG CH	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland	HR HT HU ID IE IL	Croatia Haiti Hungary Indonesia Ireland Israel	NC NE NF NG NI NL	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway	TV TW TZ UA UG UG	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands
BY BZ CA CC CF CG CH CI	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire	HR HT HU ID IE IL IN	Croatia Haiti Hungary Indonesia Ireland Israel India	NC NE NF NG NI NL NO NP	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal	TV TW TZ UA UG UG US	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States
BY BZ CA CC CF CG CH CI CK	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands	HR HT HU ID IE IL IN IO	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory	NC NE NF NG NI NL NO NP NR	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru	TV TW TZ UA UG UG UM	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay
BY BZ CA CC CF CG CH CI CK CL	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile	HR HT HU ID IE IL IN IO IQ	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq	NC NE NF NG NI NL NO NP NR NU	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue	TV TW TZ UA UG UG UM US UY UZ	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan
BY BZ CA CC CF CG CH CI CK CL	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon	HR HT HU ID IE IL IN IO IQ IR	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of)	NC NE NF NG NI NL NO NP NR NU	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand	TV TW TZ UA UG UG UM	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See)
BY BZ CA CC CF CG CH CI CK CL CM	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China	HR HT HU ID IE IL IN IO IQ IQ IR	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland	NC NE NF NG NI NL NO NP NR NU NZ	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman	TV TW TZ UA UG UG UM US UY UZ	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the
BY BZ CA CC CF CG CH CI CK CL CM CN CO	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia	HR HT HU ID IE IL IN IO IQ IR IS IT	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy	NC NE NF NG NI NL NO NP NR NU NZ OM	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama	TV TW TZ UA UG UG US UY VA VC	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica	HR HT HU ID IE IL IN IO IQ IR IR IS IT JM	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica	NC NE NF NG NI NL NO NP NR OM PA PE	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru	TV TW TZ UA UG UM US UY VA VC VE	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CC	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba	HR HT HU ID IE IL IN IO IQ IR IS IS IT JM JO	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan	NC NE NF NG NI NL NO NP NR OM PA PE PF	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia	TV TW TZ UA UG UM US UY VA VC VC	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British)
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde	HR HT HU ID IE IL IN IO IQ IR IR IS IT JM JO JP	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan	NC NE NF NG NI NL NO NP NR OM PA PE PF	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea	TV TW TZ UA UG UM US UY UZ VA VC VE VG VI	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.)
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CV	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island	HR HT HU ID IE IL IN IO IQ IR IR IS IT JM JO JP KE	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines	TV TW TZ UA UG UM US UY VA VC VE VG VI VN	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CV CX	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus	HR HT HU ID IE IL IN IO IQ IR IR IS IT JM JO JP KE KG	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan	TV TW TZ UA UG UM US UY VA VC VE VG VI VN VU	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CV CX CY	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic	HR HT HU ID IE II IN IO IQ IR IR IS IT JM JO JP KE KG KH	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan Cambodia	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK PL	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan Poland	TV TW TZ UA UG UM US UY VA VC VE VG VI VN VU WF	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu Wallis and Futuna Islands
BY BZ CA CC CF CG CH CI CK CL CM CO CR CV CY CX CY DE	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany	HR HT HU ID IE IL IN IO IQ IR IS IT JM JO JP KE KG KH	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan Cambodia Kiribati	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK PL PM	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan Poland Saint Pierre and Miquelon	TV TW TZ UA UG UM US UY VZ VA VC VE VG VI VN VU WF	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu Wallis and Futuna Islands Samoa
BY BZ CA CC CF CG CH CI CK CL CM CO CR CV CY CZ DE DJ	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti	HR HT HU ID IE IL IN IO IQ IR IS IS IT JM JO JP KE KG KH KI KM	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan Cambodia Kiribati Comoros	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK PL PM	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan Poland Saint Pierre and Miquelon Pitcairn	TV TW TZ UA UG UM US UY VZ VA VC VE VG VI VN VU WF WS YE	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu Wallis and Futuna Islands Samoa Yemen
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CY CZ DE DJ DK	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark	HR HT HU ID IE IL IN IO IQ IR IS IT JM JO JP KE KG KH	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan Cambodia Kiribati Comoros Saint Kitts and Nevis	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK PL PM PR	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan Poland Saint Pierre and Miquelon Pitcairn Puerto Rico	TV TW TZ UA UG UM US UY VZ VA VC VE VG VI VN VU WF WS YE YT	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CY CZ DE DJ DK DM	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica	HR HT HU ID IE IL IN IO IQ IR IS IS IT JM JO JP KE KG KH KI KM	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan Cambodia Kiribati Comoros Saint Kitts and Nevis Korea, Democratic People's	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK PL PM PN PR	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan Poland Saint Pierre and Miquelon Pitcairn Puerto Rico Portugal	TV TW TZ UA UG UM US UY VZ VA VC VE VG VI VN VU WF WS YE YT YU	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte Yugoslavia
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ DK DM DO	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic	HR HT HU ID IE IL IN IO IQ IR IS IT JM JO JP KE KG KH KI KM KN	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan Cambodia Kiribati Comoros Saint Kitts and Nevis Korea, Democratic People's Republic of	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK PL PM PN PR PT PW	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan Poland Saint Pierre and Miquelon Pitcairn Puerto Rico Portugal Palau	TV TW TZ UA UG UM US UY VZ VA VC VE VG VI VN VU WF WS YE YT YU ZA	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte Yugoslavia South Africa
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ DK DM DO DZ	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria	HR HT HU ID IE IL IN IO IQ IR IS IT JM JO JP KE KG KH KI KM KN KN	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan Cambodia Kiribati Comoros Saint Kitts and Nevis Korea, Democratic People's Republic of Korea, Republic of	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK PL PM PN PR PT PW	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan Poland Saint Pierre and Miquelon Pitcairn Puerto Rico Portugal Palau Paraguay	TV TW TZ UA UG UM US UY UZ VA VC VE VG VI VN VU WF WS YE YT YU ZA ZM	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte Yugoslavia South Africa Zambia
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ DK DM DO DZ EC	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador	HR HT HU ID IE IL IN IO IQ IR IS IT JM JO JP KE KG KH KI KM KN KN KN	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan Cambodia Kiribati Comoros Saint Kitts and Nevis Korea, Democratic People's Republic of Kuwait	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK PL PM PN PR PT PW PY	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan Poland Saint Pierre and Miquelon Pitcairn Puerto Rico Portugal Palau Paraguay Qatar	TV TW TZ UA UG US UY UZ VA VC VE VG VI VN VU WF WS YE YT YU ZA ZM ZR	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte Yugoslavia South Africa Zambia Zaire
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ DK DM DO DZ EC EE	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador Estonia	HR HT HU ID IE IL IN IO IQ IR IS IT JM JO JP KE KG KH KI KM KN KN KN KP	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan Cambodia Kiribati Comoros Saint Kitts and Nevis Korea, Democratic People's Republic of Kuwait Cayman Islands	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK PL PM PN PR PT PW PY QA RE	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan Poland Saint Pierre and Miquelon Pitcairn Puerto Rico Portugal Palau Paraguay Qatar Réunion	TV TW TZ UA UG UM US UY UZ VA VC VE VG VI VN VU WF WS YE YT YU ZA ZM	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte Yugoslavia South Africa Zambia
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ DK DM DO DZ EC	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador	HR HT HU ID IE IL IN IO IQ IR IS IT JM JO JP KE KG KH KI KM KN KN KN	Croatia Haiti Hungary Indonesia Ireland Israel India British Indian Ocean Territory Iraq Iran (Islamic Republic of) Iceland Italy Jamaica Jordan Japan Kenya Kyrgyzstan Cambodia Kiribati Comoros Saint Kitts and Nevis Korea, Democratic People's Republic of Kuwait	NC NE NF NG NI NL NO NP NR NU NZ OM PA PE PF PG PH PK PL PM PN PR PT PW PY	New Caledonia Niger Norfolk Island Nigeria Nicaragua Netherlands Norway Nepal Nauru Niue New Zealand Oman Panama Peru French Polynesia Papua New Guinea Philippines Pakistan Poland Saint Pierre and Miquelon Pitcairn Puerto Rico Portugal Palau Paraguay Qatar	TV TW TZ UA UG US UY UZ VA VC VE VG VI VN VU WF WS YE YT YU ZA ZM ZR	Tuvalu Taiwan Tanzania, United Republic of Ukraine Uganda United States Minor Outlying Islands United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Vietnam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte Yugoslavia South Africa Zambia Zaire

Tuner operations


IMPORTANT

Before using the remote control for the following operation;

- 1 Set the remote control mode selector to AUDIO.
- 2 Press FM/AM.



The buttons described below are used on pages 42 to 43.

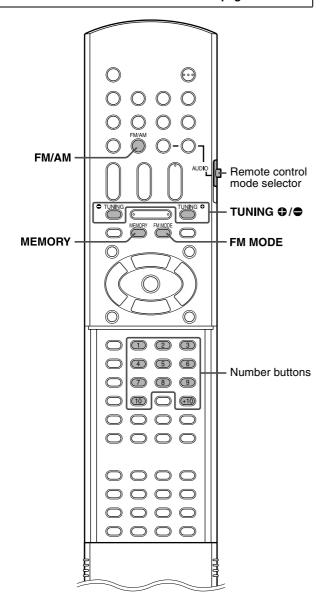

Manual tuning

Press FM/AM repeatedly to select the band.

Example:

When the system is tuned in to 810 kHz.



2 Press TUNING ⊕/⊕ repeatedly until you find the frequency you want.

When you hold down the button until the system starts searching for stations and then release it, the system stops searching automatically when a station of sufficient signal strength is tuned in to.

NOTE

- When a station of sufficient signal strength is tuned in, the TUNED indicator lights on the display window.
- When an FM stereo program is received, the ST indicator lights on the display window.

Preset tuning

Once a station is assigned to a channel number, the station can be quickly tuned in. You can preset 30 FM and 15 AM stations.

To preset the stations

I Tune in the station you want to preset.

 If you want to store the FM reception mode for an FM station, select the reception mode you want. See "Selecting the FM reception mode" below.

Example:

When the system is tuned in to 103.5 MHz.



2 Press MEMORY.



While "CH" and "--" are flashing:

3 Press number button(s) (1-10, +10) to select a preset number you want.

• For details on using the number buttons, see "How to use the number buttons" (\mathbb{L}^2 pg. 25).

Example:

When the preset channel 1 is selected.



If the setting is cancelled before you finish, start from step 2 again.

While the selected number is flashing:

4 Press MEMORY.

The selected number stops flashing.

The station is assigned to the selected preset number.

If the setting is cancelled before you finish, start from step 2 again.

5 Repeat steps 1 to 4.

- Storing a new station to a used number erases the previously stored one
- To tune in to a preset station
- Press FM/AM repeatedly to select FM or AM.
- 2 Press number button(s) (1-10, +10) to select a preset number.
 - For details on using the number buttons, see "How to use the number buttons" (IF pg. 25).

Selecting the FM reception mode

When the stereo FM program currently tuned in is noisy, you can change the FM reception mode to improve the reception.

■ While listening to an FM station

Press FM MODE.

The FM reception mode appears on the display window. Each time you press the button, the FM reception mode changes.

AUTO MUTING:

When a program is broadcast in stereo, you will hear stereo sound. (The ST indicator lights on the display window.) When in monaural, you will hear monaural sound. This mode is also useful to suppress static noise between stations. The AUTO MUTING indicator lights on the display window.

• MONO:

Reception will be improved although you will lose the stereo effect. (The ST indicator goes off.) In this mode, you will hear noise until you are tuned in to a station. (The AUTO MUTING indicator also goes off.)

Reducing the noise of AM broadcast

When listening to an AM broadcast with a lot of noise interference, you can change the Beat Cut mode to reduce the noise.

■ While listening to an AM station

Press FM MODE.

The current Beat Cut mode appears on the display window. Each time you press the button, the Beat Cut mode changes.

 Choose "BEAT CUT 1" or "BEAT CUT 2" according to which gives clearer sound.

AV COMPU LINK remote control system

The AV COMPU LINK remote control system allows you to operate

AV COMPU LINK

JVC TVs and VCRs through the center unit. This system is equipped with the AV COMPU LINK-III, which adds a function to operate JVC's video components via the video components terminals. To use this remote control system, you need to connect the video components you want to operate as follows.


 Refer also to the manuals supplied with your TV and video components.

Connecting a TV and VCR

CAUTION

Before connecting;

- If you have already plugged your VCR, TV and the center unit into the AC outlets, unplug their AC power cords first.
- Connect the center unit to a TV and
 - For details, see page 14 and 15.
- 2 Connect the center unit to a TV and VCR using the optional AV COMPU LINK cords.

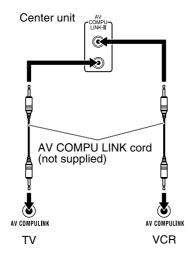

- 3 Plug the AC power cords of the VCR, TV and the center unit into the AC outlets.
- 4 Turn on the connected components first, then turn on the center unit.
 - When turning on the TV for the first time after the AV COMPU LINK connection, turn the TV volume to minimum using the TV volume control on the TV.
 - When turning on the VCR, use the remote control supplied with this system. (Press O/I VCR/DBS.)

NOTE

 To correctly use the automatic selection of TV input mode, select the correct "M. OUT" setting. (Pp pg. 37)

Available functions

The AV COMPU LINK remote control system allows you to use the functions listed following.

One-touch video play

Simply by inserting a video cassette without its safety tab into the VCR, you can enjoy video playback without manually setting other switches. This system automatically turns on and changes the source to VCR.

The TV automatically turns on and changes the input mode to the appropriate position so that you can view the playback picture. When you insert a video cassette with its safety tab in place, press the play (▶) button on the VCR or on the remote control to get the same result.

One-touch DVD play

Simply by starting playback on the built-in DVD player, you can enjoy playback without manually setting other switches. The TV automatically turns on and changes the input mode to the appropriate position so that you can view the playback picture.

Automatic selection of TV input mode

When you select DVD or VCR as the source to play on the system, the TV automatically changes the input mode to the appropriate position so that you can view the playback picture.

Automatic Power On/Off

The TV and VCR turn on and off along with the system. When you turn on the system;

- If the previously selected source is "DVD", only the TV will turn on automatically.
- If the previously selected source is "VCR", the TV and VCR will turn on automatically.

When you turn off the system, the TV and VCR will turn off.

NOTE

 If you turn off the system while recording on the VCR, the VCR will not turn off and will continue recording.

Maintenance

■ Handling Discs

- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes and moisture.



To clean the disc

Wipe the disc with a soft cloth in a straight line from center to edge.

 DO NOT use any solvent — such as conventional record cleaner, spray, thinner or benzine — to clean the disc.



Cleaning the system

- Stains on the system should be wiped off with a soft cloth. If the system is heavily stained, wipe it with a cloth soaked in waterdiluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the system may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following.
 - DO NOT wipe it with a hard cloth.
 - · DO NOT wipe it strong.
 - DO NOT wipe it with thinner or benzine.
 - DO NOT apply any volatile substance such as insecticides to it.
 - DO NOT allow any rubber or plastic to remain in contact with it for a long time.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION		
Power does not come on.	The power cord and/or system cord is not connected.	Connect the power cord and system cord correctly. (CF pg. 15)		
The remote control does	The batteries are exhausted.	Replace the batteries. (F pg. 7)		
not work.	Sunlight is falling directly on the remote sensor.	Hide the remote sensor from direct sunlight.		
No sound.	The system cord and/or speaker cord is not connected.	Check the connection. (F pg. 15)		
	The audio cord is not connected to AUDIO IN (VCR) and/or DIGITAL IN (DBS) correctly.	Connect the cord correctly. (F pg. 15)		
	An incorrect source has been selected.	Select the correct source. (pg. 19)		
	The decode mode is not set correctly.	Select the proper decode mode. (F pg. 37)		
No picture is displayed	The video cord is not connected correctly.	Connect the cord correctly. (F pg. 14)		
on the TV screen.	The disc is not playable.	Use a playable disc. (pg. 3)		
No picture is displayed on the TV screen, the picture is blurred, or the picture is divided into two parts.	The scan mode is set to "PROGRESSIVE" though the center unit is connected to the TV which does not support the progressive video input such as a conventional TV.	Change the scan mode to "INTERLACE". (F pg. 20)		
Video and audio are	The disc is scratched or dirty.	Replace or clean the disc.		
distorted.	A VCR is connected between the center unit and the TV.	Connect the center unit and TV directly. (127 pg. 14)		
The picture does not fit the TV screen.	The monitor type is not set correctly.	Set "MONITOR TYPE" properly. (127 pg. 39)		
Hard to listen to broadcast because of noise.	Antennas are disconnected.	Reconnect the antennas correctly and securely. (LF pg. 8)		

Specifications

Center unit

(XV-THM606/XV-THM603/XV-THM505/XV-THM501/ XV-THM303/XV-THM301)

Audio section

Total Harmonic Distortion 0.02 %

NOTE: This value is measured at System cord CONNECTOR for

reference.

Digital input*1:

DIGITAL IN (DBS): -21 dBm to -15 dBm (OPTICAL) $(660 \text{ nm} \pm 30 \text{ nm})$

*1 Corresponding to Linear PCM, Dolby Digital, and DTS Digital Surround (with sampling frequency — 32 kHz, 44.1 kHz, 48 kHz)

Video section

Video System: NTSC Horizontal Resolution: 500 lines Signal-to-Noise Ratio: 64 dB

Video output level

Composite: 1.0 V(p-p)/75 Ω S-video-Y: $1.0~V(p\text{-}p)/75~\Omega$ $0.286 \text{ V(p-p)/75 }\Omega$ S-video-C: Component-Y: 1.0 V(p-p)/75 Ω Component-PB/PR: 0.7 V(p-p)/75 Ω Video input sensitivity/Impedance (VCR IN) Composite: 1.0 V(p-p)/75 Ω S-video-Y: 1.0 V(p-p)/75 ΩS-video-C: $0.286 \text{ V(p-p)/75 }\Omega$

Tuner section

Tuning Range

FM: 87.5 MHz to 108.0 MHz AM: 530 kHz to 1 710 kHz

General

AC 120 V \sim , 60 Hz Power Requirements: Power Consumption: 18 W (at operation)

2.0 W (in standby mode)

Dimensions (W \times H \times D):

400 mm × 85 mm × 380 mm $(15-3/4 \text{ inches} \times 3-3/8 \text{ inches} \times 15$

inches)

Mass: 4.3 kg (9.5 lbs)

■ Subwoofer (SP-PWM606)

Amplifier section

Front/Center/Surround: 140 W per channel, RMS at 4 Ω at

1 kHz, with 10 % total harmonic

distortion.

Subwoofer: 300 W, RMS at 4 Ω at 100 Hz, with

10 % total harmonic distortion.

Speaker section

Speaker unit: 25 cm (9-7/8 inches) Bass-reflex.

Magnetically Shielded

Frequency Range: 25 Hz to 200 Hz

General

AC 120 V \sim , 60 Hz Power Requirements: Power Consumption: 155 W (at operation)

0 W (in standby mode) Dimensions (W \times H \times D):

> $255 \text{ mm} \times 480 \text{ mm} \times 445 \text{ mm}$ $(10-1/16 \text{ inches} \times 18-15/16 \text{ inches} \times$

17-9/16 inches) Mass: 13.0 kg (28.7 lbs) ■ Subwoofer (SP-PWM505/SP-PWM501)

Amplifier section

140 W (80 W*2) per channel, RMS at Front/Center/Surround:

4 Ω (Center/Surround)/ 140 W (120 W*²) per channel, RMS at 4 Ω

(Front)

at 1 kHz, with 10 % total harmonic

distortion.

Subwoofer: 300 W, RMS at 4 Ω at 100 Hz, with

10 % total harmonic distortion.

Speaker section

25 cm (9-7/8 inches) Bass-reflex. Speaker unit:

Magnetically Shielded

20 Hz to 200 Hz Frequency Range:

General

Power Requirements: AC 120 V \, 60 Hz 155 W (at operation) Power Consumption:

0 W (in standby mode)

Dimensions (W \times H \times D):

 $256 \text{ mm} \times 482 \text{ mm} \times 460 \text{ mm}$ $(10-1/8 \text{ inches} \times 19 \text{ inches} \times$

18-1/8 inches)

Mass: 18.5 kg (41 lbs)

*2For SP-PWM501

Subwoofer (SP-PWM603/SP-PWM303/SP-PWM301)

Amplifier section

Front/Center/Surround: 115 W (100 W*3) per channel, RMS at

4 Ω (Center/Surround)/ 125 W (115 W*3) per channel, RMS at 4 Ω

(Front)

at 1 kHz, with 10 % total harmonic

125 W (120 W*3), RMS at 4 Ω at Subwoofer:

100 Hz, with 10 % total harmonic

distortion

Speaker section

16 cm (6-5/16 inches) Bass-reflex, Speaker unit:

Magnetically Shielded

Frequency Range: 30 Hz to 200 Hz

General

AC 120 V \, 60 Hz Power Requirements: Power Consumption: 125 W (at operation)

0 W (in standby mode)

Dimensions (W \times H \times D):

 $168.5 \text{ mm} \times 412 \text{ mm} \times 444 \text{ mm}$ $(6-11/16 \text{ inches} \times 16-1/4 \text{ inches} \times$

17-1/2 inches)

Mass: 12.0 kg (26.5 lbs)

*3For SP-PWM301

■ Satellite Speakers

Front speakers (SP-THM606F)

Speakers: $5.5 \text{ cm } (2-3/16 \text{ inches}) \times 2$

3.0 cm (1-3/16 inches)

Bass-reflex, Magnetically Shielded

Power Handling Capacity: 140 W Impedance: 4Ω

Frequency Range: 95 Hz to 20 kHz

Dimensions (W \times H \times D):

 $250 \text{ mm} \times 1103 \text{ mm} \times 250 \text{ mm}$ $(9-7/8 \text{ inches} \times 43-7/16 \text{ inches} \times 9-7/8$

inches)

Mass: 3.67 kg (8.1 lbs)

Surround speakers (SP-THM606S)

 $5.5 \text{ cm } (2-3/16 \text{ inches}) \times 2$ Speakers:

Bass-reflex, Magnetically Shielded

Power Handling Capacity: 140 W Impedance:

90 Hz to 20 kHz Frequency Range:

Dimensions (W \times H \times D):

 $250 \text{ mm} \times 1103 \text{ mm} \times 250 \text{ mm}$ $(9-7/8 \text{ inches} \times 43-7/16 \text{ inches} \times 9-7/8$

inches)

Mass: 3.77 kg (8.4 lbs)

Center Speaker (SP-THM606C)

 $5.5 \text{ cm } (2-3/16 \text{ inches}) \times 2$ Speakers:

3.0 cm (1-3/16 inches)

Bass-reflex, Magnetically Shielded

Power Handling Capacity: 140 W Impedance: 4Ω

90 Hz to 20 kHz Frequency Range:

Dimensions (W \times H \times D):

 $209 \text{ mm} \times 85 \text{ mm} \times 92 \text{ mm}$ $(8-1/4 \text{ inches} \times 3-3/8 \text{ inches} \times$

3-5/8 inches) 0.87 kg (2.0 lbs)

■ Satellite Speakers

Front speakers (SP-THM505F)

Speakers:

Speakers:

Mass:

Woofer: 8.0 cm (3-3/16 inches) Tweeter: 1.5 cm (5/8 inches)

Bass-reflex, Magnetically Shielded

Power Handling Capacity: 140 W Impedance: 4Ω

Frequency Range: 90 Hz to 20 kHz

Dimensions (W \times H \times D):

104.5 mm × 139 mm × 101 mm $(4-1/8 \text{ inches} \times 5-1/2 \text{ inches} \times$

4 inches)

Mass: 0.7 kg (1.6 lbs)

Surround speakers (SP-THM505S)

8.0 cm (3-3/16 inches)

Bass-reflex, Magnetically Shielded

Power Handling Capacity: 140 W Impedance: 4Ω

Frequency Range: 80 Hz to 20 kHz

Dimensions (W \times H \times D):

111.5 mm × 139 mm × 106.5 mm $(4-7/16 \text{ inches} \times 5-1/2 \text{ inches} \times$

4-1/4 inches)

Mass: 0.52 kg (1.2 lbs) Center Speaker (SP-THM505C)

Speakers:

Woofer: 8.0 cm (3-3/16 inches) 1.5 cm (5/8 inches) Tweeter:

Bass-reflex, Magnetically Shielded

Power Handling Capacity: 140 W Impedance:

90 Hz to 20 kHz Frequency Range:

Dimensions (W \times H \times D):

 $137 \text{ mm} \times 105 \text{ mm} \times 104.5 \text{ mm}$ $(5-7/16 \text{ inches} \times 4-3/16 \text{ inches} \times$

4-1/8 inches)

Mass: 0.7 kg (1.6 lbs)

■ Satellite Speakers

Front speakers (SP-THM303F)

Speakers: 8.0 cm (3-3/16 inches)

Bass-reflex, Magnetically Shielded

Power Handling Capacity: 140 W Impedance: 4 O.

Frequency Range: 90 Hz to 20 kHz

Dimensions (W \times H \times D):

Mass:

106 mm × 119.5 mm × 102 mm $(4-3/16 \text{ inches} \times 4-3/4 \text{ inches} \times$

4-1/16 inches)

0.69 kg (1.6 lbs)

Surround speakers (SP-THM303S)

8.0 cm (3-3/16 inches) Speakers:

Bass-reflex, Magnetically Shielded

Power Handling Capacity: 140 W Impedance: 4Ω Frequency Range: 80 Hz to 20 kHz

Dimensions (W \times H \times D):

111.5 mm × 139 mm × 106.5 mm

 $(4-7/16 \text{ inches} \times 5-1/2 \text{ inches} \times$

4-1/4 inches)

Mass: 0.63 kg (1.4 lbs)

Center Speaker (SP-THM303C)

8.0 cm (3-3/16 inches) Speakers:

Bass-reflex, Magnetically Shielded

140 W Power Handling Capacity: Impedance: 4Ω

Frequency Range: 90 Hz to 20 kHz

Dimensions (W \times H \times D):

106 mm × 119.5 mm × 102 mm $(4-3/16 \text{ inches} \times 4-3/4 \text{ inches} \times$

4-1/16 inches)

Mass: 0.69 kg (1.6 lbs)

Designs & specifications are subject to change without notice.

JVC

LIMITED WARRANTY

CONSUMER VIDEO 1-90

JVC COMPANY OF AMERICA warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL PURCHASER AT RETAIL to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original retail purchase for the period as shown below. ("The Warranty Period")

PARTS 1 YR LABOR 90 DAYS

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN COMMONWEALTH OF PUERTO RICO.

WHAT WE WILL DO:

If this product is found to be defective, JVC will repair or replace defective parts at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products and parts thereof may be brought to a JVC authorized service center on a carry-in basis except for Television sets having a screen size 25 inches and above which are covered on an in-home basis.

WHAT YOU MUST DO FOR WARRANTY SERVICE:

Return your product to a JVC authorized service center with a copy of your bill of sale. For your nearest JVC authorized service center, please call toll free: (800) 537-5722.

If service is not available locally, box the product carefully, preferably in the original carton, and ship, insured, with a copy of your bill of sale plus a letter of explanation of the problem to the nearest JVC Factory Service Center, the name and location of which will be given to you by the toll-free number.

If you have any questions concerning your JVC Product, please contact our Customer Relations Department.

WHAT IS NOT COVERED:

This limited warranty provided by JVC does not cover:

- Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty
 installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by
 JVC to render such service, or if affixed to any attachment not provided with the products, or if the model number
 or serial number has been altered, tampered with, defaced or removed;
- 2. Initial installation and installation and removal for repair;
- 3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning;
- 4. Damage that occurs in shipment, due to act of God, and cosmetic damage;
- 5. Signal reception problems and failures due to line power surge,
- 6. Video Pick-up Tubes/CCD Image Sensor, Cartridge, Stylus (Needle) are covered for 90 days from the date of purchase;
- 7. Accessories
- 8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase);

There are no express warranties except as listed above.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANT-ABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

JVC COMPANY OF AMERICA
DIVISION OF JVC AMERICAS CORP.

1700 Valley Road Wayne, NJ 07470

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY <u>DOES NOT</u> APPLY. FOR DETAILS OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

For customer use:	
Enter below the Model No. which is located either on the for future reference.	rear, bottom or side of the cabinet. Retain this information
Model No. :	Serial No. :
Purchase data :	Name of dealer :

Authorized Service Centers

QUALITY **JVC**® SERVICE

HOW TO LOCATE YOUR JVC SERVICE CENTER

TOLL FREE: 1 (800) 537-5722 http://www.jvc.com

Dear Customer,

In order to receive the most satisfaction from your purchase, please read the instruction booklet before operating the unit. In the event that repairs are necessary, please call 1 (800) 537-5722 for your nearest authorized servicer or visit our website at **www.JVC.com**Remember to retain your Bill of Sale for Warranty Service.

Do not service the television yourself

Caution

To prevent electrical shock, do not open the cabinet. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.

Accessories

To purchase accessories for your JVC product, please call toll free: 1 (800)882-2345 or on the web at **www.JVC.com**





NOTE

TH-M606/TH-M603/TH-M505/ TH-M501/TH-M303/TH-M301

Step 2 in "Program Playback" on page 34

- There may be a case that the group or title number can be entered even for discs that contain no groups or titles. In such a case, press ENTER to proceed to the Track/Chapter column.
- When you press ENTER instead of the number buttons in the Track/Chapter column, "ALL" appears and all the tracks or chapters on the selected group or title are programmed as a step.

NOTE

TH-M606/TH-M603/TH-M505/ TH-M501/TH-M303/TH-M301

Note on MPEG4 playback

Note that the surround mode takes no effect on MPEG4 playback.

Important Products Safety Instruction

Electrical energy can perform many useful functions. But improper use can result in potential electrical shock or fire hazards. This product has been engineered and manufactured to assure your personal safety. In order not to defeat the built-in safeguards, observe the following basic rules for its installation, use and servicing.

ATTENTION:

Follow and obey all warnings and instructions marked on your product and its operating instructions. For your safety, please read all the safety and operating instructions before you operate this product and keep this brochure and the operating instructions packaged with your product for future reference.

INSTALLATION

1. Grounding or Polarization

(A) Your product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature.

If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

(B) Your product may be equipped with a 3-wire grounding-type plug, a plug having a third(grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature.

If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

2. Power Sources

Operate your product only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. If your product is intended to operate from battery power, or other sources, refer to the operating instructions.

3. Overloading

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

4. Power Cord Protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

5. Ventilation

Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered.

- Do not block the openings by placing the product on a bed, sofa, rug or other similar surface.
- Do not place the product in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

6. Wall or Ceiling Mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

ANTENNA INSTALLATION INSTRUCTIONS

1. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.


2. Lightning

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

3. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE. ANSI/NFPA 70

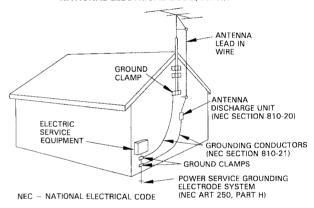

USE

1. Accessories

To avoid personal injury:

- Do not place this product on an unstable cart, stand, tripod, bracket, or table. It may fall, causing serious injury to a child or adult, and serious damage to the product.
- Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product.
- Use a mounting accessory recommended by the manufacturer and follow the manufacturer's instructions for any mounting of the product.
- Do not try to roll a cart with small casters across thresholds or deep-pile carpets.

PORTABLE CART WARNING (Symbol provided by RETAC)

2. Product and Cart Combination

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



3. Water and Moisture

Do not use this product near water—for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool and the like.

4. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

5. Attachments

Do not use attachments not recommended by the manufacturer of this product as they may cause hazards.

6. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

7. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

1. Servicing

If your product is not operating correctly or exhibits a marked change in performance and you are unable to restore normal operation by following the detailed procedure in its operating instructions, do not attempt to service it yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

2. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the product.
- c. If the product has been exposed to rain or water.
- d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e. If the product has been dropped or damaged in any way.
- f. When the product exhibits a distinct change in performance—this indicates a need for service.

3. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

4. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating conditions.

Printed in Malaysia YU20333

Thank you for purchasing



Instructions
Fold so opening is at the top.
Tape in middle or on front.

Please do not send products or other correspondence to this address.

307C



PLACE FIRST-CLASS STAMP HERE

JVC[®]
PO BOX 3434
PEORIA IL 61612-3434

PRODUCT REGISTRATION CARD/QUESTIONNAIRE

US CUSTOMERS ONLY

Registering your product will allow us to contact you in the unlikely event a product safety notification is required.

This is not a warranty card. Retain your bill of sale for proof of warranty coverage.

THANK YOU FOR PURCHASING THIS JVC PRODUCT

REGISTER ONLINE AT: WWW.JVC.COM

JVE Product Registration

10 days or Log to JVC.com and register On-Line

First Name:	
Last Name:	
Address:	
Apt #"	
City:	
State:	
Zip:	
Phone:	
Email Address:	
The information you choose to share product information and other comm	our responses to this questionnaire. with us will be used by JVC to offer you unications that may interest you. ut these special offers, please check here. { }
Date of Purchase	
Model Number	
Serial Number	
Purchase Price	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
Dealer	
1) Did you: - Purchase this product your self? - Receive this product as a gift?	5) Your Gender: - Male - Female
 2) Is this Product: The first product of this type you have ever owned? A replacement for a similar JVC product? A replacement for a similar product made by another company? 	6) Your Marital Status - Married - Single
- An addition to a similar product you are still using?	7) What is your approximate annual household income level?
3) What factors most influenced your decision to purchase this product? - JVC brand reputation - Previous experience with JVC products - Price - Specific product features	- Under \$25,000 - \$25,000 - \$49,000 - \$50,000 - \$74,000 - \$75,000 - \$99,000 - \$100,000 and over
 Style/appearance Salesperson's recommendation Friend/relative's recommendation Warranty coverage Other 	Comments:
4) How did you learn about this product? - Magazine Advertisement - Newspaper Advertisement - TV/Radio Announcement - Product Brochure - Direct Mail - Mail Order Catalog - Friend/Relative Recommendations - Salesperson/Store Recommendation	

BT-51034-1 (0703)

- Dealer Event

- Other

JVC Thanks you for completing this

offers that may interest you.

please check here { }

Your responses will help us reach you with

If you prefer not to receive these offers

questionnaire.