



Instructions





Please save these instructions for future reference. Adult assembly is required. No tools needed for assembly.

If you have any questions, please call Fisher-Price[®] Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price[®] Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

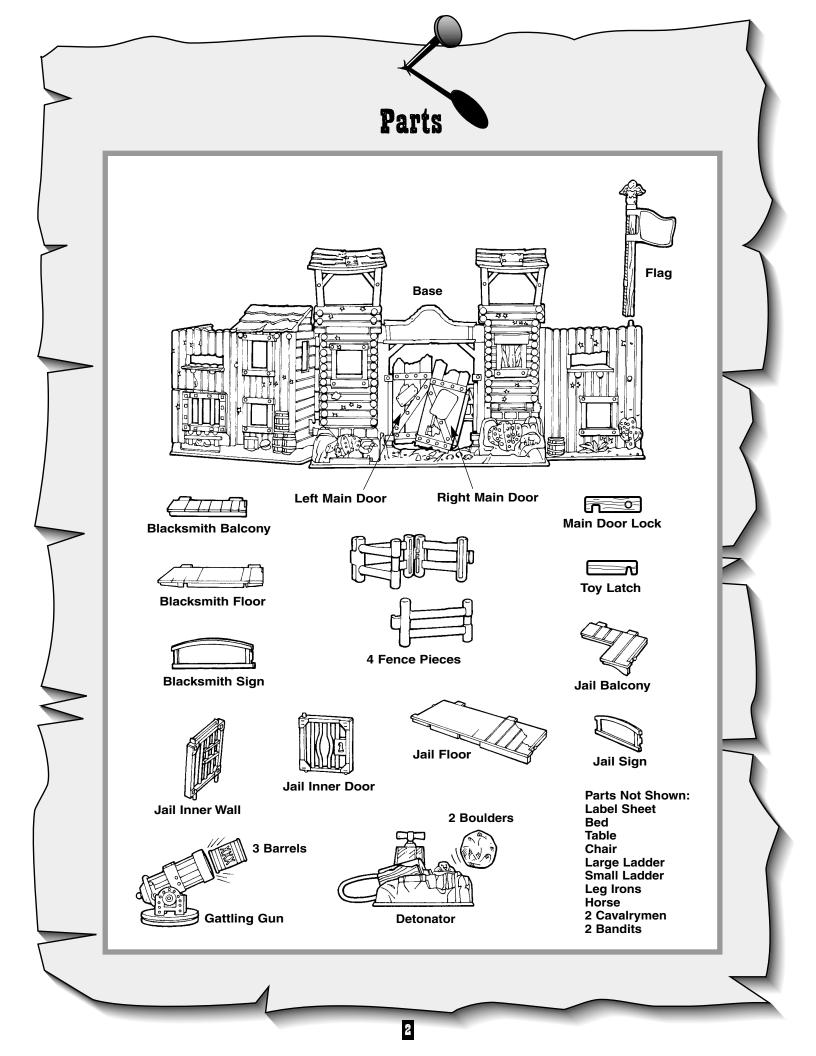

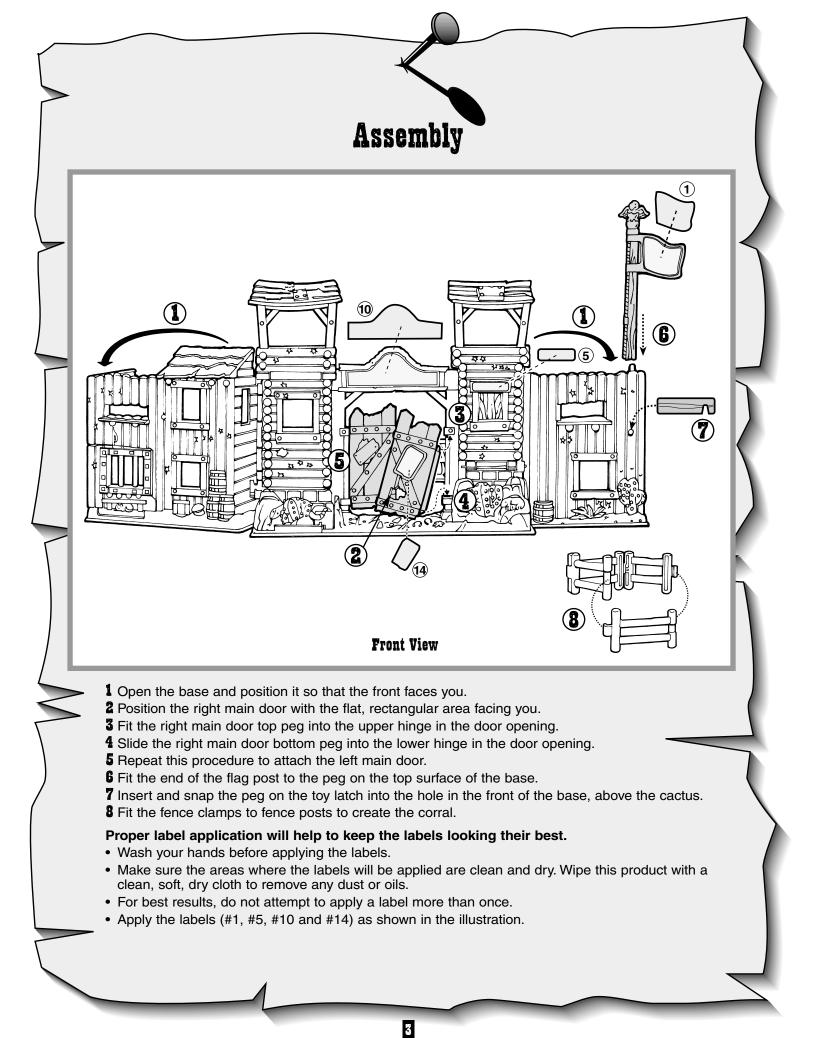

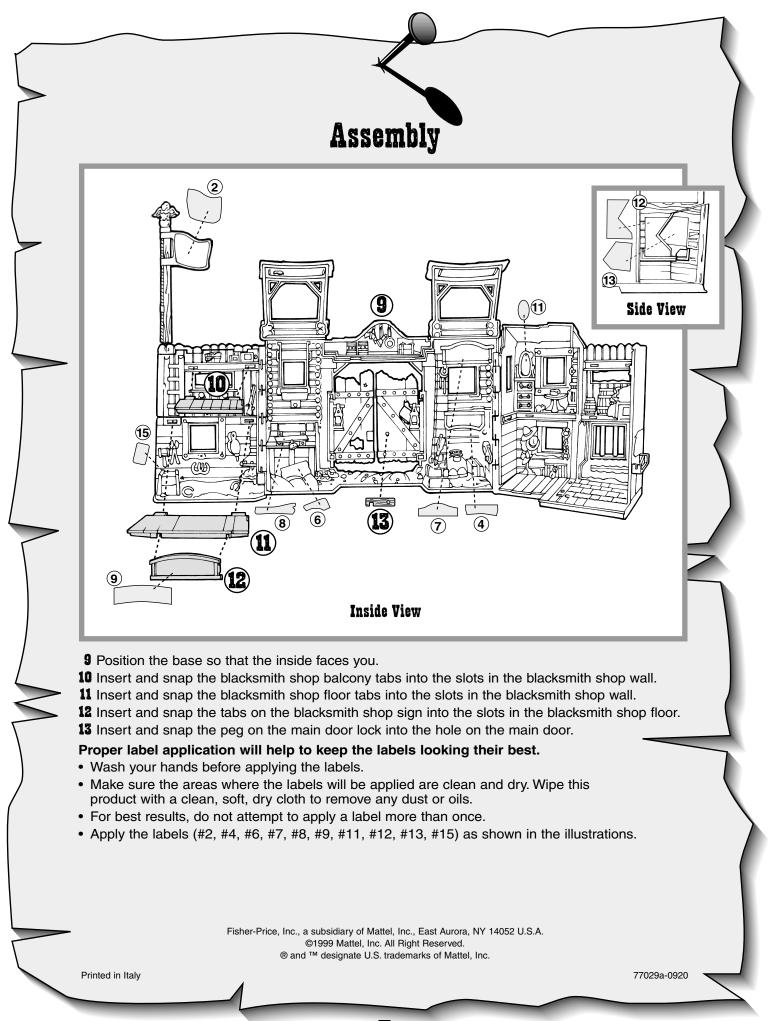

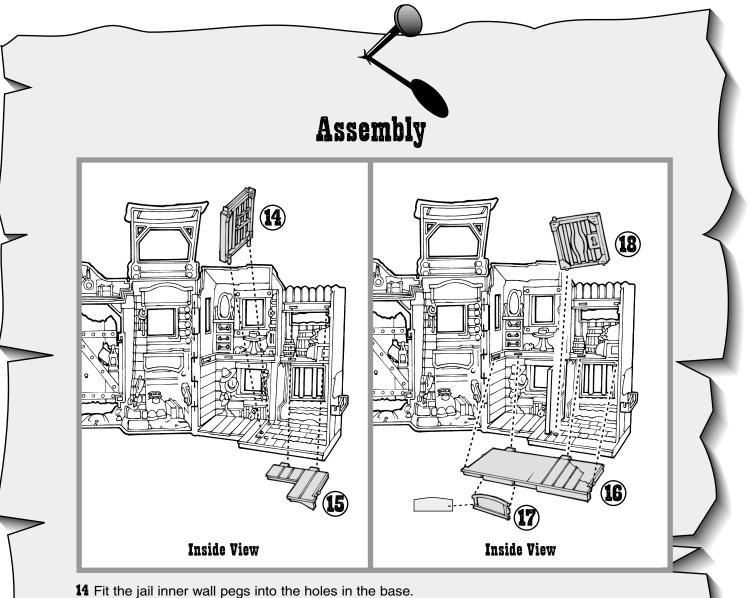

- **15** Insert the jail balcony tabs and peg into the slots in the jail front and side walls. Push on the jail balcony until the tabs snap into place.
- **16** Insert the jail floor tabs and pegs into the slots in the jail front and side walls. Make sure the top edge of the jail inner wall fits into the groove in the underside of the jail floor. Push on the jail floor until the tabs snap into place.
- 17 Insert and snap the tabs on the jail sign into the the slots in the jail floor.
- **18** At an angle, insert the jail inner door top peg into the hole in the jail floor. Slide the jail inner door bottom peg into the hole in the base.


Apply label #3 as shown in the illustration.

If you have any questions about this product:

In Canada, call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. In Great Britain, telephone 01628 500303.

5

In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

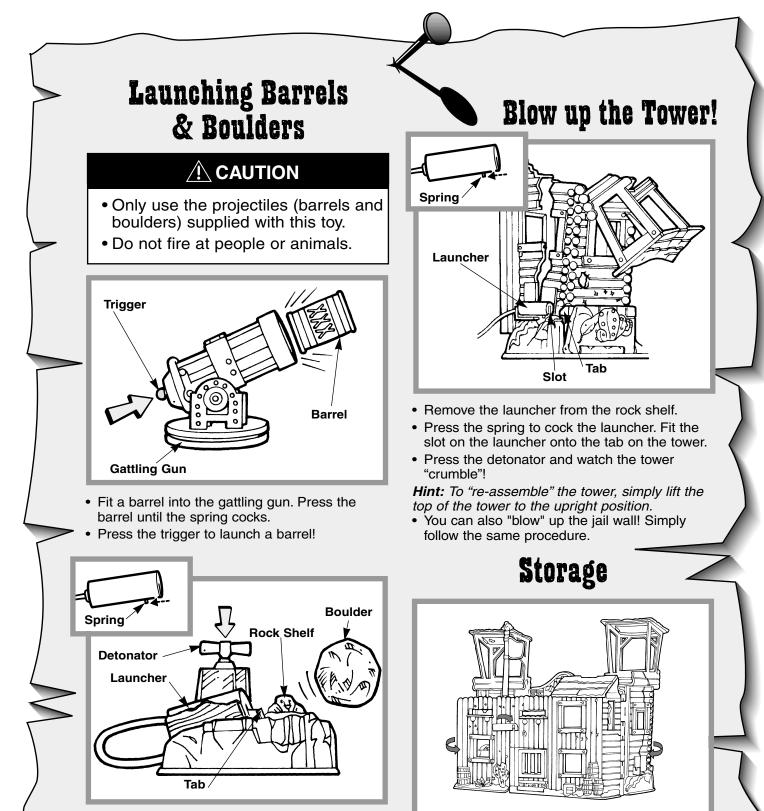

- Press the spring to cock the launcher.
- Pull the tab on the rock shelf completely out.
- Fit the slot in the launcher onto the tab.
- Place a boulder on the rock shelf, in front of the launcher. Press the detonator to shoot the boulder.

Hint: Remove the launcher from the rock shelf to shoot boulders off of any fort surface.

- Place all accessories inside the fort.
- Rotate the side walls closed.
- Lower the toy latch over the peg to keep the fort closed.



To clean, wipe the surface of this toy with a damp cloth. Do not immerse this toy.

6