

Portfolio Case Installation Guide

FMWCC45

INSTRUCTIONS

 
This portfolio case is designed to provide a compact, elegant solution for using and transporting your pen tablet and wireless keyboard.

 
The portfolio case consists of three distinct storage areas: a pen tablet easel, a keyboard platform, and a storage pocket.

To open the portfolio, unzip the wraparound zipper and flip the portfolio open. Undo the Velcro® strap that is securing the flap, as shown in Figure 1. Extend the back of the easel so that it forms a stand for the pen tablet (see Figure 2). The storage pocket remains accessible from the back of the easel.

Undo the Velcro strap that secures the screen flap. Lift the screen flap and lay it over the back of the easel to reveal the pen tablet platform. At the bottom of the platform is a flexible ledge upon which the pen tablet sits.

Tuck your pen tablet behind the ledge lip and lay the system flat onto the tablet platform. It should be a snug fit. Make sure the infrared keyboard port can be seen through the port














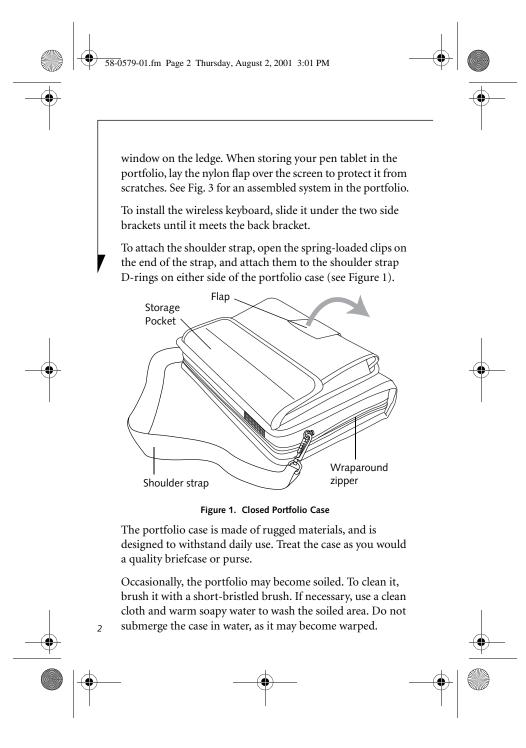

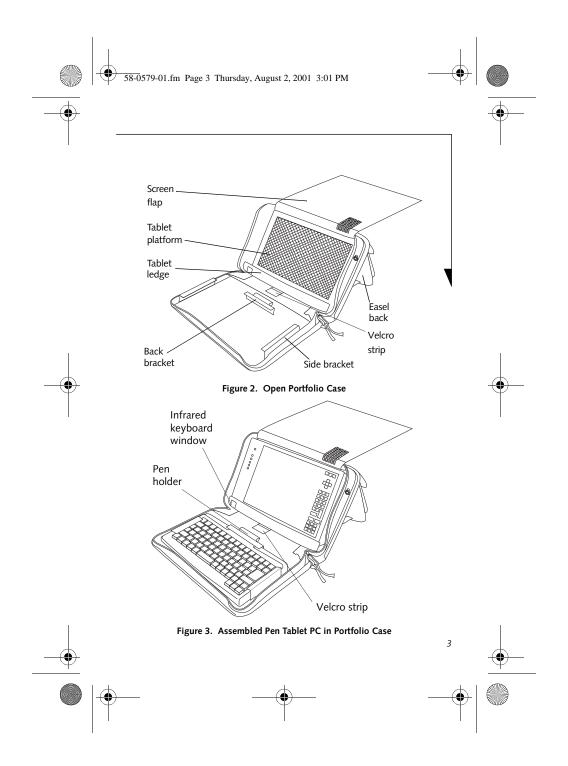

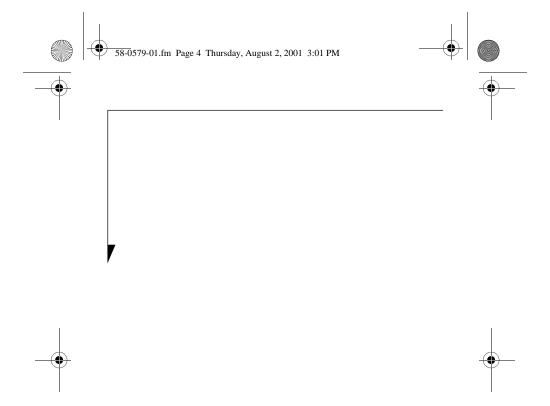



5200 Patrick Henry Drive Santa Clara, CA 95054

For more information, visit our Web site at: www.fujitsupc.com

For technical support call: 1-800-8Fujitsu (1-800-838-5487) or e-mail us at: 8fujitsu@fujitsupc.com

Fujitsu and the Fujitsu logo are registered trademarks of Fujitsu, Ltd. Stylistic is a trademark of Fujitsu PC Corporation. All other trademarks mentioned herein are the property of their respective owners. We cannot guarantee the accuracy of the contents of this document. We disclaim liability for errors, omissions or future changes.

@ 2001 Fujitsu PC Corporation. All rights reserved.

FPC58-0579-01

