 



Congratulations on your purchase of a high-quality Insignia product. Your NS-PSD5321 speaker system is designed for reliable and trouble-free performance.

FEATURES

Multi-function Control Pod

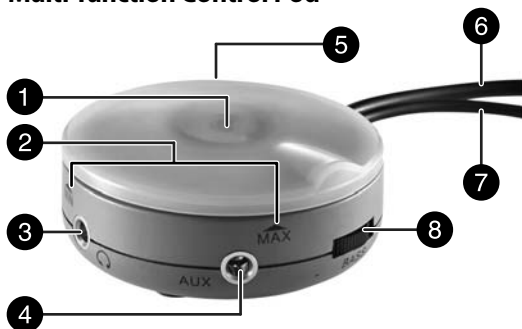

 Subwoofer

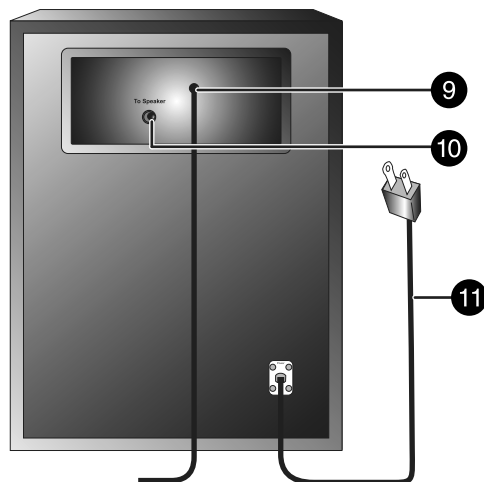


PACKAGE CONTENTS

- Satellite speakers (2)
- Subwoofer with Control pod
- Quick Setup Guide

SETTING UP YOUR SPEAKER SYSTEM

Positioning your speaker system

 - 1 Place the speakers on opposite sides of the device they are connected to and as far apart as possible.
- 2 Place the subwoofer on the floor.

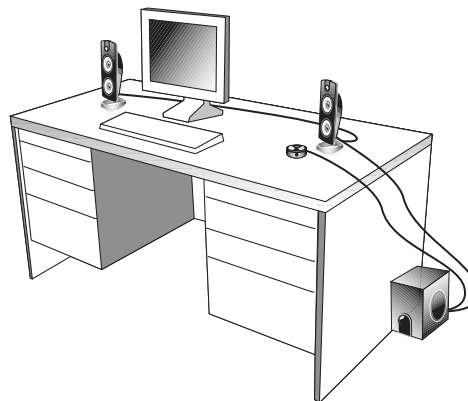

- 3 Connect the satellite speakers to the subwoofer by plugging the connector into the "To Speaker" jack on the subwoofer.
- 4 Plug the AC cable into a wall outlet or power strip.

 


- 5 Turn on the computer and your speaker system.
- 6 Use the master and bass volume controls on the control pod to control the volume of your speaker system.

Note: You may need to adjust volume levels on your computer or source devices as well.


Connecting to a computer

- 1 Make sure that the computer and your speaker system are turned off and unplugged from the power outlet.
- 2 Connect the control pod to your computer by plugging the AUX cable with the green connector that is hardwired into the control pod into the audio line out, speaker, or headphone jack on the computer (this jack is usually green).

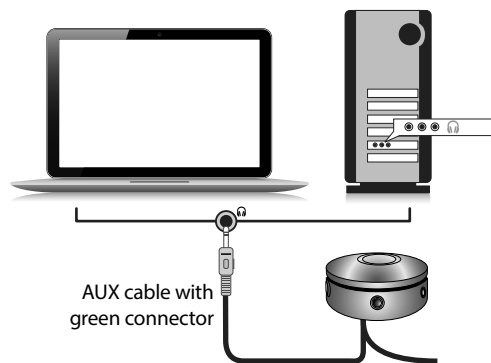

Connecting to portable audio devices

 - 1 Make sure that the portable audio device and your speaker system are turned off and unplugged.
- 2 Connect the headphone jack of your audio device to the AUX input jack on your control pod using an AUX cable (not included).

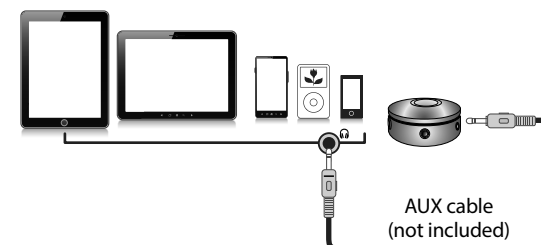

- 3 Plug the AC cable into a wall outlet or power strip.
- 4 Turn on the audio device and your speaker system.
- 5 Use the controls on your audio device to control playback.

Notes:

- This connection will override your computer source connection while it's plugged in.
- You can control playback volume using the control pod.

#	ITEM	DESCRIPTION
1	Power LED	Lights blue when the speaker system is turned on.
2	Master volume control	Rotate clockwise to turn the volume up or counter-clockwise to turn the volume down.
3	🎧 (headphone) output jack	Plug your headphones into this jack. Note: With headphones connected, speaker sound will be muted.
4	AUX input jack	Connect a second source, such as an MP3 player, to this jack.
5	Power switch	Slide the switch on the back of the control pod to turn on/off the speaker system.
6	Subwoofer cable	Connects the control pod to the subwoofer.
7	AUX cable	Connect this cable to an audio line out jack (usually green) on a computer.
8	BASS volume control	Rotate clockwise to turn bass volume up or counter-clockwise to turn bass volume down.
9	Control pod wire	The control pod wire is permanently attached to the subwoofer here.
10	To Speaker jack	Plug the connector from the speakers into this jack.
11	Power cord	The power cord is permanently attached to the subwoofer here.

TROUBLESHOOTING

SYMPTOM	SOLUTION
Speaker system will not turn on	<ul style="list-style-type: none"> Make sure that the power cord is connected to a power outlet. Test the power outlet to make sure that it is supplying power. Slide the power switch on the control pod to ON. When your speaker system is turned on, the power LED lights blue.
Speaker does not produce sound	<ul style="list-style-type: none"> Make sure that the speaker system is connected to power and turned ON. Test the power outlet to make sure that it is supplying power. Make sure that you have connected the speakers correctly. For more information, see "Setting up your speaker system" on page one. Make sure that the sound is not muted or the volume is not set too low on the computer or audio device you connected to. Make sure that the master volume of the speaker system is not set too low. Try connecting your speaker system to another audio device. If your speaker system produces sound, the problem is with the audio device you connected to. Make sure that all your headphones are not plugged into the control pod. Make sure that your source device is still playing. Some phones will pause playback if the audio output is unplugged or disrupted.
Sound is distorted	<ul style="list-style-type: none"> Adjust the master volume control to the ¼ or ½ level. Adjust volume settings on the output device (computer or portable audio source). Make sure that all connections are correct and secure.
Sound is coming from one speaker	<ul style="list-style-type: none"> If your speaker system is connected to a computer, adjust your computer's audio levels to balance the sound coming from the speakers. Make sure that all connections are correct and secure.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation or exposure.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INFORMATION

- 1 Read, follow, and save all instructions and documentation.
- 2 Do not use this apparatus near water.
- 3 Clean only with a dry cloth.
- 4 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 5 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 6 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 7 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 8 Only use attachments/accessories specified by the manufacturer.
- 9 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 10 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 11 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 12 Keep the unit in a well-ventilated environment. Do not install this equipment in a confined space such as a bookcase.
- 13 **WARNING:** To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.
- 14 **WARNING:** The wall plug is the disconnecting device. The plug must remain readily operable.
- 15 The apparatus is classified as a class II apparatus.

LEGAL NOTICES

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Canada ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 Best Buy. All rights reserved.
Made in China