



**ONKYO®**

**AV Receiver**

***TX-SR603/603E***  
***TX-SR8360***

**Instruction Manual**

Thank you for purchasing an Onkyo AV Receiver.  
Please read this manual thoroughly before making  
any connections and plugging it in.  
Following the instructions in this manual will enable  
you to obtain optimum performance and listening  
enjoyment from your new AV Receiver.  
Please retain this manual for future reference.

**Contents**

**Introduction ..... 2**

**Connections ..... 21**

**First Setup ..... 39**

**Basic Operations ..... 53**

**Advanced Operations ..... 64**

**Advanced Setup ..... 68**

**Zone 2 ..... 74**

**Using the Remote Controller  
with Other Components ..... 78**

**Specifications ..... 88**

**Troubleshooting ..... 89**

**En**

**WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

**CAUTION:**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



**WARNING**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**AVIS**  
RISQUE DE CHOC ELECTRIQUE  
NE PAS OUVRIR



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**Important Safety Instructions**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

PORTABLE CART WARNING



S3125A

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**15. Damage Requiring Service**

Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or plug is damaged,
- B. If liquid has been spilled, or objects have fallen into the apparatus,
- C. If the apparatus has been exposed to rain or water,
- D. If the apparatus does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the apparatus to its normal operation,
- E. If the apparatus has been dropped or damaged in any way, and
- F. When the apparatus exhibits a distinct change in performance this indicates a need for service.

**16. Object and Liquid Entry**

Never push objects of any kind into the apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus.

Don't put candles or other burning objects on top of this unit.

**17. Batteries**

Always consider the environmental issues and follow local regulations when disposing of batteries.

**18. If you install the apparatus in a built-in installation, such as a bookcase or rack, ensure that there is adequate ventilation.**

Leave 20 cm (8") of free space at the top and sides and 10 cm (4") at the rear. The rear edge of the shelf or board above the apparatus shall be set 10 cm (4") away from the rear panel or wall, creating a flue-like gap for warm air to escape.

# Precautions

## For U.S. Models

### Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### FCC Information for User

#### CAUTION:

The user changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## For Canadian model

**NOTE:** THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

For models having a power cord with a polarized plug:

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

## Modèle pour les Canadien

**REMARQUE:** CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Sur les modèles dont la fiche est polarisée:

**ATTENTION:** POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

1. **Recording Copyright**—Unless it's for personal use only, recording copyrighted material is illegal without permission of the copyright holder.
2. **AC Fuse**— The AC fuse inside the AV receiver is not user-serviceable. If you cannot turn on the AV receiver, contact your Onkyo dealer.
3. **Care**—Occasionally you should dust the AV receiver all over with a soft cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the AV receiver immediately afterwards with a clean cloth. Don't use abrasive cloths, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.

#### 4. Power WARNING

BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY.


AC outlet voltages vary from country to country. Make sure that the voltage in your area meets the voltage requirements printed on the AV receiver's rear panel (e.g., AC 230 V, 50 Hz or AC 120 V, 60 Hz).

Setting the [STANDBY/ON] switch to STANDBY does not fully shutdown the AV receiver. If you do not intend to use the AV receiver for an extended period, remove the power cord from the wall outlet.

#### For Worldwide model

The Worldwide model has a voltage selector for compatibility with power systems around the world. Before you plug in this model, make sure that the voltage selector is set to the correct voltage for your area.

If it isn't, use a small screwdriver to set it as appropriate. For example, if the voltage in your area is 120 volts, set the selector to "120V." And if it's between 220 and 230 volts, set it to "220-230V."

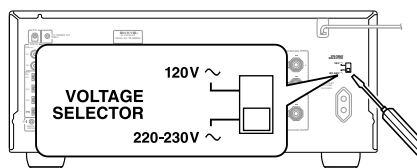

## Precautions—Continued

### For British models

Replacement and mounting of an AC plug on the power supply cord of this unit should be performed only by qualified service personnel.

#### IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Blue: Neutral

Brown: Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

#### IMPORTANT

A 5 or 13 ampere fuse is fitted in this plug. Should the fuse need to be replaced, please ensure that the replacement fuse has a rating of 5 or 13 amperes and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark or the BSI mark on the body of the fuse. IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13 AMPERE SOCKET.

If in any doubt, consult a qualified electrician.

### For European Models

#### Declaration of Conformity

We, ONKYO EUROPE  
ELECTRONICS GmbH  
LIEGNITZERSTRASSE 6,  
82194 GROEBENZELL,  
GERMANY



declare in own responsibility, that the ONKYO product described in this instruction manual is in compliance with the corresponding technical standards such as EN60065, EN55013, EN55020 and EN61000-3-2, -3-3.

GROEBENZELL, GERMANY

I. MORI


ONKYO EUROPE ELECTRONICS GmbH

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited consumer uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.


U.S. Patent Nos. 4,631,603; 4,577,216; 4,819,098; 4,907,093; 5,315,448; and 6,516,132.

## Supplied Accessories

Make sure you have the following accessories:

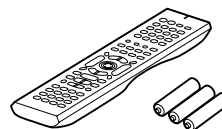


Remote controller & three batteries (AA/R6)

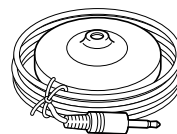


Speaker setup microphone



Indoor FM antenna

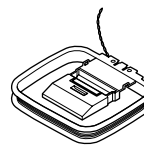


AM loop antenna

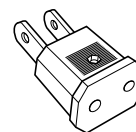

#### Power-plug adapter

Only supplied in certain countries. Use this adapter if your AC outlet does not match with the plug on the AV receiver's power cord (adapter varies from country to country).

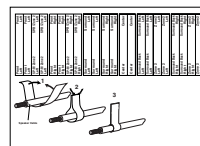

#### Speaker cable labels

\* In catalogs and on packaging, the letter at the end of the product name indicates the color. Specifications and operations are the same regardless of color.

# Features

---

## ***Amplifier***

---

- 90 watts per channel into 8 ohms, 20 Hz to 20 kHz, less than 0.08% total harmonic distortion (FTC rating)
- 7-channel amplifier
- Optimum Gain Volume Circuitry
- Zone 2 capability
- 24-bit/192 kHz D/A converters
- WRAT (Wide Range Amplifier Technology)
- Color-coded speaker terminal posts

## ***Audio/Video***

---

- Dolby<sup>\*1</sup> Digital, Dolby Digital EX, Dolby Pro Logic IIx
- DTS<sup>\*2</sup>, DTS-ES Discrete, DTS-ES Matrix, DTS Neo:6, and DTS 96/24
- VLSC (Vector Linear Shaping Circuitry) on the front left and right channels
- 6 digital inputs (4 optical, 2 coaxial), 1 digital optical output.
- Zone 2 line out
- Composite and S-Video to component video conversion
- Composite video to S-Video and S-Video to composite video conversion
- 3 component video inputs, 1 output
- 5 S-Video inputs, 3 outputs
- CinemaFILTER<sup>\*3</sup>
- Subwoofer pre out

## ***FM/AM Tuner***

---

- 40 AM/FM presets
- AM/FM auto tuning
- RDS—Radio Data System (Europe only)

## ***Others***

---

- Includes microphone for automatic speaker setup
- Easy-to-use onscreen setup menus
- Preprogrammed remote controller for use with other AV components

\*1. Manufactured under license from Dolby Laboratories. “Dolby,” “Pro Logic,” and the double-D symbol are trademarks of Dolby Laboratories.  
\*2. “DTS,” “DTS 96/24,” “DTS-ES,” and “Neo:6” are trademarks of Digital Theater Systems, Inc.  
\*3. “CinemaFILTER” is a trademark of Onkyo Corporation. “Xantech” is a registered trademark of Xantech Corporation. “Niles” is a registered trademark of Niles Audio Corporation.

# Table of Contents

## Basic

### Introduction

Important Safety Instructions .....	2
Precautions .....	3
Supplied Accessories.....	4
Features .....	5
Table of Contents .....	6
Front & Rear Panels.....	8
Remote Controller.....	13
About Home Theater .....	20

### Connecting the AV Receiver

About AV Connections .....	21
Connecting Your Speakers.....	22
Connecting Antenna .....	24
Connecting Your TV or Projector .....	27
Connecting AV Components .....	28
Connecting Audio Components .....	34
Connecting <b>RI</b> Components.....	37
Connecting the Power Cord of Another Component.....	37
Turning On the AV Receiver .....	38

### First Time Setup

Automatic Speaker Setup.....	39
About the Onscreen Setup Menus .....	42
Initial Setup.....	43
Digital Input .....	43
Component Video Setup .....	44
Minimum Speaker Impedance (not North American models) .....	44
TV Format Setup (not North American models).....	45
AM Frequency Step Setup (some models only) .....	46
Speaker Setup .....	46
Changing the TAPE/MD/CDR Display .....	52

### Basic Operations

Selecting the Input Source.....	53
Setting the Display Brightness .....	54
Muting the AV Receiver .....	54
Using the Sleep Timer.....	54
Using Headphones .....	54
Displaying Source Information .....	55
Using the Tuner .....	56
Selecting Listening Modes.....	60
Listening Mode Table.....	61
About the Listening Modes.....	62

### Others

Specifications.....	88
Troubleshooting .....	89

## Table of Contents—Continued

### Advanced

#### Controlling Other Components

Advanced Features

Entering Remote Control Codes.....	78
Learning Commands from Another Remote Controller .....	86
Using Macros.....	87

#### Advanced Setup

Advanced Features

Adjusting the Bass & Treble.....	68
Audio Adjust Functions.....	68
Assigning Listening Modes to Input Sources .....	70
IntelliVolume .....	71
Setting Preferences.....	71
Digital Input Signal Formats .....	72
Changing the Remote Controller's ID.....	73

#### Advanced Operations

Advanced Features

Using the Late Night Function (Dolby Digital only) .....	64
Using the CinemaFILTER.....	64
Adjusting Individual Speaker Levels.....	65
Using the DVD Analog Multichannel Input .....	65
Recording.....	66

#### Zone 2


Advanced Features

Connecting Zone 2.....	74
Setting the Powered Zone 2 .....	75
Using Zone 2.....	76
Using the Remote Control in Zone 2 .....	77

# Front & Rear Panels

## Front Panel

TX-SR603/603E, TX-SR8360

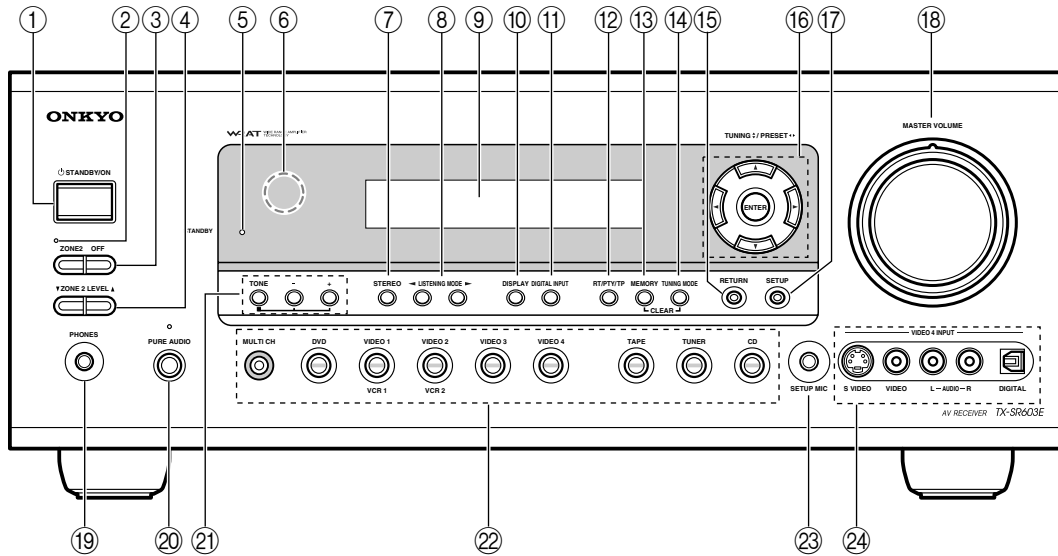

The page numbers in parentheses show where you can find the main explanation for each item.

- ① **STANDBY/ON button (38)**  
This button is used to set the AV receiver to On or Standby.
- ② **ZONE 2 indicator (76)**  
This indicator lights up when Zone 2 is selected.
- ③ **ZONE 2/OFF button (76)**  
The ZONE 2 button is used to select the input source for Zone 2.  
The OFF button is used to turn off the output of Zone 2.
- ④ **ZONE 2 LEVEL button (76)**  
This button is used to set the volume for Zone 2.
- ⑤ **STANDBY indicator (38)**  
This indicator lights up when the AV receiver is in Standby mode, and it flashes while a signal is being received from the remote controller.
- ⑥ **Remote-control sensor (13)**  
This sensor receives control signals from the remote controller.
- ⑦ **STEREO button (60)**  
This button is used to select the Stereo listening mode.
- ⑧ **LISTENING MODE [◀] [▶] buttons (60)**  
These buttons are used to select the listening modes.
- ⑨ **Display**  
See “Display” on page 10.
- ⑩ **DISPLAY button (55)**  
This button is used to display various information about the currently selected input source.
- ⑪ **DIGITAL INPUT button (43, 72)**  
This button is used to assign the digital inputs and to specify the format of digital input signals.
- ⑫ **DIMMER or RT/PTY/TP button (54, 59)**  
DIMMER is used to adjust the display brightness.  
On the European model, this is the RT/PTY/TP button, and it’s for RDS (Radio Data System). See “Using RDS (European models only)” on page 58.
- ⑬ **MEMORY button (57)**  
This button is used when storing or deleting radio presets.
- ⑭ **TUNING MODE button (56)**  
This button is used to select the Auto or Manual tuning mode.
- ⑮ **RETURN button**  
This button is used to return to the previously displayed onscreen setup menu.
- ⑯ **Arrow/TUNING/PRESET & ENTER buttons**  
When the AM or FM input source is selected, the TUNING [▲] [▼] buttons are used to tune the tuner, and the PRESET [◀] [▶] buttons are used to select radio presets (see page 57). When the onscreen setup menus are used, they work as arrow buttons and are used to select and set items. The ENTER button is also used with the onscreen setup menus.



## Front & Rear Panels—Continued

---

⑰ **SETUP button**

This button is used to access the onscreen setup menus that appear on the connected TV.

⑱ **MASTER VOLUME control (53)**

This control is used to adjust the volume of the AV receiver to MIN, 1 through 99, or MAX.

⑲ **PHONES jack (54)**

This 1/4-inch phone jack is for connecting a standard pair of stereo headphones for private listening.

⑳ **PURE AUDIO button & indicator (60)**

The North American TX-SR603 doesn't have this button and indicator.

This button is used to select the Pure Audio listening mode. The indicator lights up when that mode is selected.

㉑ **TONE, [-] & [+] buttons (68)**

These buttons are used to adjust the bass and treble.

㉒ **Input selector buttons (53)**

These buttons are used to select from the following input sources: MULTI CH, DVD, VIDEO 1, VIDEO 2, VIDEO 3, VIDEO 4, TAPE, TUNER or CD.

The [MULTI CH] button selects the DVD analog multichannel input.


㉓ **SETUP MIC (39)**

The included speaker setup microphone is connected here for automatic speaker setup.

㉔ **VIDEO 4 INPUT**

This input can be used to connect a camcorder, game console, and so on. There are jacks for optical digital audio, S-Video, composite video, and analog audio.

Display

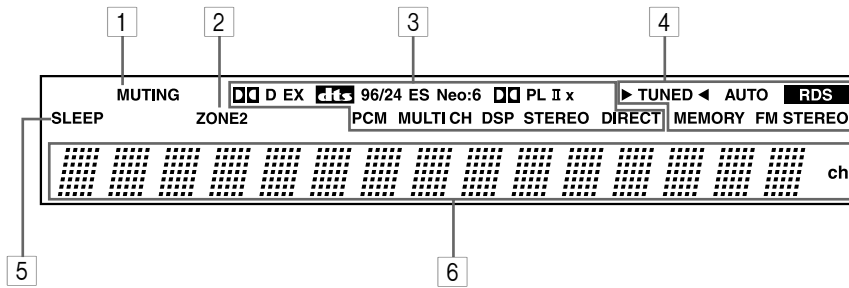


The page numbers in parentheses show where you can find the main explanation for each item.

- 1 **MUTING indicator (54)**  
This indicator flashes while the AV receiver is muted.
- 2 **ZONE 2 indicator (76)**  
This indicator lights up when Zone 2 is selected.
- 3 **Listening mode & format indicators**  
These indicators show the currently selected listening mode and the format of digital input signals.
- 4 **Tuning indicators (56)**  
**TUNED:** This indicator lights up when the AV receiver is tuned into a radio station.  
**AUTO:** This indicator lights up when the Auto Tuning mode is selected, and disappears when the Manual Tuning mode is selected.
- RDS (European model only):** This indicator lights up when the AV Receiver is tuned to a radio station that supports RDS (Radio Data System).
- MEMORY:** This indicator lights up when presetting radio stations.
- FM STEREO:** This indicator lights up when the AV receiver is tuned to a stereo FM station.
- 5 **SLEEP indicator (54)**  
This indicator lights up when the Sleep function has been set.
- 6 **Message area**  
This area of the display shows various information about the currently selected source.

## Front & Rear Panels—Continued

### Rear Panel

TX-SR603/603E, TX-SR8360

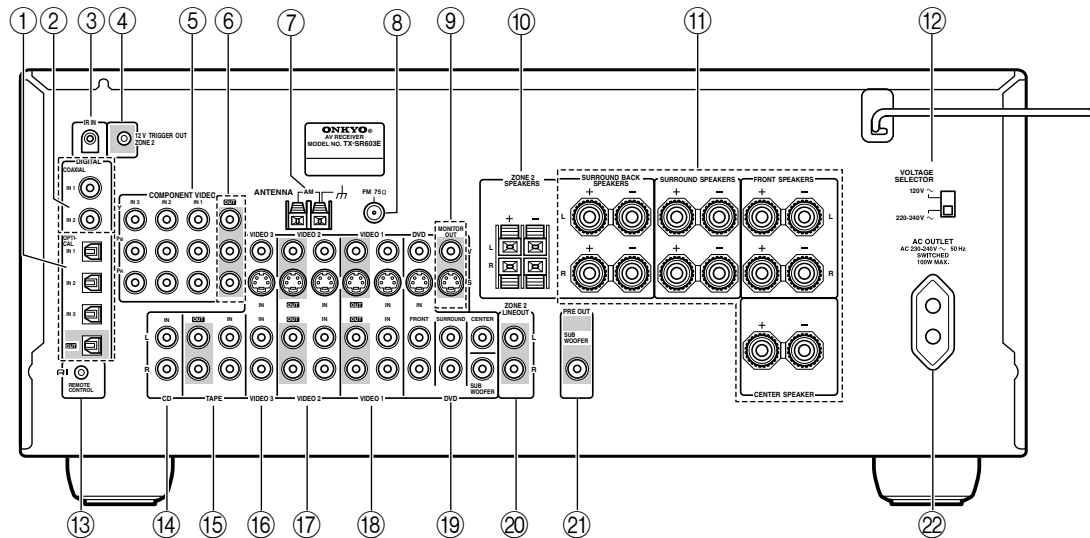

The page numbers in parentheses show where you can find the main explanation for each item.

- ① **OPTICAL DIGITAL**  
The optical digital audio inputs can be used to connect CD and DVD players, and other components with an optical digital audio output.  
The optical output can be used connect a CD recorder or other digital recorder with an optical digital input.
- ② **COAXIAL DIGITAL**  
The coaxial digital audio inputs can be used to connect CD and DVD players, and other components with a coaxial digital audio output.
- ③ **IR IN (77)**  
If you want to use the remote controller to control the AV receiver from Zone 2, or if the AV receiver is installed in a cabinet and the line of sight between the AV receiver and the remote controller is obstructed, a commercially available IR receiver can be connected here.
- ④ **12V TRIGGER OUT ZONE 2 (77)**  
This output can be connected to the 12-volt trigger input on a power amplifier in Zone 2. When Zone 2 is turned on, a 12-volt trigger signal is output.
- ⑤ **COMPONENT VIDEO IN 1, 2, 3**  
These component video inputs can be used to connect AV components with component video outputs, such as DVD players.
- ⑥ **COMPONENT VIDEO OUT**  
This component video output can be used to connect a TV or projector with a component video input.
- ⑦ **AM ANTENNA (24)**  
These push terminals are for connecting an AM antenna.
- ⑧ **FM ANTENNA (24)**  
This jack is for connecting an FM antenna.
- ⑨ **MONITOR OUT**  
The S-Video or composite video jack should be connected to a video input on your TV or projector.
- ⑩ **ZONE 2 SPEAKERS (74)**  
These terminal posts are for connecting speakers in Zone 2.
- ⑪ **FRONT, CENTER, SURROUND & SURROUND BACK SPEAKERS (23)**  
These terminal posts are for connecting your front, center, surround, and surround back speakers.

See pages 27-37 for connection information.

## Front & Rear Panels—Continued

---

⑫ **VOLTAGE SELECTOR (3)**

Certain models only.

This voltage selector provides compatibility with power systems around the world.

⑬ **RI REMOTE CONTROL**

This **RI** (Remote Interactive) jack can be connected to an **RI** jack on another Onkyo AV component. The AV receiver's remote controller can then be used to control that component. To use **RI**, you must make an analog audio connection (RCA) between the AV receiver and the other AV component, even if they are connected digitally.

⑭ **CD IN**

This analog audio input is for connecting a CD player's analog audio output.

⑮ **TAPE IN/OUT**

This analog audio input and output are for connecting a recorder with an analog audio input and output (cassette, Mini Disc, etc.).

⑯ **VIDEO 3 IN**

Here you can connect a video source (VCR, set-top box, etc.). Input jacks include S-Video, composite video, and analog audio.

⑰ **VIDEO 2 IN/OUT**

Here you can connect a VCR. Input and output jacks include S-Video, composite video, and analog audio.

⑱ **VIDEO 1 IN/OUT**

Here you can connect a VCR. Input and output jacks include S-Video, composite video, and analog audio.

⑲ **DVD IN**

Here you can connect a DVD player. Input jacks include S-Video, composite video, and analog audio. You can connect a DVD player's 2-channel analog audio output or 5.1-channel analog audio output.

⑳ **ZONE 2 LINE OUT (74)**

This analog audio output can be connected to a line input on an integrated amplifier in Zone 2.

㉑ **PRE OUT (22)**

The SUBWOOFER jack is for connecting a powered subwoofer.

㉒ **AC OUTLET**


This switched AC outlet can be used to supply power to other AV components. The type of outlet depends on the country in which you purchased your AV receiver.

See pages 27-37 for connection information.


# Remote Controller

## Installing the Batteries


- 1 To open the battery compartment, press the small hollow and slide off the cover.**

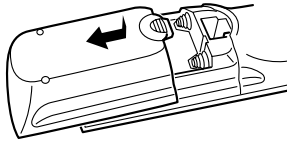

- 2 Insert the three supplied batteries (AA/R6) in accordance with the polarity diagram inside the battery compartment.**

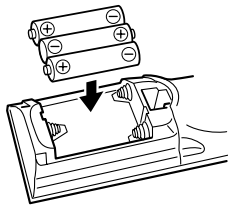

- 3 Put the cover onto the remote controller and slide it shut.**

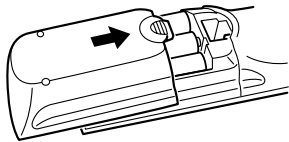


### Notes:

- The batteries should last for about six months, although this will vary with usage.
- If the remote controller doesn't work reliably, try replacing the batteries.
- Don't mix new and old batteries or different types of batteries.
- If you intend not to use the remote controller for a long time, remove the batteries to prevent damage from leakage or corrosion.
- Expired batteries should be removed as soon as possible to prevent damage from leakage or corrosion.

## Using the Remote Controller

To use the remote controller, point it at the AV receiver's remote control sensor, as shown below.

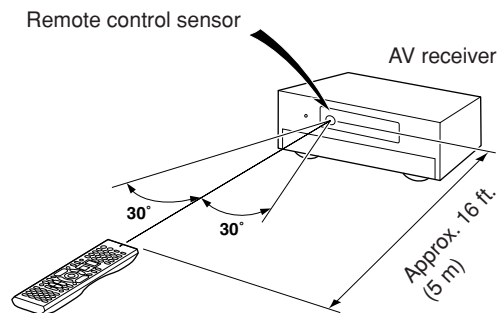

### Notes:

- The remote controller may not work reliably if the AV receiver is subjected to bright light, such as direct sunlight or inverter-type fluorescent lights. Keep this in mind when installing.
- If another remote controller of the same type is used in the same room, or the AV receiver is installed close to equipment that uses infrared rays, the remote controller may not work reliably.
- Don't put anything, such as a book, on the remote controller, because the buttons may be pressed inadvertently, thereby draining the batteries.
- The remote controller may not work reliably if the AV receiver is installed in a rack behind colored glass doors. Keep this in mind when installing.
- The remote controller will not work if there's an obstacle between it and the AV receiver's remote control sensor.


## Remote Controller—Continued

In addition to controlling the AV receiver, the remote controller has several operating modes for controlling your other AV components, including Onkyo components connected via **RI**. Modes are selected by using the remote controller's REMOTE MODE buttons. For detailed information, see the pages in parentheses. Some of the functions described in this manual may not work as expected with other components.

### Receiver Mode


Receiver mode is used to control the AV receiver. To select Receiver mode, press the [RECEIVER] REMOTE MODE button.

#### RC-591M

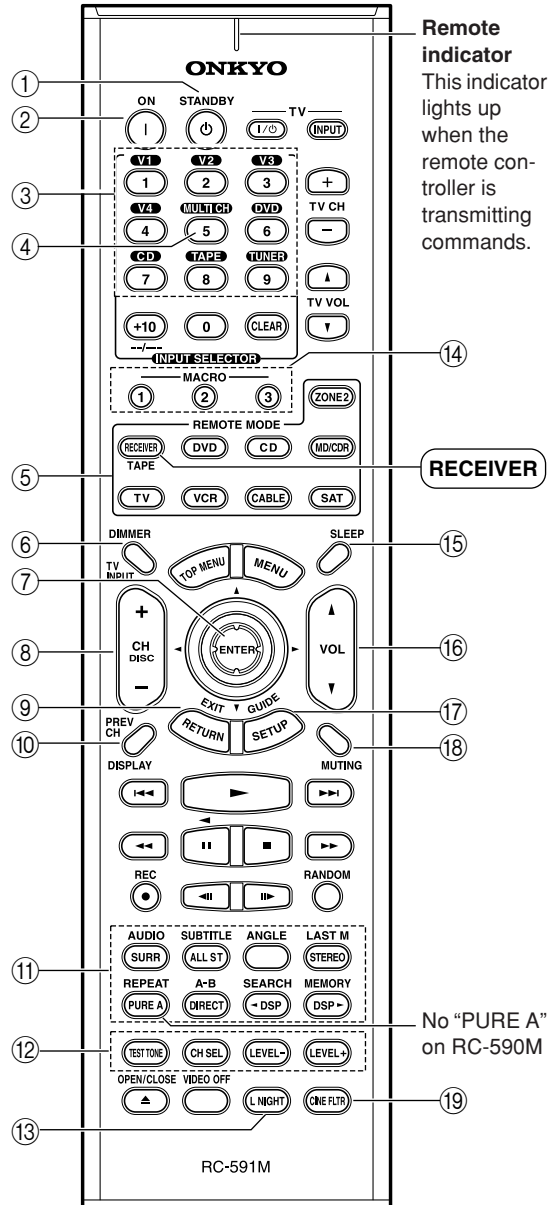

## Remote Controller—Continued

- ① **STANDBY button (38)**  
This button is used to set the AV receiver to Standby.
- ② **ON button (38)**  
This button is used to turn on the AV receiver.
- ③ **INPUT SELECTOR buttons (53)**  
These buttons are used to select the input source.
- ④ **MULTI CH button (65)**  
This button is used to select the DVD analog multi-channel input.
- ⑤ **REMOTE MODE buttons**  
These buttons are used to select the remote controller modes.
- ⑥ **DIMMER button (54)**  
This button is used to adjust the display brightness.
- ⑦ **Arrow [▲]/[▼]/[◀]/[▶] & ENTER buttons**  
These buttons are used to select items on the onscreen setup menus.
- ⑧ **CH +/- button (57)**  
This button is used to select radio presets.
- ⑨ **RETURN button**  
This button is used to return to the previously displayed onscreen setup menu.
- ⑩ **DISPLAY button (55, 57)**  
This button is used to display various information about the currently selected input source.
- ⑪ **Listening mode buttons (60)**
  - SURR button**  
This button is used to select the Dolby Digital, Pro Logic IIx, Neo:6, DTS and other listening modes.
  - ALL ST button**  
This button is used to select the All Ch Stereo listening mode.
  - STEREO button**  
This button is used to select the Stereo listening mode.
  - PURE A button (RC-591M only)**  
This button is used to select the Pure Audio listening mode.
  - DIRECT button**  
This button is used to select the Direct listening mode.
  - [◀ DSP] & [DSP ▶] buttons**  
These buttons are used to select the Onkyo original DSP (digital signal processor) listening modes and Mono listening mode.
- ⑫ **TEST TONE, CH SEL, LEVEL-, & LEVEL+ buttons (50)**  
These buttons are used to adjust the level of each speaker individually. The [LEVEL-] & [LEVEL+] buttons are also used to adjust the volume in Zone 2.
- ⑬ **L NIGHT button (64)**  
This button is used to set the Late Night function.
- ⑭ **MACRO buttons (87)**  
These buttons are used with the Macro function.
- ⑮ **SLEEP button (54)**  
This button is used to set the Sleep function.
- ⑯ **VOL button (53)**  
This button is used to adjust the volume of the AV receiver.
- ⑰ **SETUP button**  
This button is used to access the onscreen setup menus that appear on the connected TV.
- ⑱ **MUTING button (54)**  
This button is used to mute the AV receiver.
- ⑲ **CINE FLTR button (64)**  
This button is used to set the CinemaFILTER function.

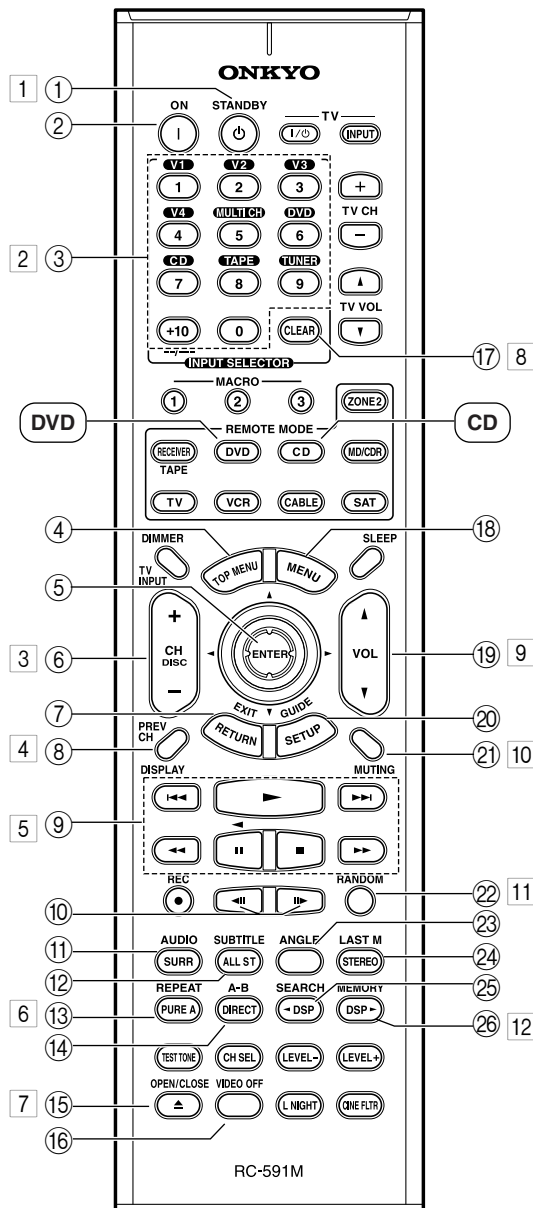

Numbers in circles are for DVD mode.  
Numbers in squares are for CD mode.

## DVD Mode

DVD mode is used to control an Onkyo DVD player connected to the AV receiver via **RI**.

To set the remote controller to DVD mode, press the **[DVD] REMOTE MODE button**.

- ① **STANDBY button**  
This button is used to set the DVD player to Standby.
- ② **ON button**  
This button is used to turn on the DVD player and to set it to Standby.
- ③ **Number buttons**  
These buttons are used to enter title, chapter, and track numbers, and to enter times for locating specific points in time.
- ④ **TOP MENU button**  
This button is used to select a DVD's top menu.
- ⑤ **Arrow [▲]/[▼]/[◀]/[▶] & ENTER buttons**  
These buttons are used to navigate DVD menus and the DVD player's onscreen setup menus.
- ⑥ **DISC +/- button**  
This button selects discs on a DVD changer.
- ⑦ **RETURN/EXIT button**  
This button is used to exit the DVD player's onscreen setup menu.
- ⑧ **DISPLAY button**  
This button is used to display information about the current disc, title, chapter, or track on the DVD player's display, including the elapsed time, remaining time, total time, and so on.
- ⑨ **Playback buttons**  
From left to right: Previous, Play, Next, Fast Reverse, Pause, Stop, and Fast Forward.
- ⑩ **Step & Slow [◀||]/[||▶] buttons**  
These buttons are used for frame-by-frame playback and slow-motion playback.
- ⑪ **AUDIO button**  
This button is used to select foreign language soundtracks and audio formats (e.g., Dolby Digital or DTS).
- ⑫ **SUBTITLE button**  
This button is used to select subtitles.
- ⑬ **REPEAT button**  
This button is used to set the repeat playback functions.



## Remote Controller—Continued

- ⑭ **A-B button**  
This button is used to set the A–B repeat playback function.
- ⑮ **OPEN/CLOSE [▲] button**  
This button is used to open and close the disc tray.
- ⑯ **VIDEO OFF button**  
This button is used to turn off the internal video circuitry, eliminating any possibility of interference.
- ⑰ **CLEAR button**  
This button is used to cancel functions and to clear entered numbers.
- ⑱ **MENU button**  
This button is used to display a DVD's menu.
- ⑲ **VOL button**  
This button is used to adjust the volume of the AV receiver.
- ⑳ **SETUP/GUIDE button**  
This button is used to access the DVD player's onscreen setup menus.
- ㉑ **MUTING button**  
This button is used to mute the AV receiver.
- ㉒ **RANDOM button**  
This button is used with the random playback function.
- ㉓ **ANGLE button**  
This button is used to select camera angles.
- ㉔ **LAST M button**  
This button is used with the last memory function, which allows you to resume DVD playback from where you left off.
- ㉕ **SEARCH button**  
This button is used to search for titles, chapters, tracks, and specific points in time.
- ㉖ **MEMORY button**  
This button is used with the memory playback function, which allows you to create a custom playlist of titles, chapters, or tracks.


### CD Mode

CD mode is used to control an Onkyo CD player connected to the AV receiver via **RI**.

**To set the remote controller to CD mode, press the [CD] REMOTE MODE button.**

- 1 **ON button**  
This button is used to set the CD player to On or Standby.
- 2 **Number buttons**  
These buttons are used to enter track numbers and to enter times for locating specific points in time.
- 3 **DISC button**  
This button is used to select discs on a CD changer.
- 4 **DISPLAY button**  
This button is used to display information about the current disc or track on the CD player's display, including the elapsed time, remaining time, total time, and so on.
- 5 **Playback buttons**  
From left to right: Previous, Play, Next, Fast Reverse, Pause, Stop, and Fast Forward.
- 6 **REPEAT button**  
This button is used to set the repeat playback functions.
- 7 **OPEN/CLOSE [▲] button**  
This button is used to open and close the disc tray.
- 8 **CLEAR button**  
This button is used to cancel functions and to clear entered numbers.
- 9 **VOL button**  
This button is used to adjust the volume of the AV receiver.
- 10 **MUTING button**  
This button is used to mute the AV receiver.
- 11 **RANDOM button**  
This button is used with the random playback function.
- 12 **MEMORY button**  
This button is used with the memory playback function, which allows you to create a custom playlist of tracks.

## Remote Controller—Continued

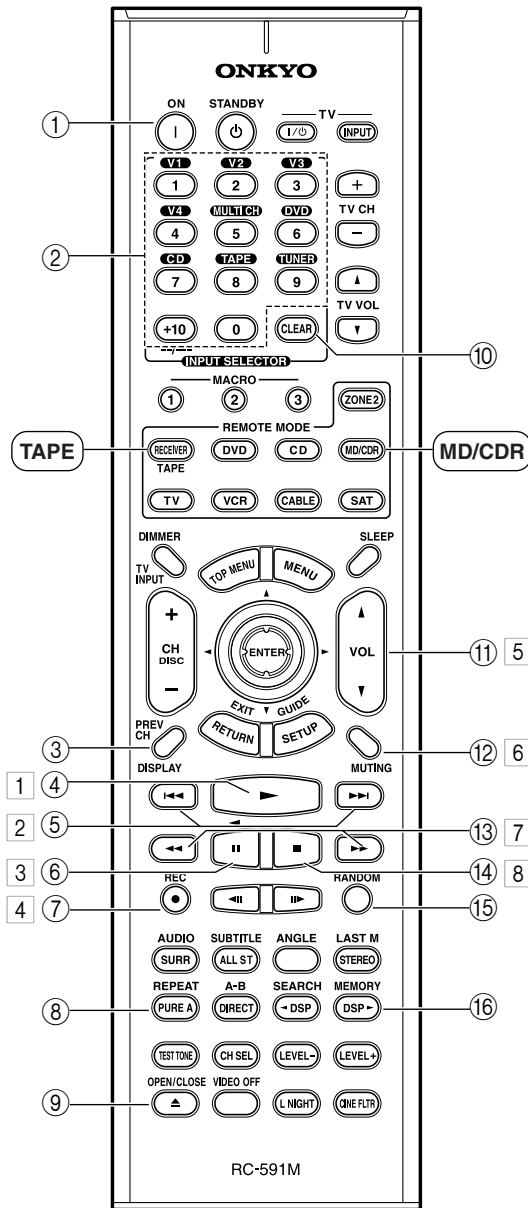

Numbers in circles are for MD/CDR mode.  
Numbers in squares are for TAPE mode.

### MD/CDR Mode

MD/CDR mode is used to control an Onkyo MiniDisc recorder or CD recorder connected to the AV receiver via **RI**.

To select MD/CDR mode, press the [MD/CDR] REMOTE MODE button.

By default, this button is set to control a MiniDisc recorder. To control a CD recorder, it must be set to CDR (see page 78).

- ① **ON button**  
This button is used to set the MD recorder or CD recorder to On or Standby.
- ② **Number buttons**  
These buttons are used to enter track numbers and to enter times for locating specific points in time.
- ③ **DISPLAY button**  
This button is used to display information about the current disc or track on the MD recorder or CD recorder's display, including the elapsed time, remaining time, total time, and so on.
- ④ **Play [▶] button**  
This button is used to start playback.
- ⑤ **Previous & Next [◀◀]/[▶▶] buttons**  
The Previous [◀◀] button is used to select the previous track. During playback it selects the beginning of the current track. The Next [▶▶] button is used to select the next track.
- ⑥ **Pause [||] button**  
This button is used to pause playback.
- ⑦ **REC [●] button**  
This button is used to start recording.
- ⑧ **REPEAT button**  
This button is used to set the repeat playback functions.
- ⑨ **OPEN/CLOSE [▲] button**  
This button is used to eject a MiniDisc or to open and close the CD recorder's disc tray.
- ⑩ **CLEAR button**  
This button is used to cancel functions and to clear entered numbers.
- ⑪ **VOL button**  
This button is used to adjust the volume of the AV receiver.
- ⑫ **MUTING button**  
This button is used to mute the AV receiver.

## Remote Controller—Continued

- 13 **FR & FF [◀◀]/[▶▶] buttons**  
The FR [◀◀] button is used to start fast reverse. The FF [▶▶] button is used to start fast forward.
- 14 **Stop [■] button**  
This button is used to stop playback.
- 15 **RANDOM button**  
This button is used with the random playback function.
- 16 **MEMORY button**  
This button is used with the memory playback function, which allows you to create a custom playlist of tracks.

### TAPE Mode

TAPE mode is used to control an Onkyo cassette recorder connected to the AV receiver via **RI**.

**To set the remote controller to TAPE mode, press the [TAPE] REMOTE MODE button.**

For double cassette decks, only Deck B can be controlled.

- 1 **Play [▶] button**  
This button is used to start playback.
- 2 **Previous & Next [◀◀]/[▶▶] buttons**  
The Previous [◀◀] button is used to select the previous track. During playback it selects the beginning of the current track. The Next [▶▶] button is used to select the next track.  
  
The Previous and Next [◀◀]/[▶▶] buttons may not work properly with some cassette tapes depending on how they were recorded.
- 3 **Reverse Play [◀] button**  
This button is used to start reverse playback.
- 4 **REC [●] button**  
This button is used to start recording.
- 5 **VOL button**  
This button is used to adjust the volume of the AV receiver.
- 6 **MUTING button**  
This button is used to mute the AV receiver.
- 7 **Rewind & FF [◀◀]/[▶▶] buttons**  
The Rewind [◀◀] button is used to start rewind. The FF [▶▶] button is used to start fast forward.
- 8 **Stop [■] button**  
This button is used to stop playback.

# About Home Theater

## Enjoying Home Theater

Thanks to the AV receiver's superb capabilities, you can enjoy surround sound with a real sense of movement in your own home—just like being in a movie theater or concert hall. With DVDs you can enjoy DTS and Dolby Digital. With analog and digital TV you can enjoy Dolby Pro Logic IIx or Onkyo's own DSP surround listening modes.

### Front left and right speakers

These output the overall sound. Their role in a home theater is to provide a solid anchor for the sound image. They should be positioned facing the listener at about ear level, and equidistant from the TV. Angle them inward so as to create a triangle, with the listener at the apex.

### Center speaker

This speaker enhances the front left and right speakers, making sound movements distinct and providing a full sound image. In movies it's used mainly for dialog.

Position it close to your TV (preferably on top) facing forward at about ear level, or at the same height as the front left and right speakers.

### Subwoofer

The subwoofer handles the bass sounds of the LFE (Low-Frequency Effects) channel. The volume and quality of the bass output from your subwoofer will depend on its position, the shape of your listening room, and your listening position. In general, a good bass sound can be obtained by installing the subwoofer in a front corner, or at one-third the width of the wall, as shown.

**Tip:** To find the best position for your subwoofer, while playing a movie or some music with good bass, experiment by placing your subwoofer at various positions within the room, and choose the one that provides the most satisfying results.


### Surround left and right speakers

These speakers are used for precise sound positioning and to add realistic ambience.

Position them at the sides of the listener, or slightly behind, about 2–3 feet (60–100 cm) above ear level. Ideally they should be equidistant from the listener.

### Surround back left and right speakers

These speakers are necessary to enjoy Dolby Digital EX, DTS-ES Matrix, and DTS-ES Discrete. They enhance the realism of surround sound and improve sound localization behind the listener. Position them behind the listener about 2–3 feet (60–100 cm) above ear level.

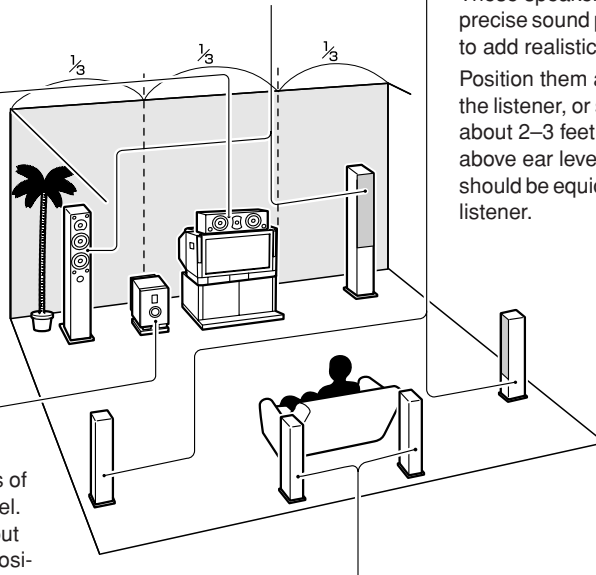

# Connecting the AV Receiver

## About AV Connections

- Before making any AV connections, read the manuals supplied with your other AV components.
- Don't connect the power cord until you've completed and double-checked all AV connections.

### Optical Digital Jacks

The AV receiver's optical digital jacks have shutter-type covers that open when an optical plug is inserted and close when it's removed. Push plugs in all the way.


**Caution:** To prevent shutter damage, hold the optical plug straight when inserting and removing.

## AV Connection Color Coding

RCA-type AV connections are usually color-coded: red, white, and yellow. Use red plugs to connect right-channel audio inputs and outputs (typically labeled "R"). Use white plugs to connect left-channel audio inputs and outputs (typically labeled "L"). And use yellow plugs to connect composite video inputs and outputs.



- Push plugs in all the way to make good connections (loose connections can cause noise or malfunctions).
- To prevent interference, keep audio and video cables away from power cords and speaker cables.

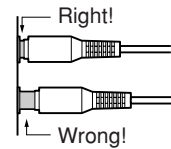

## AV Cables & Jacks

### Video

Cable	Jack	Description
	Y Pr Pb	Component video separates the luminance (Y) and color difference signals (Pr, Pb), providing the best picture quality (some TV manufacturers label their component video sockets slightly differently).
	S	S-Video separates the luminance and color signals and provides better picture quality than composite video.
	V	Composite video is commonly used on TVs, VCRs, and other video equipment. Use only dedicated composite video cables.

### Audio

Cable	Jack	Description
	OPTICAL	Offers the best sound quality and allows you to enjoy surround sound (e.g., Dolby Digital, DTS). The audio quality is the same as for coaxial.
	COAXIAL	Offers the best sound quality and allows you to enjoy surround sound (e.g., Dolby Digital, DTS). The audio quality is the same as for optical.
	L R	This cable carries analog audio. It's the most common connection format for analog audio, and can be found on virtually all AV components.
	FRONT SURR CENTER DVD SUB WOOFER	This cable carries multichannel analog audio and it's typically used to connect DVD players with a 5.1-channel analog audio output. Several standard analog audio cables can be used instead of a multi-channel cable.

**Note:** The AV receiver does not support SCART plugs.

## Connecting the AV Receiver—Continued

### Connecting Your Speakers

#### Speaker Configuration

For the best surround sound experience, you should connect seven speakers and a powered subwoofer.

The following table indicates the channels you should use depending on the number of speakers that you have.

Number of speakers:	2	3	4	5	6	7
Front left	✓	✓	✓	✓	✓	✓
Front right	✓	✓	✓	✓	✓	✓
Center		✓		✓	✓	✓
Surround left			✓	✓	✓	✓
Surround right			✓	✓	✓	✓
Surround back					✓	
Surround back left*						✓
Surround back right*						✓

\*If you're using only one surround back speaker, connect it to the left (L) SURROUND BACK SPEAKERS terminals.


No matter how many speakers you use, a powered subwoofer is recommended for a really powerful and solid bass.

To get the best from your surround sound system, you need to set the speaker settings by using the supplied setup microphone (see page 39).

#### Using Dipole Speakers

You can use dipole speakers for the surround left and right and surround back left and right speakers. Dipole speakers output the same sound in two directions.

Dipole speakers typically have an arrow printed on them to indicate how they should be positioned. The surround left and right dipole speakers should be positioned so that their arrows point toward the TV/screen, while the surround back left and right dipole speakers should be positioned so that their arrows point toward each other, as shown.

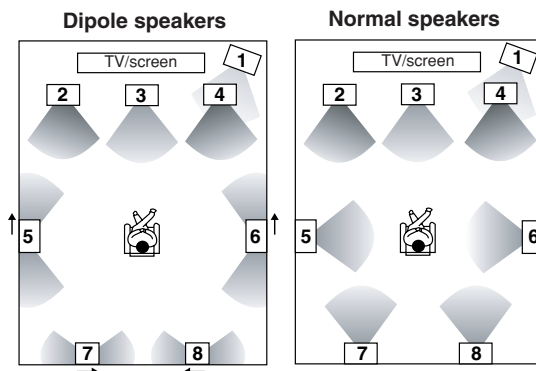


1. Subwoofer
2. Front left speaker
3. Center speaker
4. Front right speaker
5. Surround left speaker

6. Surround right speaker
7. Surround back left speaker
8. Surround back right speaker

### Connecting a Powered Subwoofer

Using a suitable cable, connect the AV receiver's SUBWOOFER PRE OUT to an input on your powered subwoofer, as shown. If your subwoofer is unpowered and you're using an external amplifier, connect the SUBWOOFER PRE OUT to an input on the amp.

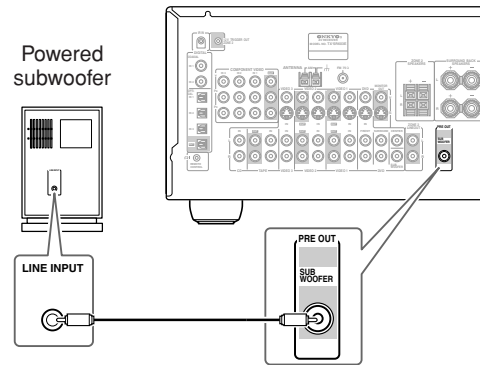

### Attaching the Speaker Labels

The AV receiver's positive (+) speaker terminals are color-coded for ease of identification (the negative (-) speaker terminals are all black).

Speaker terminal	Color
Front left, Zone 2 left	White
Front right, Zone 2 right	Red
Center	Green
Surround left	Blue
Surround right	Gray
Surround back left	Brown
Surround back right	Tan

The supplied speaker labels are also color-coded and you should attach them to the positive (+) side of each speaker cable in accordance with the above table. Then all you need to do is to match the color of each label to the corresponding speaker terminal.





## Connecting the AV Receiver—Continued



 

### Speaker Connection Precautions

Read the following before connecting your speakers:

- **North American model only:** Only connect speakers with an impedance of 6 ohms or higher. If you use speakers with a lower impedance, and use the amplifier at high volume levels for a long period of time, the built-in protection circuit may be activated.
- **Other models:** You can connect speakers with an impedance of between 4 and 16 ohms. If the impedance of any of the connected speakers is 4 ohms or more, but less than 6 ohms, be sure to set the Minimum Speaker Impedance to “4 ohms” (see page 44). If you use speakers with a lower impedance, and use the amplifier at high volume levels for a long period of time, the built-in protection circuit may be activated.
- Disconnect the power cord from the wall outlet before making any connections.
- Read the instructions supplied with your speakers.
- Pay close attention to speaker wiring polarity. In other words, connect positive (+) terminals only to positive (+) terminals, and negative (–) terminals only to negative (–) terminals. If you get them the wrong way around, the sound will be out of phase and will sound unnatural.
- Unnecessarily long, or very thin speaker cables may affect the sound quality and should be avoided.
- If you use 4 or 5 speakers, connect each of the two surround speakers to the SURROUND SPEAKERS terminals. Do not connect them to the SURROUND BACK SPEAKERS terminals.
- Be careful not to short the positive and negative wires. Doing so may damage the AV receiver.
- Make sure the metal core of the wire does not have contact with the TX-SR603/603E/8360's rear panel. Doing so may damage the AV receiver.
- Don't connect more than one cable to each speaker terminal. Doing so may damage the AV receiver.
- Don't connect one speaker to several terminals.

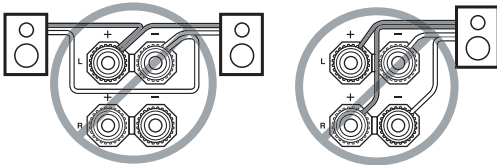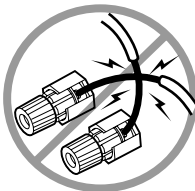


### Connecting the Speaker Cables

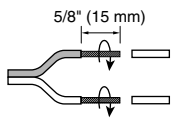- 1 **Strip about 5/8" (15 mm) of insulation from the ends of the speaker cables, and twist the bare wires tightly, as shown.** 
- 2 **Unscrew the terminal.** 
- 3 **Fully insert the bare wires.** 
- 4 **Screw the terminal tight.** 

The following illustration shows which speaker should be connected to each pair of terminals.


If you're using only one surround back speaker, connect it to the left (L) SURROUND BACK SPEAKERS terminals.

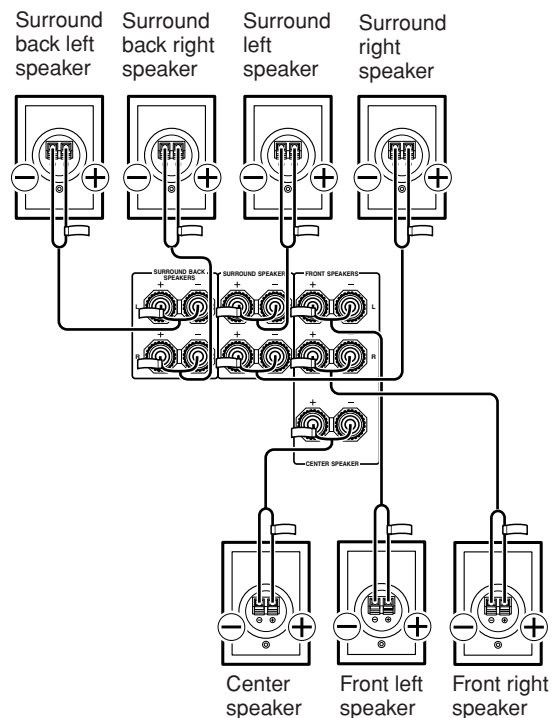

## Connecting the AV Receiver—Continued

### Connecting Antenna

This section explains how to connect the supplied indoor FM antenna and AM loop antenna, and how to connect commercially available outdoor FM and AM antennas. The AV receiver won't pick up any radio signals without any antenna connected, so you must connect the antenna to use the tuner.

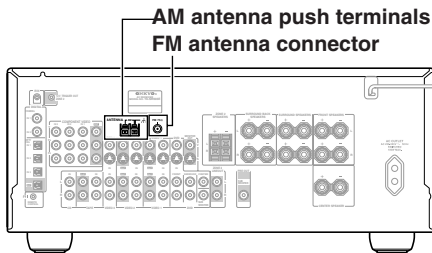


### Connecting the Indoor FM Antenna


The supplied indoor FM antenna is for indoor use only.

#### 1 Attach the FM antenna, as shown.

##### ■ North American Model

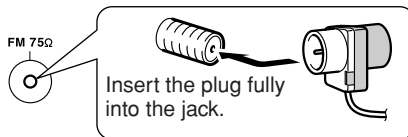


##### ■ Other Models

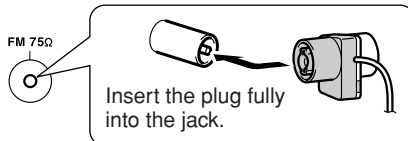

Once your AV receiver is ready for use, you'll need to tune into an FM radio station and adjust the position of the FM antenna to achieve the best possible reception.

#### 2 Use thumbtacks or something similar to fix the FM antenna into position.

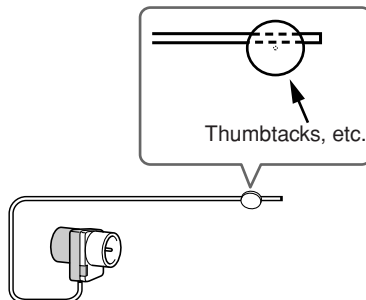


**Caution:** Be careful that you don't injure yourself when using thumbtacks.

If you cannot achieve good reception with the supplied indoor FM antenna, try a commercially available outdoor FM antenna instead (see page 25).

### Connecting the AM Loop Antenna


The supplied indoor AM loop antenna is for indoor use only.

#### 1 Assemble the AM loop antenna, inserting the tabs into the base, as shown.

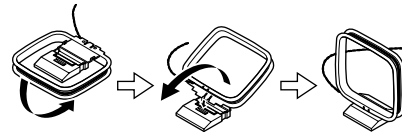

#### 2 Connect both wires of the AM loop antenna to the AM push terminals, as shown.

(The antenna's wires are not polarity sensitive, so they can be connected either way around). Make sure that the wires are attached securely and that the push terminals are gripping the bare wires, not the insulation.

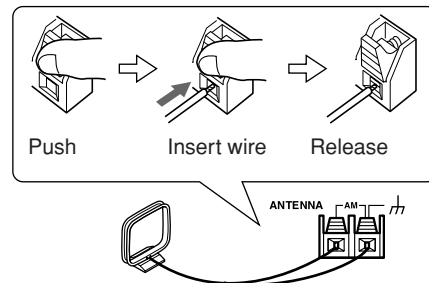

Once your AV receiver is ready for use, you'll need to tune into an AM radio station and adjust the position of the AM antenna to achieve the best possible reception.

Keep the antenna as far away as possible from your AV receiver, TV, speaker cables, and power cords.


If you cannot achieve good reception with the supplied indoor AM loop antenna, try using it with a commercially available outdoor AM antenna (see page 25).



## Connecting the AV Receiver—Continued

### Connecting an Outdoor FM Antenna

If you cannot achieve good reception with the supplied indoor FM antenna, try a commercially available outdoor FM antenna instead.

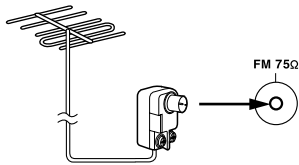


#### Notes:

- Outdoor FM antennas work best outside, but usable results can sometimes be obtained when installed in an attic or loft.
- For best results, install the outdoor FM antenna well away from tall buildings, preferably with a clear line of sight to your local FM transmitter.
- Outdoor antenna should be located away from possible noise sources, such as neon signs, busy roads, etc.
- For safety reasons, outdoor antenna should be situated well away from power lines and other high-voltage equipment.
- Outdoor antenna must be grounded in accordance with local regulations to prevent electrical shock hazards.


### ■ Using a TV/FM Antenna Splitter

It's best not to use the same antenna for both FM and TV reception, as this can cause interference problems. If circumstances demand it, use a TV/FM antenna splitter, as shown.

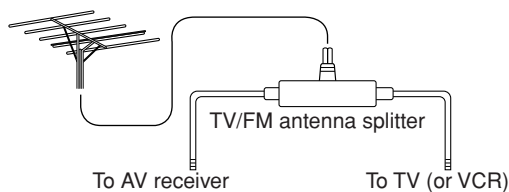

### Connecting an Outdoor AM Antenna

If good reception cannot be achieved using the supplied AM loop antenna, an outdoor AM antenna can be used in addition to the loop antenna, as shown.

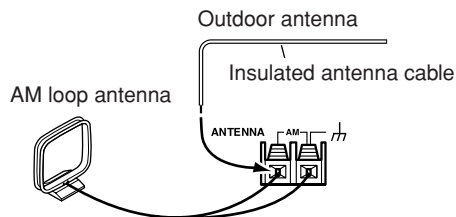


Outdoor AM antennas work best when installed outside horizontally, but good results can sometimes be obtained indoors by mounting horizontally above a window. Note that the AM loop antenna should be left connected.

Outdoor antenna must be grounded in accordance with local regulations to prevent electrical shock hazards.

## Connecting the AV Receiver—Continued

### Connecting Both Audio & Video

By connecting both the audio and video outputs of your DVD player and other AV components to the AV receiver, you can select both the audio and video simultaneously simply by selecting the appropriate input source on the AV receiver.

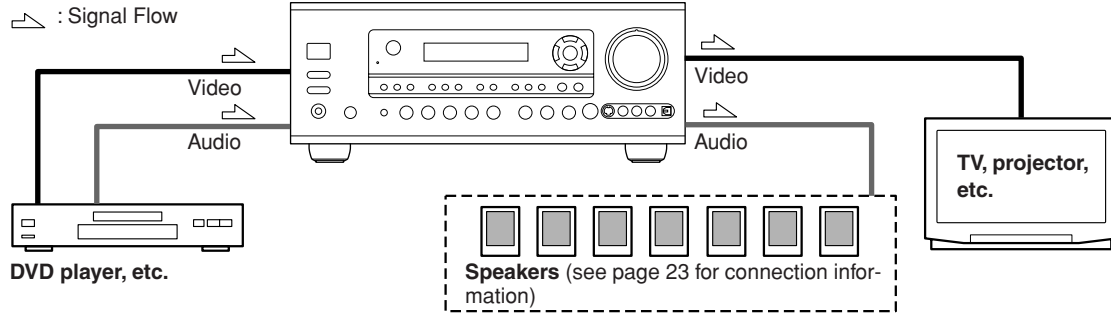

### Which Connections Should I Use?


The AV receiver supports several connection formats for compatibility with a wide range of AV equipment. The format you choose will depend on the formats supported by your other components. Use the following sections as a guide. For video components, you must make two connections—one for audio, one for video.

#### Video Connection Formats

Video equipment can be connected to the AV receiver by using any one of the following video connection formats: composite video, S-Video, or component video, the latter offering the best picture quality.

A video signal connected to a V or S IN jack will be converted—composite video to S-Video or S-Video to composite video—but only for the MONITOR OUT jacks, not the VIDEO 1 and VIDEO 2 OUT V and S jacks.


**Note:** The TX-SR603/603E/8360 can be set to upconvert composite video and S-Video input signals and output them from the COMPONENT VIDEO OUT (see page 44).

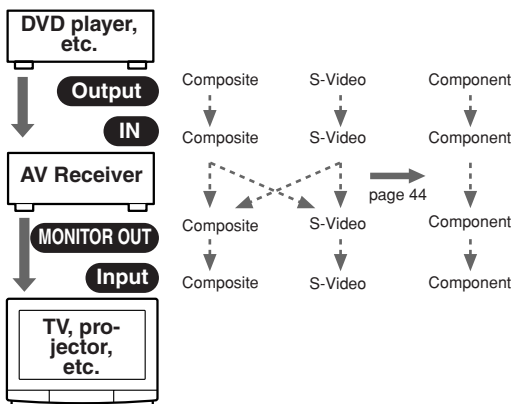

#### Audio Connection Formats

Audio equipment can be connected to the AV receiver by using any of the following audio connection formats: analog, optical, coaxial, or multichannel.

When choosing a connection format, bear in mind that the AV receiver doesn't convert between them. For example, audio signals connected to an OPTICAL or COAXIAL input are not output by the analog TAPE OUT.

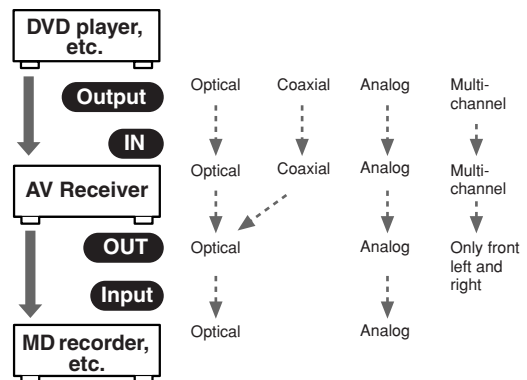


## Connecting the AV Receiver—Continued

### Connecting Your TV or Projector

#### Monitor Out


##### ■ Using Composite Video

Use a composite video cable to connect the AV receiver's V MONITOR OUT jack to a composite video input on your TV, as shown.

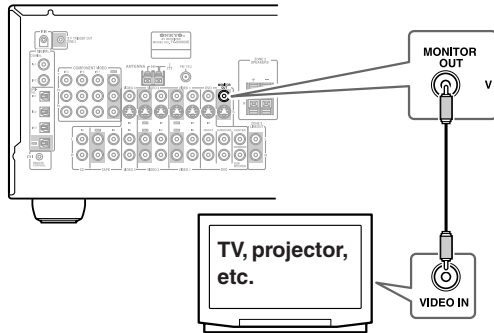


##### ■ Using S-Video

Use an S-Video cable to connect the AV receiver's S MONITOR OUT jack to an S-Video input on your TV, as shown.

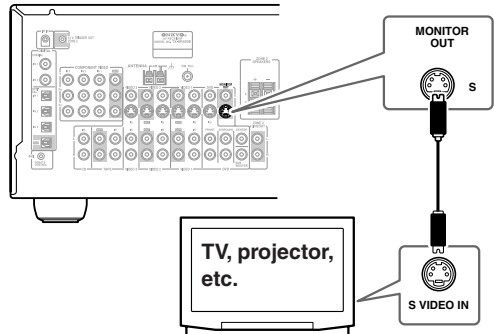

##### ■ Using Component Video

Use a component video cable to connect the AV receiver's COMPONENT VIDEO OUT jacks to a component video input on your TV, as shown.

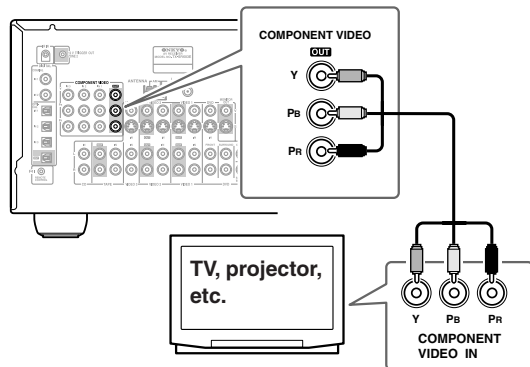

#### Audio Connections

These connections will allow you to listen to audio from your TV via the AV receiver.

If your TV doesn't have an audio output, connect the AV receiver to your VCR and use its tuner (see page 30).


##### ■ Using Coaxial or Optical Connections

If you connect to a digital audio input, you'll need to assign it (see page 43).

- Use an optical digital audio cable to connect one of the AV receiver's OPTICAL DIGITAL IN jacks to an optical output on your TV, as shown.

OR


- Use a coaxial digital audio cable to connect one of the AV receiver's COAXIAL DIGITAL IN jacks to a coaxial output on your TV, as shown.

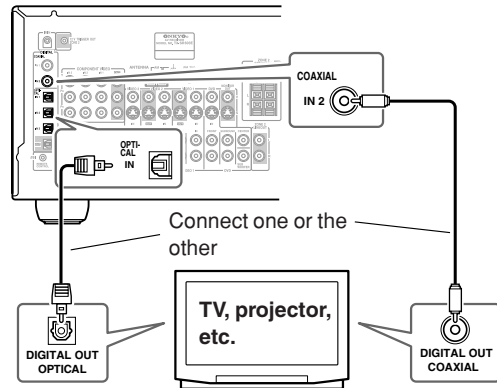

##### ■ Using Analog Connections

If your TV doesn't have a digital audio output, or you want to record from it, you'll need to make the following analog audio connection.

Use an analog audio cable to connect the AV receiver's VIDEO 3 IN L/R jacks to an analog audio output on your TV, as shown.

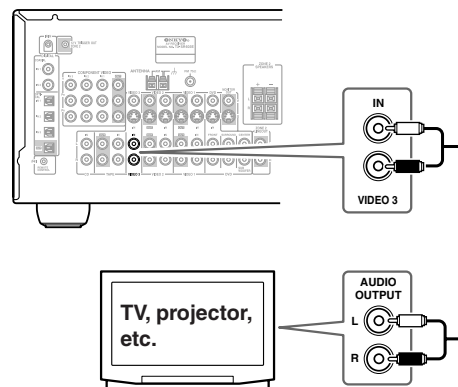

## Connecting the AV Receiver—Continued


### Connecting a DVD Player

#### Video Connections

You only need to use one of the following connection methods.


##### ■ Using Composite Video

Use a composite video cable to connect the AV receiver's V DVD IN jack to the composite video output on your DVD player, as shown.

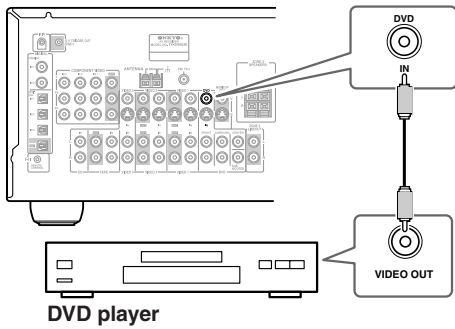

##### ■ Using S-Video


Use an S-Video cable to connect the AV receiver's S DVD IN jack to the S-Video output on your DVD player, as shown.

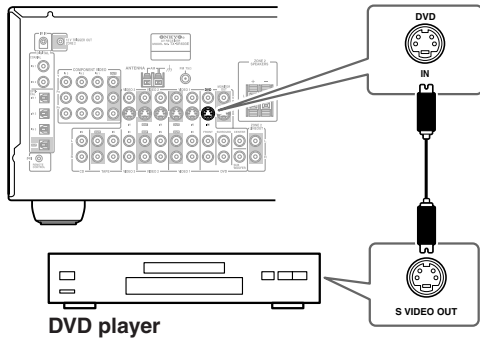

##### ■ Using Component Video

Use a component video cable to connect the AV receiver's COMPONENT VIDEO IN1 jacks to the component video output on your DVD player, as shown.

- Your TV must also be connected via component video.

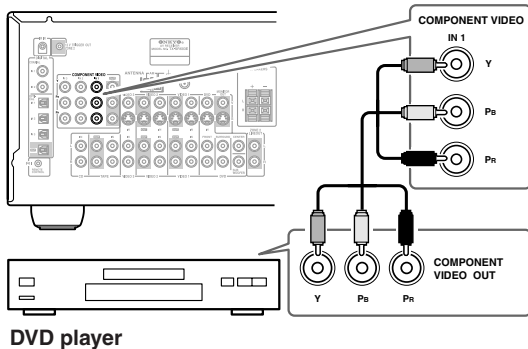


#### Audio Connections

##### ■ Using Coaxial or Optical Connections

- Use a coaxial digital audio cable to connect one of the AV receiver's COAXIAL DIGITAL IN jacks to the coaxial output on your DVD player, as shown.

OR

- Use an optical digital audio cable to connect one of the AV receiver's OPTICAL DIGITAL IN jacks to the optical output on your DVD player, as shown.

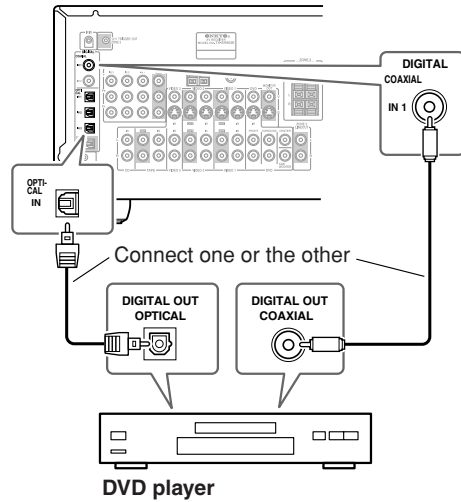


Initially, the COAXIAL IN 1 jack is assigned to the DVD input source. If you connect your DVD player to a different digital input, you'll need to reassign the DVD input source (see page 43).

##### ■ Using Analog Connections

Even if your DVD player is connected digitally (optical or coaxial), to use **RI**, or to record audio from your DVD player, you'll need to make an analog connection as well.

Use an analog audio cable to connect the AV receiver's DVD IN L/R jacks to the analog audio output on your DVD player, as shown.

If your DVD player has stereo (L/R) and multichannel outputs, be sure to use the left and right outputs.

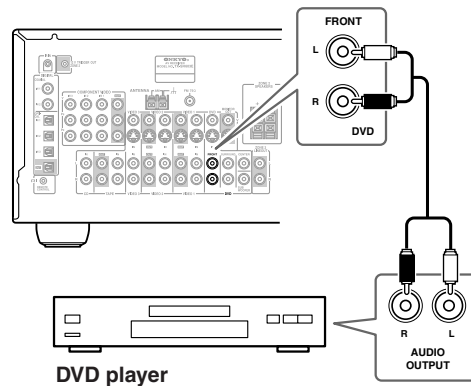


## Connecting the AV Receiver—Continued

### ■ Using a Multichannel Connection

If your DVD player supports multichannel audio formats such as DVD-Audio, and it has a 5.1-channel analog audio output, you can enjoy DVD-Audio playback.

Use a multichannel analog audio cable to connect the AV receiver's DVD IN FRONT L/R, CENTER, SURROUND L/R, and SUBWOOFER jacks to the 5.1-channel analog audio output on your DVD player, as shown. Alternatively, use several analog audio cables.

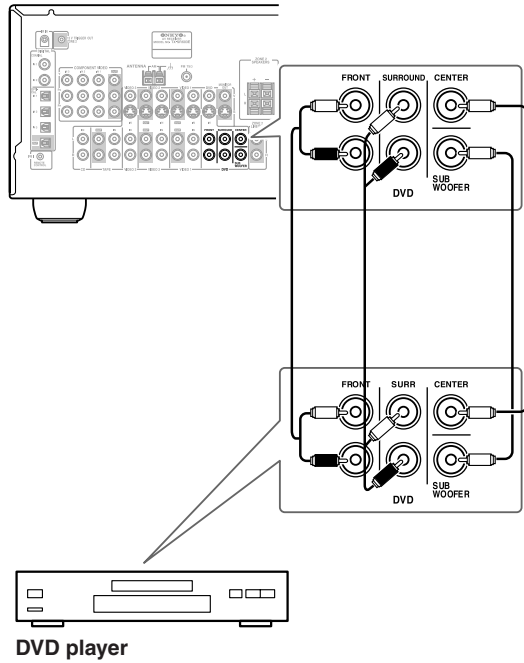

## Connecting the AV Receiver—Continued

### Connecting a VCR for Playback

This section shows how to connect a VCR for playback so that you can watch videos via the AV receiver.

#### Video Connections

- Use an S-Video cable to connect the AV receiver's S VIDEO 1 IN jack to a S-Video output on your VCR, as shown.


OR

- Use a composite video cable to connect the AV receiver's V VIDEO 1 IN jack to a composite video output on your VCR, as shown.

An S-Video connection provides better picture quality than a composite video connection.

#### Audio Connections

- Use an analog audio cable to connect the AV receiver's VIDEO 1 IN L/R jacks to an analog audio output on your VCR, as shown.

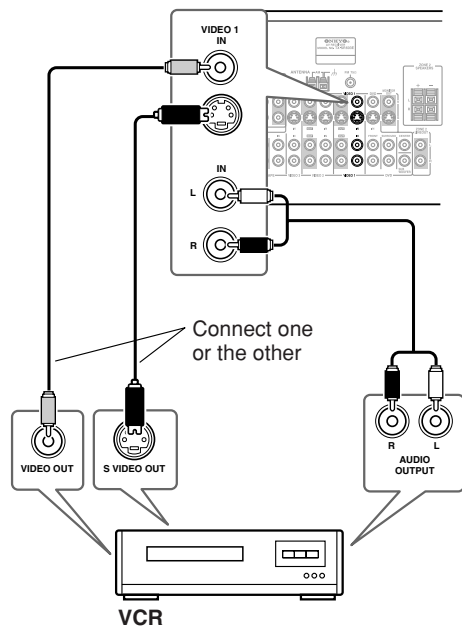


### Connecting an HDD/DVD recorder for Playback

#### Video Connections

With the initial settings of the TX-SR603/603E/8360, the VIDEO 1 input source is set for the COMPONENT VIDEO IN 2 jacks. If you connect the device to the COMPONENT VIDEO IN 3 jacks, see page 44.

Use a component video cable to connect the AV receiver's COMPONENT VIDEO IN2 or 3 jacks to a component video output on your HDD/DVD recorder, as shown.

Your TV must also be connected via component video.

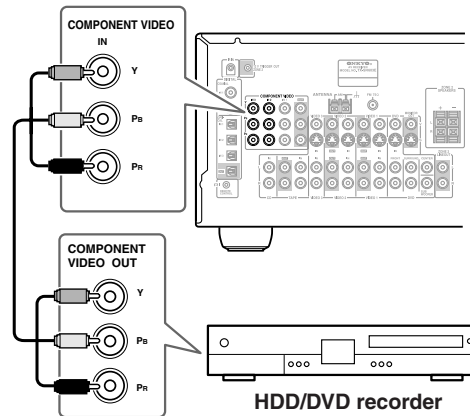


#### Audio Connections

If you connect to a digital audio input, you'll need to assign it (see page 43).

- Use an optical digital audio cable to connect one of the AV receiver's OPTICAL DIGITAL IN jacks to an optical output on your HDD/DVD recorder, as shown.
- OR

- Use a coaxial digital audio cable to connect one of the AV receiver's COAXIAL DIGITAL IN jacks to a coaxial output on your HDD/DVD recorder, as shown.

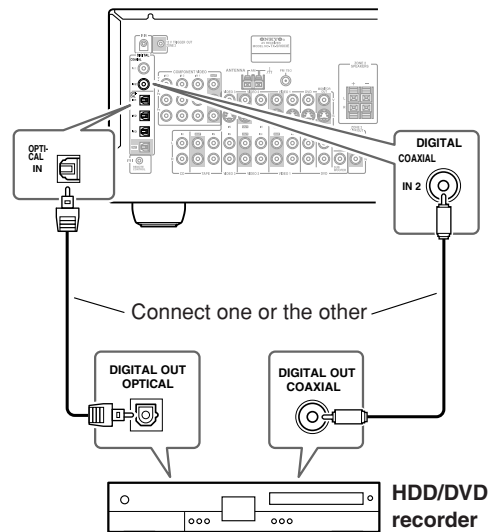

## Connecting the AV Receiver—Continued

### Connecting a VCR for Recording

This section explains how to connect a VCR for recording from a TV or another VCR.

#### Video Connections

- Use an S-Video cable to connect the AV receiver's S VIDEO 1 OUT jack to an S-Video input on the recording VCR. Use another S-Video cable to connect the AV receiver's S VIDEO 3 IN jack to an S-Video output on your TV or playback VCR, as shown.

OR

- Use a composite video cable to connect the AV receiver's V VIDEO 1 OUT jack to a composite video input on the recording VCR. Use another composite video cable to connect the AV receiver's V VIDEO 3 IN jack to a composite video output on your TV or playback VCR, as shown.

#### Audio Connections

- Use an analog audio cable to connect the AV receiver's VIDEO 1 OUT L/R jacks to an audio input on the recording VCR.
- Use an analog audio cable to connect the AV receiver's VIDEO 3 IN L/R jacks to an audio output on your TV or playback VCR.

#### Playback from the Recording VCR

To play back a video in the recording VCR via the AV receiver:

- Use an S-Video cable to connect the AV receiver's S VIDEO 1 IN jack to an S-Video output on the recording VCR.

OR


- Use a composite video cable to connect the AV receiver's V VIDEO 1 IN jack to a composite video output on the recording VCR.

And use an analog audio cable to connect the AV receiver's VIDEO 1 IN L/R jacks to an audio output on the recording VCR.

#### Notes:

- The AV receiver must be turned on for recording. Recording is not possible while it's in Standby mode.
- If you want to record directly from your TV or playback VCR to the recording VCR without going through the AV receiver, connect the TV/VCR's audio and video outputs directly to the recording VCR's audio and video inputs. See the manuals supplied with your TV and VCR for details.
- Video signals connected to composite video inputs can only be recorded via composite video outputs. If your TV/VCR is connected to a composite video input, the recording VCR must be connected to a composite video output. Similarly, video signals connected to S-Video inputs can only be recorded via S-Video outputs. If your TV/VCR is connected to an

S-Video input, the recording VCR must be connected to an S-Video output.

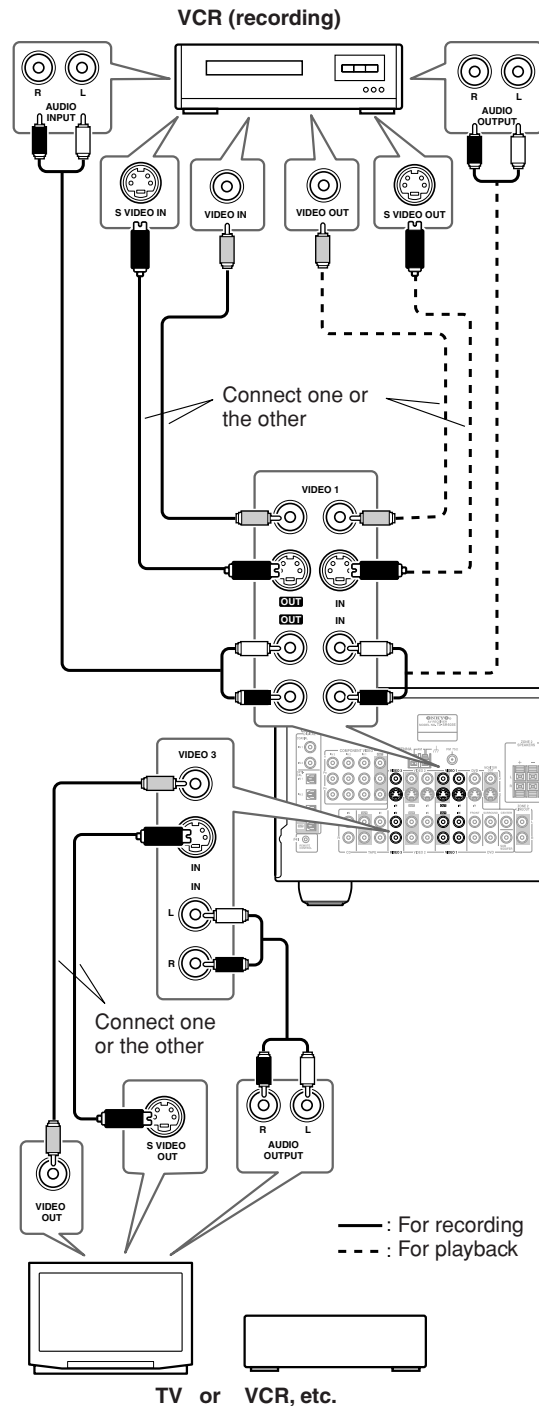

## Connecting the AV Receiver—Continued


### Connecting Other Video Sources— Satellite, Cable, Set-top box, LD Player, etc.

#### Video Connections

You only need to use one of the following connection methods.

##### ■ Using Composite Video


Use a composite video cable to connect the AV receiver's V VIDEO 3 IN jack to a composite video output on your video source, as shown.

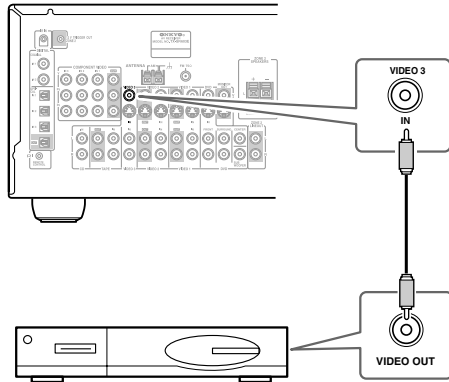

Satellite, cable, set-top box, LD player, etc.

##### ■ Using S-Video

Use an S-Video cable to connect the AV receiver's S VIDEO 3 IN jack to an S-Video output on your video source, as shown.

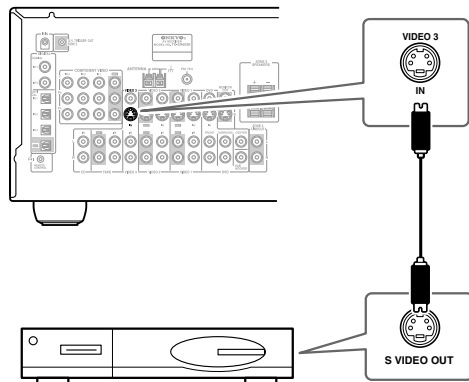


Satellite, cable, set-top box, LD player, etc.

##### ■ Using Component Video

If you connect to a component video input, you must assign it (see page 44).

Use a component video cable to connect the AV receiver's COMPONENT VIDEO IN 2 or IN 3 jack to a component video output on your video source, as shown.

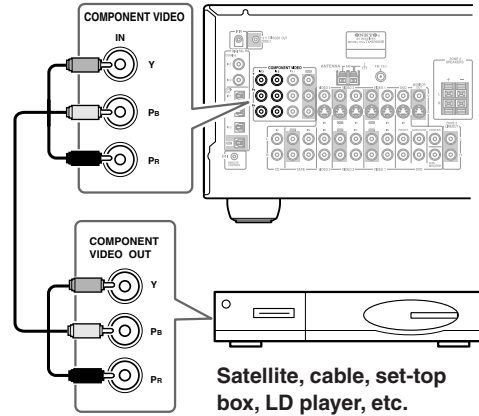

Satellite, cable, set-top box, LD player, etc.

#### Audio Connections


##### ■ Using Optical or Coaxial Connections

If you connect to a digital audio input, you'll need to assign it (see page 43).

- Use an optical digital audio cable to connect one of the AV receiver's OPTICAL DIGITAL IN jacks to an optical output on your video source, as shown.

OR

- Use a coaxial digital audio cable to connect one of the AV receiver's COAXIAL DIGITAL IN jacks to a coaxial output on your video source, as shown.

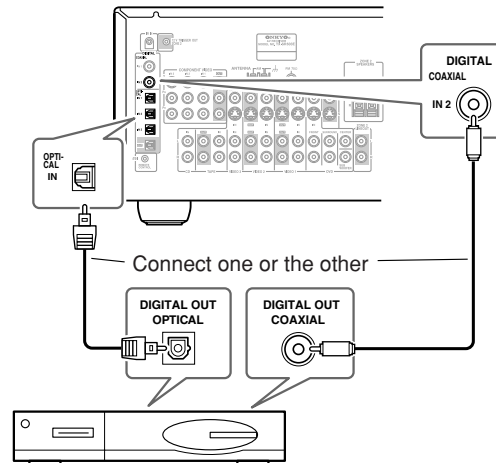

Satellite, cable, set-top box, LD player, etc.

#### Note:

To connect the AV receiver to an LD player's AC-3RF output, you need a commercially available demodulator.




## Connecting the AV Receiver—Continued

### ■ Using Analog Connections

If your video source doesn't have a digital audio output, or you want to record from it, you'll need to make the following analog audio connection.


Use an analog audio cable to connect the AV receiver's VIDEO 3 IN L/R jacks to the analog audio output on your video source, as shown.

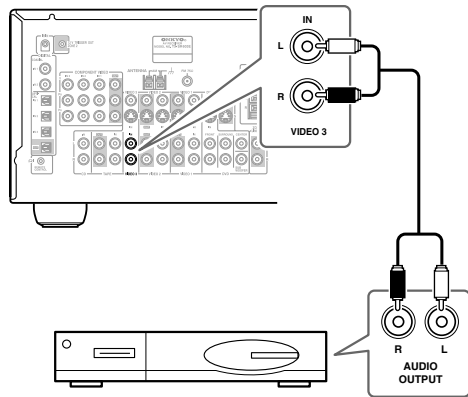

Satellite, cable, set-top box, LD player, etc.

### ■ Using S-Video


Use an S-Video cable to connect the AV receiver's VIDEO 4 INPUT S VIDEO jack to the S-Video output on your camcorder, game console, etc., as shown.

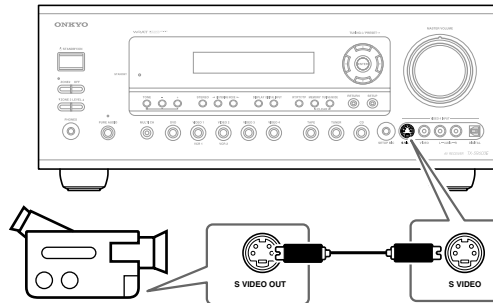

Camcorder, game console, etc.

### Audio Connections

Use an analog audio cable to connect the AV receiver's VIDEO 4 INPUT AUDIO L/R jacks to the analog audio output on your camcorder, game console, etc., as shown.

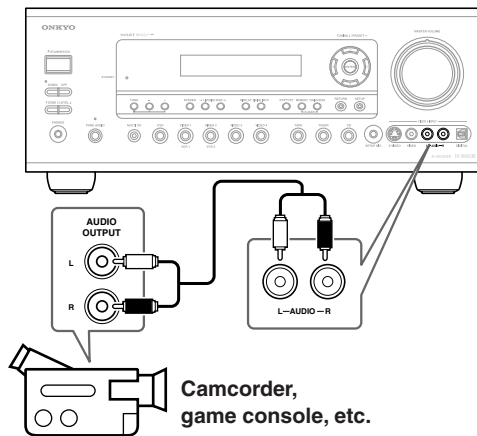

Camcorder, game console, etc.


## Connecting a Camcorder, Game Console, etc.

### Video Connections

You only need to use one of the following connection methods.


### ■ Using Composite Video

Use a composite video cable to connect the AV receiver's VIDEO 4 INPUT VIDEO jack to the composite video output on your camcorder, game console, etc., as shown.

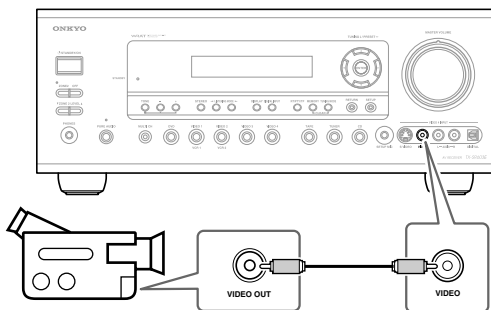

Camcorder, game console, etc.

If your camcorder, game console, etc., has an optical digital audio output, use an optical digital audio cable to connect it to the AV receiver's VIDEO 4 INPUT DIGITAL jack, as shown.

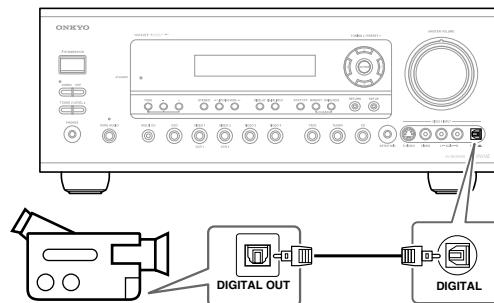

Camcorder, game console, etc.

## Connecting the AV Receiver—Continued

### Connecting a CD Player


#### ■ Using Optical or Coaxial Connections

If you connect to a digital audio input, you'll need to assign it (see page 43).

- Use an optical digital audio cable to connect one of the AV receiver's OPTICAL DIGITAL IN jacks to the optical output on your CD player, as shown.

OR


- Use a coaxial digital audio cable to connect one of the AV receiver's COAXIAL DIGITAL IN jacks to the coaxial output on your CD player, as shown.

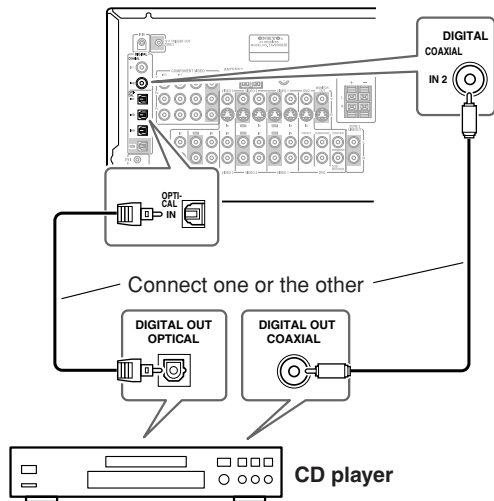

#### ■ Using Analog Connections


Even if your CD player is connected digitally (coaxial or optical), to use **RI**, or to record audio from your CD player, you'll need to make an analog audio connection as well.

Use an analog audio cable to connect the AV receiver's CD IN L/R jacks to the analog audio output on your CD player, as shown.

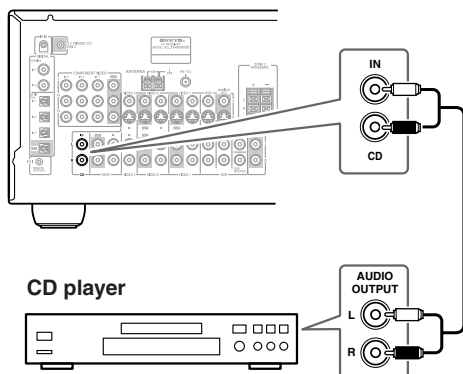

### Connecting a Cassette Recorder

Use an analog audio cable to connect the AV receiver's TAPE IN L/R jacks to the cassette recorder's output, and use another analog audio cable to connect the AV receiver's TAPE OUT L/R jacks to the cassette recorder's input, as shown.

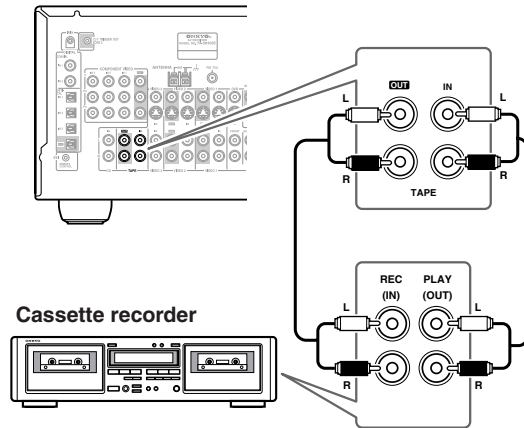


### Connecting a DAT, CD, or MD Recorder

You can connect a DAT, CD, or MD recorder instead of a cassette recorder.

#### ■ Analog Connections

Use an analog audio cable to connect the AV receiver's TAPE IN L/R jacks to the recorder's output, and use another analog audio cable to connect the AV receiver's TAPE OUT L/R jacks to the recorder's input, as shown.

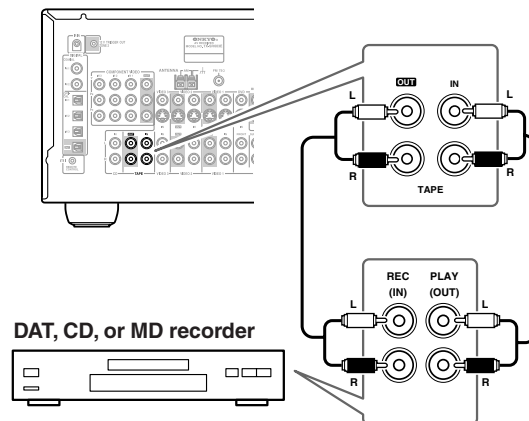

## Connecting the AV Receiver—Continued


### ■ Using Optical or Coaxial Connections (playback only)

If you connect to a digital audio input, you'll need to assign it (see page 43).

- Use an optical digital audio cable to connect one of the AV receiver's OPTICAL DIGITAL IN jacks to the optical output on your recorder, as shown.

OR


- Use a coaxial digital audio cable to connect one of the AV receiver's COAXIAL DIGITAL IN jacks to the coaxial output on your recorder, as shown.

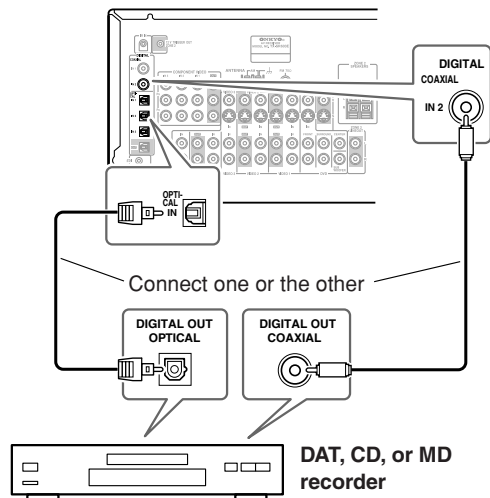

### ■ Digital Recording

If your recorder has a digital input, by connecting it to the AV receiver's optical DIGITAL OUT jack, you can record digitally. However, because the AV receiver doesn't convert analog input signals to digital and vice versa, only input signals connected to a DIGITAL IN jack can be recorded in this way.

#### Digital source (DAT, CD, MD player)

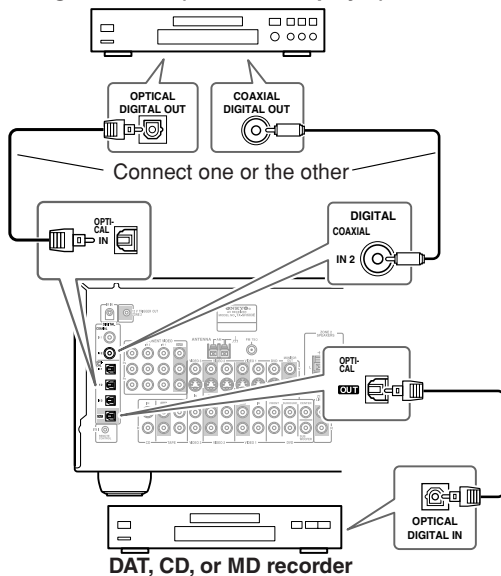


## Connecting the AV Receiver—Continued

### Connecting a Turntable


#### ■ Turntable with a Built-in Phono Preamp

Use an analog audio cable to connect an unused audio input on the AV receiver to the audio outputs on your turntable, as shown.

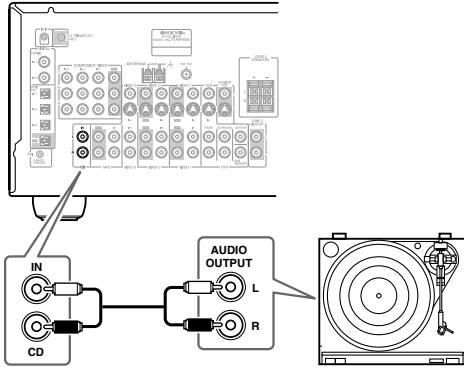


#### ■ Turntable without a Built-in Phono Preamp

Use an analog audio cable to connect an unused audio input on the AV receiver to the audio outputs on your phono preamp, and use another analog audio cable to connect the phono preamp's inputs to your turntable, as shown.

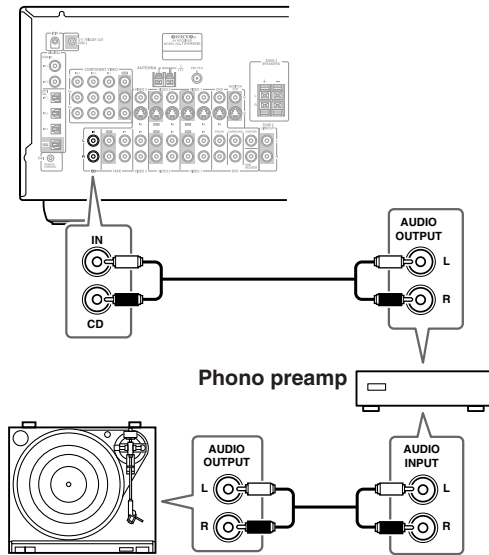

#### ■ Turntable with an MC (Moving Coil) Cartridge

Use an analog audio cable to connect an unused audio input on the AV receiver to your phono preamp. Use another analog audio cable to connect the phono preamp's inputs to your MC head amp's outputs. And use another analog audio cable to connect the MC head amp's inputs to your turntable, as shown. For further information, see the manual for your turntable or phono preamp.

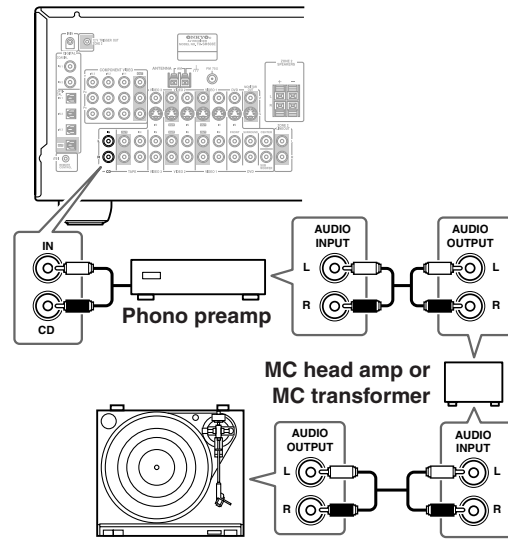

## Connecting the AV Receiver—Continued

### Connecting **RI** Components

With **RI** (Remote Interactive) you can control your **RI**-compatible Onkyo CD player, DVD player, and so on with the AV receiver's remote controller, as follows:

- To use **RI**, you must make an analog audio connection between the AV receiver and the other AV components, even if they are connected digitally.

#### Auto Power On/Standby


When you start playback on an AV component connected via **RI**, if the AV receiver is in Standby, it will turn on and select that AV component as the input source automatically. Similarly, when the AV receiver is set to Standby, all components connected via **RI** also enter Standby. Note that this function will not work if the component's power cord is connected to the AV receiver's AC OUTLET.

#### Direct Change

When playback is started on an AV component connected via **RI**, the AV receiver automatically selects that AV component as the input source.

#### Remote Control

You can control your **RI**-compatible Onkyo components with the AV receiver's remote controller.

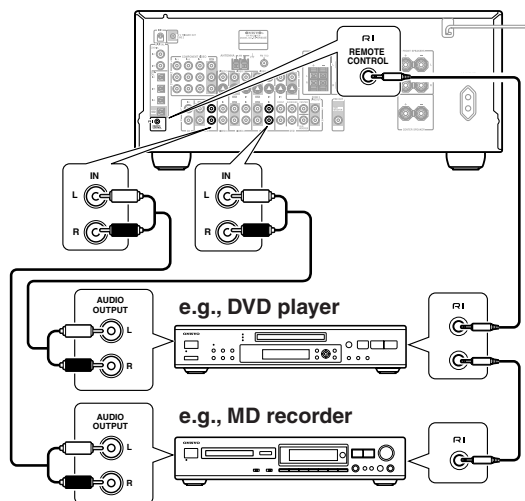


#### Notes:

- If you connect an **RI**-compatible Onkyo MiniDisc recorder or CD recorder to the TAPE IN/OUT jacks, for **RI** to work properly, you must change the TAPE/MD/CDR display (see page 52).
- Push plugs in all the way to make good connections.
- Use only **RI** cables for **RI** connections. No **RI** cables are supplied with this AV receiver.
- Some AV components have two **RI** jacks. You can connect either one to this AV receiver. The other jack is for connecting more **RI**-compatible components.
- Connect the AV receiver's **RI** jack to only Onkyo AV components. Connecting to other manufacturer's AV components may cause them to malfunction.
- Some components may not support all **RI** functions. Refer to the manuals supplied with your components.

### Connecting the Power Cord of Another Component

The AV receiver has an AC outlet on its rear panel for connecting the power cord of another AV component. The other component's power switch can then be left in the ON position so that it turns on or off when the AV receiver is set to On or Standby.

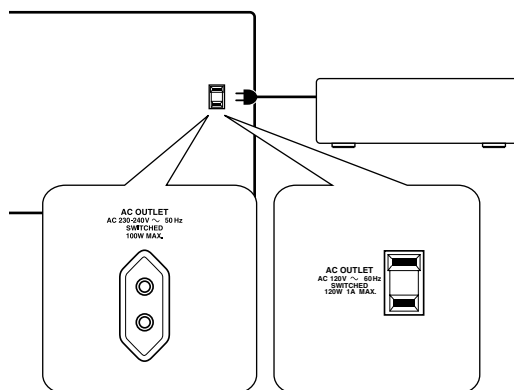

European and some Asian models

North American model

#### Caution:

Make sure that the capacity of the component that you connect to the AC OUTLET does not exceed the stated capacity (e.g., 100 W).


#### Notes:

- Onkyo components with **RI** jacks should be connected directly to wall outlets, not the AV receiver's AC OUTLET.
- The socket type and capacity will depend on the country in which you purchased the AV receiver.

## Connecting the AV Receiver—Continued

### Turning On the AV Receiver

- Before connecting the power cord, connect all your speakers and AV components.
- Turning on the AV receiver may cause a momentary power surge that might interfere with other electrical equipment on the same circuit. If this is a problem, plug the AV receiver into a different circuit.

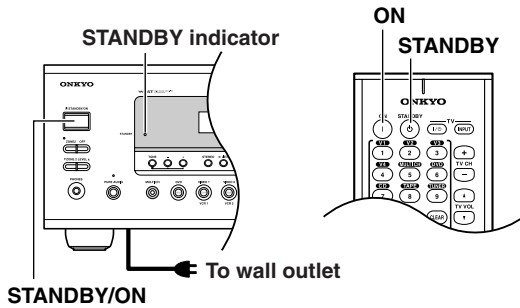

<b>1</b> STANDBY	<b>Plug the power cord into an AC wall outlet.</b> The STANDBY indicator will light up.
<b>2</b>  Remote controller  ON  STANDBY	<b>Press the [STANDBY/ON] button. Alternatively, press the remote controller's [RECEIVER] button followed by the [ON] button.</b> The AV receiver comes on, the display lights up, and the STANDBY indicator goes off.  To turn off the AV receiver, press the [STANDBY/ON] button. The AV receiver will enter Standby mode.

#### Notes:


- Pressing the remote controller's [ON] button once will turn on the AV receiver. Pressing it again will turn on any components connected via **RI**.
- When the AV receiver is on Standby, it will turn on automatically when any one of its input selector buttons is pressed.
- Before disconnecting the power cord from the wall outlet, set the AV receiver to Standby.

# First Time Setup

This chapter explains the settings that you need to make before using the AV receiver.

## Automatic Speaker Setup



With the supplied speaker setup microphone, the Automatic Speaker Setup function can measure the test tone output by each speaker and automatically determine the number of speakers connected, their sizes, the distance from each speaker to the listening position, and so on. Before using this function, connect and position all your speakers.

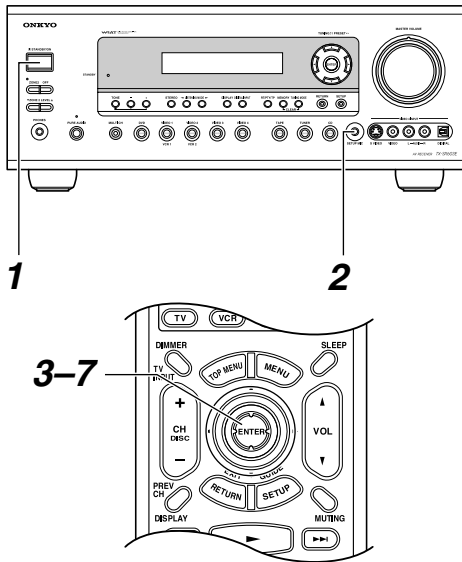

**1** Turn on the AV receiver and the connected TV.  
On the TV, select the input to which the AV receiver is connected.

## 2

Put the speaker setup microphone in the listening position, and connect it to the SETUP MIC jack.

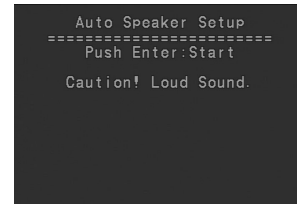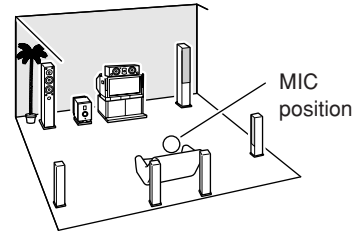

### Notes:

- Make sure the microphone is horizontal.
- If there's an obstacle between the microphone and any speaker, the automatic setup will not work correctly. Setup the room as you would when enjoying a DVD.
- If the AV receiver was previously muted, the Muting function will be cancelled.
- The automatic setup cannot be used while a pair of headphones is connected.
- By putting the microphone close to where your ears would normally be at the listening position, a more accurate setup can be achieved. If you use a tripod or level table, you can adjust the height of the microphone.

## First Time Setup—Continued

3



Press [ENTER].

```
Auto Speaker Setup
=====
Do not Unplug Setup Mic.

Please, be quiet.

Wait a moment, please.
```

The automatic speaker setup starts. The test tone is output by each speaker in turn, measured by the microphone, and the speaker settings set accordingly. The whole process takes about 2 minutes.

```
Auto Speaker Setup
=====
Do not Unplug Setup Mic.


Please, be quiet.

Now measurement

Left
```

If any extraneous noise is picked up by the microphone, the automatic setup may not work correctly, so be careful.

4

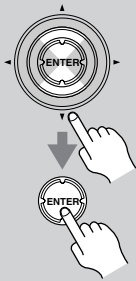

Once the measurement is completed, the following completion screen appears.

```
Auto Speaker Setup
=====
->Apply the Results

Check the Results
Retry
Retry with
Test noise Level up
Cancel
```

Use the Up and Down [▲]/[▼] buttons to select any of the following options, and then press [ENTER].

**Apply the Results:**

Validates the measurement results and closes the screen. Normally you may want to select this option. Continue with step 5.

**Check the Results:**

Displays the measurement results for your reference. Continue with “How to Verify the Measurement Results” described below.

**Retry:**

Retries measurement. Return to step 2.

**Retry with Test noise Level up:**

Retries measurement with the test sound at high volume level. Return to step 2.

**Cancel:**

Closes the screen without validating the measurement results. Continue with step 5.

5

Disconnect the speaker setup microphone.


To cancel the automatic setup while it's in progress, disconnect the microphone.

```
Auto Speaker Setup
=====

Please, Unplug Setup Mic.
```

■ **How to Verify the Measurement Results**

By selecting “Check the Results” at step 4, you can display the following screen to confirm the measurement results.

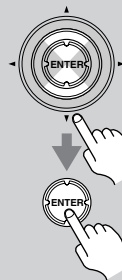

```
Auto Speaker Setup
=====
1. Warning
2. Speaker Config
3. Speaker Distance
4. Speaker Level Adjust
5. Equalizer settings
```



- 1 Warning
- 2 Number of speakers and their sizes
- 3 Distance from each speaker to the listening position
- 4 The optimum volume level for each speaker
- 5 The level adjustment for individual frequency range covered by respective speaker

Use the Up and Down [▲]/[▼] buttons to select the item that you want to check, and then press [ENTER].

Press the [RETURN] button to return to the previous display.



## First Time Setup—Continued

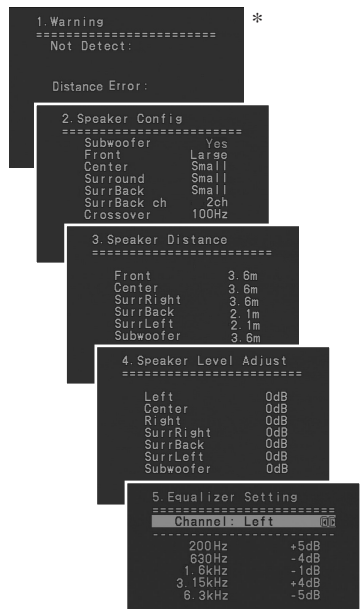

1. Warning  
-----  
Not Detect: \*

Distance Error:

2. Speaker Config  
-----  
Subwoofer Yes  
Front Large  
Center Small  
Surrround Small  
SurrBack Small  
SurrBack ch 2ch  
Crossover 100Hz

3. Speaker Distance  
-----  
Front 3.6m  
Center 3.6m  
SurrRight 3.6m  
SurrBack 2.1m  
SurrLeft 2.1m  
Subwoofer 3.6m

4. Speaker Level Adjust  
-----  
Left 0dB  
Center 0dB  
Right 0dB  
SurrRight 0dB  
SurrBack 0dB  
SurrLeft 0dB  
Subwoofer 0dB

5. Equalizer Setting  
-----  
Channel Left 0dB


200Hz	+5dB
630Hz	-4dB
1.9kHz	-1dB
3.15kHz	+4dB
6.3kHz	-5dB

(Menus vary depending on country)  
\*When a speaker has a warning, its abbreviation (e.g., L, R, and so on) appears.

**Not Detect:**  
No speaker was detected. Make sure the connection is secured correctly.

**Distance Error:**  
The positions of the speakers are too close or too far, or the distance could not be measured.  
If you want to adjust any of the settings manually, see “Speaker Setup” on page 46.

**When you’ve checked the settings, press the [RETURN] button to return to the previous menu.**

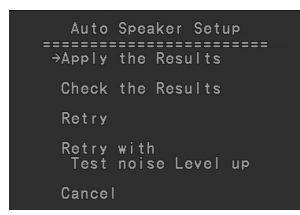

```
Auto Speaker Setup
-----
->Apply the Results

Check the Results

Retry

Retry with
Test noise Level up

Cancel
```

results confirmation screen, turn the volume up to an appropriate level and the frequency as high as it can go. And then turn on the Direct switch, if available. For further information, see the manual for the subwoofer.

**Note:**

Measurement may not be performed correctly depending on your use environment. If the measurement results remain unchanged after retried, create speaker settings manually (see pages 46-51).


**Tip:**

When any amplifier-builtin subwoofer is connected, its sound may not be detected with the automatic speaker settings because the sound is generated from the low position with very low frequencies. If the subwoofer (SW) is specified as “Not Detect” in the measurement

# First Time Setup—Continued

## About the Onscreen Setup Menus

The AV receiver is configured using onscreen setup menus, which are displayed on the TV that's connected to either of the MONITOR OUT jacks. Because they appear on your TV, they're large and clear, making setup a breeze.

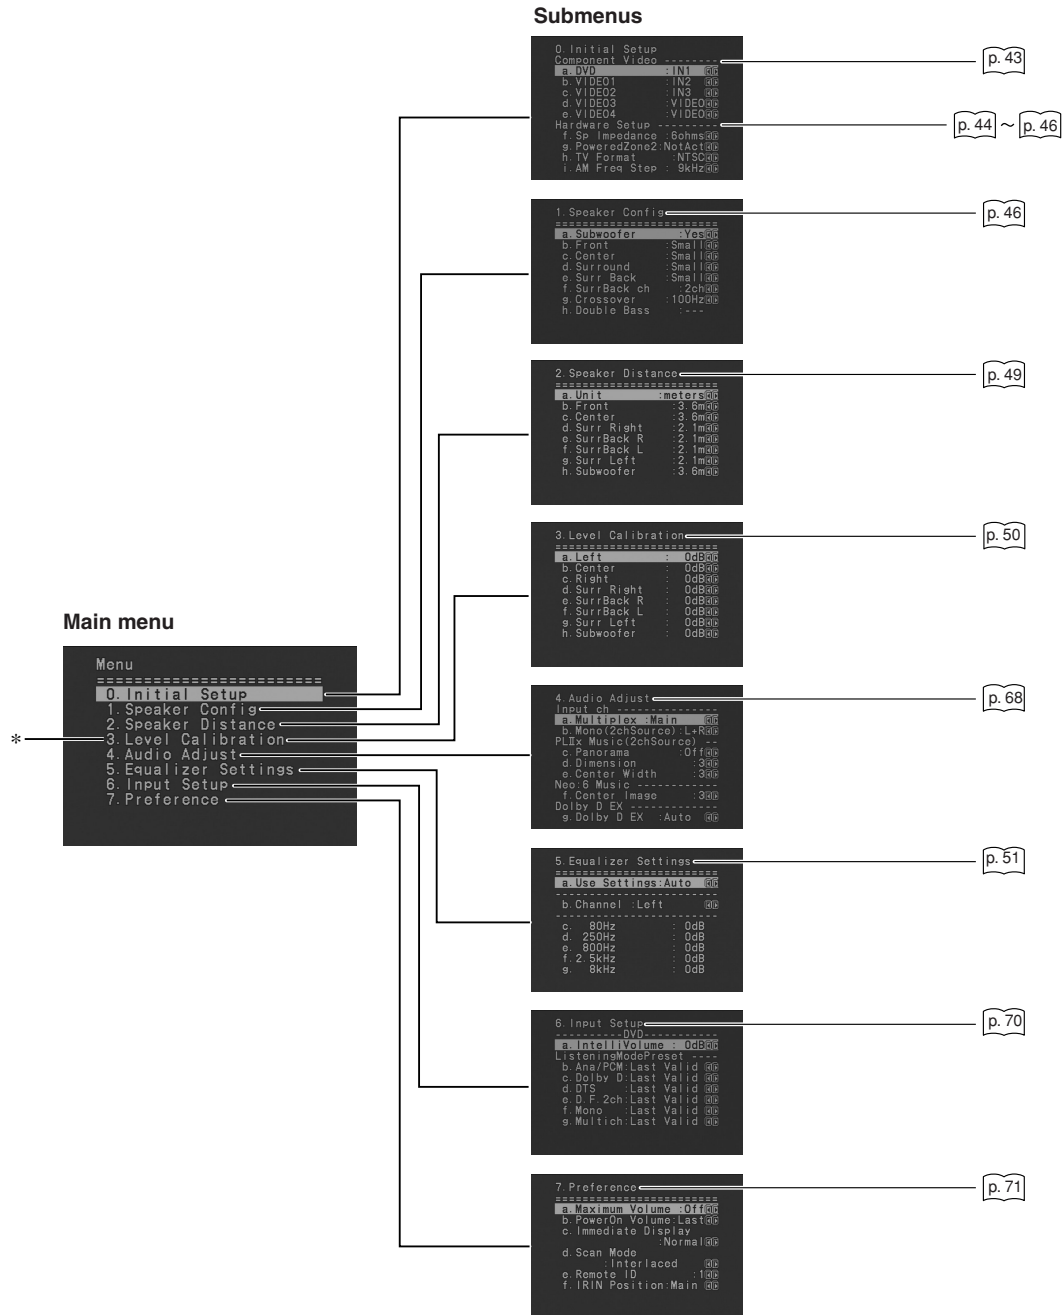


\* For multichannel connection, "3. Multich Level Adjust" appears instead of "3. Level Calibration."

## First Time Setup—Continued

### Initial Setup

#### Digital Input

If you connect a component to a digital input jack, you must assign that jack to an input selector. For example, if you connect your CD player to the OPTICAL IN2 jack, you should assign that jack to the CD input selector. By default, the COAXIAL IN1 jack is assigned to the DVD input selector, although this can be changed.

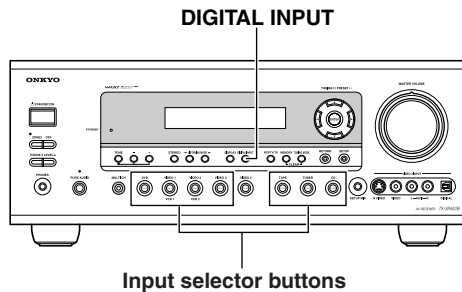




#### Examples:

If you connect your DVD player to the OPTICAL IN 2 jack, set “DVD” to “OPT2.”

If you want to listen to audio from the component connected to the OPTICAL IN 3 jack when the VIDEO 1 input selector is selected, set “VIDEO1” to “OPT3.”

If you want to listen to audio from the component connected to the COAXIAL IN 1 jack when the VIDEO 2 input selector is selected, set “VIDEO2” to “COAX1.”

For input selectors that you don't want to assign a digital input jack, set to “---- (analog).”
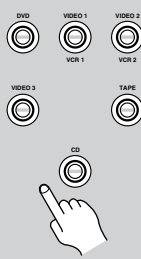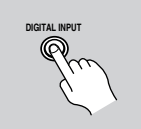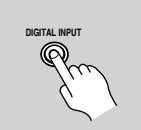
<b>1</b> 	<b>Press the input selector button for the source that you want to assign.</b> (Digital inputs cannot be assigned to the TUNER input source)
<b>2</b> 	<b>Press the [DIGITAL INPUT] button.</b> The current assignment appears. <div style="border: 1px solid black; padding: 5px; display: inline-block;">DVD      #COAX1</div>
<b>3</b> 	<b>Press the [DIGITAL INPUT] button repeatedly to select COAX1, COAX2, OPT1, OPT2, OPT3, or ---- (analog).</b> <ul style="list-style-type: none"><li>• There are no assignments for TUNER.</li><li>• VIDEO 4 is used only for digital input from the front panel terminals.</li></ul>


## First Time Setup—Continued


### Component Video Setup

If you connect to a COMPONENT VIDEO IN, you must assign it to an input selector. For example, if you connect your DVD player to COMPONENT IN 3, you should assign it to the DVD input selector.

If you want to output composite and S-Video sources from the COMPONENT VIDEO OUT, select VIDEO, as explained below.


Input selector	VIDEO IN jack
DVD	IN 1
VIDEO 1	IN 2
VIDEO 2	IN 3
VIDEO 3	VIDEO
VIDEO 4	VIDEO

- 

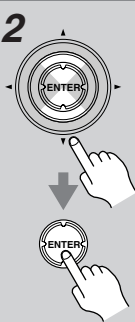**1** Press the [RECEIVER] button followed by the [SETUP] button. The main menu appears onscreen.
- 

**2** Use the Up and Down [▲]/[▼] buttons to select “0. Initial Setup,” and then press [ENTER]. The Initial Setup menu appears.

```

Menu
-----
0. Initial Setup
Component Video -----
a. DVD : IN1 @@
b. VIDEO1 : IN2 @@
c. VIDEO2 : IN3 @@
d. VIDEO3 : VIDEO @@
e. VIDEO4 : VIDEO @@
Hardware Setup -----
f. Sp Impedance : 6ohms@@
g. PoweredZone2 : NotAct@@
h. TV Format : NTSC@@
i. AM Freq Step : 9kHz@@
                    
```
- 

**3** Use the Up and Down [▲]/[▼] buttons to select an input selector, and then use the Left and Right [◀]/[▶] buttons to select:

  - IN1:** Use the video component connected to COMPONENT VIDEO IN 1.
  - IN2:** Use the video component connected to COMPONENT VIDEO IN 2.
  - IN3:** Use the video component connected to COMPONENT VIDEO IN 3.

**VIDEO:** Output composite video and S-Video sources from the COMPONENT VIDEO OUT.

**4** Press the [SETUP] button. The setup menu closes.


**Note:**  
This procedure can also be performed on the AV receiver by using its [SETUP] button, arrow buttons, and [ENTER] button.

### Minimum Speaker Impedance (not North American models)


 
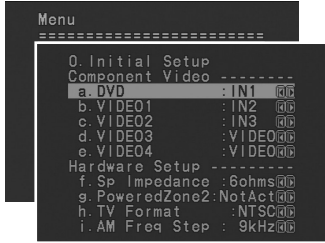


This setting is not set automatically by the Automatic Speaker Setup function (see page 39).

If the impedance of any of the connected speakers is 4 ohms or more, but less than 6 ohms, set the Minimum Speaker Impedance to “4 ohms.”

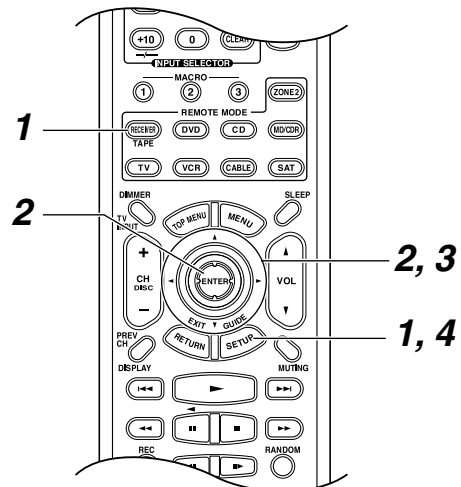**Note:**  
Before you change this setting, turn down the volume.








## First Time Setup—Continued

<p><b>1</b></p> 	<p><b>Press the [RECEIVER] button followed by the [SETUP] button.</b> The main menu appears onscreen.</p>
<p><b>2</b></p> 	<p><b>Use the Up and Down [▲]/[▼] buttons to select “0. Initial Setup,” and then press [ENTER].</b> The Initial Setup menu appears.</p>  <p>(Menus vary depending on country.)</p>
<p><b>3</b></p> 	<p><b>Use the Up and Down [▲]/[▼] buttons to select “f. Sp Impedance,” and then use the Left and Right [◀]/[▶] buttons to select:</b></p> <p><b>4 ohms:</b> Select if the impedance of any connected speaker is 4 ohms or more, but less than 6 ohms.</p> <p><b>6 ohms:</b> Select if the impedances of all connected speakers are between 6 and 16 ohms.</p>
<p><b>4</b></p> 	<p><b>Press the [SETUP] button.</b> The setup menu closes.</p>

## TV Format Setup (not North American models)

Here you can specify the TV format used in your area.

<p><b>1</b></p> 	<p><b>Press the [RECEIVER] button followed by the [SETUP] button.</b> The main menu appears onscreen.</p>
<p><b>2</b></p> 	<p><b>Use the Up and Down [▲]/[▼] buttons to select “0. Initial Setup,” and then press [ENTER].</b> The Initial Setup menu appears.</p>  <p>(Menus vary depending on country.)</p>
<p><b>3</b></p> 	<p><b>Use the Up and Down [▲]/[▼] buttons to select “h. TV Format,” and then use the Left and Right [◀]/[▶] buttons to select:</b></p> <p><b>Auto:</b> Conforms with the video input signal.</p> <p><b>PAL:</b> Select if the TV system in your area is PAL.</p> <p><b>NTSC:</b> Select if the TV system in your area is NTSC.</p>
<p><b>4</b></p> 	<p><b>Press the [SETUP] button.</b> The setup menu closes.</p>

 

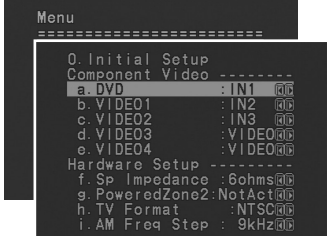


### Note:

This procedure can also be performed on the AV receiver by using its [SETUP] button, arrow buttons, and [ENTER] button.

## First Time Setup—Continued

### AM Frequency Step Setup (some models only)

Here you can specify the AM frequency step used in your area. When this setting is changed, all radio presets are deleted.

<p><b>1</b></p> 	<p><b>Press the [RECEIVER] button followed by the [SETUP] button.</b> The main menu appears onscreen.</p>
<p><b>2</b></p> 	<p><b>Use the Up and Down [▲]/[▼] buttons to select “0. Initial Setup,” and then press [ENTER].</b> The Initial Setup menu appears.</p> 
<p><b>3</b></p> 	<p><b>Use the Up and Down [▲]/[▼] buttons to select “i. AM Freq Step,” and then use the Left and Right [◀]/[▶] buttons to select:</b></p> <p><b>10 kHz:</b> Select if 10 kHz steps are used in your area.</p> <p><b>9 kHz:</b> Select if 9 kHz steps are used in your area.</p>
<p><b>4</b></p> 	<p><b>Press the [SETUP] button.</b> The setup menu closes.</p>

**Note:**

This procedure can also be performed on the AV receiver by using its [SETUP] button, arrow buttons, and [ENTER] button.

### Speaker Setup


Some of the settings in this section are set automatically by the Automatic Speaker Setup function (see page 39). Here you can check the settings made by the Automatic Speaker Setup function, or set them manually, which is useful if you change one of the connected speakers after using the Automatic Speaker Setup function.

#### Speaker Configuration


This setting is set automatically by the Automatic Speaker Setup function (see page 39).


Here you can specify which speakers are connected and their individual sizes.

For speakers with a cone diameter over 6-1/2 inches (16 cm), specify *large*, and for those with a diameter below this, specify *small*.

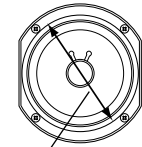


Cone diameter

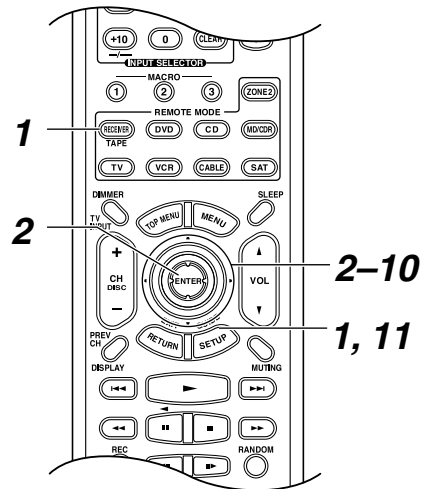


<p><b>1</b></p> 	<p><b>Press the [RECEIVER] button followed by the [SETUP] button.</b> The main menu appears onscreen.</p>
-----------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------

## First Time Setup—Continued


**2**

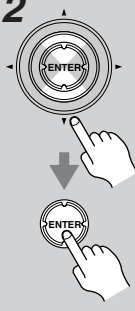

**Use the Up and Down [▲]/[▼] buttons to select “1. Speaker Config,” and then press [ENTER].**  
The Speaker Config menu appears.

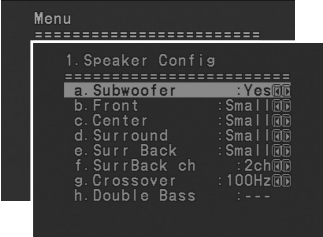


**3**



**Use the Up and Down [▲]/[▼] buttons to select “a. Subwoofer,” and then use the Left and Right [◀]/[▶] buttons to select:**

**Yes:** Select if a subwoofer is connected.  
**No:** Select if no subwoofer is connected.

**4**




**Use the Up and Down [▲]/[▼] buttons to select “b. Front,” and then use the Left and Right [◀]/[▶] buttons to select:**

**Small:** Select if the front speakers are small.  
**Large:** Select if the front speakers are large.

**Note:**  
If the Subwoofer setting in step 3 is set to No, this setting is fixed at Large.

**5**




**Use the Up and Down [▲]/[▼] buttons to select “c. Center,” and then use the Left and Right [◀]/[▶] buttons to select:**

**Small:** Select if the center speaker is small.  
**Large:** Select if the center speaker is large.  
**None:** Select if no center speaker is connected.

**Note:**  
If the Front setting in step 4 is set to Small, the Large option cannot be selected.

**6**




**Use the Up and Down [▲]/[▼] buttons to select “d. Surround,” and then use the Left and Right [◀]/[▶] buttons to select:**

**Small:** Select if the surround left and right speakers are small.  
**Large:** Select if the surround left and right speakers are large.  
**None:** Select if no surround left and right speakers are connected.

**Note:**  
If the Front setting in step 4 is set to Small, the Large option cannot be selected.

**7**




**Use the Up and Down [▲]/[▼] buttons to select “e. SurrBack,” and then use the Left and Right [◀]/[▶] buttons to select:**

**Small:** Select if the surround back left and right speakers are small.  
**Large:** Select if the surround back speakers are large.  
**None:** Select if no surround back speakers are connected.

**Notes:**

- If the Surround setting in step 6 is set to None, this setting cannot be selected.
- If the Surround setting in step 6 is set to Small, this setting cannot be set to Large.

**8**



**Use the Up and Down [▲]/[▼] buttons to select “f. SurrBack ch,” and then use the Left and Right [◀]/[▶] buttons to select:**

**1ch:** Select if one surround back speaker is connected.  
**2ch:** Select if two (left and right) surround back speakers are connected.

**Note:**  
If the Surround Back Setting in step 7 is set to None, this setting cannot be selected.

Continue with step 9 on page 48.

## First Time Setup—Continued

### Crossover

9



Use the Up and Down [▲]/[▼] buttons to select “g. Crossover,” and then use the Left and Right [◀]/[▶] buttons to select a crossover frequency.

Choose a crossover frequency suitable for your setup. If you’re using a subwoofer, choose a crossover frequency based on the diameter of your front speakers. If you’re not using a subwoofer, use the diameter of any speaker that you specified as Small.

Speaker cone diameter	Crossover frequency
Over 8 in. (20 cm)	60 Hz
6-1/2 to 8 in. (16–20 cm)	80 Hz
5-1/4 to 6-1/2 in. (13–16 cm)	100 Hz
3-1/2 to 5-1/4 in. (9–13 cm)	120 Hz
Under 3-1/2 in. (9 cm)	150 Hz

Continue with step 10 in the right column.

**Note:**

If the crossover frequency is set to a low value, and the program material doesn’t contain any sounds below that frequency, the subwoofer will not output much sound.

### Double Bass

This setting is not set automatically by the Automatic Speaker Setup function (see page 39).

With the Double Bass function, you can boost bass output by feeding bass sounds from the front left and right channels to the subwoofer. This function can be set only if the Subwoofer setting in step 3 is set to Yes, and the Front setting in step 4 is set to Large.

In the speaker setup screen, you can choose how bass information is distributed to your speakers only if you have large front left and right speakers AND a subwoofer.

10



Use the Up and Down [▲]/[▼] buttons to select “h. Double Bass,” and then use the Left and Right [◀]/[▶] buttons to select:

**On:** Double Bass function on (default). Front left and right bass also goes to the subwoofer simultaneously.

**Off:** Double Bass function off.

11



Press the [SETUP] button.

The setup menu closes.

**Note:**

This procedure can also be performed on the AV receiver by using its [SETUP] button, arrow buttons, and [ENTER] button.




## First Time Setup—Continued

### Speaker Distance


This setting is set automatically by the Automatic Speaker Setup function (see page 39).

Here you can specify the distance from each speaker to the listening position so that the sound from each speaker arrives at the listener's ears as the sound designer intended.

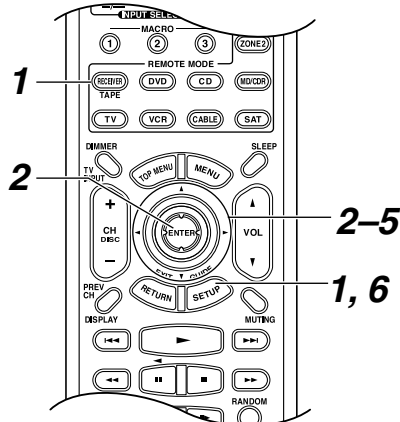

**1** Press the [RECEIVER] button followed by the [SETUP] button. The main menu appears onscreen.

**2** Use the Up and Down [▲]/[▼] buttons to select "2. Speaker Distance," and then press [ENTER]. The Speaker Distance menu appears.

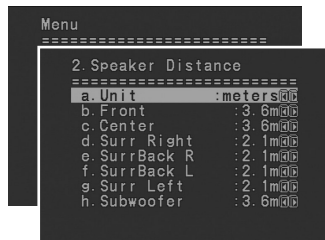

**Note:** Speakers that you set to No or None on the Speaker Configuration page (page 46) cannot be selected.

**3** Use the Up and Down [▲]/[▼] buttons to select "a. Unit," and then use the Left and Right [◀]/[▶] buttons to select:



**feet:** Select if you want to enter distances in feet. Can be set from 1 to 30 feet in 1-foot steps.

**meters:** Select if you want to enter distances in meters. Can be set from 0.3 to 9 meters in 0.3-meter steps.

**4** Use the Up and Down [▲]/[▼] buttons to select "b. Front," and then use the Left and Right [◀]/[▶] buttons to specify the distance.



Specify the distance from the front left speaker to your listening position.

**5** Repeat step 4 for all speakers.

**6** Press the [SETUP] button. The setup menu closes.



#### Notes:

- The Center and Subwoofer distances can be set up to 5 ft. (1.5 m) more or less than the Front distance. For example, if the Front distance is set to 20 ft. (6 m), the Center and Subwoofer distances can be set between 15 and 25 ft. (4.5 and 7.5 m). The Surr Right, Surr Left, and Surr Back distances can be set up to 5 ft. (1.5 m) more or 15 ft. (4.5 m) less than the Front distance. For example, if the Front distance is set to 20 ft. (6 m), the Surr Right, Surr Left, and Surr Back distances can be set between 5 and 25 ft. (1.5 and 7.5 m).
- This procedure can also be performed on the AV receiver by using its [SETUP] button, arrow buttons, and [ENTER] button.

## First Time Setup—Continued


### Speaker Level Calibration

This setting is set automatically by the Automatic Speaker Setup function (see page 39).

Here you can adjust the level of each speaker with the built-in test tone so that the volume of each speaker is the same at the listening position.

**Note:**


The speakers cannot be calibrated while the output of the AV receiver is muted, while a pair of headphones is connected, or when using the multichannel input.

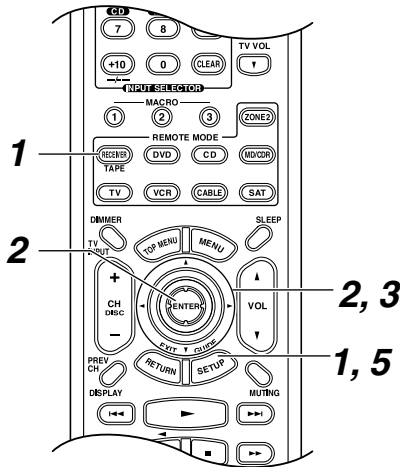

**1** Press the [RECEIVER] button followed by the [SETUP] button. The main menu appears onscreen.

**2** Use the Up and Down [▲]/[▼] buttons to select “3. Level Calibration,” and then press [ENTER].

The Level Calibration menu appears and the pink noise test tone is output by the front left speaker.

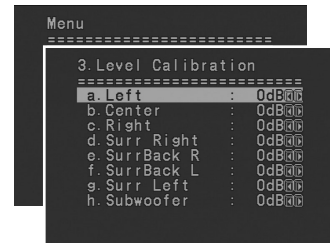

**Note:**

Speakers that you set to No or None on the Speaker Configuration page (page 46) cannot be selected.

**3** Use the Up and Down [▲]/[▼] buttons to select each speaker, and use the Left and Right [◀]/[▶] buttons to set the volume.

The volume can be adjusted from -12 to +12 dB in 1 dB steps (-15 to +12 dB for the subwoofer).

**4** Repeat step 3 until the volume of the test tone from each speaker is the same.

**5** Press the [SETUP] button. The setup menu closes.

**Note:**


This procedure can also be performed by using the remote controller. First press the [TEST TONE] button to output the test tone. Use the [LEVEL-] and [LEVEL+] buttons to set the volume, and use the [CH SEL] button to select the speakers.

## First Time Setup—Continued

### Equalizer Setting

This setting is set automatically by the Automatic Speaker Setup function (see page 39).

Here you can adjust the EQ of individual speakers. To set the volume of individual speakers see page 50.

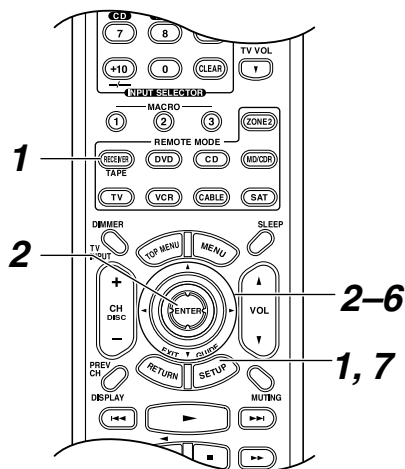

**1**

**Press the [RECEIVER] button followed by the [SETUP] button.**  
The main menu appears onscreen.

**2**

**Use the Up and Down [▲]/[▼] buttons to select “5. Equalizer Settings,” and then press [ENTER].**  
The Equalizer Settings menu appears.

**3**

**Use the Left and Right [◀]/[▶] buttons to select:**  
**Off:** Tone off, response flat.  
**Auto:** The tone for each speaker is set automatically by the Automatic Speaker Setup function.  
**Manual:** You can adjust the EQ of each speaker manually.  
If you select Manual, continue with this procedure. If you select Off or Auto, go to step 7.

**4**

**Use the Down [▼] button to select “Channel,” and then use the Left and Right [◀]/[▶] buttons to select a speaker.**

**5**

**Use the Up and Down [▲]/[▼] buttons to select a frequency, and then use the Left and Right [◀]/[▶] buttons to adjust the level at that frequency.**  
The volume at each frequency can be adjusted from -6 to +6 dB in 1 dB steps.  
**Tip:** Low frequencies (e.g., 80 Hz) affect bass sounds; high frequencies (e.g., 8 kHz) affect treble sounds.

**6**

**Use the Up [▲] button to select “Channel,” and then use the Left and Right [◀]/[▶] buttons to select another speaker.**  
Repeat steps 5 and 6 for each speaker.

**7**

**Press the [SETUP] button.**  
The setup menu closes.


**Note:**





This procedure can also be performed on the AV receiver by using its [SETUP] button, arrow buttons, and [ENTER] button.

## First Time Setup—Continued
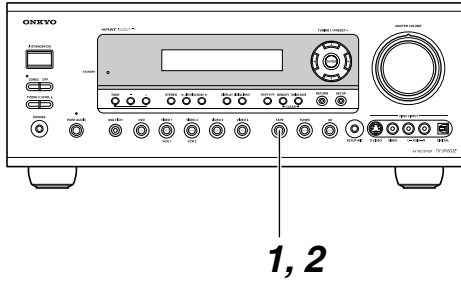
### Changing the TAPE/MD/CDR Display

If you connect an **RI**-compatible Onkyo MiniDisc recorder or CD recorder to the TAPE IN/OUT jacks, for **RI** to work properly, you must change this setting. This setting can only be changed on the AV receiver.




- |                                                                                                 |                                                                                                                                                                                                                                          |
|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b><br>   | <b>Press the [TAPE] input selector button so that "TAPE" appears on the display.</b><br>                                                               |
| <b>2</b><br> | <b>Press and hold down the [TAPE] input selector button (about 3 seconds) to set the display.</b><br>Repeat this step to select TAPE, MD, or CDR.<br> |

# Basic Operations


## Selecting the Input Source

This section explains how to select the input source (i.e., the AV component that you want to listen to or watch).

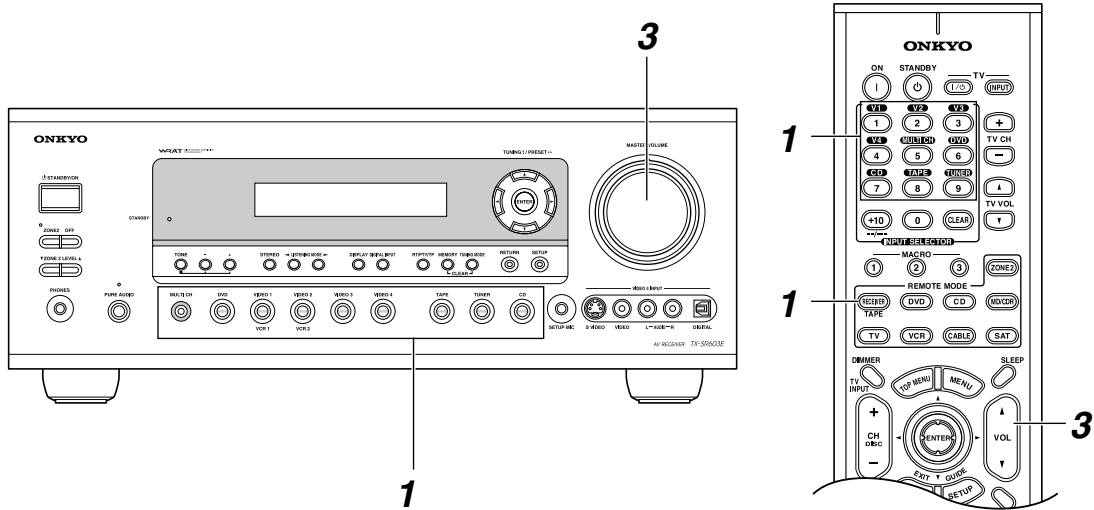


<p><b>1</b></p> <p><b>AV receiver</b></p> <p><b>Remote controller</b></p> <p>or</p>	<p><b>Use the AV receiver's input selector buttons to select the input source.</b></p> <p><b>To select the input source with the remote controller, press the [RECEIVER] button, and then use the INPUT SELECTOR buttons.</b></p> <p>On the remote controller, the [V1], [V2], [V3], and [V4] buttons select the VIDEO 1, VIDEO 2, VIDEO 3, and VIDEO 4 input sources, respectively.</p>
<p><b>2</b></p>	<p><b>Start playback on the source component.</b></p> <p>When you select DVD or another video component, on your TV, you'll need to select the video input that's connected to the AV receiver's MONITOR OUT.</p> <p>On some DVD players, you may need to turn on the digital audio output.</p>
<p><b>3</b></p> <p><b>AV receiver</b></p> <p><b>Remote controller</b></p> <p>or</p>	<p><b>To adjust the volume, use the MASTER VOLUME control, or the remote controller's [VOL] button.</b></p> <p>The volume can be set to MIN, 1 through 99, or MAX.</p> <p>The AV receiver is designed for home theater enjoyment. It has a wide volume range, allowing precise adjustment.</p>

## Basic Operations—Continued

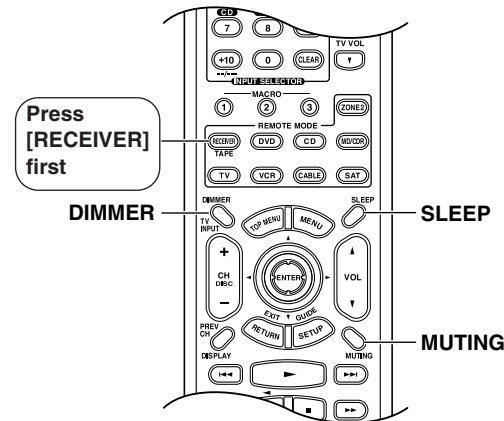


### Setting the Display Brightness

You can adjust the brightness of the display.

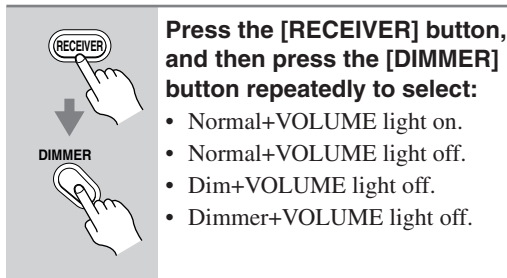


### Muting the AV Receiver

You can temporarily mute the output of the AV receiver.

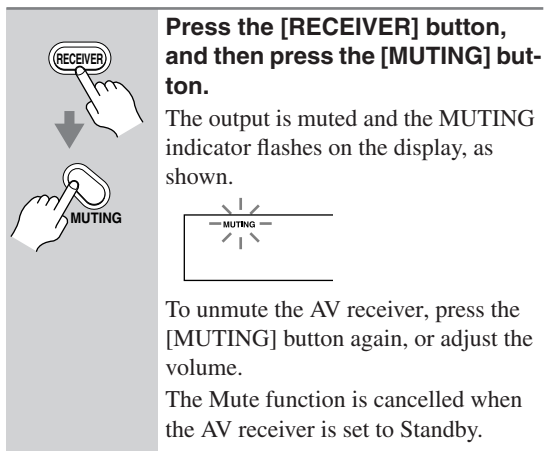

### Using the Sleep Timer

With the sleep timer, you can set the AV receiver to turn off automatically after a specified period.

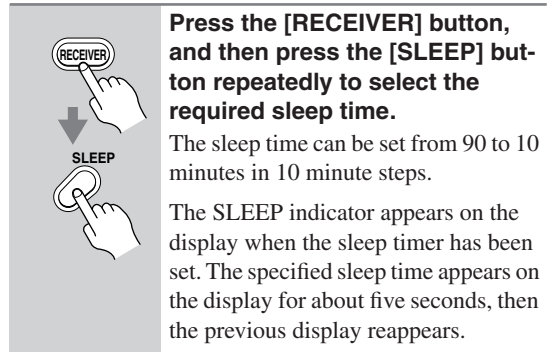


If you need to cancel the sleep timer, press the [SLEEP] button repeatedly until the SLEEP indicator disappears.

To check the time remaining until the AV receiver sleeps, press the [SLEEP] button. Note that if you press the [SLEEP] button while the sleep time is being displayed, you'll shorten the sleep time by 10 minutes.

### Using Headphones

You can connect a pair of stereo headphones (1/4-inch phone plug) to the AV receiver's PHONES jack for private listening, as shown.

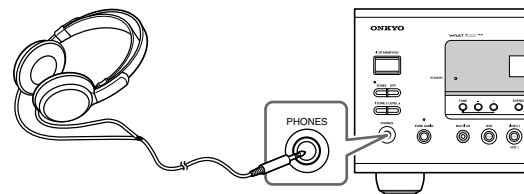


#### Notes:

- Always turn down the volume before connecting your headphones.
- The speakers are turned off while the headphones plug is inserted in the PHONES jack (Zone 2 speakers are not turned off).
- When you connect a pair of headphones, the listening mode is set to Stereo, unless it's already set to Stereo, Mono, Direct, or Pure Audio (not North American TX-SR603).
- Only the Stereo, Direct, Pure Audio (not North American TX-SR603), and Mono listening modes can be used with headphones (the listening modes available also depends on the currently selected input source).
- When the multichannel input is used, only the front left and right audio can be heard in the headphones.
- To adjust the headphone level, press the [CH SEL] button on the remote controller, and then press the [LEVEL +]/[LEVEL -] buttons. You can adjust the level between -12 dB and +12 dB.


## Basic Operations—Continued

### Displaying Source Information

You can display various information about the current input source as follows.

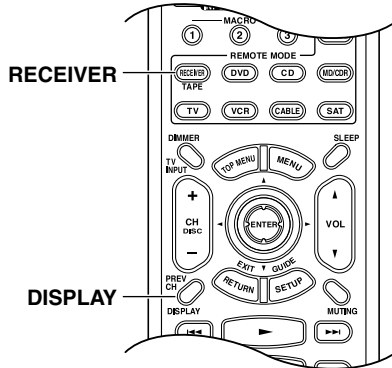

- B: The number of surround channels (2 means surround left and surround right). If there's surround back channel information, this will be 3.
- C: LFE channel for subwoofer (1 means yes).

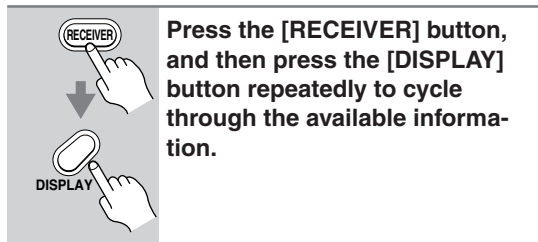


Press the [RECEIVER] button, and then press the [DISPLAY] button repeatedly to cycle through the available information.

#### Note:

This procedure can also be performed on the AV receiver by using its [DISPLAY] button.

The following information can typically be displayed for input sources.

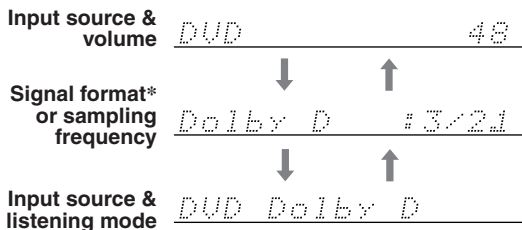

\* If the input signal is analog, no format information is displayed. If the input signal is PCM, the sampling frequency is displayed. If the input signal is digital but not PCM, the signal format is displayed. Information is displayed for about three seconds, then the previously displayed information reappears.

#### Interpreting Surround Channel Values

$$\frac{3}{A} \frac{2}{B} \frac{1}{C}$$


A: The number of front channels (3 means front left, front right, and center).

## Basic Operations—Continued

### Using the Tuner

With the built-in tuner you can enjoy AM and FM radio stations. You can store your favorite stations as presets for quick selection.

### Listening to the Radio


**1**  **Use the [TUNER] input selector button to select either AM or FM.**  
In this example, FM has been selected. Each time you press the [TUNER] button, the input source changes between AM and FM.


FM 87.50MHz

Band                  Frequency

(Actual display depends on country)

### Manual Tuning Mode

**1**  **Press the [TUNING MODE] button so that the AUTO indicator disappears from the display.**


**2**  **Press and hold the TUNING Up or Down [▲]/[▼] button.**  
The frequency stops changing when you release the button.  
Press the buttons repeatedly to change the frequency one step at a time.

The North American model changes FM frequency in 0.2 MHz steps, 10 kHz steps for AM. For other models it's 0.05 MHz steps for FM and 9 kHz steps for AM. In Manual Tuning mode, FM stations will be in mono.


### Tuning into weak FM stereo stations


If the signal from a stereo FM station is weak, it may be impossible to get good reception. In this case, switch to Manual Tuning mode and listen to the station in mono.

### Tuning into Radio Stations

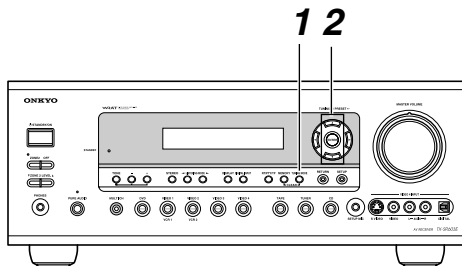


### Auto Tuning Mode

**1**  **Press the [TUNING MODE] button so that the AUTO indicator appears on the display.**

**2**  **Press the TUNING Up or Down [▲]/[▼] button.**  
Searching stops when a station is found.


When tuned into a station, the TUNED indicator appears. When tuned into a stereo FM station, the FM STEREO indicator appears on the display, as shown.

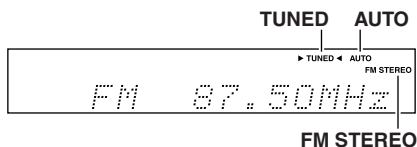



## Basic Operations—Continued

### Presetting Radio Stations

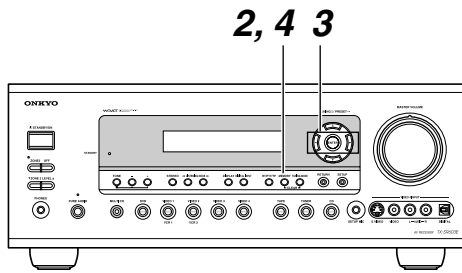


You can store up to 40 of your favorite radio stations as presets.

<b>1</b>	<p><b>Tune into the station that you want to store as a preset.</b></p>
<b>2</b>	<p><b>Press the [MEMORY] button.</b> The MEMORY indicator appears and the preset number flashes.</p>
<b>3</b>	<p><b>While the MEMORY indicator is displayed (about 8 seconds), use the PRESET [◀]/[▶] buttons to select a preset from 1 through 40.</b> In this example, preset #3 is selected.</p>
<b>4</b>	<p><b>Press the [MEMORY] button again to store the station.</b> The station is stored and the preset number stops flashing. Repeat this procedure for all your favorite radio stations.</p>

### Selecting Preset Stations


<b>1</b>	<p><b>Use the [TUNER] input selector button to select either AM or FM.</b></p>
<b>2</b>	<p><b>Use the PRESET [◀]/[▶] buttons, or the remote controller's CH [+/-] button to select a preset.</b></p>

### Deleting Presets

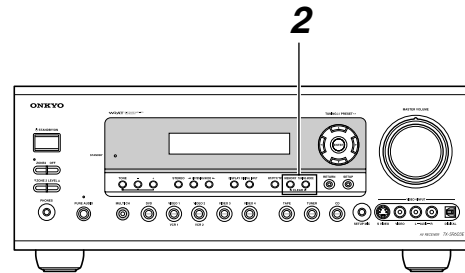

<b>1</b>	<p><b>Select the preset that you want to delete.</b> See the previous section.</p>
<b>2</b>	<p><b>While holding down the [MEMORY] button, press the [TUNING MODE] button.</b> The selected preset is deleted and its number disappears from the display.</p>

### Displaying Radio Information

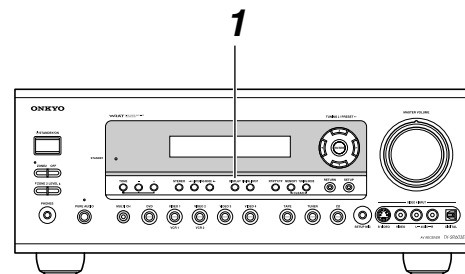

<b>1</b>	<p><b>Press the [DISPLAY] button repeatedly to cycle through the available information.</b></p>
----------	-------------------------------------------------------------------------------------------------

Band, frequency & preset #	
Listening mode	

## Basic Operations—Continued

### Using RDS (European models only)

RDS only works with European models and only in areas where RDS broadcasts are available.

#### ■ What is RDS?

RDS stands for *Radio Data System* and it's a method of transmitting data in FM radio signals. It was developed by the European Broadcasting Union (EBU) and is available in most European countries. Many FM stations use it these days. In addition to displaying text information, RDS can also help you find radio stations by type (e.g., news, sport, rock, etc.).

The AV receiver supports four types of RDS information:

#### PS (Program Service)

When tuned to an RDS station that's broadcasting PS information, the station's name appears. When you press the [DISPLAY] button, the frequency is displayed for three seconds.

#### RT (Radio Text)

When tuned to an RDS station that's broadcasting RT text information, that information is shown on the display (see page 59).

#### PTY (Program Type)

You can also search for radio stations by type (see page 59).

#### TP (Traffic Program)

You can also search for TP radio stations (see page 59).

#### Notes:


- In some cases, the text characters displayed on the AV receiver may not be identical to those broadcast by the radio station. Also, unexpected characters may be displayed when unsupported characters are received. This is not a malfunction.
- If the signal from an RDS station is weak, RDS data may be displayed intermittently or not at all.

### Program Types Used in Europe (PTY)

Type	Display	Description
None	NONE	No program type.
News reports	NEWS	Reports on current events and happenings.
Current affairs	AFFAIRS	Topical reporting of current affairs, often with a wider range of topics than news reports.
Information	INFO	General information such as weather forecasts, consumer affairs, medical help, etc.
Sport	SPORT	Live sports action, sports news, and interviews.
Education	EDUCATE	Formal educational programs.
Drama	DRAMA	Radio plays and serials.
Culture	CULTURE	Cultural programs (including religious affairs).
Science and technology	SCIENCE	Programs about the natural sciences and technology.
Varied	VARIED	Speech-based programs not covered by the above categories (e.g., quizzes, panel games, and comedy).
Pop music	POP M	Popular commercial music, usually from past or present sales charts (e.g., Top 40).
Rock music	ROCK M	Popular music with an alternative appeal, often not appearing on sales charts.
Middle of the road music	M.O.R.M	Easy listening music (as opposed to Pop, Rock, or Classical).
Light classics	LIGHT M	Classical music for general rather than specialist appreciation.
Serious classics	CLASSICS	Performances of major orchestral works, symphonies, chamber music, etc. (including Grand Opera).
Other music	OTHER M	Music styles not covered by the above categories (e.g., Jazz, Rhythm & Blues, Folk, Country, and Reggae).
Alarm	ALARM	When an RDS station is making an emergency broadcast, ALARM will flash on the display.

## Basic Operations—Continued

### Displaying Radio Text (RT)

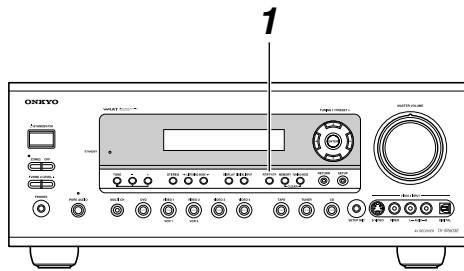


When tuned to an RDS station that's broadcasting RT text information, that information can be displayed.

- 1** Press the [RT/PTY/TP] button once. The RT information scrolls across the display.

#### Notes:

- The message “Waiting” may appear while the AV receiver waits for RT information.
- If the message “No Text Data” appears on the display, no RT information is available.

### Finding Stations by Type (PTY)

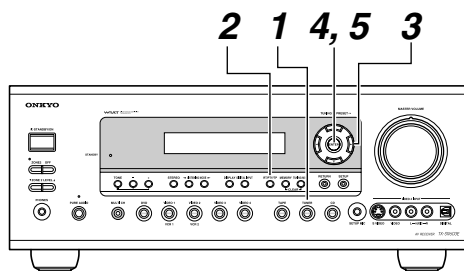


You can search for radio stations by type.

- 1** Use the [TUNER] input selector button to select FM.
- 2** Press the [RT/PTY/TP] button twice. The current program type appears on the display.
- 3** Use the PRESET [◀]/[▶] buttons to select the type of program you want. See the table on page 58.

- 4** To start the search, press [ENTER].  
The AV receiver searches until it finds a station of the type you specified, at which point it stops briefly before continuing with the search.
- 5** When a station you want to listen to is found, press [ENTER].  
If no stations are found, the message “Not Found” appears.

### Listening to Traffic News (TP)

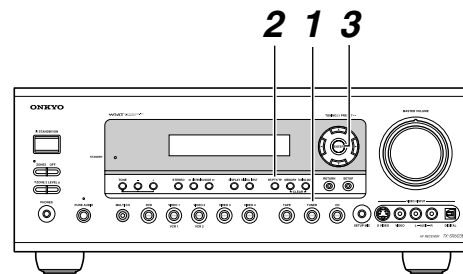

You can search for TP radio stations.

- 1** Use the [TUNER] input selector button to select FM.
- 2** Press the [RT/PTY/TP] button three times.  
If the current radio station is broadcasting TP (Traffic Program), “[TP]” will appear on the display, and traffic news will be heard as and when it's broadcast. If “TP” without square brackets appears, this means that the station is not broadcasting TP.
- 3** To locate a station that is broadcasting TP, press [ENTER].  
The AV receiver searches until it finds a station that's broadcasting TP. If no stations are found, the message “Not Found” appears.


## Basic Operations—Continued

### Selecting Listening Modes

See “About the Listening Modes” on page 62 for detailed information about the listening modes.


- The Dolby Digital and DTS listening modes can only be selected if your DVD player is connected to the AV receiver with a digital audio connection (coaxial or optical).
- Listening mode availability depends on the format of the current input signal.

### Selecting on the AV receiver

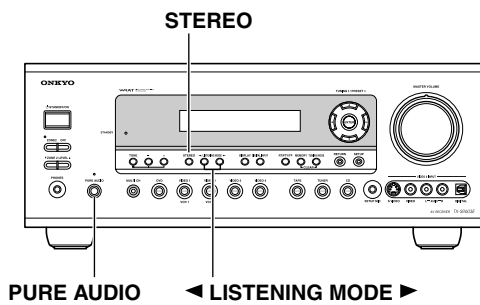

- **[PURE AUDIO] button (not North American TX-SR603)**  
This button selects the Pure Audio listening mode. While this mode is selected, the AV receiver outputs no video signals and its display is turned off.
- **[STEREO] button**  
This button selects the Stereo listening mode.
- **LISTENING MODE [◀] [▶] buttons**  
These buttons select all the listening modes that can be used with the current input source.  
Modes can be selected in the following order, depending on the input signal format:  
Pure Audio → Direct → Stereo → Mono → Surround (e.g., PLIIx, Neo:6, Dolby D EX, DTS/DTS 96/24, DTS-ES, and so on) → Onkyo original DSP

### Selecting with the Remote Controller

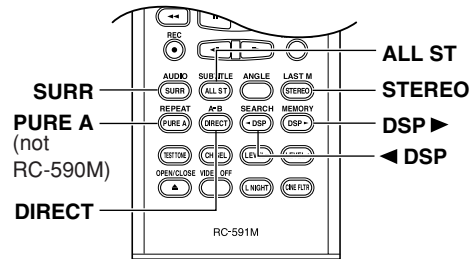

- **[SURR] button**  
This button selects the Dolby Digital, Pro Logic IIx, Neo:6, DTS, and other listening modes.
- **[All ST] button**  
This button selects the All Ch Stereo listening mode.
- **[STEREO] button**  
This button selects the Stereo listening mode.
- **[PURE A] button (not North American TX-SR603)**  
This button selects the Pure Audio listening mode. While this mode is selected, the AV receiver outputs no video signals and its display is turned off.
- **[DIRECT] button**  
This button selects the Direct listening mode.
- **[◀ DSP] & [DSP ▶] buttons**  
These buttons select the Onkyo original DSP modes and Mono mode.

## Basic Operations—Continued

The following table lists all the listening modes and shows which modes can be selected for each input signal format.

Input signal format	Analog, PCM*1	Dolby D				DTS/DTS 96/24*2					Multich
		3/2, 2/2	2/0	1/0,1+1	Other	3/2, 2/2	2/0	1/0, 1+1	Other	DTS-ES	
<b>Listening mode</b>	<b>Source</b> CD, TV, LD, VHS, MD, turntable, radio, cassette, DTV, etc.	<b>DVD, DTV, etc.</b>				<b>DVD, LD, CD, etc.</b>					<b>DVD</b>
Pure Audio	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Direct	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Stereo	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
Mono	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
PLIIx Movie/Music/Game *3	<input type="radio"/>		<input type="radio"/>				<input type="radio"/>				
Neo:6 Cinema	<input type="radio"/>		<input type="radio"/>				<input type="radio"/>				
Neo:6 Music *4	<input type="radio"/>		<input type="radio"/>				<input type="radio"/>				
Dolby D		<input type="radio"/>			<input type="radio"/>						
Dolby D EX *5		<input type="radio"/>									
Dolby D+PLIIx Movie *6		<input type="radio"/>									
Dolby D+PLIIx Music *5		<input type="radio"/>									
DTS, DTS 96/24						<input type="radio"/>			<input type="radio"/>	<input type="radio"/>	*7
DTS+Neo:6 *5						<input type="radio"/>					
DTS+Dolby EX *5						<input type="radio"/>					
DTS+PLIIx Movie *6/Music *5						<input type="radio"/>					
DTS-ES Discrete *5										Discrete	
DTS-ES Matrix *5										Matrix	
Multich											<input type="radio"/>
Mono Movie											
Orchestra											
Unplugged	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
Studio-Mix											
TV Logic											
All Ch Stereo	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
Full Mono	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	

1. In the Pure Audio and Direct listening modes, PCM signals at 32 kHz, 44.1 kHz, and 48 kHz are processed at 64 kHz, 88.2 kHz, and 96 kHz, respectively. 96 kHz signals are processed at 48 kHz for all listening modes other than Pure Audio, Direct, and Stereo.

2. In the Pure Audio, Direct, Stereo, and DTS 96/24 listening modes, signals are processed as DTS 96/24. Everything else is processed as DTS.

3. If the SurrBack parameter is set to "None," or the Zone 2 speakers are being used, PLII is used.

4. Available only when Surround speakers are connected.

5. Cannot be selected if the SurrBack parameter is set to "None" or the Zone 2 speakers are being used.

6. Cannot select if the SurrBack setting is not set to "2ch," or the Zone 2 speakers are being used.

7. If the SurrBack setting is set to "None," or the Zone 2 speakers are being used, DTS is used.


## Basic Operations—Continued

### About the Listening Modes

With its built-in surround sound decoders and DSP programs, the AV receiver can transform your home listening room into a movie theater or concert hall.

If you connect two surround back speakers (i.e., left and right), both will be used for 6.1-channel surround playback.

The AV receiver's surround indicators show which speakers are active in each listening mode.

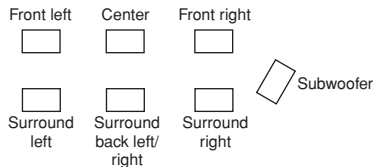

#### Direct

The selected input source is output directly with minimal processing for a pure sound.

#### Pure Audio

As an extension of Direct mode, this mode turns off the display, turns off the power to the video circuitry, and minimizes any other possible noise sources, providing a high fidelity sound that's true to the original (since the power to the video circuitry is turned off, no video signals are output while this mode is selected).

#### Stereo

The selected input source is processed as a stereo signal and output by the front left and right speakers and the subwoofer.

#### Mono

Use this mode when watching an old movie with a mono soundtrack, or to select multilingual soundtracks recorded in the left and right channels of some movies. It can also be used when playing a DVD or other source with multiplexed audio, such as a karaoke DVD.

#### Dolby Pro Logic II Movie

Use this mode with DVDs and videos that bear the Dolby Surround logo or TV programs that feature Dolby Surround. You can also use this mode with stereo movies or TV programs and the AV receiver will create a 5.1 surround mix from the 2-channel stereo.

#### Dolby Pro Logic II Music

Use this mode to add 5.1 surround to stereo sources such as music CDs and DVDs.

#### Dolby Pro Logic IIx

If you've connected surround back speakers to the AV receiver, Dolby Pro Logic IIx allows you to enjoy 7.1-channel playback from 2-channel or 5.1-channel music or movies. Dolby Pro Logic IIx provides a well defined, natural multichannel surround sound experience, putting the listener in a seamless envelope of sound. The added

drama and natural sound enhance the listening experience with CDs, movies, and games.

Dolby Pro Logic IIx has three modes of operation: Movie mode for movies, Music mode for listening to music, and Game mode for use with game consoles with 2-channel stereo outputs.

#### Dolby Digital

With this format you can experience the same superb sound that you get at a movie theater or concert hall. Use this mode with DVDs that bear the Dolby Digital logo.

#### Dolby Digital EX

With an added surround-back channel, this 6.1-channel format offers a heightened sense of space, for added realism with moving sounds, such as those that rotate 360 degrees or pass overhead. Dolby Digital EX material can also be played on conventional 5.1-channel systems, in which case the surround-back channel audio is split between the surround left and right channels. Use this mode with DVDs that have a 5.1-channel soundtrack and bear the Dolby Digital logo.

#### DTS

This digital surround format offers a surround sound experience with exceptional fidelity. It uses compressed digital audio data, with six discrete channels (5.1), and the ability to handle large amounts of audio data while remaining faithful to the original. DTS provides very high-quality sound. You'll need a DTS compatible DVD player in order to enjoy DTS material. Use this mode with DVDs, LDs, or CDs that bear the DTS logo.

#### DTS 96/24

This mode provides higher audio quality. Use it with CDs, DVDs, and LDs that bear the DTS 96/24 logo.

#### DTS-ES Discrete

This is DTS with an added surround back channel for 6.1 surround sound. Use it with program material recorded in DTS 6.1 format. With the additional surround back channel, this format offers 6.1 fully independent digital channels, providing a realistic sense of movement and space. Use it with program material recorded in DTS 6.1, such as CDs, DVDs, or LDs that bear the DTS-ES logo.

## Basic Operations—Continued

### DTS-ES Matrix

This is DTS with an added surround back channel for 6.1 surround sound. Use it to provide 6.1-channel surround playback with program material recorded in DTS 5.1 format. Since DTS 5.1 program material contains surround back channel information, all channels can be reconstructed for 6.1-channel playback. Use this mode with CDs, DVDs, or LDs that bear the DTS-ES or DTS logo.



### Neo:6

This mode provides 6.1-channel playback from 2-channel sources. It offers six full-bandwidth channels with excellent separation. There are two modes of operation: Cinema mode for movies, and Music mode for listening to music.

Cinema mode simulates the realistic sense of movement that you get with 6.1-channel surround sound sources. Use this mode with videos, DVDs, and TV programs that feature stereo sound.

Music mode uses the surround channels to simulate a natural sound field that cannot be produced with conventional stereo. Use this mode with stereo material such as music CDs.

## Onkyo Original DSP Modes

### Orchestra

Suitable for classical or operatic music. The surround channels are emphasized in order to widen the stereo image. In addition, it simulates the natural reverberation of a large hall.

### Unplugged

Suitable for acoustic instrument sounds, vocals, and jazz music. By emphasizing the front stereo image, it simulates the stage-front experience.

### Studio-Mix

Suitable for rock and pop music. Listening to music in this mode creates a lively sound field with a powerful acoustic image, like being at a club or rock concert.

### TV Logic

Adds realistic acoustics to TV programs produced in a TV studio. In addition, it adds surround effects to the entire sound and adds clarity to voices.

### Mono Movie

This mode is suitable for use with old movies and other mono sound sources. The center speaker outputs the sound as it is, while reverb is applied to the sound output by the other speakers, giving presence to even mono material.


### All Ch Stereo

Ideal for background music. The front, surround, and surround back channels create a stereo image that fills the entire listening area.

### Full Mono

In this mode, all speakers output mono audio, so the music sounds the same regardless of where you are.


# Advanced Operations

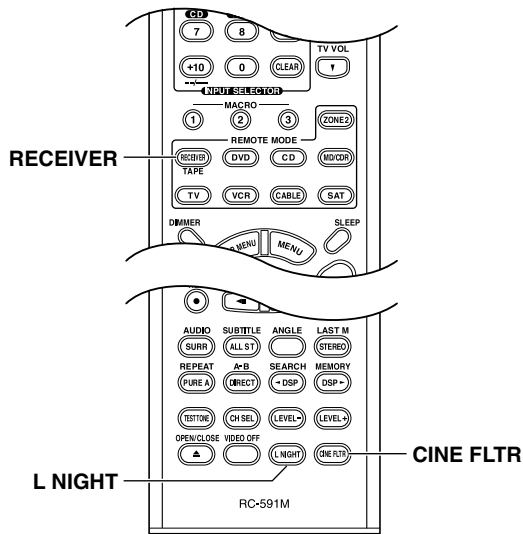

## Using the CinemaFILTER


With the CinemaFILTER, you can soften overly bright movie soundtracks, which are typically mixed for reproduction in a movie theater.

CinemaFILTER can be used with the following listening modes: Dolby Digital, Dolby Digital EX, Dolby Pro Logic IIx Movie, Dolby Pro Logic II Movie, DTS, DTS-ES, DTS Neo:6 Cinema, DTS 96/24, DTS+Neo:6, and DTS+Dolby EX.

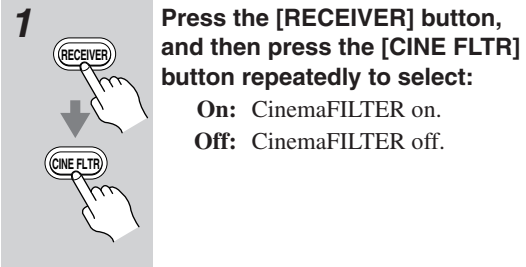

## Using the Late Night Function (Dolby Digital only)

With the Late Night function, you can reduce the dynamic range of Dolby Digital material so that you can still hear quiet parts even when listening at low volume levels—ideal for watching movies late at night when you don't want to disturb anyone.

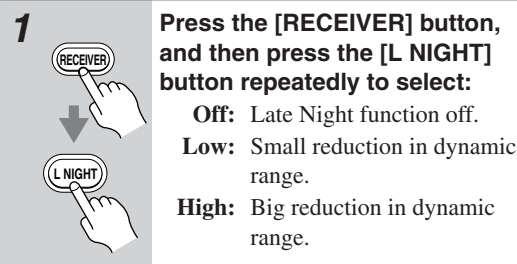


### Notes:

- The effect of the Late Night function depends on the Dolby Digital material that you are playing, and with some material there will be little or no effect.
- The Late Night function is set to Off when the AV receiver is set to Standby.




## Advanced Operations—Continued

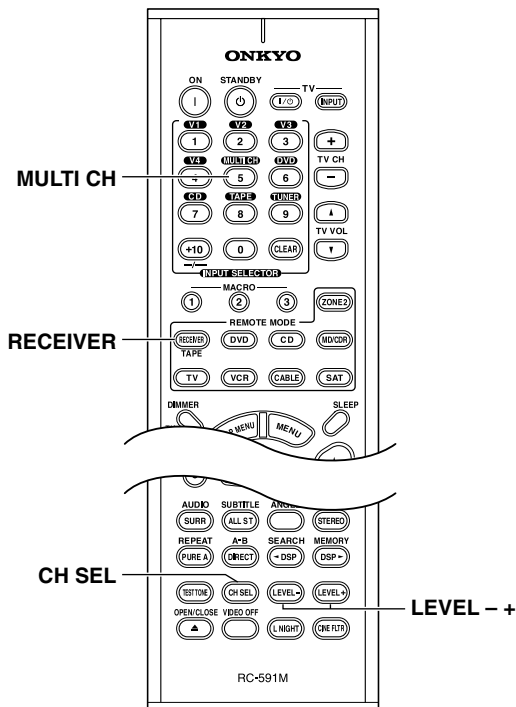

### Using the DVD Analog Multichannel Input

The DVD analog multichannel input is for connecting components with a 5.1-channel analog audio output, such as a DVD player or MPEG decoder.

See “Using a Multichannel Connection” on page 29 for connection information.

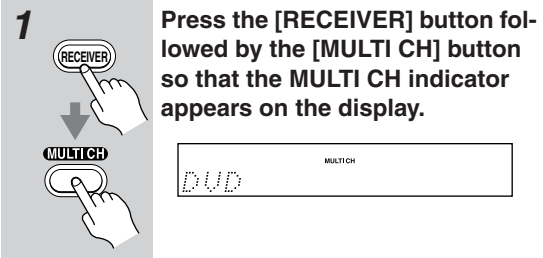

#### Note:

To use the bass and treble functions with the DVD analog multichannel input, select the Multich listening mode first.

### Adjusting Individual Speaker Levels

You can adjust the level of individual speakers during playback. These adjustments are temporary and will be cancelled when the AV receiver is set to Standby.

The diagram shows the steps to adjust individual speaker levels. Step 1 shows a hand pressing the 'RECEIVER' button, then the 'CH SEL' button, and finally the 'LEVEL-' or 'LEVEL+' buttons. Below this, a display window shows 'Left' on the left and '+0dB' on the right.

**1** Press the [RECEIVER] button, use the [CH SEL] button to select each speaker, and use the [LEVEL-] and [LEVEL+] buttons to adjust the volume.

Speakers are selected in the following order: Front Left → Center → Front Right → Surr Right → Surr Back Right → Surr Back Left → Surr Left → Subwoofer.

You can adjust the volume of each speaker from -12 dB to +12 dB (-15 dB to +12 dB for the subwoofer). The name of the currently selected speaker and its volume appear on the display, as shown.

#### Notes:





- You cannot use this function while the AV receiver is muted.
- Speakers that are set to No or None in the Speaker Configuration cannot be adjusted.

## Advanced Operations—Continued


### Adjusting Individual Speaker Levels

You can adjust the level of individual speakers while using the DVD analog multichannel input.

#### Adjusting with onscreen setup menus:
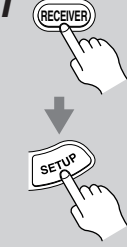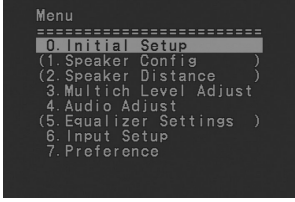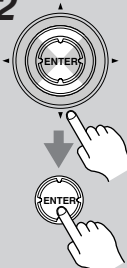
<p><b>1</b></p> 	<p><b>Press the [RECEIVER] button followed by the [SETUP] button.</b> The main menu appears onscreen.</p> 
<p><b>2</b></p> 	<p><b>Use the Up and Down [▲]/[▼] buttons to select “3. Multich Level Adjust,” and then press [ENTER].</b> The Multich Level Adjust menu appears.</p>
<p><b>3</b></p> 	<p><b>Use the Up and Down [▲]/[▼] buttons to select each speaker, and use the Left and Right [◀]/[▶] buttons to set the volume.</b> The volume can be adjusted from –12 to +12 dB in 1 dB steps (–30 to +12 dB for the subwoofer).</p>

#### Adjusting with the remote controller:

<p><b>1</b></p> 	<p><b>Use the remote controller’s [CH SEL] button to select each speaker, and then use the [LEVEL–] and [LEVEL+] buttons to adjust the volume.</b> The level can be adjusted from –12 to +12 dB (–30 to +12 dB for the subwoofer).</p>
-----------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

#### Notes:

- These speaker level settings are completely independent of those explained on pages 50, 65.
- While the DVD analog multichannel input is selected, you can only select the Direct, Pure Audio (not North American TX-SR603), or Multich listening mode. If you select the DVD analog multichannel input while using another listening mode, that listening mode will be cancelled.

- While the DVD analog multichannel input is selected, the Automatic Speaker Setup on page 39 and Speaker Configuration settings on page 46 are ignored, and signals from the multichannel input are fed to the front left, front right, center, surround left, and surround right speakers, and subwoofer regardless of those settings.

### Recording

This section explains how to record the current input source, how to record one input source while enjoying another, and how to dub audio onto your video recordings.

**Unless you have the full consent of the copyright holder, copyright laws prohibit using your recordings for anything other than personal enjoyment!**


#### Notes:

- The surround sound and DSP listening modes cannot be recorded.
- Copy-protected DVDs cannot be recorded.
- You cannot record from the DVD analog multichannel input.
- Various restrictions apply to digital recording. Refer to the manuals supplied with your digital recording equipment for more details.
- Digital input signals are output by only the digital outputs, and analog input signals are output by only the analog outputs. There is no internal conversion from digital to analog or vice versa.
- DTS signals will be recorded as noise, so don’t attempt analog recording of DTS CDs or LDs.
- While the listening mode is set to Pure Audio, no image is provided because the power is turned off for the video circuit. If you want to make recordings, select other listening mode.

## Advanced Operations—Continued

### AV Recording

You can record AV input sources to an AV recording component (VCR, etc.) connected to the VIDEO 1 OUT, VIDEO 2 OUT, or TAPE OUT. See pages 27–37 for information on connecting components.

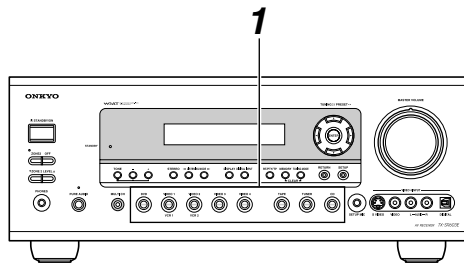


- |          |                                                                                                                                                                                                                                                                                                                                       |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b> | <p><b>Use the input selector buttons to select the AV component that you want to record.</b></p> <p>Audio signals from the selected input source are output by the VIDEO 1 OUT, VIDEO 2 OUT, and TAPE OUT only.</p> <p>You can watch the source while recording, and the AV receiver's VOLUME control has no effect on recording.</p> |
| <b>2</b> | <p><b>Start recording on the AV component connected to the VIDEO 1 OUT, VIDEO 2 OUT, or TAPE OUT.</b></p>                                                                                                                                                                                                                             |
| <b>3</b> | <p><b>Start playback on the source AV component.</b></p> <p>If you select another input source during recording, that input source will be recorded.</p>                                                                                                                                                                              |


### Recording Separate AV Sources

Here you can record audio and video from completely separate sources, allowing you to overdub audio onto your video recordings. This function takes advantage of the fact that when an audio-only input source (i.e., TAPE, TUNER, or CD) is selected, the video input source remains unchanged.

In the following example, audio from the CD player connected to the CD IN, and video from the camcorder connected to the VIDEO 4 INPUT VIDEO jack are recorded by the VCR connected to the VIDEO 1 OUT jacks.

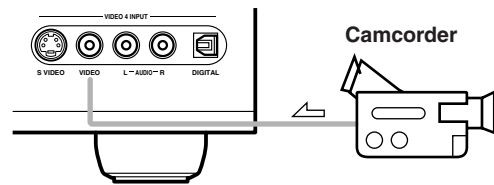

↗ : video signal  
↘ : audio signal

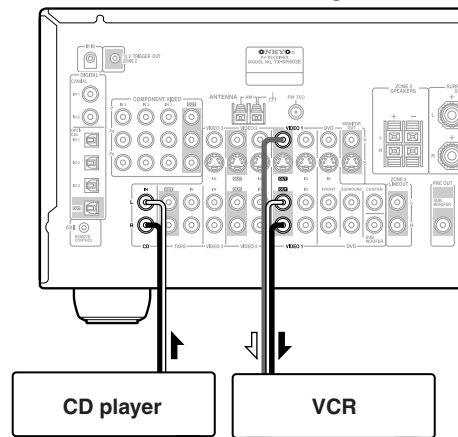


- 1** Prepare the camcorder and CD player for playback.
- 2** Prepare the VCR for recording.
- 3** Press the [VIDEO 4] input selector button.
- 4** Press the [CD] input selector button.  
This selects the CD player as the audio source, but leaves the camcorder as the video source.
- 5** Start recording on the VCR and start playback on the camcorder and CD player.  
The video from the camcorder and the audio from the CD player are recorded by the VCR.

# Advanced Setup

## Adjusting the Bass & Treble

You can adjust the bass and treble for the front speakers, except when the Direct or Pure Audio (not North American TX-SR603) listening mode is selected.

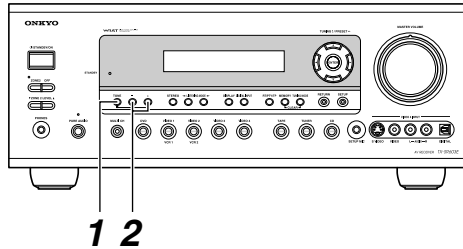

<b>1</b> 	<b>Press the [TONE] button repeatedly to select either Bass or Treble.</b>
<b>2</b> 	<b>Use the TONE [-]/[+] buttons to adjust.</b>

### ■ Bass

You can boost or cut low-frequency sounds output by the front speakers from -10 dB to +10 dB in 2 dB steps.


### ■ Treble

You can boost or cut high-frequency sounds output by the front speakers from -10 dB to +10 dB in 2 dB steps.

## Audio Adjust Functions

Here you can set listening mode-related settings and functions.

<b>1</b> 	<b>Press the [RECEIVER] button followed by the [SETUP] button.</b> The main menu appears onscreen.
<b>2</b> 	<b>Use the Up and Down [▲]/[▼] buttons to select “4. Audio Adjust,” and then press [ENTER].</b> The Audio Adjust menu appears.
<b>3</b> 	<b>Use the Up and Down [▲]/[▼] buttons to select the settings, and use the Left and Right [◀]/[▶] buttons to set them.</b> The settings are explained on page 69.
<b>4</b> 	<b>When you’ve finished, press the [SETUP] button.</b> The setup menu closes.

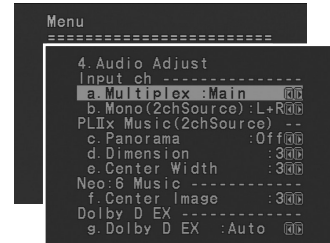

### Note:

This procedure can also be performed on the AV receiver by using its [SETUP] button, arrow buttons, and [ENTER] button.

## Advanced Setup—Continued

The Audio Adjust functions are explained below.

### Input Channel Settings

#### ■ Multiplex

This setting determines which channel is output from a stereo multiplex source. Use it to select audio channels or languages with multiplex sources, multilingual TV broadcasts, and so on.

**Main:** The main channel is output (default).

**Sub:** The sub channel is output.

**Main/Sub:** Both the main and sub channels are output.

#### ■ Mono (2chSource)

This setting specifies the channel to be used for playing any 2-channel digital source such as Dolby Digital, or 2-channel analog/PCM source in the Mono listening mode.

**L+R:** Both the left and right channels are output (default).

**L:** Only the left channel is output.

**R:** Only the right channel is output.

### PL IIX Music Mode Settings

These settings provide for playing any 2-channel digital source such as Dolby Digital, or 2-channel analog/PCM source in the PLIIX Music listening mode.

#### ■ Panorama

With this function, you can broaden the width of the front stereo image when using the Pro Logic II Music or Pro Logic IIX Music listening mode.

**On:** Panorama function on.

**Off:** Panorama function off (default).

#### ■ Dimension

With this setting, you can move the sound field forward or backward when using the Pro Logic II Music or Pro Logic IIX Music listening mode. The default setting is 3. Higher settings move the sound field forward. Lower settings move it backward.

If the stereo image feels too wide, or there is too much surround sound, move the sound field forward to improve the balance. Conversely, if the stereo image feels like it is in mono, or there is not enough surround sound, move it backward.

#### ■ Center Width

With this function, you can adjust the width of the sound from the center speaker when using the Pro Logic II Music or Pro Logic IIX Music listening mode. Normally if you are using a center speaker, the center channel sound is output by only the center speaker. (If you are not using a center speaker, the center channel sound will be distributed to the front left and right speakers to create a phantom center). This setting controls the front left, right, and center mix, allowing you to adjust the weight of the center channel sound. It can be adjusted from 0 to 7 (default is 3).

### Neo:6 Music Mode Setting

#### ■ Center Image

The DTS Neo:6 Music listening mode creates 6-channel surround sound from 2-channel (stereo) sources. With this setting, you can specify by how much the front left and right channel output is attenuated in order to create the center channel. It can be adjusted from 0 to 5 (default is 3). This setting is unavailable if no surround speakers are connected.

When set to 0, the front left and right channel output is attenuated by half (–6 dB), giving the impression that the sound is located centrally. This setting works well when the listening position is considerably off center. When set to 5, the front left and right channels are not attenuated, maintaining the original stereo balance.

### Dolby Digital EX Input Signal Setting

#### ■ Dolby D EX

This setting determines how Dolby Digital EX signals are handled. This setting is unavailable if no surround back speakers are connected.

**Auto:** If the source signal contains a Dolby Digital EX flag, the Dolby Digital EX listening mode is used (default).

**Manual:** You can select Pro Logic IIX Movie, Pro Logic IIX Music, Dolby Digital, or Dolby Digital EX.

## Advanced Setup—Continued



### Assigning Listening Modes to Input Sources

You can assign a default listening mode to each input source that will be selected automatically when you select each input source. For example, you can set the default listening mode to be used with Dolby Digital input signals. You can select other listening modes during playback, but the mode specified here will be resumed once the AV receiver has been set to Standby.

**1** Press the [RECEIVER] button followed by the [SETUP] button.  
The main menu appears onscreen.




**2** Use the Up and Down [▲]/[▼] buttons to select “6. Input Setup,” and then press [ENTER].  
The Input Setup menu appears.

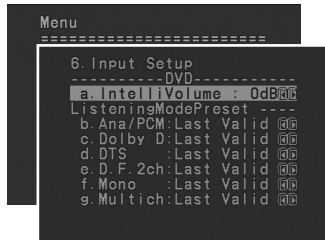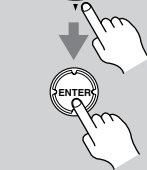

**3** Use the INPUT SELECTOR buttons on the remote controller to select the input source that you want to set.

For input selectors that have no digital input jacks, only “b. Analog” will be available.

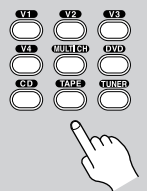

**4**



Use the Up and Down [▲]/[▼] buttons to select the signal format that you want to set, and then use the Left and Right [◀]/[▶] buttons to select a listening mode.

Only listening modes that can be used with each input signal format can be selected.

For “Surround,” the listening mode specified on page 69 will be used.

The Last Valid option means that the listening mode selected last will be used.

**b. Ana/PCM:** With this setting, you can specify the listening mode to be used when an analog (CD, TV, LD, VHS, MD, turntable, radio, cassette, cable, satellite, etc.) or PCM digital (CD, DVD, etc.) audio signal is played.

**c. Dolby D:** With this setting, you can specify the listening mode to be used when a Dolby Digital format digital audio signal is played (DVD, etc.).

**d. DTS:** With this setting, you can specify the listening mode to be used when a DTS format digital audio signal is played (DVD, LD, CD, etc.).

**e. D.F. 2ch:** With this setting, you can specify the listening mode to be used when a 2-channel (2/0) digital audio signal (Dolby Digital, DTS) is played (DVD, etc.).

**f. Mono:** With this setting, you can specify the listening mode to be used when a mono digital audio signal is played (DVD, etc.).

**g. Multich:** This setting is available only when DVD or MULTI CH is selected with INPUT SELECTOR. With this setting, you can specify the listening mode to be used when the DVD analog multichannel input is used.

**5**



When you’ve finished, press the [SETUP] button.

The setup menu closes.

#### Note:

This procedure can also be performed on the AV receiver by using its [SETUP] button, arrow buttons, and [ENTER] button.

## Advanced Setup—Continued

### IntelliVolume



You can set the input level for each input source. This is useful if some of your AV components are louder or quieter than others.

While this menu is shown onscreen, you can select each input source and set the levels while listening to and comparing them.

**1** Press the [RECEIVER] button followed by the [SETUP] button.  
The main menu appears onscreen.



**2** Use the Up and Down [▲]/[▼] buttons to select “6. Input Setup,” and then press [ENTER].  
The Input Setup menu appears.

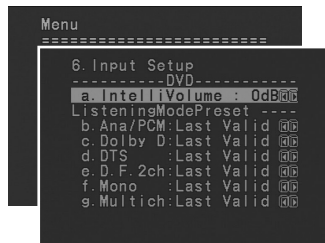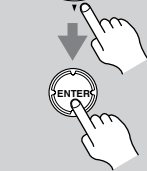

**3** Use the INPUT SELECTOR buttons on the remote controller to select the input source that you want to set.



**4** Use the Up and Down [▲]/[▼] buttons to select “a. IntelliVolume.”  
If a component is too loud compared to your other components, use the Left [◀] button to adjust the level. If it’s too quiet, use the Right [▶] button.



If a component is too loud compared to your other components, use the Left [◀] button to adjust the level. If it’s too quiet, use the Right [▶] button.

- The level can be set from –6 dB to +6 dB.


### Setting Preferences

This section explains the items on the Preference menu.

**1** Press the [RECEIVER] button followed by the [SETUP] button.  
The main menu appears onscreen.



**2** Use the Up and Down [▲]/[▼] buttons to select “7. Preference,” and then press [ENTER].  
The Preference menu appears.

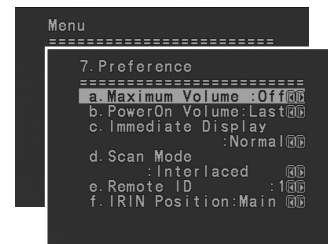

**3** Use the Up and Down [▲]/[▼] buttons to select the settings, and use the Left and Right [◀]/[▶] buttons to set them.  
The settings are explained on page 72.



**4** When you’ve finished, press the [SETUP] button.  
The setup menu closes.



#### Note:

This procedure can also be performed on the AV receiver by using its [SETUP] button, arrow buttons, and [ENTER] button.

## Advanced Setup—Continued

### a. Maximum Volume

With this preference, you can prevent the volume being set too high by specifying a maximum volume level. The range is from 50 to 99. To specify no maximum volume, select Off.

### b. Power On Volume

With this preference, you can specify the volume setting to be used each time the AV receiver is turned on. The range is MIN, 1 through 50. To use the same volume level that was used when the AV receiver was turned off, select Last.

### c. Immediate Display

This preference determines whether or not actions, such as selecting an input source, are displayed onscreen.

**Normal:** Select if your TV is 4:3.

**Wide:** Select if your TV is 16:9.

**Off:** Actions not displayed.

Even if this preference is set to Normal or Wide, actions are not displayed on the TV or projector that's connected to the COMPONENT VIDEO OUT.

### d. Scan Mode

If the text in onscreen setup menus flickers due to compatibility with the connected display device (TV, projector, etc.), set the Scan Mode to Non-Interlaced.

**Interlaced:** Default.

**Non-Interlaced:** Select if the text flickers.

- Depending on the display device, when Non-Interlaced is selected, the onscreen setup menus may not appear. If this happens, use the AV receiver's display and repeat the procedure to revert to Interlaced.

### e. Remote ID

With this setting, you can change the AV Receiver's remote control ID. You may need to change this if the remote controller's control codes overlap with those of another Onkyo component located in the same room.

- If you change the AV receiver's remote control ID, be sure to set the same ID on both the AV receiver and remote controller (see page 73). The default ID for both is 1.

### f. IR IN Position

When using a commercially available IR receiver, use this setting to specify its location.

**Main:** Select if the IR receiver is located in the main room.


**Zone 2:** Select if the IR receiver is located in, and will be used to control Zone 2.

## Digital Input Signal Formats

The digital input signal formats are available only for the input sources that you have assigned a digital input jack; otherwise you will see "Analog" indicated on the screen (see page 43).

Normally, the AV receiver detects the signal format automatically. However, if you experience either of the following issues when playing PCM or DTS material, you can manually set the signal format to PCM or DTS:

- If the beginnings of tracks from a PCM source are cut off, try setting the format to PCM.
- If noise is produced when fast forwarding or reversing a DTS CD, try setting the format to DTS.

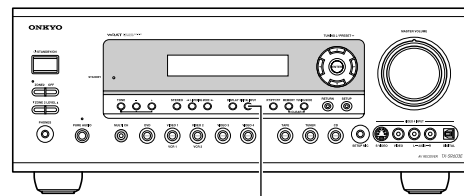

DIGITAL INPUT

- 1** Press and hold the AV receiver's [DIGITAL INPUT] button for about 3 seconds.
- 2** While "Auto" is displayed (about 3 seconds), press the [DIGITAL INPUT] button again to select: PCM, DTS, or Auto.  
**DTS or PCM:** The DTS or PCM indicator, depending on which format you have set, flashes, and only signals in that format are output. Digital signals in other formats are ignored.  
**Auto (default):** The format is detected automatically. If no digital input signal is present, the corresponding analog input is used instead.




## Advanced Setup—Continued

### Changing the Remote Controller's ID

If several Onkyo components are used in the same room, the remote controller's control codes may overlap with those of another component. To differentiate the remote controller's control codes, you can change its ID to another number.

#### Notes:

If you change the remote controller's ID, be sure to set the same ID on both the remote controller and AV receiver (see "e. Remote ID" on page 72). The default ID for both is 1.

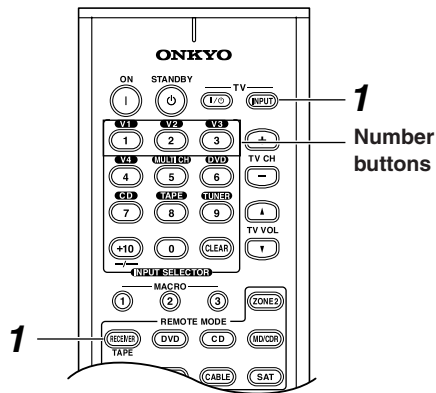

**1** Press and hold down the [RECEIVER] button, and then press the TV [INPUT] button.

**2** Use the number buttons to enter a remote control ID.

You can enter 1, 2, or 3.

# Zone 2

## Connecting Zone 2


With the Zone 2 function, you can enjoy one input source in the main room and a different source in another room.

There are two connection methods: using a receiver/integrated amp in Zone 2 or using only a pair of speakers in Zone 2.

### Using a Receiver/Integrated Amp in Zone 2

With this connection method, you can use 7.1 surround sound in the main room and play a different AV source in Zone 2. The volume for Zone 2 is set on the receiver/integrated amp.


- Use an RCA audio cable to connect the AV receiver's ZONE 2 LINE OUT L/R jacks to an analog audio input on your receiver/integrated amp.
- Connect the Zone 2 speakers to the speaker terminals on the receiver/integrated amp.

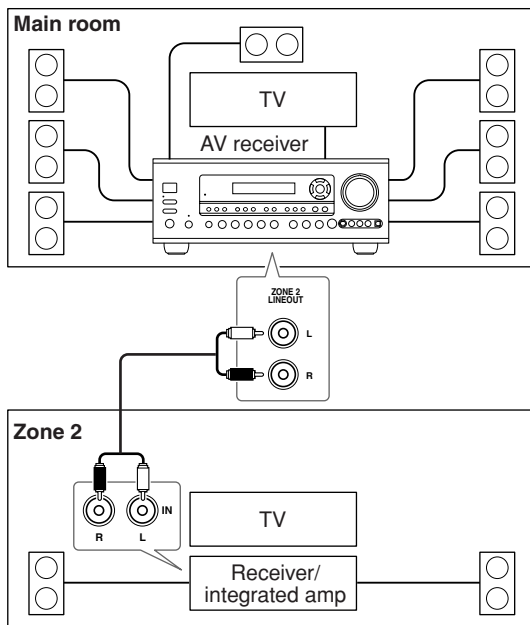

### Using Only Speakers in Zone 2

With this connection method, you can use 5.1 surround sound in the main room and play a different AV source in Zone 2. The volume for Zone 2 is set on the AV receiver.


- Set the Powered Zone 2 setting to Activated (see page 75).
- Connect your Zone 2 speakers to the AV receiver's ZONE 2 SPEAKERS terminals.

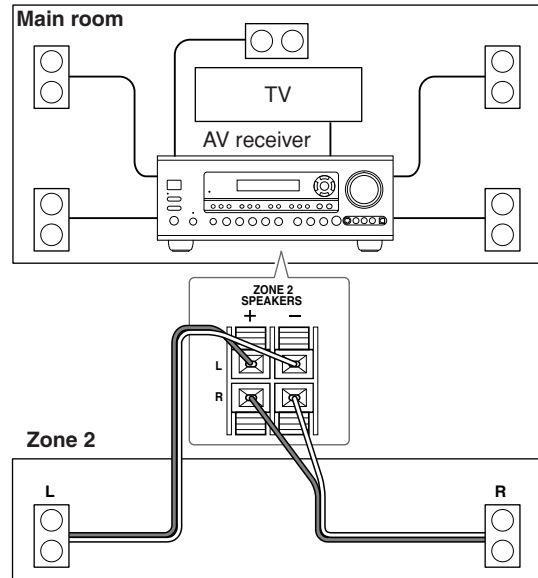

## Zone 2—Continued

### Setting the Powered Zone 2


To use Zone 2, you must make this setting. It enables the speakers connected to the ZONE 2 SPEAKERS terminals so that they produce sound when Zone 2 is used.

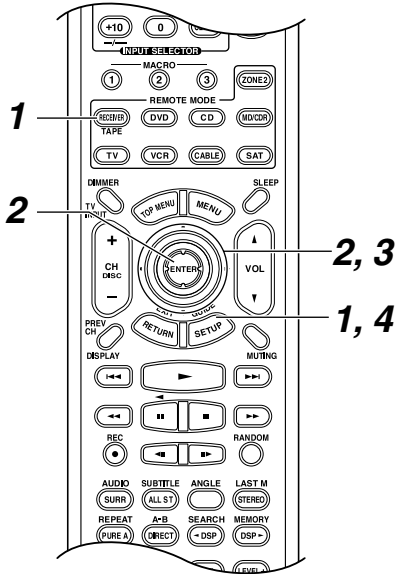


**1** Press the [RECEIVER] button followed by the [SETUP] button. The main menu appears onscreen.



**2** Use the Up and Down [▲]/[▼] buttons to select “0. Initial Setup,” and then press [ENTER]. The Initial Setup menu appears.

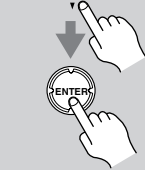

**3** Use the Up and Down [▲]/[▼] buttons to select “g. Powered Zone 2,” and use the Left and Right [◀]/[▶] buttons to select:

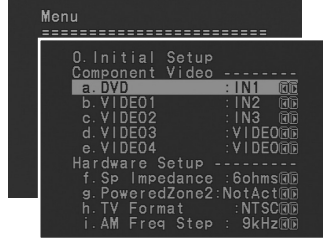

**Not Activated:** Zone 2 SPEAKERS terminals deactivated.

**Activated:** Zone 2 SPEAKERS terminals activated.

When Zone 2 is activated and turned on (see page 76), the speakers connected to the ZONE 2 SPEAKERS terminals output sound, but the speakers connected to the SURROUND BACK SPEAKERS terminals do not (when Zone 2 is activated but not used, the surround back speakers work as normal).

**4** Press the [SETUP] button. The setup menu closes.




#### Note:

This procedure can also be performed on the AV receiver by using its [SETUP] button, arrow buttons, and [ENTER] button.

## Zone 2—Continued



### Using Zone 2

Here you can turn on Zone 2, select an input source, and adjust the volume.

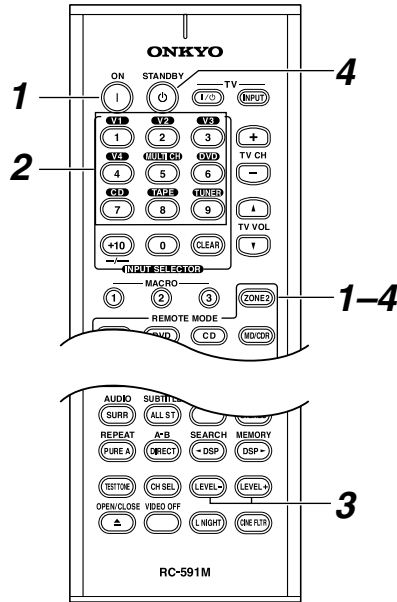


#### Note:

 To control Zone 2 with the remote controller, you must press the [ZONE 2] button first.


<b>1</b>	 <p><b>Point the remote controller at the AV receiver and press the [ZONE 2] button followed by the [ON] button.</b></p> <p>This turns on Zone 2 and the AV receiver's 12V TRIGGER OUT.</p>
<b>2</b>	 <p><b>To select the Zone 2 input source with the remote controller, press the [ZONE 2] button followed by an input selector button.</b></p> <p>If you select AM or FM, you can use the remote controller's [TUNER] button to select the band.</p> <p><b>To perform steps 1 and 2 on the AV receiver, press the [ZONE 2] button followed by an input selector button within eight seconds.</b></p> <p>The name of the selected Zone 2 source appears on the display.</p>

To set Zone 2 to the same source as the main room, press the [ZONE 2] button repeatedly to display "Zone 2 Sel: Source."
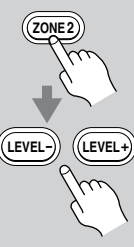
<b>3</b>	 <p><b>To adjust the Zone 2 volume with the remote controller, press the [ZONE 2] button, and then use the [LEVEL-] and [LEVEL+] buttons.</b></p>
----------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**To do this on the AV receiver, press the ZONE 2 LEVEL [▲]/[▼] buttons.**

If the Zone 2 receiver/integrated amp is connected to the AV receiver's ZONE 2 LINE OUT L/R jacks, use the volume control on the receiver/integrated amp.
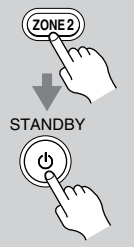
<b>4</b>	 <p><b>To turn off Zone 2 with the remote controller, press the [ZONE 2] button followed by the [STANDBY] button.</b></p>
----------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**To do this from the AV receiver, press the [OFF] button.**

#### Notes:

- If the Sleep function has been set, the Zone 2 component will turn off along with the AV receiver when the specified sleep time expires. To use the Sleep function with Zone 2 only, set the Sleep function and then set the AV receiver to Standby.
- Only analog input sources are output by the ZONE 2 LINE OUT and ZONE 2 SPEAKERS terminals. Digital input sources are not output. If no sound is heard when an input source is selected, check if it's connected to an analog input.
- While Zone 2 is being used, listening modes that need surround back speakers (i.e., Dolby Digital EX and DTS-ES) are unavailable.
- While Zone 2 is on, **RI** functions will not work.
- You can't select different radio stations for Zone 2 and the main room. For example, if you have an FM station for the main room, that station will also be used in Zone 2.

## Zone 2—Continued

### Using the 12V Trigger

When Zone 2 is turned on, the ZONE 2 12V TRIGGER OUT outputs 12 volts (100 milliamperes max). By connecting this jack to the 12-volt trigger input on, say, a power amp in Zone 2, that power amp will turn on and off automatically as and when Zone 2 is turned on and off on the AV receiver.

### Using the Remote Control in Zone 2

To use the remote controller to control the AV receiver from Zone 2, you'll need one of the following commercially available multiroom remote control kits:


- Multiroom Kits such as those made by Niles and Xantech.

These kits can also be used when the AV receiver is not in line of sight of the remote controller, for example, when it's installed inside a cabinet.


### Using a Multiroom Kit with Zone 2

In the following diagram, an IR receiver picks up the infrared signals from the remote controller in Zone 2 and feeds them to the AV receiver in the main room via the connecting block.

- On the Remote Setup menu, set the IR IN Position setting to "Zone 2" (see page 72).

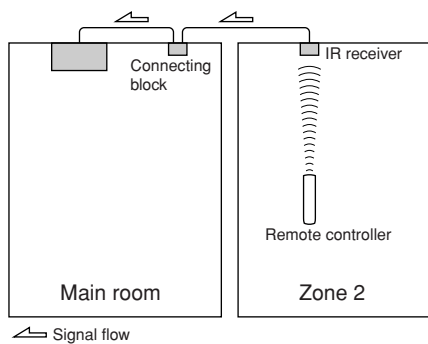


Connect the miniplug cable from the connecting block to the AV receiver's IR IN jack as shown below.

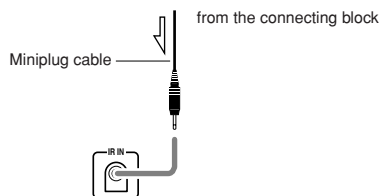

### Using a Multiroom Kit with a Cabinet

In the following diagram, an IR receiver picks up the infrared signals from the remote controller and feeds them to the AV receiver in the cabinet via the connecting block.

- On the Remote Setup menu, set the IR IN Position setting to "Main" (see page 72).

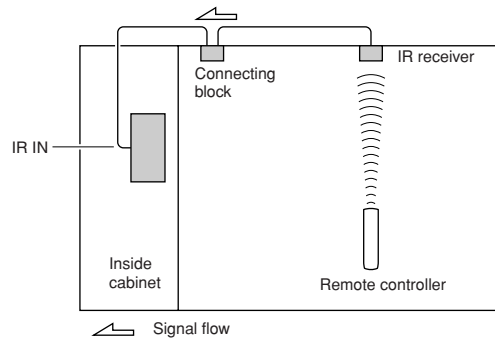

# Controlling Other Components


You can use the AV Receiver's remote controller (RC-590M/RC-591M) to control your other components, including those made by other manufacturers. This chapter explains how to:

- Enter the remote control code for a component that you want to control (e.g., DVD, TV, VCR).
- Learn commands directly from another component's remote controller (see page 86).
- Program the Macro function to perform a sequence of actions with a single press of a button (see page 87).

## Entering Remote Control Codes

Entering the appropriate remote control code for each REMOTE MODE button will allow you to control your other components with the remote controller. You'll need to perform this procedure for each component that you want to control.

For the [DVD], [TV], [VCR], [CABLE], and [SAT] buttons, choose a code from the respective category. For the [CD] and [MD/CDR] buttons, you can choose a code from any category. Remote control codes cannot be entered for the [RECEIVER] and [ZONE 2] buttons.

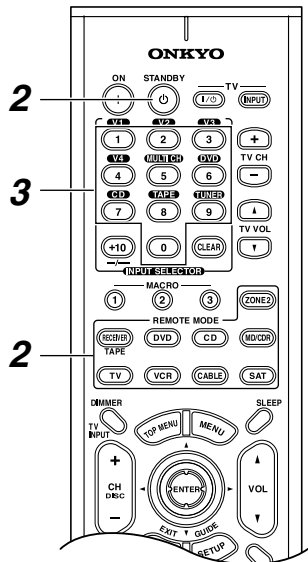

**1** Look up the remote control code for your component. See "Remote Control Codes" on page 80.

**2** While holding down the REMOTE MODE button that you want to enter the code for, press the [STANDBY] button.

**3** Within 30 seconds, use the number buttons to enter the 4-digit remote control code.

**4** Select the remote controller mode, point the remote controller at the component, and check its operation.

Remote controller buttons that can be used in DVD mode are shown on page 16. Those that can be used with the TV, VCR, CABLE, and SAT modes are shown on pages 84, 85.

If the remote controller works OK, the code has been entered correctly. If not, try again or try another code.

## Codes for Onkyo DVD Players

The remote control code for an Onkyo DVD player depends on whether it's connected via **RI**, as follows:


- 5001:** Use this code if you've connected an **RI** cable and an analog audio cable to your DVD player. This is the default setting, so if you're using **RI**, you don't need to change anything. Point the remote controller at the AV receiver to operate the DVD player.
- 5002:** Use this code if your DVD player doesn't have an **RI** jack, or you're not using **RI**. Point the remote controller at the DVD player to operate it.

## Setting the [MD/CDR] Button to CDR

By default, the [MD/CDR] button is set to control a MiniDisc recorder. To control a CD recorder, it must be set to CDR. The codes are as follows:

- 6002:** Code for controlling an CD recorder.
- 6003:** Code for controlling an MD recorder (default).

## Controlling Other Components—Continued

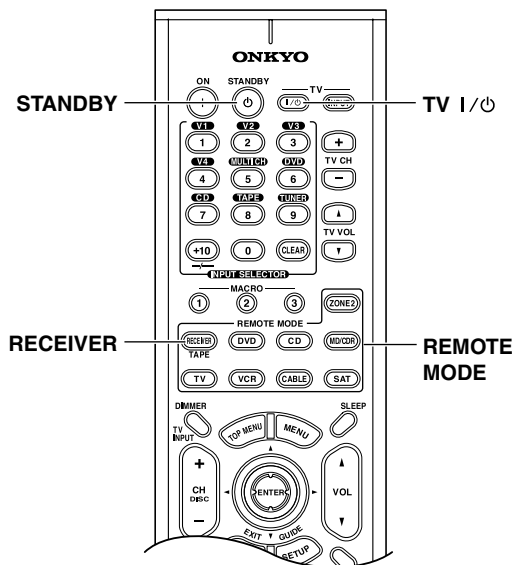

### Resetting the Remote Controller

Here you can reset the remote controller to its default settings.

- 1** While holding down the [RECEIVER] button, press the [STANDBY] button. Release both buttons and wait five seconds.
- 2** Press the [RECEIVER] button again. The remote controller is reset.

### Resetting REMOTE MODE Buttons

If you've entered another code for one of these button and now want to return to the default, perform the following procedure.

By default, some REMOTE MODE buttons are preprogrammed with remote control codes for controlling Onkyo components connected via **RI**.

- 1** While holding down the REMOTE MODE button that you want to reset, press the TV [I/⏻] button. Release both buttons and wait two seconds.
- 2** Press the REMOTE MODE button again. The REMOTE MODE button is reset.

## Controlling Other Components—Continued

### Remote Control Codes

When two or more codes are given, try each one in turn, and choose the one that works best.

Depending on the manufacturer and component, the remote controller may not work as expected.

DVD (DVD player)	
Manufacturer	Control code
Aiwa	5010
Akai	5019
Apex	5015, 5016
CyberHome	5027
Denon	5017, 5020
GE	5003
Hitachi	5009
Integra	5001, 5002
Integra Research	5001, 5002
JVC	5023
Kenwood	5017
Magnavox	5004, 5021
Marantz	5025, 5026
Mitsubishi	5005
Onkyo	5001, 5002
Panasonic	5011, 5017, 5020
Philips	5004, 5021, 5028
Pioneer	5006
Proscan	5003
RCA	5003
Sanyo	5012
Sony	5007, 5013, 5018, 5029
Technics	5020
Thomson	5022, 5024
Toshiba	5008, 5021
Xbox	5022
Yamaha	5020
Zenith	5014, 5021

SAT (satellite receiver)	
Manufacturer	Control code
Alba	4014, 4017, 4025, 4027
Allsat	4015, 4027
Alltech	4022, 4025
Amstrad	4013, 4019, 4025, 4030, 4031
Anglo	4025
Ankaro	4025
Anttron	4017
Apollo	4017
Arcon	4016
Armstrong	4013
Asat	4016
Astra	4013, 4016, 4024
Astro	4019, 4020
AudioTon	4015
Bush	4012, 4014
Condor	4024

SAT (satellite receiver)	
Manufacturer	Control code
Conrad	4024
Cosat	4015, 4023
Crown	4013
Daewoo	4016, 4017, 4025
Diamond	4022
Dishnet	4008
Dual	4016
Echostar	4010, 4018, 4025
Einhell	4013, 4017, 4025
Elta	4015, 4017
Engel	4025
Eurosat	4013, 4022
Eurosky	4013, 4024
Eurostar	4024
Fagor	4015, 4023
Ferguson	4012
Fidelity	4030
Fracarro	4017
FTE	4025, 4030
Fuba	4017
Galaxis	4015, 4023
GE	4001, 4002
General Instruments	4003
GMI	4013
Grundig	4021, 4029, 4031
Hinari	4017
Hirschmann	4019, 4035
Hitachi	4036, 4037
Hughes Network Systems	4011
Huth	4013, 4015, 4024
Imperial	4014
Intertronic	4013
Intervision	4015, 4023, 4024
Johansson	4015
JVC	4009, 4021
Kathrein	4025
Kolon	4017
K-SAT	4025
Kyostar	4017
Lasat	4013, 4020, 4024
Lenco	4016, 4017, 4025
Lennox	4023
Loewe	4013
Lorenzen	4024
Macab	4022
Manhattan	4015, 4020, 4023
Maspro	4021, 4025
Matsui	4021
Mediamarkt	4013
Medion	4025
Metronic	4013, 4017, 4020
Micro Technology	4025
Minerva	4021
Morgan's	4013, 4015, 4025
Mysat	4025
Neuhaus	4019, 4023, 4024, 4025
Neusat	4025

SAT (satellite receiver)	
Manufacturer	Control code
Nikko	4013, 4025, 4027
Nokia	4033
Nordmende	4017, 4020
Oceanic	4022
Octagon	4016, 4017
Okano	4013
Optex	4015, 4023
Orbit	4016
Orbitech	4017, 4019
Pace	4012, 4026, 4031
Pacific	4022
Palladium	4013, 4017, 4021
Palsat	4019
Panasonic	4006, 4031
Panda	4024
Philips	4021, 4029
Phonotrend	4015, 4023
Predki	4017
Premier	4023
Primestar	4007
Proscan	4001, 4002
Protek	4022
Pye	4021
Quelle	4024
Radix	4035
RCA	4001, 4002
Roadster	4025
Rover	4025
Saba	4014, 4020, 4024, 4027
Samsung	4017
Satcom	4024
SatPartner	4017, 4020, 4027, 4030
Schneider	4029
Sedea Electronique	4017
Seemann	4013
SEG	4017, 4028
Seleco	4015, 4023
Skymaster	4025, 4034
Skyvision	4015
Sony	4005, 4031
Strong	4016, 4017, 4020
Sunstar	4013
Techniland	4015, 4023
TechniSat	4019
Teco	4013, 4016
Teleciel	4027
Telefunken	4017
Teleka	4013
Telemaster	4020
Telewire	4015, 4023
Tensai	4016
Thomson	4024, 4025
Thorens	4022
Tonna	4015, 4023, 4025
Toshiba	4004
Triasat	4019



## Controlling Other Components—Continued

SAT (satellite receiver)	
Manufacturer	Control code
Tristar	4016
Unisat	4013
Universum	4021, 4024
Vortec	4017
Wela	4025
Zehnder	4020
Zenith	4032

CBL (cable receiver)	
Manufacturer	Control code
ABC	3001, 3002, 3021
Archer	3006
Cabletime	3028, 3032
Cableview	3004
Contec	3009
Eastern	3010
GE	3001, 3002
Gemini	3011
General Instruments	3002, 3022
Grundig	3031
Hamlin	3012
Hitachi	3002
Jerrold	3002, 3011, 3013, 3021, 3022, 3023, 3026
Magnavox	3014
Memorex	3015
Movie Time	3016
NEC	3003
Nokia	3033
NSC	3016
Oak	3009
Panasonic	3020
Philips	3007, 3008, 3014
Pioneer	3017, 3024
Proscan	3001, 3002
RCA	3004, 3020, 3022
Realistic	3006
Sagem	3034
Salora	3029
Samsung	3017
Signature	3002
Sprucer	3020
Standard Component	3018
Starcom	3011, 3021
Stargate	3011
Tele+1	3030
Tocom	3013
United Cable	3021, 3023
Universal	3005, 3006
Videoway	3025
View Star	3009, 3014, 3016
Zenith	3019

VCR	
Manufacturer	Control code
Aiwa	2012, 2046, 2047
Akai	2003, 2004, 2022
Alba	2033, 2041, 2044, 2045, 2047
Anitech	2033
ASA	2034
Baird	2036
Bell & Howell	2007
Blaupunkt	2039, 2042
Bush	2033, 2041, 2044, 2045, 2047
Canon	2010, 2011
Carver	2014
Cimline	2033
Citizen	2008, 2009
Colortyme	2005
Craig	2008
Crown	2033
Curtis Mathes	2001, 2005, 2008, 2009, 2010, 2011, 2023, 2026
Cyrus	2034
Daewoo	2012
Dansai	2033
Decca	2034
Dimensia	2001, 2026
Dumont	2034, 2036, 2037
Elcotech	2033
Emerson	2003, 2010, 2012, 2022
ESC	2043
Ferguson	2035
Finlandia	2034, 2036
Finlux	2034, 2036, 2037
Firstline	2033, 2041
Fisher	2007, 2030, 2036
Fuji	2004, 2010, 2024
Funai	2012
Garrard	2012
GE	2001, 2002, 2008, 2010, 2011, 2023, 2025, 2026
GEC	2034
GoldHand	2033
GoldStar	2005, 2009
Goodmans	2031, 2033
Gradiente	2012
Graetz	2036, 2043
Granada	2030, 2034, 2036
Grandin	2033
Grundig	2029, 2033, 2034, 2039, 2040, 2042, 2044
Harman Kardon	2005
HCM	2033, 2044
Hinari	2028, 2033, 2043, 2044, 2047
Hitachi	2013, 2021, 2025, 2028, 2037, 2038, 2043
Ingersol	2028
Interfunk	2034
ITT	2030, 2036, 2043, 2048
JC Penney	2005, 2006, 2007, 2008, 2010, 2011, 2013, 2014, 2021

VCR	
Manufacturer	Control code
Jensen	2013
JVC	2005, 2006, 2007, 2009, 2032, 2035, 2040, 2048
Kaisui	2033
Kendo	2041, 2046
Kenwood	2005, 2006, 2007, 2009
Kodak	2010
Loewe	2028, 2034
Logik	2028, 2043
Luxor	2030, 2031, 2036
Magnavox	2010, 2011, 2014, 2019, 2020
Marantz	2005, 2006, 2007, 2009, 2010, 2014, 2031, 2034
Matsui	2028, 2041, 2046, 2047
Matsushita	2010
Memorex	2007, 2008, 2010, 2012, 2019, 2030, 2036
Metz	2039
MGA	2022
Minerva	2039
Minolta	2013, 2021
Mitsubishi	2013, 2022, 2032, 2034
Motorola	2010
MTC	2008
Multitech	2008, 2012, 2033
NEC	2005, 2006, 2007, 2009, 2032
Neckermann	2034
Nesco	2033
NOBLEX	2008
Nokia	2030, 2036, 2043
Nordmende	2048
Okano	2046
Olympus	2010
Optonica	2017
Orion	2028, 2041, 2045, 2046, 2047
Osaki	2033
Otto Versand	2034
Palladium	2033
Panasonic	2010, 2011, 2042
Pentax	2013, 2021, 2025, 2037
Pentax Research	2009
Philco	2010, 2011, 2014
Philips	2010, 2014, 2017, 2034, 2048
Phonola	2034
Pioneer	2006, 2013, 2032, 2034
Proline	2044
Proscan	2001, 2002, 2026
Pye	2034
Quasar	2010, 2011
Quelle	2034
Radio Shack	2017
Radio Shack/ Realistic	2007, 2008, 2010, 2011, 2012, 2017
Radiola	2034

## Controlling Other Components—Continued

VCR	
Manufacturer	Control code
RCA	2001, 2002, 2003, 2008, 2010, 2013, 2021, 2023, 2025, 2026, 2027
Realistic	2007, 2008, 2010, 2011, 2012, 2017
Rex	2048
Roadstar	2033, 2043
Runco	2019
Saba	2040, 2048
Saisho	2028, 2041
Salora	2030
Samsung	2008, 2043, 2049
Sansui	2006, 2032
Sanyo	2007, 2008, 2030, 2036
Saville	2047
SBR	2034
Schaub Lorenz	2036
Schneider	2033, 2034
Scott	2015
Sears	2007, 2010, 2013, 2021
SEG	2043
SEI	2028, 2034
Sharp	2016, 2017, 2031
Shintom	2004, 2033, 2036
Shorai	2028
Siemens	2034, 2036, 2039
Singer	2010
Sinudyne	2028, 2034
Sonorol	2030, 2031
Sony	2004, 2018, 2024
STS	2010, 2021
Sunkai	2046
Sylvania	2010, 2011, 2012, 2014
Symphonic	2012
Tandy	2007
Tatung	2034
Teac	2012
Technics	2010, 2042
Teknika	2010, 2012
Telefunken	2048
Thomson	2048
Thorn	2035, 2036
Toshiba	2013, 2015, 2022, 2034, 2048
Totevision	2008
Uher	2043
Unitech	2008
Universum	2034, 2039, 2043
Vector Research	2005, 2006
Video Concepts	2005, 2006, 2022
Wards	2008, 2010, 2012, 2013, 2017, 2021, 2027
XR-1000	2010, 2012
Yamaha	2005, 2006, 2007, 2009
Yoko	2043
Zenith	2004, 2019, 2024

TV	
Manufacturer	Control code
Admiral	1026, 1040, 1062
Akai	1002, 1067
Akura	1045
Alba	1035, 1043
Amplivision	1063
Amstrad	1035, 1067
Amtron	1009
Anam National	1003, 1009
Anitech	1035
AOC	1004, 1005, 1006
Arc en Ciel	1066
Arcam	1063
ASA	1040
Audiovox	1009
Autovox	1040, 1068
Baird	1069
Bang & Olufsen	1040
Baur	1036, 1054, 1055, 1058, 1059, 1068
Beko	1052
Bell & Howell	1010, 1017
Binatone	1063
Blaupunkt	1041, 1042, 1044, 1058, 1059
Boots	1063
Brionvega	1040
Bruns	1040
BSR	1048
Bush	1035, 1043, 1048, 1050, 1053, 1057
Cascade	1035
Celebrity	1002
Century	1040
Cimline	1035, 1043
Citizen	1004, 1006, 1009, 1017, 1022, 1025
Clatronic	1052
ColorTyme	1004, 1006
Condor	1052
Contec	1035
Contec/Cony	1007, 1009
Continental Edison	1066
Craig	1009
Crosley	1040
Crown	1009, 1014, 1035, 1052
Curtis Mathes	1001, 1004, 1006, 1010, 1017, 1022, 1025, 1034
Daewoo	1004, 1005, 1006, 1025, 1035, 1053
Daytron	1004, 1006, 1025, 1035
Decca	1067
Dimensia	1001, 1034
Dixi	1035
Dual	1057, 1068
Dumont	1004, 1039, 1040
Electroband	1002
Electrohome	1002, 1003, 1004, 1006, 1008
Elta	1035

TV	
Manufacturer	Control code
Emerson	1004, 1006, 1007, 1009, 1010, 1017, 1025, 1027, 1029, 1033, 1040, 1070
Envision	1004, 1006
Erres	1037
Europhon	1067
Fidelity	1068
Finlux	1039, 1040, 1067
Firstline	1035, 1043, 1048, 1049, 1063
Fisher	1010, 1017, 1052, 1063, 1068
Formenti	1040
Frontech	1045, 1062
Fujitsu	1070
Funai	1009, 1045, 1048, 1070
GE	1001, 1003, 1004, 1006, 1011, 1012, 1019, 1034
GEC	1038, 1063, 1067, 1069
Geloso	1035
Genexxa	1062
GoldStar	1004, 1005, 1006, 1007, 1008, 1025, 1047, 1063
Goodmans	1043, 1053, 1063
Gorenje	1052
Graetz	1062, 1069
Granada	1063, 1067
Grundig	1039, 1041, 1042, 1058, 1059, 1064
Hallmark	1004, 1006
Hanseatic	1060, 1068
Hantarex	1067
HCM	1035
Hinari	1035, 1043
Hitachi	1004, 1006, 1007, 1013, 1027, 1038, 1062, 1063, 1069
Huanyu	1053
ICE	1045, 1063
Imperial	1052
Infinity	1014
Inno Hit	1056, 1067
Interfunk	1055, 1062, 1066, 1069
Intervision	1045, 1063
ITT	1062, 1068, 1069
JBL	1014
JC Penney	1001, 1004, 1005, 1006, 1011, 1012, 1016, 1019, 1022, 1025, 1034
Jensen	1004, 1006
JVC	1007, 1012, 1013, 1015, 1033
Kaisui	1035, 1063
Kapsch	1062, 1069
Kathrein	1060
Kawasho	1002, 1004, 1006
Kendo	1043
Kenwood	1004, 1006, 1008
Kloss Novabeam	1009
Korting	1040
KTV	1009, 1025
LG	1005

## Controlling Other Components—Continued

TV	
Manufacturer	Control code
Loewe	1014, 1040, 1055
Luxman	1004, 1006
LXI	1001, 1006, 1010, 1014, 1016, 1017, 1034
M Electronic	1035, 1053, 1062, 1063
Magnadyne	1040, 1067, 1068
Magnafon	1067
Magnavox	1004, 1006, 1008, 1014, 1018, 1020
Marantz	1004, 1006, 1014, 1060
Matsui	1035, 1043, 1048, 1050, 1063, 1064, 1067, 1068
Megatron	1006
Memorex	1005, 1006, 1010, 1017, 1035
Metz	1040, 1051, 1058
MGA	1004, 1005, 1006, 1008
Minerva	1039, 1058, 1059, 1064
Mitsubishi	1004, 1005, 1006, 1008, 1040, 1055, 1058
Mivar	1047, 1056, 1067
Motorola	1003, 1026
MTC	1004, 1005, 1006, 1022, 1055
Multitech	1009, 1035
NAD	1006, 1016
NEC	1003, 1004, 1005, 1006
Neckermann	1040, 1041, 1054, 1059, 1060
Nikkai	1045
Nikko	1006
Oceanic	1062
Onwa	1009
Optonica	1021, 1026
Orion	1029, 1043, 1048, 1049, 1050, 1067, 1068
Osaki	1045, 1063
Otto Versand	1036, 1041, 1043, 1054, 1055, 1058, 1059, 1060, 1063
Palladium	1052
Panasonic	1003, 1012, 1014, 1031, 1044, 1046, 1051, 1061, 1062, 1069
Pathe Marconi	1066
Philco	1003, 1004, 1005, 1006, 1007, 1008, 1014, 1018, 1040
Philips	1003, 1004, 1007, 1008, 1014, 1018, 1019, 1020, 1037, 1038, 1040, 1053, 1059, 1060
Phoenix	1040
Phonola	1037, 1040
Pioneer	1004, 1006, 1027, 1062
Portland	1004, 1005, 1006, 1025
Price Club	1022
Prism	1012
Profex	1035
Proline	1049
Proscan	1001, 1034
Protech	1035, 1045, 1063
Proton	1004, 1006, 1007
Pye	1037


TV	
Manufacturer	Control code
Quasar	1003, 1012, 1031
Quelle	1036, 1039, 1054, 1055, 1058, 1059, 1068
Radio Shack	1010, 1017, 1034
Radio Shack/Realistic	1001, 1004, 1006, 1007, 1009, 1010, 1017, 1021, 1025
Radiola	1037
Radiomarelli	1040, 1067
RCA	1001, 1003, 1004, 1005, 1006, 1008, 1027, 1034
Realistic	1010, 1017, 1034
Rex	1045, 1062
RFT	1040
Roadstar	1035, 1045
Saba	1040, 1062, 1066, 1069
Saisho	1035, 1043, 1045, 1067, 1068
Salora	1062
Sambers	1056, 1067
Sampo	1004, 1006, 1025
Samsung	1004, 1005, 1006, 1007, 1008, 1022, 1025, 1035, 1045, 1047, 1052, 1056, 1060, 1063, 1065
Sansui	1029
Sanyo	1004, 1010, 1017
SBR	1037, 1038
Schaub Lorenz	1069
Schneider	1068
Scott	1004, 1006, 1007, 1009, 1070
Sears	1001, 1004, 1006, 1008, 1010, 1015, 1016, 1017, 1028, 1034, 1070
SEG	1045, 1063
SEI	1036, 1040, 1048, 1067, 1068
Seleco	1062
Sharp	1004, 1006, 1007, 1021, 1023, 1025, 1026
Shorai	1048
Siarem	1040, 1067
Siemens	1041, 1042, 1058, 1059
Singer	1040
Sinudyne	1036, 1040, 1043, 1067, 1068
Solavox	1062
Sonoko	1035
Sonolor	1062
Sony	1002, 1030, 1032, 1036, 1054
Soundesign	1004, 1006, 1009, 1070
Starlite	1009
Stern	1062
Sunkai	1043, 1048, 1049, 1050
Sylvania	1004, 1006, 1008, 1014, 1018, 1020
Symphonic	1009, 1028
Tandy	1026, 1062, 1063
Tashiko	1038, 1063
Tatung	1003, 1063, 1067
Tec	1063

TV	
Manufacturer	Control code
Technics	1012, 1044, 1061
Techwood	1004, 1006, 1012
Teknika	1004, 1005, 1006, 1007, 1009, 1022, 1025, 1031, 1070
Teleavia	1066
Telecaption	1024
Telefunken	1066
Teletech	1035
Teleton	1063
Tensai	1048
Thomson	1066
Thorn	1054, 1055, 1058
Toshiba	1010, 1016, 1017, 1022, 1024, 1039
Totevision	1025
Triumph	1067
Universal	1011, 1019
Universum	1045, 1052, 1058
Voxson	1040, 1062
Waltham	1063
Wards	1001, 1004, 1005, 1006, 1008, 1011, 1014, 1018, 1019, 1020, 1021, 1034, 1070
Watt Radio	1068
Wega	1040
Yamaha	1004, 1005, 1006, 1008
Yoko	1045, 1063
Zenith	1004

## Controlling Other Components—Continued

To control another component, point the remote controller at it and use the buttons as explained below (you must select the appropriate remote control mode first).

### Controlling a TV

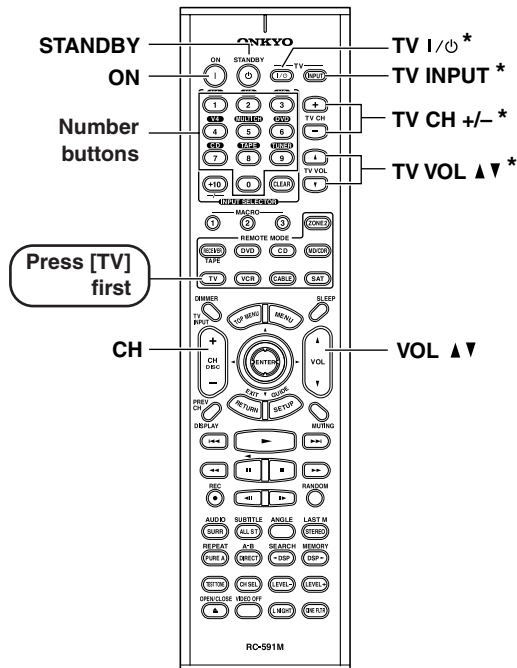

<b>[ON], [STANDBY]</b>	Set the TV to On or Standby
<b>TV [I/⏻]</b>	Turn the TV On or Off
<b>Number buttons</b>	Enter numbers
<b>[CH +/-]</b>	Select channels on the TV
<b>[TV INPUT]</b>	Select inputs on the TV
<b>VOL [▲]/[▼]</b>	Adjust the TV's volume


\* Buttons marked with an asterisk can always be used to control a TV regardless of the currently selected remote controller mode.

The following buttons control the AV Receiver.

[VOL]: Adjusts the volume of the AV receiver.

[MUTING]: Mutes the AV Receiver.

### Controlling a Cable Receiver

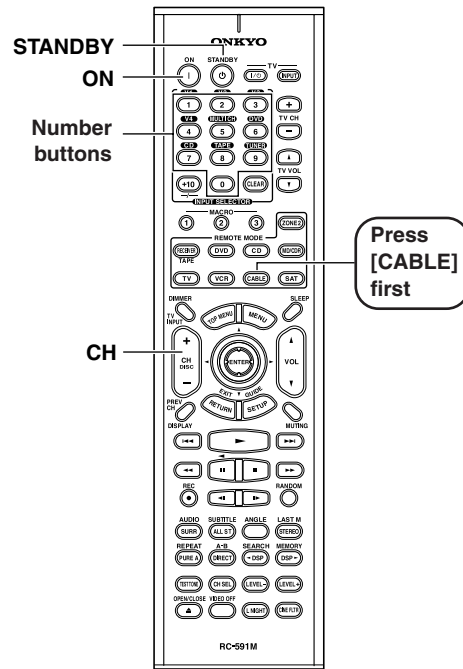

<b>[ON], [STANDBY]</b>	Set the cable receiver to On or Standby
<b>[CH +/-]</b>	Select cable channels
<b>Number buttons</b>	Enter numbers


The following buttons control the AV Receiver.

[VOL]: Adjusts the volume of the AV receiver.

[MUTING]: Mutes the AV Receiver.

## Controlling Other Components—Continued


### Controlling a VCR

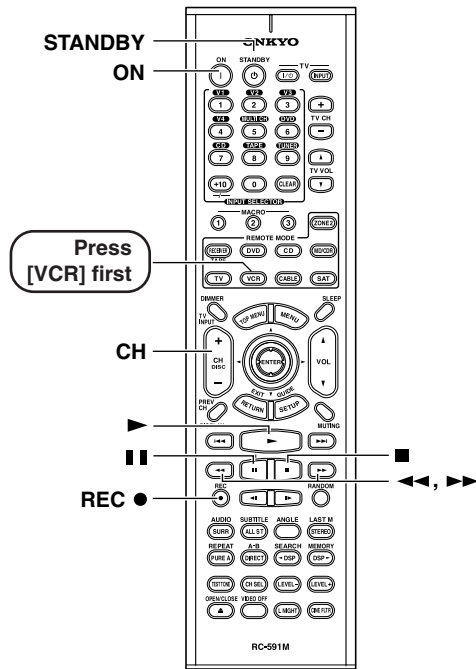

[ON], [STANDBY]	Set the VCR to On or Standby
[CH +/-]	Selects channels on the VCR
[▶]	Play
[■]	Stop
[◀◀]	Rewind
[▶▶]	Fast forward
[⏸]	Pause
REC [●]	Record

The following buttons control the AV Receiver.  
 [VOL]: Adjusts the volume of the AV receiver.  
 [MUTING]: Mutes the AV Receiver.

### Controlling a Satellite Receiver

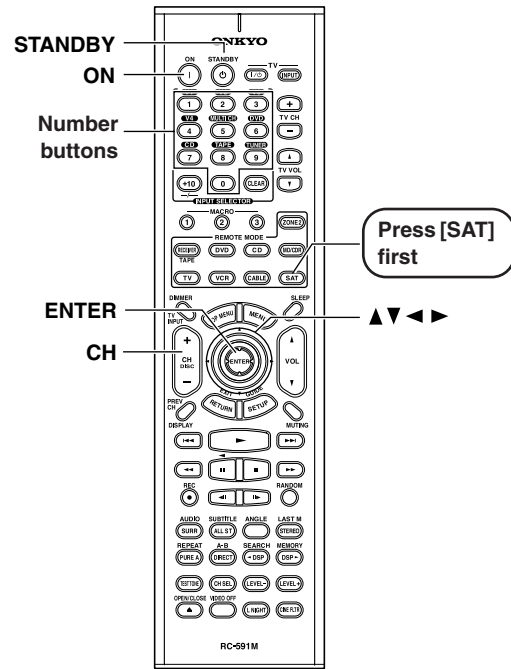

[ON], [STANDBY]	Set the satellite receiver to On or Standby
[CH +/-]	Select satellite channels
[▲]/[▼]/[◀]/[▶]	Select menu items
[ENTER]	Confirm selection
Number buttons	Enter numbers


The following buttons control the AV Receiver.  
 [VOL]: Adjusts the volume of the AV receiver.  
 [MUTING]: Mutes the AV Receiver.

## Controlling Other Components—Continued

### Learning Commands from Another Remote Controller

The AV receiver's remote controller can learn the commands of other remote controllers simply by pointing them at each other. For example, by transmitting the Play command from your CD player's remote controller, the remote controller can learn it and then transmit the same command when its Play [▶] button is pressed in CD mode.

This is convenient when you want to add commands to buttons after entering a remote control code (page 78).

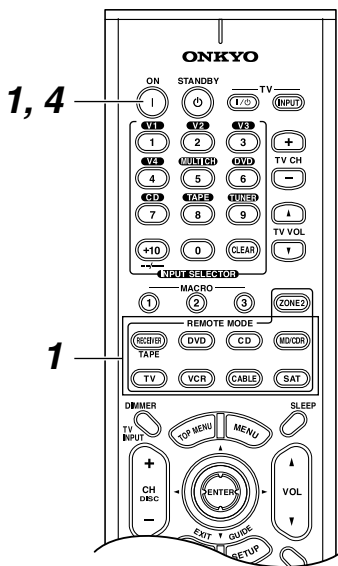


**1** While holding down the **REMOTE MODE** button that you want to learn the command, press the **[ON]** button.



**2** On the AV receiver's remote controller, press the button you want to learn the new command.

**3**

Point the remote controllers at each other, about 2 to 6 inches (5–15 cm) apart, and then, on the other remote controller, press the button whose command you want to learn.

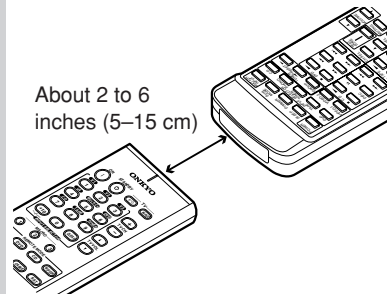

**4**

To teach the AV receiver's remote controller more new commands, repeat steps 2 and 3.

Press the [ON] button when you've finished.

#### Notes:

- The following buttons cannot be taught new commands: REMOTE MODE, MACRO [1], [2], [3], TV [I/⏻], TV [INPUT], TV CH [+]/[-], TV VOL [▲]/[▼].
- The AV receiver's remote controller can learn up to approximately 150 commands. However, the commands of some remote controllers may use a lot of memory, which will decrease the number of commands that can be learned.
- By default, the AV receiver's remote controller knows the commands for controlling an Onkyo CD player, cassette deck, DVD player, and MD player (e.g., Play, Stop, Pause, etc., buttons). These buttons can learn new commands, although the defaults will be restored if the remote controller is reset.
- To learn a new command for a button that has already learned one, simply repeat this procedure.
- Like most remote controllers, the AV receiver's remote controller uses infrared. Commands from remote controllers that don't use infrared cannot be learned.
- When the remote controller's batteries expire, all learned commands will be lost and will have to be learned all over again, so don't discard your other remote controllers.

## Controlling Other Components—Continued

### Using Macros


With the Macro function, you can program the remote controller's MACRO buttons to perform a sequence of actions with just one button press. For example, normally you need to perform the following actions to play a CD:

1. Press the REMOTE MODE [RECEIVER] button to select Receiver mode.
2. Press the [ON] button to turn on the AV receiver.
3. Press the [CD] INPUT SELECTOR button to select the CD input source.
4. Press the REMOTE MODE [CD] button to select the CD remote controller mode.
5. Press the Play [▶] button to start playback on the CD player.

With the Macro function, you can program one of the MACRO buttons to perform all five actions.

### Making Macros

There are three MACRO buttons, and each button can be programmed with a different macro in each remote controller mode. Each macro can perform up to eight actions.

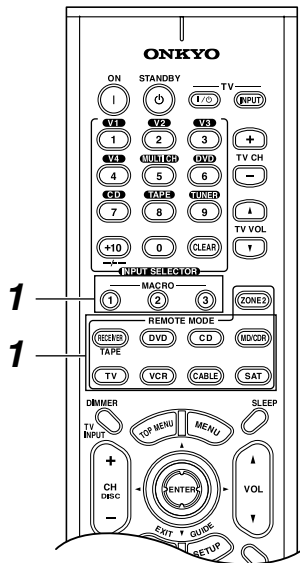

**1**



While holding down the REMOTE MODE button for the mode that you want to learn the macro, press MACRO button [1], [2], or [3].

The Remote indicator lights up.

**2**

On the remote controller, press the buttons whose actions you want to program into the macro in the order you want them performed.

For example, to program the previous CD example into a macro, press the following buttons: REMOTE MODE [RECEIVER], [ON], INPUT SELECTOR [CD], REMOTE MODE [CD], Play [▶].

**3**

When you've finished, press the MACRO button again.

#### Note:

If after programming a macro you teach one of the buttons in that macro a new command, then the macro will no longer work properly. In this case, you must program the macro again.

### Running Macros

Programmed macros can be run as follows.

**1**

Press the MACRO [1], [2], or [3] button.

The actions in the macro are performed in the order in which they were programmed.

# Specifications

## Amplifier Section

Power Output 2 channel driven:	North American: <b>90 W + 90 W</b> (8 $\Omega$ , 20 Hz–20 kHz, FTC) European: 125 W + 125 W (6 $\Omega$ , 1 kHz, DIN) Asian, Australian: 155 W + 155 W (6 $\Omega$ , 1 kHz, JEITA)
Dynamic Power	225 W + 225 W (3 $\Omega$ , Front) 175 W + 175 W (4 $\Omega$ , Front) 105 W + 105 W (8 $\Omega$ , Front)
THD (Total Harmonic Distortion)	0.08 % (Power Rated)
Damping Factor	60 (Front, 1 kHz, 8 $\Omega$ )
Input Sensitivity and Impedance	200 mV/47 k $\Omega$ (LINE)
Output Level and Impedance	200 mV/470 $\Omega$ (REC OUT)
Frequency Response	10 Hz–100 kHz/+1 dB-3 dB (Direct mode)
Tone Control	$\pm$ 10 dB, 50 Hz (BASS) $\pm$ 10 dB, 20 kHz (TREBLE)
SN Ratio	106 dB (LINEIHF-A)
Speaker Impedance	North American: 6 $\Omega$ – Others: 4 $\Omega$ –

## Video Section

Input Sensitivity/Output Level and Impedance	1 Vp-p/75 $\Omega$ (Component and S-Video Y) 0.7 Vp-p/75 $\Omega$ (Component Pb/Cb, Pr/Cr) 0.28 Vp-p/75 $\Omega$ (S-Video C) 1 Vp-p/75 $\Omega$ (Composite)
Component Video Frequency Response	5 Hz – 50 MHz

## Tuner Section

### ■ FM

Tuning Frequency Range	North American: 87.5 MHz– 107.9 MHz Others: 87.5 MHz– 108.0 MHz
Usable Sensitivity	Stereo: 17.2 dBf 2 $\mu$ V (75 $\Omega$ IHF) Mono: 11.2 dBf 1 $\mu$ V (75 $\Omega$ IHF)
S/N Ratio	Stereo: 70 dB (IHF-A) Mono: 76 dB (IHF-A)
THD	Stereo: 0.3 % (1 kHz) Mono: 0.2 % (1 kHz)
Frequency Response	30 Hz–15 kHz / $\pm$ 1 dB
Stereo Separation	45 dB (1kHz)

### ■ AM

Tuning Frequency Range	North American: 530 kHz–1710 kHz European: 522 kHz–1611 kHz Others: 530/522 kHz–1710/1611 kHz
Usable Sensitivity	30 $\mu$ V
S/N Ratio	40 dB
THD	0.70%

## General

Power Supply	North American: AC 120 V, 60 Hz Australian and European: AC 230-240 V, 50 Hz Others: AC 120/220-230 V, 50/60 Hz AC 230-240 V, 50 Hz AC 220-230 V, 50/60 Hz
Power Consumption	North American: 7A Others: 630 W
Stand-by Power Consumption	North American: 0.1 W European: 0.2 W Others: 0.5 W
Dimensions (W x H x D)	435 W x 174 H x 377 D mm 17-1/8" W x 6-7/8" H x 14-13/16" D inches
Weight	North American and European: 11.0 kg 24.3 lbs Others: 11.1 kg 24.5 lbs

### ■ Video Inputs

Component Video Input	1,2,3
S-Video Compatible Jack Input	DVD, VIDEO1, VIDEO2, VIDEO3, VIDEO4
A/V Input	DVD, VIDEO1, VIDEO2, VIDEO3, VIDEO4

### ■ Video Outputs

Component Video Output	OUT
S-Video Compatible Jack Output	MONITOR OUT, VIDEO1, VIDEO2
A/V Output	MONITOR OUT, VIDEO1, VIDEO2

### ■ Audio Inputs

Digital Inputs	Optical: 4 Coaxial: 2
Analog Inputs	DVD(MULTICHANNEL), VIDEO1, VIDEO2, VIDEO3, VIDEO4, TAPE, CD
Multichannel Inputs	6

### ■ Audio Outputs

Digital Outputs	Optical: 1
Analog Outputs	TAPE, VIDEO1, VIDEO2, ZONE2
Subwoofer Pre Outputs	1
Speaker Outputs	9
Phones	1

### ■ Other Jacks

IR Input	1
12V Trigger Out	1

Specifications and features are subject to change without notice.



# Troubleshooting

If you have any trouble using the AV receiver, look for a solution in this section. If you can't resolve the issue yourself, contact your Onkyo dealer.

## Power

### Can't turn on the AV receiver?

- Make sure that the power cord is properly plugged into the wall outlet.
- Unplug the power cord from the wall outlet, wait five seconds or more, then plug it in again.

### The AV receiver turns off as soon as it's turned on?

- The amp protection circuit has been activated. Remove the power cord from the wall outlet immediately and contact your Onkyo dealer.

## Audio

### There's no sound, or it's very quiet?

- Make sure that all audio connecting plugs are pushed in all the way (page 21).
- Make sure that the inputs and outputs of all components are connected properly (page 21).
- Make sure that the polarity of the speaker cables is correct, and that the bare wires are in contact with the metal part of each speaker terminal (page 23).
- Make sure that the input source is properly selected (page 53).
- Make sure that the speaker cables are not shorting.
- Check the volume. It can be set to MIN, 1 through 99, or MAX (page 53). The AV receiver is designed for home theater enjoyment. It has a wide volume range, allowing precise adjustment.
- If the MUTING indicator is shown on the display, press the remote controller's [MUTING] button to unmute the AV receiver (page 54).
- While a pair of headphones is connected to the PHONES jack, no sound is output by the speakers (page 54).
- Check the digital audio output setting on the connected device. On some game consoles, such as those that support DVD, the default setting is off.
- With some DVD-Video discs, you need to select an audio output format from a menu.
- If your turntable doesn't have a built-in phono preamp, you must connect one between it and the AV receiver. If your turntable uses an MC cartridge, you must connect an MC head amp, or an MC transformer and phono equalizer.
- Make sure that none of the connecting cables are bent, twisted, or damaged.
- Not all listening modes use all speakers (page 62).

- Specify the speaker distances (page 49) and adjust the individual speaker levels (page 50).
- Make sure that the speaker setup microphone is not still connected.

### Only the front speakers produce sound?

- When the Stereo listening mode is selected, only the front speakers and subwoofer produce sound.
- When the Direct or Pure Audio (not all models) listening mode is selected, only the front speakers produce sound.
- Make sure the speakers are configured correctly (page 46).

### Only the center speaker produces sound?

- If you use the Pro Logic IIx Movie or Pro Logic IIx Music listening mode with a mono source, such as an AM radio station or mono TV program, the sound is concentrated in the center speaker.
- Make sure the speakers are configured correctly (page 46).

### The surround speakers produce no sound?

- When the Stereo, Direct, or Pure Audio (not all models) listening mode is selected, the surround speakers produce no sound (page 62).
- Depending on the source and current listening mode, not much sound may be produced by the surround speakers. Try selecting another listening mode.
- Make sure the speakers are configured correctly (page 46).

### The center speaker produces no sound?

- When the Mono or Stereo listening mode is selected, the center speaker produces no sound (page 62).
- Make sure the speakers are configured correctly (page 46).

### The surround back speakers produce no sound?

- The surround back speakers are not used with all listening modes. Select another listening mode (page 62).
- Not much sound may be produced by the surround back speakers with some sources.
- Make sure the speakers are configured correctly (page 46).

## Troubleshooting—Continued

### The subwoofer produces no sound?

- When you play source material that contains no information in the LFE channel, the subwoofer produces no sound.
- Make sure the speakers are configured correctly (page 46).

### There's no sound with a certain signal format?

- Check the digital audio output setting on the connected device. On some game consoles, such as those that support DVD, the default setting is off.
- With some DVD-Video discs, you need to select an audio output format from a menu.
- Depending on the input signal, some listening modes cannot be selected (page 61).

### Can't select the DTS-ES Discrete/Matrix listening modes?

- These modes cannot be selected when no surround back speakers are connected, or the Zone 2 speakers are being used.
- You can not always select all of the listening modes, depending on the number of the speaker connected (page 61).

### Can't get 6.1 playback?

- If no surround back speakers are connected, or the Zone 2 speakers are being used, 6.1 playback is not possible.
- You can not always select all of the listening modes, depending on the number of the speakers connected (page 61).

### The volume cannot be set to 99?

- When the levels of all speakers have been calibrated (page 50), the maximum volume setting may change.

### Noise can be heard?

- Using cable ties to bundle audio cables with power cords, speaker cables, and so on may degrade the audio performance, so don't do it.
- An audio cable may be picking up interference. Try repositioning your cables.

### The Late Night function doesn't work?

- Make sure the source material is Dolby Digital (page 64).

### The DVD analog multichannel input doesn't work?

- Check the DVD analog multichannel input connections (page 29).
- To select the DVD analog multichannel input, press the [MULTI CH] input selector button.
- Check the audio output settings on your DVD player.

### About DTS signals

- When DTS program material ends and the DTS bitstream stops, the AV receiver remains in DTS listening mode and the DTS indicator remains on. This is to prevent noise when you use the pause, fast forward, or fast reverse function on your player. If you switch your player from DTS to PCM, because the AV receiver does not switch formats immediately, you may not hear any sound, in which case you should stop your player for about three seconds, and then resume playback.
- With some CD and LD players, you won't be able to playback DTS material properly even though your player is connected to a digital input on the AV receiver. This is usually because the DTS bitstream has been processed (e.g., output level, sampling rate, or frequency response changed) and the AV receiver doesn't recognize it as a genuine DTS signal. In such cases, you may hear noise.
- When playing DTS program material, using the pause, fast forward, or fast reverse function on your player may produce a short audible noise. This is not a malfunction.

## Video

### There's no picture?

- Make sure that all video connecting plugs are pushed in all the way (page 21).
- Make sure that each video component is properly connected.
- If your video component is connected to a component video input, your TV must be connected to the component video output (page 26).
- On your TV, make sure that the video input to which the AV receiver is connected is selected.
- While the Pure Audio listening mode (not all models) is selected, the video circuits are turned off and the AV receiver outputs no video signals.

### The onscreen menus don't appear?

- Make sure that the video settings are correct (page 44).
- On your TV, make sure that the video input to which the AV receiver is connected is selected.

## Troubleshooting—Continued

### Tuner

#### Reception is noisy, FM stereo reception is noisy, or the FM STEREO indicator doesn't appear?

- Relocate your antenna.
- Move the AV receiver away from your TV or computer.
- Listen to the station in mono (page 56).
- When listening to an AM station, operating the remote controller may cause noise.
- Passing cars and airplanes can cause interference.
- Concrete walls weaken radio signals.
- If nothing improves the reception, install an outdoor antenna.

### Remote Controller

#### The remote controller doesn't work?

- Make sure that the batteries are installed with the correct polarity (page 13).
- Install new batteries. Don't mix different types of batteries, or old and new batteries (page 13).
- Make sure that the remote controller is not too far away from the AV receiver, and that there's no obstruction between the remote controller and the AV receiver's remote control sensor (page 13).
- Make sure that the AV receiver is not subjected to direct sunshine or inverter-type fluorescent lights. Relocate if necessary.
- If the AV receiver is installed in a rack or cabinet with colored-glass doors, the remote controller may not work reliably when the doors are closed.
- Make sure you've selected the correct remote controller mode (pages 14-19).
- When using the remote controller to control other manufacturers' AV components, some buttons may not work as expected.
- Make sure you've entered the correct remote control code.
- Make sure to set the same ID on both the AV receiver and remote controller (pages 72 and 73).

#### Can't control other components?

- If it's an Onkyo component, make sure that the **RI** cable and analog audio cable are connected properly. Connecting only an **RI** cable won't work (page 37).
- Make sure you've selected the correct remote controller mode (pages 14-19).
- If you connect an MD recorder or CD recorder to the TAPE jacks, be sure to make the necessary setting (pages 52 and 78).

- When learning commands, make sure that the transmitting ends of both remote controllers are pointing at each other.
- Are you trying to learn from a remote controller that cannot be used for learning? Some commands cannot be learned, especially those that transmit several instructions with a single button press.
- The wrong remote control code has been entered.
- The entered remote control code may not be correct. If more than one code is listed, try each one.
- With some AV components, certain buttons may not work as expected, and some may not work at all.
- To control Onkyo components, point the remote controller at the AV receiver.
- To control another manufacturer's component, point the remote controller at that component.

### Recording

#### Can't record?

- On your recorder, make sure the correct input is selected (e.g., digital or analog).

### Zone 2

#### Zone 2 has turned off?

- Was the Sleep function set? The Sleep function turns off Zone 2 as well as the AV receiver. To set the Sleep function for Zone 2 only, see page 76.

#### There's no sound?

- Only components connected to analog inputs can be played in Zone 2.

## Troubleshooting—Continued

### Others

#### The sound changes when I connect my headphones?

- When a pair of headphones is connected, the listening mode is set to Stereo, unless it's already set to Stereo, Direct, or Pure Audio (not all models). When you disconnect the headphones, the previous listening mode will be resumed.

#### The speaker volume cannot be set as required?

- When the Automatic Speaker Setup function is used, or the volume is adjusted on the onscreen setup menus, the maximum possible volume setting may change.

#### The speaker distance cannot be set as required?

- In some cases, corrected values suitable for home theater use may be set automatically.

#### The display doesn't work?

- The display is turned off when the Pure Audio (not all models) listening mode is selected.
- Actions are not displayed on the TV or projector that's connected to the COMPONENT VIDEO OUT.

#### How do I change the language of a multiplex source?

- Use the "a. Multiplex" setting on the "4. Audio Adjust" menu to select Main or Sub (page 69).

#### The functions Auto Power On/Standby and Direct Change don't work for components connected via .

- These functions don't work when Zone 2 is turned on.

The AV receiver contains a microcomputer for signal processing and control functions. In very rare situations, severe interference, noise from an external source, or static electricity may cause it to lockup. In the unlikely event that this happens, unplug the power cord from the wall outlet, wait at least five seconds, and then plug it back in again.

Onkyo is not responsible for damages (such as CD rental fees) due to unsuccessful recordings caused by the unit's malfunction. Before you record important data, make sure that the material will be recorded correctly.

Resetting the AV receiver to its factory defaults  
To reset the AV receiver to its factory defaults, turn it on and, while holding down the [VIDEO 1] button, press the [STANDBY/ON] button. "CLEAR" will appear on the display and the AV receiver will enter Standby mode.

The AV receiver uses a battery-less memory backup system in order to retain radio presets and other settings when it's unplugged or in the case of a power failure. Although no batteries are required, the AV receiver must be plugged into an AC outlet in order to charge the backup system.

Before disconnecting the power cord from the wall outlet, set the AV receiver to Standby.

## ONKYO CORPORATION

Sales & Product Planning Div. : 2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN  
Tel: 072-831-8023 Fax: 072-831-8124

### ONKYO U.S.A. CORPORATION

18 Park Way, Upper Saddle River, N.J. 07458, U.S.A.  
Tel: 201-785-2600 Fax: 201-785-2650 <http://www.us.onkyo.com/>

### ONKYO EUROPE ELECTRONICS GmbH

Liegnitzerstrasse 6, 82194 Groebenzell, GERMANY  
Tel: +49-8142-4401-0 Fax: +49-8142-4401-555 <http://www.eu.onkyo.com/>

### ONKYO EUROPE UK Office

Suite 1, Gregories Court, Gregories Road, Beaconsfield, Buckinghamshire, HP9 1HQ  
UNITED KINGDOM Tel: +44-(0)1494-681515 Fax: +44(0)-1494-680452

### ONKYO CHINA LIMITED

Units 2102-2107, Metroplaza Tower I, 223 Hing Fong Road, Kwai Chung, N.T., HONG KONG Tel: 852-2429-3118 Fax: 852-2428-9039  
<http://www.ch.onkyo.com/>

  
ONKYO  
HOMEPAGE  
<http://www.onkyo.com/>

D0504-1

SN 29343945

(C) Copyright 2005 ONKYO CORPORATION Japan. All rights reserved.



\* 2 9 3 4 3 9 4 5 \*