

COMPETENCE 5051 B

Build-In Oven

Operating Instructions

Your new appliance

Thank you for purchasing an AEG appliance, we are confident you will enjoy using the appliance and also find cooking easier.

To enable you to use your appliance effectively and safely, please read this instruction book carefully before installing or using the appliance, and retain for future reference.

If you require further assistance or advice, please contact our customer care Department either by letter or telephone.

Accessories

The following accessories are available as optional extras, please consult the AEG price list or contact your retailer.

Catalytic liners
Baking Sheet

Contents

Important Safety Information

Safety Instructions	4-6
Environmental Information	7
Technical Data	8

Description of the appliance

Control panel	9
Oven Accessories	10-11

Before use

Setting the time of day	12
Pre-cleaning before use	13

Electronic Clock

Minute minder	14
Automatic switch off	15
Automatic switch on and off	16

Oven

Controls	17
Cooking Functions	18
Shelf levels	19
Operating the Oven	19

Cooking Methods

Baking	20
Baking Tables	21-23
Hints and Tips for baking	23
Roasting	24
Roasting Tables	25
Grilling	26-27
Defrosting	28

Maintenance and Cleaning

Interior and External Cleaning	29
Hinged Grill	30
Care of Catalytic liners (Optional extra)	31
Replacing/refitting shelf support system	31
Replacing oven light/cleaning glass	31
Removing/refitting oven door	32

Something Not Working

33

Service

34

Guarantee Conditions

35

Important Safety Information

Important Safety Instructions

These warnings are provided in the interests of your safety. Ensure you fully understand them before installing or using the appliance. Your safety is of paramount importance. If you are unsure about the meaning of these warnings contact the Customer Care Department for assistance.

Installation

The oven must be installed according to the instructions supplied. Any electrical installation work must be undertaken by a qualified electrician/competent person.

This oven is heavy, care must be taken when moving it. Do not try to move the oven by pulling the door handles.

All packaging, both inside and outside the oven must be removed before the oven used.

It is dangerous to alter the specifications or modify the oven in any way. After installation please dispose of the packaging with due regard for safety and the environment.

Child Safety

This oven is designed to be operated by adults and children under supervision. Young children must not be allowed to tamper with the controls or play near or with the oven.

The oven and accessible parts become hot when the oven is in use. Keep children away until it has cooled.

During Use

Do not use this oven if it is in contact with water. Never operate it with wet hands.

Take great care when heating fats and oils as they will ignite if they become too hot.

This oven has been designed for cooking edible foodstuffs only, and must not be used for any other purposes.

Never place plastic or any other material which may melt in or on the oven.

Fruit juices dripping from an oven dish may leave marks on the enamel, which cannot be removed. Use a baking tray to protect the enamel.

Do not leave the grill pan handle in position when grilling and ensure oven gloves are used to remove and replace the handle, as it will become hot.

Always use oven gloves to remove and replace food in the oven.

Ensure that all vents are left unobstructed to ensure ventilation of the oven cavity.

Never line any part of the oven with aluminium foil. Do not allow heat proof cooking material, e.g. roasting bags to come into contact with oven elements because they may catch fire.

Always stand back from the oven when opening the oven door to allow any build up of steam or heat to release.

Stand clear when opening the drop down oven doors. Support the doors using the handles until fully open.

Do not place sealed cans or aerosols inside the oven. They may explode if they are heated.

Ensure that all control knobs are in the OFF position when not in use.

Do not stand on open oven doors.

Do not hang towels, dishcloths or clothes from the oven or its handles.

Important Safety Information

Cleaning and Maintenance

The oven is heavy and care must be taken when moving it.

This oven should be kept clean at all times. A build-up of fats or other foodstuffs could result in a fire, especially in the grill pan.

Do not leave cookware containing foodstuffs, e.g. fat or oil in the oven in case it is inadvertently switched on.

Always allow the cooling fan to cool the oven down before switching off at the wall prior to carrying out any cleaning/maintenance work.

Only clean this oven in accordance with the instructions given in this book.

Service

Repairs should not be carried out by inexperienced persons as this may cause injury or serious malfunction. This oven should only be serviced by an authorised AEG Service Engineer and only genuine approved spare parts should be used.

Environmental Information

Packaging

AEG is an environmentally conscious company, packaging materials are therefore kept to a minimum.

All transit packaging materials are environmentally compatible and can be reused. Wood is untreated. The cardboard boxes consist of between 80–100 % recycled paper. The sheeting is made out of polyethylene (PE) and the strapping of polystyrol (PS) which are pure hydrocarbon compounds and can be recycled. By treating and re-using them, raw materials can be saved and the volume of waste reduced.

Please dispose of the packaging with due care for the environment.

Old appliances

When disposing of your old appliance:

Make the appliance unusable by cutting off the cable, and remove any door catches to ensure small children cannot become trapped inside.

Help to keep your country tidy - use an authorised disposal site.

Important Safety Information

Technical Data – Competence 5051 B

Aperture Dimensions

Height	59.5 cm
Width	56.2 cm
Depth	56.3 cm

Internal Oven Dimensions

Height	33.0 cm
Width	45.0 cm
Depth	41.0 cm
Oven Capacity	61.0 ltr.

Oven Ratings

Oven Element	920 W
Grill Element	2600 W
Convection Fan	30 W
Oven Light	40 W
Cooling Fan	20 W
Total Rating	2500 W

Total Connected Load 2500 W


CE This appliance complies with the following EC Directives:
LVD (Low Voltage Directive) 73/23/EC dated 19. 02. 1973
EMC (Electromagnetic Compatibility) 89/336/EC dated 03. 05. 1989
(including amendment Directive 91/31/EC)

This appliance must be installed by a qualified competent person in accordance with existing rules and regulations.

If this appliance is not installed in accordance with the instructions supplied, the warranty will not be valid.

Description of the appliance

Control Panel

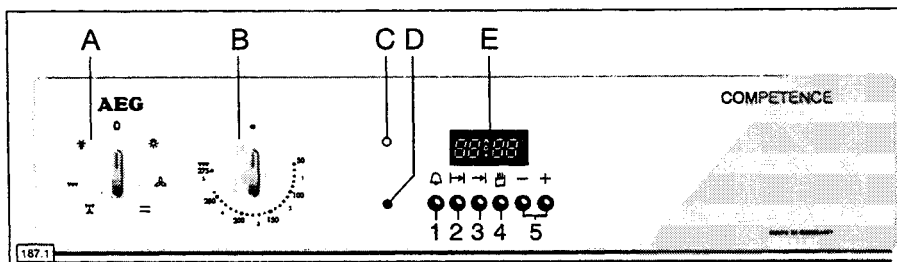

A. Cooking function selector for the oven

B. Temperature selector for the oven

C. Oven pilot light

D. Thermostat control light


E. Electronic timer with:

1. Minute minder.
2. Button to set the cooking duration.
3. Button to set end of cooking time.
4. Selector button for automatic or manual operation.
5. Time selection (increase and decrease) buttons.


Description of the appliance

Oven Accessories


Wire Shelf, large x 2

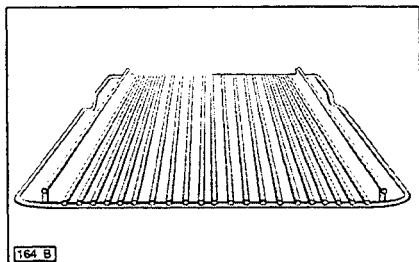


Meat Tin

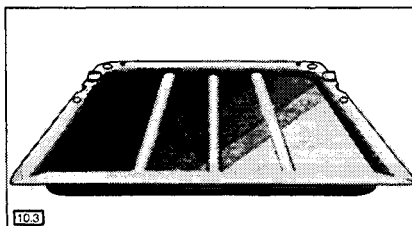


Grill Pan

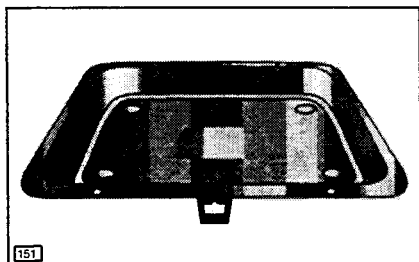


Grill Pan Grid

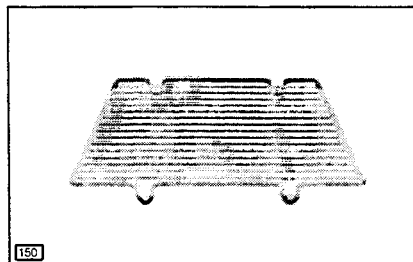

Grill Pan Handle

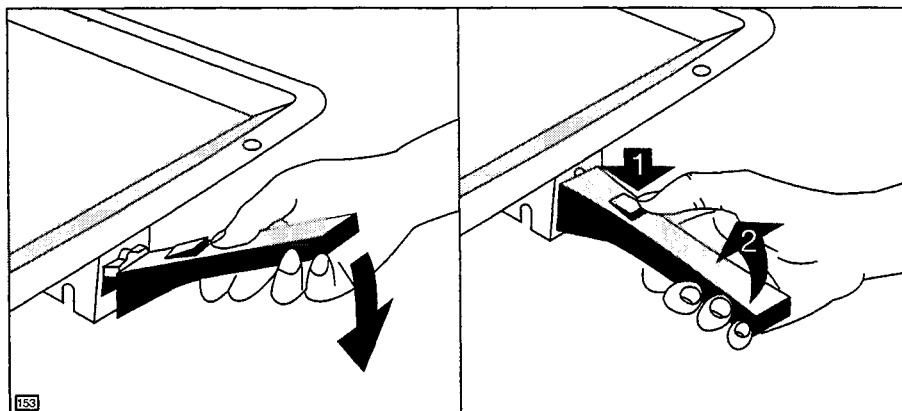

Anti-tip

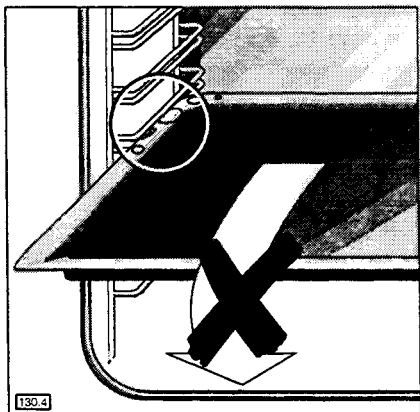

The wire shelves and meat tray are fitted with an anti-tip device, so that they cannot be pulled out completely by accident. Ensure that these are fitted correctly, with the shelf stoppers at the rear.

Before use

Before use


Ensure all packaging inside the oven has been removed.





Wipe down the front of the appliance with a damp cloth. Do not use caustic or abrasive cleaners, as these will damage the surface of the product (see maintenance and cleaning).

Before using the oven for the first time the oven should be pre-cleaned as described later in this section, however before this cleaning operation can be carried out the time of day must be set on the electronic timer.

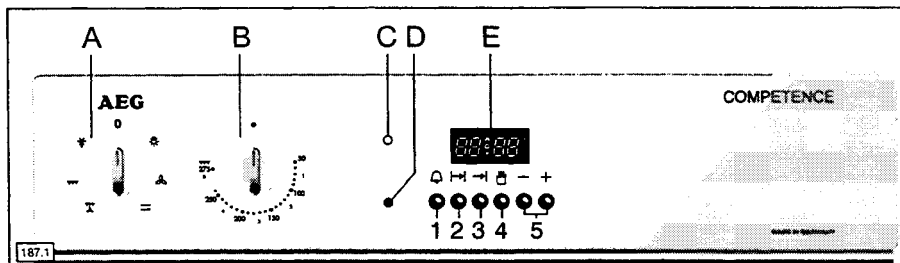Electronic timer – Setting the time of day


As soon as the appliance is switched on at the mains supply (and also after a power cut), the clock display will flash. Before the oven can be operated you will need to set the time of day.



1. Press buttons **2**  and **3**  simultaneously.
2. Press buttons **5**  or  until the correct time of day shows in the display.

Pre-cleaning the oven before use

Before using the oven for the first time all accessories (shelf supports, wire shelves etc) should be washed with warm soapy water (warm water with mild detergent), and the oven heated, empty for 1 hour to burn off any residue from the internal surfaces.

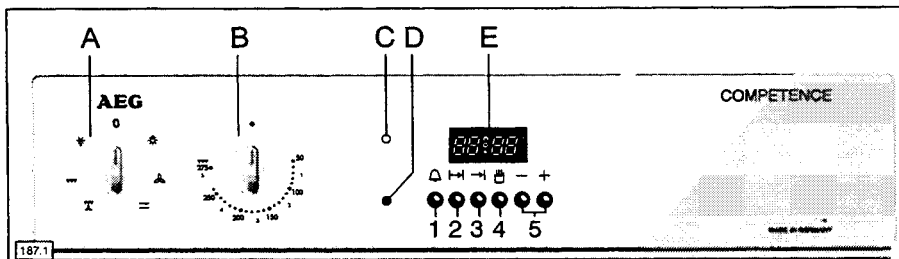

To burn off residue from internal surfaces

During this operation an unpleasant odour may be emitted, it is therefore advisable to open a window for ventilation.




1. Using function selector **A** select conventional cooking 
2. Turn the temperature selector to 250 °C.

 
When the oven has cooled, wipe down with a warm soapy water. Clean all the accessories and shelf supports in the same way.

Electronic Clock


Operating the Electronic Clock

To set the Minute minder

1. Press button **1**  and
2. Press buttons **5**  or  until the display shows the time required.

When the selected time has elapsed you will hear an audible signal (which will switch off automatically after approximately 2 minutes). To switch off the signal press button **1** . The display will show the time of day.

Programming the oven to switch off automatically

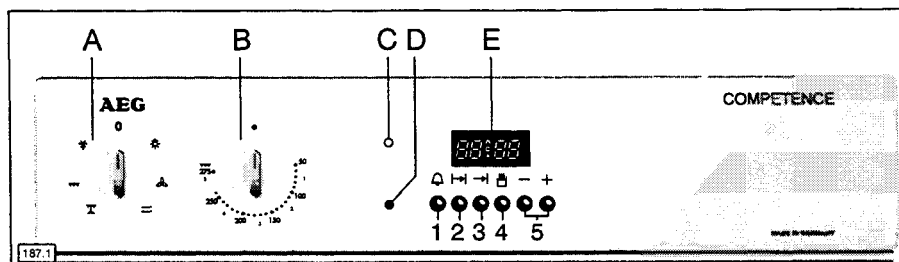

To programme the oven to switch off

1. Using function selector **A** select the required cooking function.
2. Set the required temperature using temperature selector **B**.
3. Press button **2** and enter the length of cooking time required with buttons **5** and .

The **"AUTO"** symbol will light up (**Automatic operation**) and the oven will switch on immediately, and will switch off automatically when the cooking time has elapsed.

At the end of the cooking period, the oven will switch off, the audible signal will sound and the **"AUTO"** symbol will flash. To switch off the audible signal press button **4** .

Press button **4** again to switch off the flashing **AUTO** symbol and return the oven to manual function.


Turn the function and temperature selector dials to the OFF position.

To cancel a programme

1. Press button **2** , and return the length of cooking time to zero using buttons **5** and .
2. Press button **4** to return the cooker to manual function.

Electronic Clock

Programming the oven to switch on and off automatically

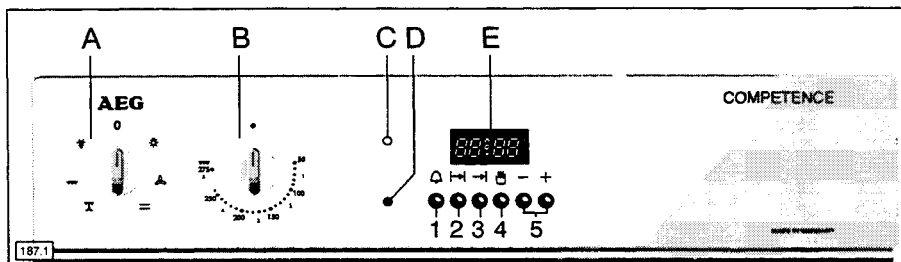

To programme the Oven to Switch on and off

1. Using function selector **A** select the required cooking function.
2. Set the required temperature using temperature selector **B**.
3. Press button **2** and enter the length of cooking time required with buttons **5** and .
4. Press button **3** and enter the required finish time with buttons buttons **5** and .

The symbol and the time of day will appear in the display.

The oven is now programmed to switch on and off automatically.

The oven pilot light will illuminate when the oven switches on and the thermostat control light will cycle on and off during cooking to show that temperature is being maintained.

At the end of the cooking period, the oven will switch off, the audible signal will sound and the symbol will flash. To switch off the audible signal press button **4** .


To return the oven to manual operation and switch off the flashing **AUTO** symbol press button **4** , and turn the function and temperature selector dials to the OFF position.

To cancel a programme

1. Press button **2** , and return the length of cooking time to zero using buttons **5** and .
2. Press button **4** to return the cooker to manual function.

Main Oven

Controls for the oven

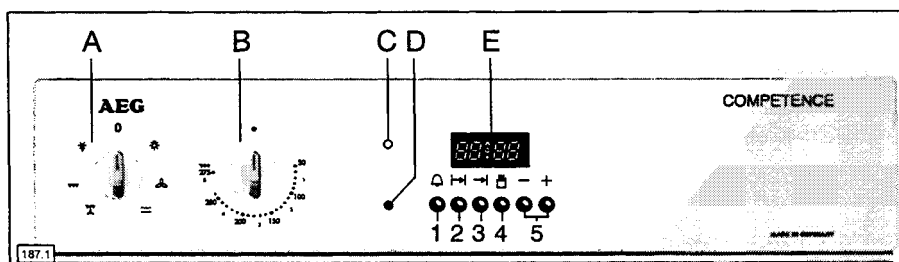

A. Cooking function selector

B. Temperature selector

C. Oven pilot light

D. Thermostat control light

E. Electronic timer for the oven with

1. Minute minder button
2. Button to set cooking duration time
3. Button to set end of cooking duration time
4. Selector button for automatic operation
5. Time selection (increase and decrease buttons).

Main Oven

Cooking Functions



Oven Lighting

The oven light will be on when the oven is in use, however you may select this function to illuminate the oven for cleaning purposes.



Ventitherm fan assisted cooking

A fan in the rear of the oven ensures that hot air is continuously circulated around the oven, allowing you to cook, bake and roast simultaneously. This cooking method uses lower temperatures than conventional cooking and is therefore highly energy efficient.



Conventional Cooking

This method of cooking uses the top and bottom element. To ensure a uniform distribution of heat, you should cook on one level only.



Rotitherm roasting

This cooking method combines the fan with the grill element. It replaces the rotisserie in your oven and is an excellent method of roasting meat and poultry on one level. It is also perfect for "au gratin" dishes.



Grilling

The heat source comes from the grill element mounted in the oven ceiling. This method of cooking is particularly suitable for grilling flat pieces of meat e.g. steaks, sausages, fish, or toast.




Defrosting


The fan operates without heat, circulating the air inside the oven increasing the speed of defrosting. It is particularly useful for delicate foods which could be damaged by heat such as cakes, butter, bread, fruit.

Shelf levels

The oven has shelf supports on either side, which provide 6 cooking levels. Please note that when using the cooking tables provided in this instruction book, the levels are counted from the top downwards.

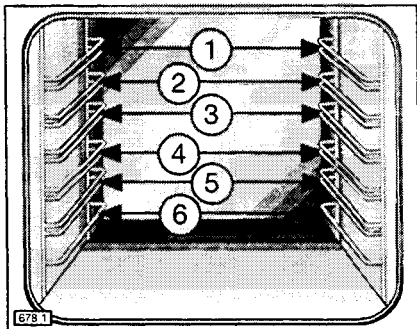

To Operate the Oven

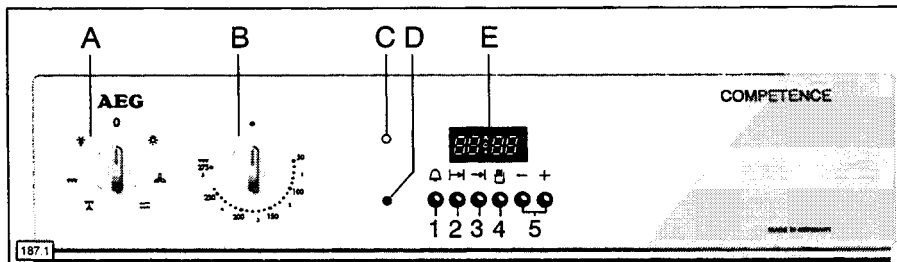

1. Turn the cooking function selector **A** to the required method of cooking.
2. Set the temperature with temperature selector **B**.

The oven pilot light will illuminate, and the oven thermostat control light will illuminate while the oven is heating up and will cycle on and off when the pre-selected temperature has been reached. It will continue to cycle on and off to show that the temperature is being maintained.

Pre-Heating

If pre-heating is required, set the temperature required. When the oven reaches the pre-selected temperature the thermostat light **D** will cycle on and off.

Cooking Methods

Baking

Bakeware


How bakeware affects browning:

1. Bakeware, which is dark in colour, has a non-stick coat or is made from aluminium absorbs more heat which is then transferred to the cake resulting in shorter cooking times, lower energy consumption and increased base browning.
2. Bakeware which is light in colour or is made of tin reflects the heat away resulting in longer cooking times and less base browning.

Shelf Levels

When using the following cooking charts please note that the shelf levels are counted from the top downwards.

Baking using the conventional cooking function (upper/lower elements) should be carried out on one shelf level only. When possible place cakes in trays in the centre of the shelf. If you are using two trays place the trays side by side on one shelf, the cooking times may have to be extended.

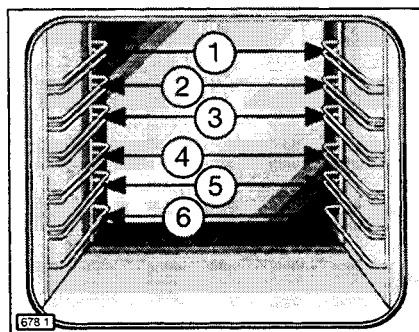

You can bake on two shelf levels at the same time when using the Ventitherm fan assisted cooking method. Check the progress of the upper baking tray and if necessary remove it from the oven earlier than the second one.

1 Baking tray
2 Baking trays

Use shelf level 4
Use shelf levels 3 and 5

Baking tables

You will find the temperatures, cooking times and shelf settings for a selection of foods/cakes in the tables.

Ranges are given for temperature and baking times as these will depend on the composition of the mixture, the quantity and the type of foods being baked.

When baking on two levels simultaneously, extend the baking time for the lower level by 5–10 minutes as necessary.

Moist cakes to be cooked (i.e. pizzas/cakes with fruit filling etc.) should only be baked on one shelf setting.

We recommend that you set the lower temperature when baking a dish for the first time and adjust the temperature as required e.g. for extra browning or if the baking time is too long.



If you are able to locate actual timings for a recipe of your own, use the temperatures given for a similar cake as a guide.

Switch off the oven 5–10 minutes before the end of the baking time (residual heat).

The tables apply for placing cakes in a cold oven, unless otherwise stated.

Cooking Methods

Baking with Ventitherm fan assisted or Conventional Oven

Type of Food	Ventitherm fan assisted 		Conventional 		Time for both types of heating
	Shelf Position (from top)	Temperature	Shelf Position (from top)	Temperature	
Using cake tins					
Cakes in Guelhopf tins	4	160-170	3	170-180	60-70
Cakes in loaf tins	4	150-160	3	160-170	1¼-1½ hr
Madeira cake	4	150-160	3	160-180	60-70
Dundee cake	4	130-140	3	140-150	2½-3 hr
Christmas cake (10")	4	130	3	130-140	4½-5 hr
Victoria sandwich	3 + 5	160-170	3	180-190	25-35
Pastry cases	4	170-180	3	210-220	10-25
Bakewell tart	4	160-170	3	180-190	45-55
Swiss roll	3	170-180*	3	200-220	10-15
Flans & quiches	4	170-180	3	180-200	30-50
Using baking sheets					
Shortbread	4	140-150	3	150-170	40-50
Biscuits	4	150-170	3	180-200	15-25
Macaroons	4	140-150	3	150-170	25-35
Apple strudel	4	170-180*	3	210-220	30-50
Choux pastry buns	4	170-180*	3	200-210	20-35
Buns/cup cakes	4	150-160*	3	190-210	25-35
Scones	4	190-200*	3	220-240	10-15
Meringues	4	75-100	3	100-120	3½-4½ hr
Sausage rolls	4	170-180*	3	210-220	20-35
Pizza	4	180-200	3	200-220	30-50
Bread					
Wholemeal bread	4	200-210*	3	220-240	30-40
White bread	4	200-210*	3	210-230	35-40
Desserts					
Apple pie	4	180-190	3	210-220	45-50
Rice pudding	4	130-140	3	150-160	2-2½ hr
Fruit crumble	4	160-170	3	170-190	50-70
Pineapple upside down cake	4	160-170	3	180-190	35-45
Pavlova	4	130-140	3	140-150	60-70
Baked custard	4	150-160	3	160-170	45-60
Baked apples	4	160-170	3	190-210	40-55
Bread and butter pudding	4	170-180	3	200-210	40-60
Apple charlotte	4	180-190	3	210-220	40-55
	4	170-180	3	200-210	40-60
	4	180-190	3	210-220	40-55
Souffle - sweet/savoury	4	170-190	3	210-220	30-45

Note:

The figures in bold indicate the best method to cook the food.

Select the lower temperature to start with, then select the higher one only if required.

* Pre-heat the oven

Soufflés and gratiné

	☐ Conventional Oven		☒ Rotitherm roasting		Length of Time in Mins
	Shelf Level (From Top)	Temperature	Shelf Level (From Top)	Temperature	
Pasta Bake Moussaka	5.	200–220	3.	160–170	45–60
Lasagne	2.	220–230	3.	160–170	25–40
Gratiné of vegetables	3.	220–230	3.	160–170	15–30
Gratiné Baguettes					
Toasted open Sandwiches	3.	230–240	3.	160–170	15–30
Sweet/Savoury Soufflés	3.	200–220	–	–	40–60
Fish Bake	3.	210–220	3.	160–170	30–60
Stuffed Vegetables	3.	220–250	3.	160–170	30–60

Hints and Tips on baking

Checking if the cake is cooked

Pierce the cake at its highest point through the centre with a wooden cocktail stick. If no mixture sticks to the wood, you can switch off the oven and use the residual heat to complete cooking.

The cake sinks

(becomes 'sad' – heavy and very moist in the centre)

Check your recipe. Next time use less liquid. Observe the mixing times, especially when using electric mixers use baking margarine or butter.

The cake is too light at the bottom

Use a dark baking tray or put the cakes at a lower level.

The cake is too dark at the bottom

Use a lighter reflective baking tray, or position at a higher level.

Cakes with moist toppings e.g. cheese cakes, or rich fruit cakes are not baked through.

Bake at a lower temperature and for longer.

Cooking Methods

Roasting

Roasting Utensils

You can use any heat resistant utensils or roasting pan for roasting. Attention should be paid to utensils with plastic handles that these are heat resistant.



Larger joints can either be placed directly into the roasting pan or on a wire grid tray in the roasting pan. Place small joints in a suitable smaller size dish or tin to help reduce fat splashings. The use of aluminium foil for most of the cooking time will also help to keep fat and juice splashes to a minimum. Remove for the last 30 minutes or so to increase browning if required.

Information on the roasting charts

Information on temperature settings, cooking times and shelf levels are given for the various types of meat. However, the cooking temperature and times are only intended as a guide, as much depends on personal preferences. Be prepared to adjust them to your own requirements.

We recommend that only pieces of meat and fish which are larger than 1 kg are roasted in the oven.

Roasting

Type of Food	Quantity	 Ventitherm fan assisted	Conventional Cooking	 Rotitherm	Time for all types of cooking in mins
		Shelf level (from top)	Upper/Lower Heating Shelf level (from top)	Roasting Shelf level (from top)	
		Tempera- ture	Tempera- ture	Tempera- ture	
Pork					
Shoulder					30-35 mins per 450 g plus
leg					30-35 mins over. For Roti-
rolled					therm roasting and joints
boned spare rib					of 2.5 kg and over eliminate
loin of pork					the additional 30-35 mins
Veal					
		4	3	3	
			190-210		
Lamb					
		4	3	3	
			190-210		
Beef Prime cuts:					
Rare		4	3	3	20/25 per 450 g + 20/25
Medium		4	3	3	30/35 per 450 g + 25/30
Well Done		4	3	3	35/40 per 450 g + 35/40
Inexpensive cuts		4	3	3	For Rotitherm roasting and joints of 2.5 kg eliminate the additional time.
Poultry/Game					
Chicken	1 kg	4	3	3	50-70
Chicken	1.5 kg	4	3	3	1 1/4-1 1/2 hr
Duck	1.5-2 kg	4	3	3	1 1/4-1 3/4 hr
Goose	3.5-5 kg	4 or 5	4 or 5	4 or 5	2 1/2-3 hr
Turkey	2.5-3.5 kg	4	4	4 or 5	1 1/2-2 hr
Turkey	4-6 kg	4 or 5	4 or 5	4 or 5	2 1/2-4 hr
Pheasant/rabbit/ wild duck	1 kg per	4	3	4 or 5	30-60
Partridge/pigeon	300-500 g	4	3	3	50-60
Fish					
Whole fish	1-1.5 kg	4	3 or 4	3	30-60
Fish pies/bakes	750 g-1 kg	4	3	3	15-45

The figures in bold indicate the best method to cook the food. Always use the fat filter when roasting. * Pre-heat oven

Cooking Methods

Grilling in the oven

To grill food place grill pan and wire grill tray on the second shelf level. Ensure the grill tray with the food on is not pushed too far towards the back of the oven.


Turn over pieces of meat or fish half way through the grilling time.

Grill Pan Handle

The grill handle must be removed whilst grilling. Failure to remove the grill handle will result in the handle overheating, this could result in damage to the handle, causing it to break. Always use oven gloves when removing or attaching the grill pan handle.

Inserting the handle

Lock the handle into the grip at the front of the pan. See illustration.

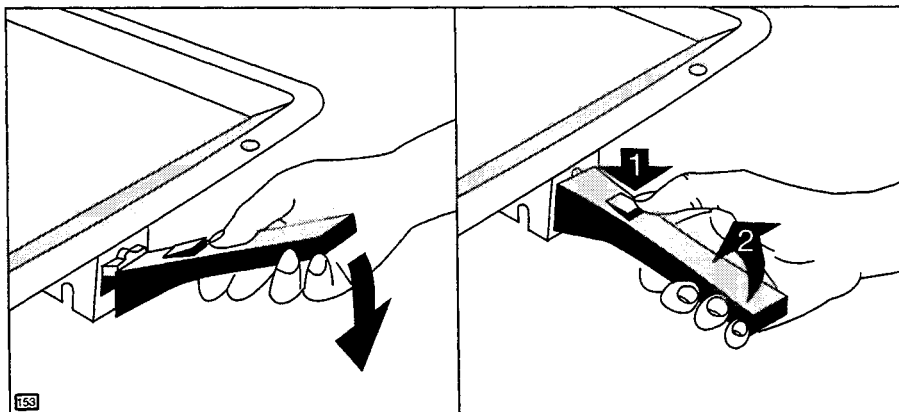



Ensure the handle is firmly attached.

Removing the handle

Press the button on the handle to release it. See illustration.

To grill in the oven

1. Using Cooking Function Selector A select grill 
2. Turn temperature selector B to , and then adjust as necessary during cooking.

Always grill with the oven door closed.

The grilling times are intended only as a guide and actual times will depend on the type and quality of the food to be grilled. Grilling is particularly suitable for flat pieces of fish and meat.

Food	Shelf Level (from top)	Grilling Time (Minutes)
Bacon rashers	2	2-3 each side
Beefburger	2	6-10 each side
Chicken joints	2	10-15 each side
Chops: lamb	2	7-10 each side
pork	2	10-15 each side
Fish: whole trout/herring	2	8-12 each side
fillet plaice/cod	2	4-6 each side
Kebabs	2	10-15 each side
Kidneys: lamb/pig	2	4-6 each side
Liver: lamb/pig	2	5-10 each side
Sausages	2	10-15 turn as required
Steaks: rare	2	3-6 each side
medium	2	6-8 each side
well	2	7-10 each side

Cooking Methods

Defrosting

The defrosting function allows you to defrost frozen foods. The oven fan operates without heat and circulates the air, at room temperature, inside the oven. This increases the speed of defrosting. This function is particularly suitable for delicate food which could be damaged by heat, e.g. cream filled gateaux, iced cakes, pastries, bread and other yeast products.

1. Using Function Selector A select defrost .
2. Use shelf level 4

Cover if necessary with transparent foil or parchment. Do not use plates or bowls to cover the food as this will increase the defrosting time.

Food	Defrosting time (Mins)	Standing Time (Mins)	Note
Chicken 1000 g	100–140	20–30	Place chicken on an inverted saucer on a large plate. Defrost open and turn at half time or defrost covered with foil.
Meat 1000 g	100–140	20–30	Defrost open and turn at half time or cover with foil.
Meat 500 g	90–120	20–30	As above
Trout 150 g	25–35	10–15	Defrost open
Strawberries 300 g	30–40	10–20	Defrost open
Butter 250 g	30–40	10–15	Defrost open
Cream 2 x 200 g	80–100	10–15	Defrost open (cream is easy to whip even if parts of it are still slightly frozen)
Cake 1400 g	60 min	60 min	Defrost open

The times quoted in the chart should be used as a guide only, as the speed of defrosting will depend on the kitchen temperature. For example, the colder the ambient temperature the longer the defrosting time.

Maintenance and Cleaning

Always allow the oven to cool, and switch off at the mains supply before carrying out any cleaning or maintenance.

Cleaning materials

Before using any cleaning materials on your cooker check that they are suitable and that their use is recommended by the manufacturer.

Cleaners that contain bleach should not be used as they may dull the surface finishes. Harsh abrasives, caustic cleaners or abrasive objects should also be avoided.

External Cleaning

Regularly wipe over the control panel, oven doors using a soft cloth and warm soapy water.

Oven Cavity

The enamelled oven cavity is best cleaned whilst the oven is still warm. Wipe the oven cavity after every use, with a soft cloth soaked in warm soapy water with a few squirts of vinegar added. However if the oven is cold and the soilage has become set, the following process (steam cleaning) will help to soften the splatters to help make cleaning easier.

Steam Cleaning

1. Place the grill/meat pan on the oven shelf positioned on the lowest runner.
2. Add a few drops of washing-up liquid to the pan and fill to about 12 mm with boiling water from the kettle.
3. Close the oven door and set the fan oven to 50 °C.
4. After 15 minutes, turn off the thermostat, and allow the fan oven to continue without heat (Cold defrost position) for a further 5 minutes, when the temperature of the water will have cooled down.
5. Carefully remove the pan of water from the oven and use normal oven cleaners to clean away soil residues.
6. Leave a little of the soapy water to soak into any burned on spillage on the floor of the oven for a longer time if necessary.

From time to time it may be necessary to carry out a more thorough cleaning, using a proprietary oven cleaner, please ensure you observe the manufacturer's directions.

Accessories

Rinse the accessories after every use and dry well. Soak for a short while to make cleaning easier.

Maintenance and Cleaning

Hinged Grill


The oven is fitted with a hinged grill element to enable access to the oven ceiling for cleaning.

Ensure the oven is isolated from the mains supply and all selector dials on the appliance are in the OFF position. Do not attempt to clean the roof of the oven unless the grill element is cold.

To Swing down grill element

1. Turn the 2 retaining hooks towards the centre of the oven.
2. Gently pull the grill downwards to allow access to the roof of the oven. (See illustration).
3. Clean the roof of the oven with a suitable cleaner and wipe dry.

Warning: Do not force the element downwards. Forcing the element may cause it to break.

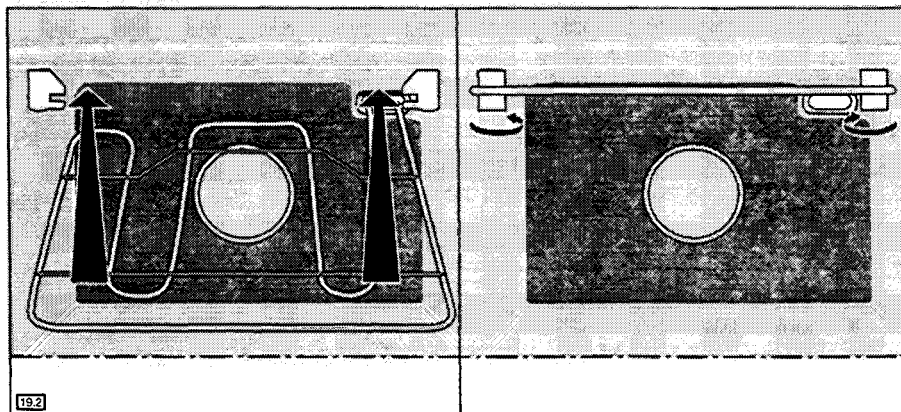

To refit the grill element

1. Push the element gently upwards.
2. Turn the retaining hooks 90 ° towards the back of the oven so that the element crossbar is secured between the retaining hooks:

Warning: The hooks must not be clipped over the element.

Care of Catalytic liners (Optional Extra)

The catalytic liners are self cleaning and will destroy splashes of food and fats while the oven is on. To aid this process and to ensure continued good performance of the liners, we recommend you run the oven, without food, once a week at 250°C for at least 1 hour.

IMPORTANT:


The steam cleaning process recommended for enamelled ovens must not be carried out if catalytic liners are fitted. Manual cleaning of the catalytic liners is not recommended, and damage will occur if oven sprays or abrasives of any kind are used.

Slight discoloration of the Catalytic surfaces may occur in time. This does not affect the Catalytic properties in any way.

Catalytic liners are available as an optional extra, please consult the AEG price list.

Shelf supports

The shelf supports can be removed to clean the side walls of the oven (refer to diagram).

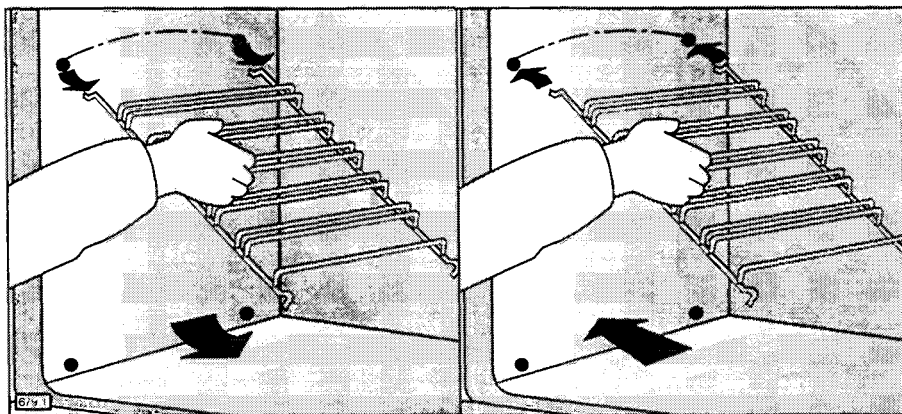

Hold the shelf support at the bottom, lift up towards the centre of the oven and unhook at the top. Reverse the procedure to fit.


Maintenance and Cleaning

Replacing oven light bulb and cleaning glass cover, in the main oven

Warning: Ensure the oven is isolated from the mains supply, before replacing the light bulb.

1. Place a cloth on the oven floor
2. Unscrew the glass cover clockwise
3. Clean the glass cover and replace the bulb if necessary
4. Replace the glass cover and remove the cloth from the oven


The replacement bulb must be **40 watt, 230 V, heat resistant to 300 °C**.
Replacement bulbs are available from your local service centre.

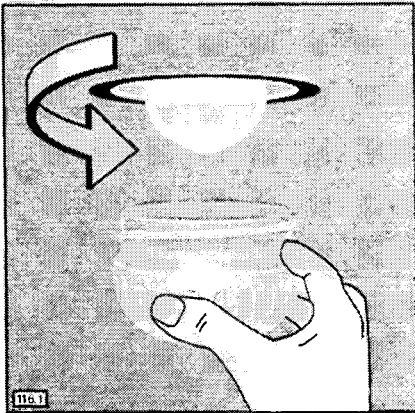

Removing the oven door

Removal


Fully open the door and lift both catches on the door hinges **(1)**.

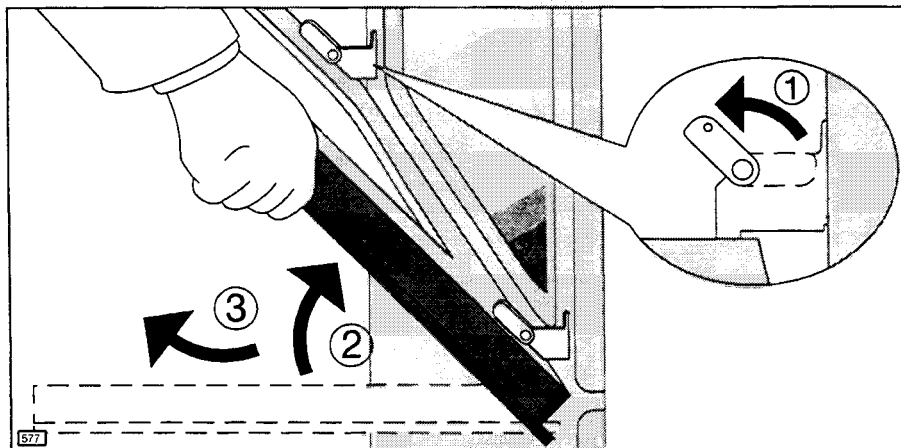

Hold the door by the sides (not by the door handle), lift in the direction that the door is closed **(2)** and pull out towards the front **(3)**.

Refitting

Hold the door by the sides (not by the door handle), slide in both hinges at an angle from above **(1)**. Fully open door downwards **(2)** and push back door catches.

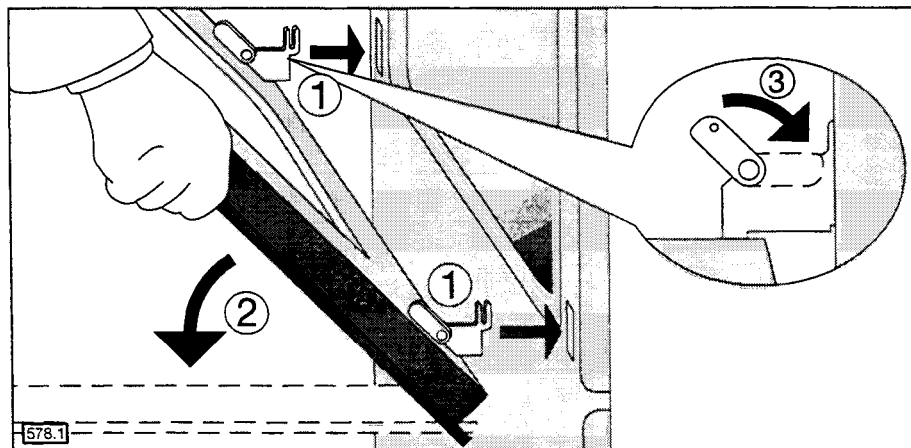

Something not working

Please carry out the following checks before contacting your local AEG service centre.

The oven cannot be switched on:

- Check there is an electrical supply to the oven
- Ensure the time of day has been set.
- Ensure the oven is in manual operation

The oven light fails to work:

- Check that there is an electrical supply to the oven
- Check the bulb in the oven and replace if necessary.

Service

If after carrying out the necessary checks there is still a fault with your appliance please contact your local AEG Service Centre.

In guarantee customers should ensure that the suggested checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for in-guarantee service calls.


Service & Spare Parts

If you require a service engineer or wish to purchase spare parts, contact your local AEG Service Centre, by telephoning

0990 234 234

Help us to help you

Please determine your type of enquiry before telephoning. When you contact us we need to know.

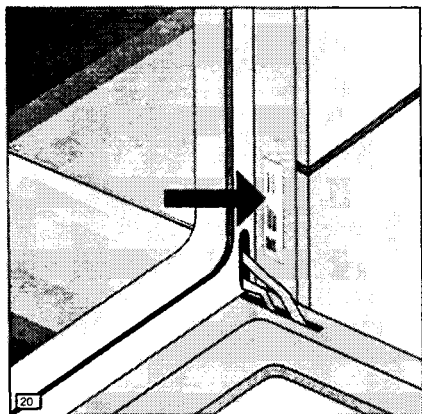

1. Your name, address and post code.
2. Your telephone number
3. Clear and concise details of the fault.
4. The model, production number and product identification number.
5. Date of purchase

This information can be found on the rating plate, so you have this number to hand we recommend you write it below.

KD - /
(Product Identification No.) (Date Code) (Production No.)

Customer Care

For general enquiries regarding your AEG appliance, or further information on AEG products please contact our customer care department.

Guarantee Conditions

AEG offer the following guarantee to the first purchaser of this appliance.

1. The guarantee is valid for 12 months commencing when the appliance is handed over to the first retail purchaser, which must be verified by purchase invoice or similar documentation.

The guarantee does not cover commercial use.

2. The guarantee covers all parts or components which fail due to faulty workmanship or faulty materials. The guarantee does not cover appliances where defects or poor performance are due to misuse, accidental damage, neglect, faulty installation, unauthorised modification or attempted repair, commercial use or failure to observe requirements and recommendations set out in the instruction book.

This guarantee does not cover such parts as light bulbs, removable glassware, dust bags or filters.

3. Should guarantee repairs be necessary the purchaser must inform the nearest customer service office (manufacturer's service or authorised agent). AEG reserves the right to stipulate the place of the repair (i.e. the customer's home, place of installation or AEG workshop).
4. The guarantee or free replacement includes both labour and materials.
5. Repairs carried out under guarantee do not extend the guarantee period for the appliance. parts removed during guarantee repairs become the property of AEG.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

© Copyright by AEG

H 259 246 740 – 04970.5/03 –

AEG Domestic Appliances Ltd
Customer Care Department
55-77 High Street
Slough
Berkshire SL1 1DZ
Telephone: 08705 350350