

INSTALLATION MANUAL



$\begin{array}{c} \textbf{Polaris}^{\text{TM}} \\ \textbf{Universal Projector Mount} \end{array}$

Model: MAG

Premier Mounts

3130 E. Miraloma Avenue Anaheim, CA 92806

Phone: (800) 368-9700 Fax: (800) 832-4888 mounts@mounts.com www.mounts.com







Table of Contents

Parts List	3 -
Installation Tools	3 -
Features	4 -
Selecting the Proper Mounting Hardware	4 -
Attaching the Mount	
Single Mounting Point Installation	
Ceiling Installation	
Concrete Mounting	6 -
Adjusting the Projector	
Troubleshooting Procedures	7 -
Technical Specifications	
Warranty	
Warning Statements	




Parts List

NOTE:

This mount is shipped with all proper installation hardware and components. Make sure that none of these parts are missing and/or damaged before beginning installation. If there are parts missing and/or damaged, please stop the installation and contact Premier Mounts (800-368-9700).

NOTE: Please review all WARNING and CAUTION statements (see Page 8) before beginning the installation of the MAG Mount.

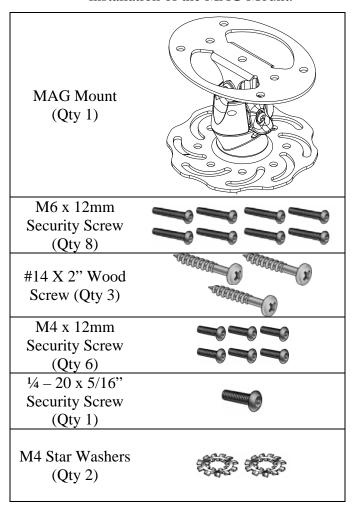

Mounting Legs (Qty 4)	
M3 Flat Washers (Qty 4)	
M5 x 12mm Security Screw (Qty 4)	
M3 x 16mm Security Screw (Qty 4)	
M2.5 x 8mm Security Screw (Qty 4)	
Plastic Barrel Caps (Qty 4)	

Installation Tools

Phillips Head Screw Driver Soft Material/ Blanket Tape Measure Ladder M3 Security Allen Wrench (Supplied) 1/8" Wood Drill Bit – Ceiling Installation (Commercially Available) Portable Drill
Pencil
Stud Finder (Commercially Available)
M5 Security Allen Wrench (Supplied)
Masonry Bit – Concrete Installation
(Commercially Available)

Installation Manual Page - 3 -




-B

Features

Congratulations on the purchase of your new Premier Mounts PolarisTM Universal Projector Mount. The projector mount can be configured for ceiling installations. The PolarisTM features our exclusive MagnaGuideTM Technology which assists the installer for quicker installation times and peace of mind.

- A Single Wooden Stud Mounting Points
- B Solid Structure Mounting Points
- C Ceiling Plate
- D M4 x 12mm Security Screw and Star Washer
- E MagnaGuideTM Upper Assembly
- F Barrel Cap
- G Leveling Barrel
- H Mounting Hardware
- I MagnaGuideTM-Lower Assembly
- J Projector Plate
- K M6 Square Nut
- L Locking Tab
- M Magnets
- N Radial GlideTM Set Screw
- O Mounting Leg

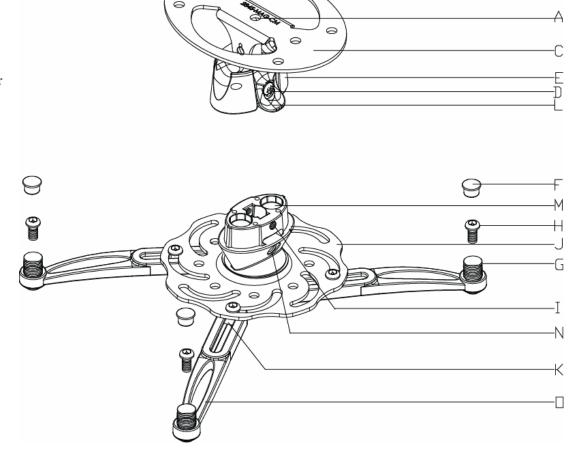

Selecting the Proper Mounting Hardware

- 1. Invert the projector and locate the mounting points.
- 2. Test each size of the screws provided.
- 3. The correct screws should thread easily into the mounting point and not pull out when pressure is applied.

WARNING: DO NOT OVERTIGHTEN YOUR MOUNTING SCREWS TO THE PROJECTOR CHASIS. USING THE INCORRECT SCREW DEPTH MAY CAUSE DAMAGE TO YOUR PROJECTOR.

Page - 4 - Installation Manual



Attaching the Mount

Unpack the MAG Mount and review any WARNING statements that apply to the installation. Select the desired location for the MAG Mount.




 Locate the mounting points on the bottom of the projector (see arrows above for mounting point recognition).
 NOTE: Projector mounting points will vary. The projector used in this manual is an example, and may not match yours exactly.



- 2. Attach the appropriate number of mounting legs to the projector using the appropriate mounting hardware (see Page 4, Selecting the Proper Mounting Hardware).
- 3. Do not tighten these screws completely at this time.



- 4. Align the projector plate to the mounting legs.
- Position the legs accordingly for best configuration. You
 may raise or lower each leg independently by turning the
 leveling barrels.

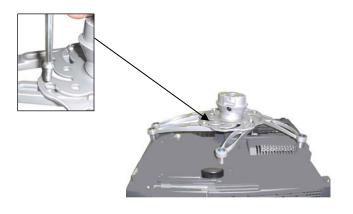


- 6. Secure the legs to the projector plate by screwing M6 x 12mm security screws into the M6 square nut (do not overtighten) on the mounting legs.
- 7. Tighten all security screws at this time.
- 3. Once the security screws have been tightened, place the plastic cap over each leveling barrel and firmly push the plastic cap into place.

Single Mounting Point Installation



If your projector has a $\frac{1}{4}$ -20 x 5/16" mounting point, please refer to the following three steps:

1. Determine where the mounting point is located.

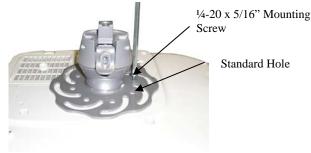

- 2. Place the projector plate over the mounting point.
- 3. Insert the $\frac{1}{4}$ -20 x 5/16" security screw.

NOTE: This screw will use a standard hole when mounting.

Installation Manual Page - 5 -



Ceiling Installation

1. Mounting Surfaces

<u>NOTE</u>: Use a 1/8" drill bit to pre-drill the mounting holes before securing the wood screws (supplied).

Wood studs: Where denoted with the letter 'A', mark these locations for wood stud installation.

NOTE: Use a masonry bit to pre-drill the mounting holes in the concrete surface.

Concrete surface: Where denoted with the letter 'B', mark these locations for concrete installation.

2. Use two (2) #14 x 2" wood screws (supplied) to attach the ceiling plate to the wooden ceiling stud.

NOTE: For extra security, attach a third wood screw to the middle mounting point (A).

 Slowly raise the projector toward the upper assembly. Once the projector is close to the upper assembly, MagnaGuideTM Technology will pull the lower assembly into the upper assembly and the locking tab will engage.

WARNING: THE MAGNETS ARE USED FOR GUIDING THE UNIT ONLY! PLEASE MAKE SURE THE TWO (2) M4 X 12MM SCREWS ARE USED TO SECURE THE PROJECTOR.

4. Attach the two (2) M4 x 12mm security screws and star washers that are located on each side of the locking tab.

<u>NOTE</u>: Do not release your hold on the projector until the upper and lower assemblies are engaged and the locking tab is in place.

NOTE: If you choose to use the center mounting point for added security, detach the lower assembly from the ceiling plate by removing the two (2) M6 x 12mm security screws, drive the wood screw in place and reattach the lower assembly and security screws.







Concrete Mounting

NOTE: The MAG can be mounted to a ceiling with a minimum 6" thickness. Concrete wedge anchors must be used for concrete installation. It is recommended that ¼" wedge anchors be used. A masonry bit must be used to drill the pilot hole. These items can be purchased at your local hardware store.

- 1. Begin by placing the ceiling plate into position against the ceiling, keeping it level.
- 2. Mark off four holes to be used for securing the mount and place the ceiling plate aside.
- 3. Next, drill holes using the appropriate masonry bit for your anchor.
- 4. Insert a concrete anchor into each hole.
- 5. If necessary, a hammer can be used to lightly tap each anchor into place so that they are flush with the ceiling.
- 6. Once all of the anchors are in place, move the ceiling plate back into position.
- 7. Attach the nut onto the threaded shaft that is protruding from the ceiling.
- 8. Do not tighten until all nuts are in place.

Page - 6 - Installation Manual



Adjusting the Projector


After the projector has been installed, the projector must then be adjusted. To adjust the projector:

- 1. Loosen the M5 set screw using the M5 Allen wrench (both sides).
- 2. Adjust the projector to the correct position. Firmly grasp the projector in both hands, and tilt either forward or backward to adjust the level.

-OR-

Firmly grasp the projector in both hands and rotate side to side for orientation adjustment.

3. Tighten both M5 set screws using the M5 Allen wrench.

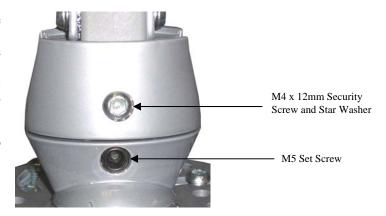

Troubleshooting Procedures

QUESTION: My projector mount must be set at an angle to be viewed properly on the ceiling, but the

projector will not hold at this position. Why is this?


ANSWER: The angle adjustments are not tight; they must be tightened.


QUESTION: What happens if the universal legs don't fit my projector?

ANSWER: Contact Customer Service and advise them of the situation.

Technical Specifications

All measurements are inches (mm).

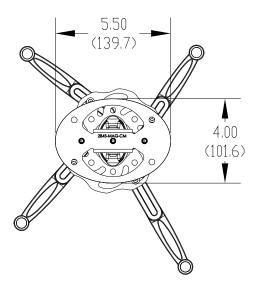

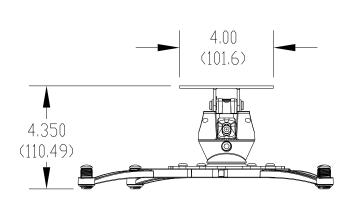

Installation Manual Page - 7 -



Warranty

Limited Lifetime Warranty

All Premier Mounts products carry a limited lifetime warranty from ship date against defects in materials and workmanship. Premier Mounts is not liable for improper installation that results in damage to mounts, adapters, display equipment or personal injury. Any modification to the existing mount will void the manufacturers' warranty.

DISCLAIMER OF WARRANTY.

THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Warning Statements

WARNING: PREMIER MOUNTS DOES NOT WARRANT AGAINST DAMAGE CAUSED BY THE USE OF ANY PREMIER MOUNTS

PRODUCT FOR PURPOSES OTHER THAN THOSE FOR WHICH IT WAS DESIGNED OR DAMAGE CAUSED BY UNAUTHORIZED ATTACHMENTS OR MODIFICATIONS, AND IS NOT RESPONSIBLE FOR ANY DAMAGES, CLAIMS, DEMANDS, SUITS, ACTIONS OR CAUSES OF ACTION OF WHATEVER KIND RESULTING FROM, ARISING OUT OF

OR IN ANY MANNER RELATING TO ANY SUCH USE, ATTACHMENTS OR MODIFICATIONS.

THE CEILING STRUCTURE MUST BE CAPABLE OF SUPPORTING 25LBS.. IF NOT, THE CEILING STRUCTURE MUST **WARNING:**

BE REINFORCED, PROPER INSTALLATION PROCEDURE BY A QUALIFIED SERVICE TECHNICIAN, AS OUTLINED IN THE INSTALLATION INSTRUCTIONS. MUST BE ADHERED TO, FAILURE TO DO SO COULD RESULT IN SERIOUS

PERSONAL INJURY, OR EVEN DEATH.

WARNING: SAFETY MEASURES MUST BE PRACTICED AT ALL TIMES DURING THE INSTALLATION OF THIS PRODUCT. USE

PROPER SAFETY GEAR AND TOOLS FOR THE INSTALLATION PROCEDURE TO PREVENT PERSONAL INJURY.

PRIOR TO THE INSTALLATION OF THIS PRODUCT, THE INSTALLATION INSTRUCTIONS SHOULD BE READ AND **WARNING:**

COMPLETELY UNDERSTOOD. THE INSTALLATION INSTRUCTIONS MUST BE READ TO PREVENT PERSONAL INJURY AND PROPERTY DAMAGE. KEEP THESE INSTALLATION INSTRUCTIONS IN AN EASILY ACCESSIBLE

LOCATION FOR FUTURE REFERENCE.

Indicates that the power plug is to be disconnected from the power outlet.

Contact Premier Mounts with any questions -Customer Service - (800) 368-9700 Technical Support - techsupport@mounts.com

Safety precautions must be taken at all times.

Warning and Caution statements.

Do not install on a structure that is prone to vibration, movement or chance of impact. Failure to do so could result in damage to the projector and/or damage to the mounting surface.

Do not install near heater, fireplace, direct sunlight, air conditioning or any other source of direct heat energy. Failure to do so may result in

damage to the projector and could increase the risk of fire. A qualified person should perform the installation procedure. Injury and/or damage can result from dropping or mishandling the projector

NORTH AMERICA

USA and Canada -Phone: 800-368-9700

Fax: 800-832-4888

EUROPE 3130 Fast Miraloma Avenue Swallow House Anaheim, CA 92806 USA

Shilton Industrial Estate, Shilton, Coventry, England CV79JY Phone: +44 (0) 2476 614700 Fax: +44 (0) 2476 614710

AUSTRALIA, NEW ZEALAND, OCEANIA (DISTRIBUTOR)

P.O. Box 295 Mordialloc Victoria 3195 Australia Phone: 039586 6330 www.premiermounts.com.au

 $Other\ Locations-Phone:\ (001)-714-632-7100;\ Fax:\ (001)-714-632-1044$

©Premier Mounts 2007 9530-001-011-07

Page - 8 -**Installation Manual**