





User's Guide

READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USE OF THE ELECTRON-IC REFERENCE DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PUR-CHASE RECEIPT TO THE DEALER FROM WHICH YOU PUR-CHASED THE ELECTRONIC REFERENCE AND YOUR PUR-CHASE PRICE WILL BE REFUNDED. ELECTRONIC REFER-ENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive licensed to use this ELECTRONIC REFERENCE. You may not make any copies of the ELEC-TRONIC REFERENCE or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or reexport, directly or indirectly, the ELEC-TRONIC REFERENCE without compliance with appropriate governmental regulations. The ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license

Now there's a fun way to make crossword puzzles less puzzling. With your Crossword Puzzle Solver you can ...

- find possible crossword answers when you know only a few letters
- find possible crossword answers when you know most of the letters
- find phrases when you know only one word or a few letters
- find more possible answers by changing one or more letters
- jumble letters to form words for games such as Scrabble[®].

The Crossword Puzzle Solver can't solve all your crossword puzzles, but by combining your knowledge with its crossword answer list from Merriam-Webster®, you will find many more answers than you find now.

Key Guide



Finds more possible answers.

Jumbles letters to form words.

Finds phrases that include entered word.

Stands for an unknown letter.

Stands for a series of unknown letters.

Turns Crossword on and off.

Clears to the Ready screen.

Stands for an unknown letter.

Stands for a series of unknown letters.

Enters a request.

Types a hyphen.

Darkens screen contrast at the Ready screen, scrolls up, or types an apostrophe. Lightens screen contrast at the Ready screen, scrolls down, or types a period. Erases a letter or scrolls left. Types a space or scrolls right. If you are using this product for the first time, follow these steps to install the batteries, turn the product on and adjust the screen contrast.

- 1. Turn the product over.
- 2. Use a small Phillips screwdriver to remove the screw to the battery cover and then remove the cover.
- 3. Place four AAA batteries inside the case, following the diagram.
- 4. Replace the battery cover.
- Press ON/OFF. A brief demonstration appears.
- 6. Press CLEAR to stop the demo. The Ready screen appears.
- 7. Press ▲ or ▼ repeatedly to adjust the screen contrast.

You can adjust the contrast only at the Ready screen.

$\sqrt{}$ Disabling the Demonstration

You probably do not want to view the demonstration every time you turn on this product. To disable the demonstration, type --*D* and then press **ENTER**. To re-enable it, do the same. You can find answers to crossword puzzles by filling in missing letters. Just type a ? for each unknown letter. To type a ?, press LETTER? or ?.

1. Type a word with ?'s.

C?M??N?E?

To erase a letter, press <

2. Press ENTER.

COMMANDER

- ŧ
- 3. Press ▼ to view more matches.
- 4. Press CLEAR when done.

The flashing arrows at the right of the screen show which arrow keys you can press to view more words.

$\sqrt{\text{About Automatic Shutoff}}$

Don't worry if you forget to turn your unit off. If no key is touched within two minutes, your unit will shut itself off. To find a series of missing letters in a word, type an asterisk. To type an asterisk, press **MATCH** or *****. There are more matches here because an asterisk can be one letter or several letters.

1. Type a word with *'s.

C*M*R

2. Press ENTER.

CABINETMAKER

- 3. Press ▼ to view more matches.
- 4. Press CLEAR when done.

$\sqrt{\mathrm{Tips}}$ for Finding Words

- Use ?'s to find lists of words (e.g., to view four-letter words beginning with a z, enter Z???).
- Use both ?'s and *'s in a word (e.g., Z*K?). There is no need to type a ? next to a *.

If you don't find the answer you were looking for using the ? or ***** keys, try pressing **MORE**. Each time you press **MORE**, Crossword Puzzle Solver substitutes letters for the selected word.

1. Enter a word with ?'s or *'s and then press ENTER.

For example, enter SH?P?.

2. Press \checkmark to view the matches.



3. Press MORE.

cHOPS

The lowercase letter is the new letter.

- 4. Press ▼ to view the new matches.
- 5. Press MORE again.

 




6. Press CLEAR when done.

The Crossword Puzzle Solver can also search for phrases. You need to know only a few of the letters in the phrase. **NOTE**: Phrases take longer to find because the entire list of phrases from A to Z must be searched.

- 1. Type a word in a phrase (e.g. CAT).
- 2. Press PHRS.



3. Press \forall to continue searching.

CAT BURGLAR

4. Press CLEAR to stop.

$\sqrt{1}$ Typing Punctuation

At the Ready screen, you can type an apostrophe by pressing ▲ or a period by pressing ▼. **NOTE**: These punctuation marks cannot begin a word.

Jumbling Letters

Jumble rearranges the letters you enter to form words. It can help you with Scrabble[®], anagrams, and other word games.

1. Type letters or a word.



- 2. Press JUMBLE.
- Press ▲ or ▼ to choose the minimum word size (e.g., 4).
- 4. Press ENTER.





- 5. Press \checkmark to view the words.
- 6. Press CLEAR when done.

$\sqrt{}$ Cleaning, Storage, Problems

To clean, spray a mild glass cleaner onto a cloth and wipe the surface. Do not spray liquids directly on this product. Do not use or store this product in extreme or prolonged heat, cold, humidity, or other adverse conditions. It could damage its circuitry.

√ Customer Service

If you have a problem with this product, refer to the limited warranty. If you purchased your unit outside the United States, contact the place of purchase to obtain warranty or repair information.

Model CWP-206

•Size: 5.25 x 3.5 x 1 in. Weight: 4 oz LCD: 1 x 16 characters ISBN 1-59074-114-5

FOR HOME OR OFFICE USE

Copyrights, Trademarks and Patents © 2002 Franklin Electronic Publishers, Inc. Burlington, NJ 08016-4709 USA. All rights reserved. © 1981-1983 Merriam-Webster, Incorporated. All rights reserved. Merriam-Webster is a registered trademark of Merriam-Webster, Inc. U.S. PATENTS; 4,490,811; 4,830,618; 4,891,775; 5,113,340; 5,218,536; 5,203,705; 5,249,965; 5,396,606; 5,435,564; Euro.Pat .0 136 379 Patents Pending

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

IDS-28007-00 Rev.A

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES AND LIMITED REMEDY (A) LIMITED WARRANTY. FRANKLIN WARRANTS TO THE ORIGINAL END USER THAT FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVI-DENCED BY A COPY OF YOUR RECEIPT, YOUR FRANKLIN PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP THIS LIMITED WARRANTY DOES NOT INCLUDE DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLI-GENCE, MODIFICATION, UNSUITABLE ENVIRONMENT OR IMPROPER MAINTENANCE THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WILL BE REPAIR OR REPLACEMENT WITH THE SAME OR AN EQUIVALENT PRODUCT OF THE DEFECTIVE PORTION OF THE PROD-UCT. AT THE SOLE OPTION OF FRANKLIN IF IT DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THE DEFECTS AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY THIS REMEDY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WAR-RANTY, THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER LEGISLATED RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION. (B) DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY, EXCEPT FOR THE LIMITED WARRANTIES EXPRESSLY RECITED ABOVE. THIS FRANKLIN IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED. INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABLE QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING, THIS WAR-RANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY FRANKLIN AND DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES, NEITHER FRANKLIN NOR OUR DEALERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER. INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAM AGED DATA OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. OR THEY ARE OTHERWISE FORE-SEEABLE, WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY, OUR MAXIMUM AGGREGATE LIABILITY TO YOU, AND THAT OF OUR DEALERS AND SUPPLI-ERS. SHALL NOT EXCEED THE AMOUNT PAID BY YOU FOR THE FRANKLIN PRODUCT AS EVIDENCED BY YOUR PURCHASE RECEIPT, YOU ACKNOWLEDGE THAT THIS IS A REASONABLE ALLOCATION OF RISK. SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAM-AGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE REL-EVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES. THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN. (C) WARRANTY SERVICE: UPON DISCOVERING A DEFECT, YOU MUST CALL FRANKLIN'S CUSTOMER SERVICE DESK. 1-800-266-5626. TO REQUEST A RETURN MERCHANDISE AUTHORIZATION ("RMA") NUMBER, BEFORE RETURNING THE PROD-UCT (TRANSPORTATION CHARGE'S PREPAID) TO: FRANKLIN ELECTRONIC PUBLISHERS, INC. ATTN: SERVICE DEPARTMENT ONE FRANKLIN PLAZA BURLINGTON, NJ 08016-4907 IF YOU RETURN A FRANKLIN PRODUCT, PLEASE INCLUDE A NOTE WITH THE RMA.

YOUR NAME, ADDRESS, TELEPHONE NUMBER, A BRIEF DESCRIPTION OF THE DEFECT AND A COPY OF YOUR SALES RECEIPT AS PROOF OF YOUR ONLIGNAL DATE OF PURCHASE. YOU MUST ALSO WRITE THE RMA PROMINENTLY ON THE PACKAGE IF YOU RETURN THE PRODUCT, OTHERWISE THERE MAY BE A LENGTHY DELAY IN THE PROCESSING OF YOUR RETURN. WE STRONGLY RECOMMEND USING A TRACKABLE FORM OF DELIVERY TO FRANKLIN FOR YOUR RETURN.