

---

**CANDY**


---

**Washing machine**

**Instructions for use**

**CBL 140**

---

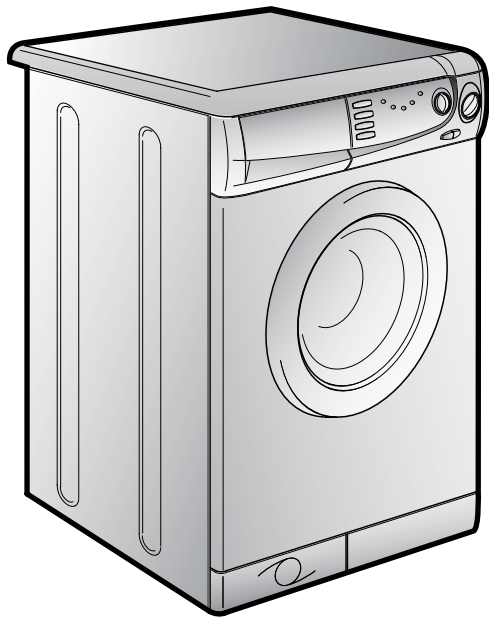

## Introduction

Please read these instructions for use carefully and all other information enclosed with the washing machine.

Keep all documentation in a safe place for future reference or for any future owners.

**Note: this machine is solely for domestic use.**

### Notes on disposal

All packaging material used is environmentally-friendly and recyclable. Please help dispose of the packaging via environmentally-friendly means.

**Your supplier or local council will be able to give you details of current means of disposal.**

Valuable materials can be salvaged from an old appliance via scrap reprocessing.

**Note: pull out the mains plug from any old appliance. Cut the power cable and dispose of it, together with the plug.**

When disposing of an old washing machine, please ensure that the door lock is rendered inoperable to prevent children shutting themselves in the appliance.

## Contents

## Page

Introduction	2
General delivery notes	4
Safety notes	4
<b>Quick start</b>	5
Useful advice for the user	6
Description of controls	7
Detergent drawer	11
Programme selector	12
The main wash	13
Programme Table	16
Detergents, washing aids and amounts to use	18
Cleaning and routine maintenance	20
Investigating malfunctions	22
Customer service + Guarantee	23
Technical data	24
<b>Setting up + installation</b>	25

**BEFORE SWITCHING ON THE APPLIANCE MAKE SURE IT IS CORRECTLY INSTALLED AND THAT THE TRANSIT BRACKETS ARE REMOVED AS SHOWN IN PAGE 25.**

## General delivery notes

Please check that the following items are delivered with the appliance:

- Instruction manual
- Certificate of guarantee
- Inlet hose
- Liquid detergent compartment
- 32 minute programme dosing scoop

Check that no damage has occurred during transit, and if so, call your nearest Authorised Technical Support Service agent (see Customer Service)

## Safety notes.

### Note: for cleaning or maintenance of the washing machine

- A) Pull out the plug
- B) Turn off the tap
- C) Candy equips all its appliances with earthing. Ensure that the mains supply is earthed, and if it is not, seek assistance from a qualified person.
- D) Do not touch the appliance when hands or feet are wet or damp. Do not use the appliance with bare feet.
- E) The use of adapters, multiple connectors and/or extensions is not recommended.

### Note: water temperature can reach 90°C during the wash cycle

- F) Check there is no water left in the drum before opening the door.
- G) Do not allow children or unauthorised persons to use the appliance without supervision.
- H) Do not pull the power cable or the appliance itself to remove the plug from the socket.
- I) The appliance must not be exposed to weather conditions (rain, direct sun, etc...)
- L) When moving the appliance never lift it by the controls or by the detergent drawer. When in transit never rest the door against the trolley or transport the appliance without the polystyrene base.

### M) **N.B!**

If the appliance is installed on a carpeted floor ensure that the ventilation holes on the base of the appliance are not obstructed.

- N) If the appliance is not running properly or breaks down, switch it off, turn off the tap and do not tamper with the appliance.

Consult only the Authorised Technical Support Service for possible repair and ask them to use original spare parts.

Failure to comply with the above can compromise the safety of the appliance.

- O) If the appliance's power cable should ever need replacing, consult the Authorised Technical Support Service

## Quick start

### Washing

- Open the door with the special DOOR OPEN button "B" (Fig. 1, page 7)
- Select laundry and put it in the machine
- Close the door
- Put detergent in the compartments as indicated in the programme guide in this instruction manual
- Select programme

### Press additional function buttons (if required)

- Press the Start button (page 7)
- After few seconds the appliance starts working.

### After washing

- **The indicator light "end cycle" will go on.**
- **Wait for the door lock to be released (about 2 minutes after the programme has finished).**
- **Switch off the washing machine by pressing the Start button and turning the selector to OFF.**
- **Open the door and remove the laundry**

## Useful advice for users

Tips on using your domestic appliance in the most environmentally-friendly and economical way

### Do a full load in your washing machine

To prevent any possible waste of energy, water or detergent we recommend that you put a full load in your washing machine, not exceed the maximum loads shown below:

Cotton and linen	4,5 kg
Mixed	2 kg
Very delicate	1,5 kg
Wool	1 kg

Up to 50% energy saving can be made with one full load compared to two half load washes

### When is prewashing really needed?

Only with particularly dirty loads!


Energy savings of 5 to 15% are made by not selecting the prewash option for normal soiled laundry.

### Which wash temperature should you choose?

Using stain removers before machine washing reduces the need to wash at temperatures over 60°C.

Energy savings of up to 50% can be made by using a 60°C wash temperature rather than 90°C

## Description of controls

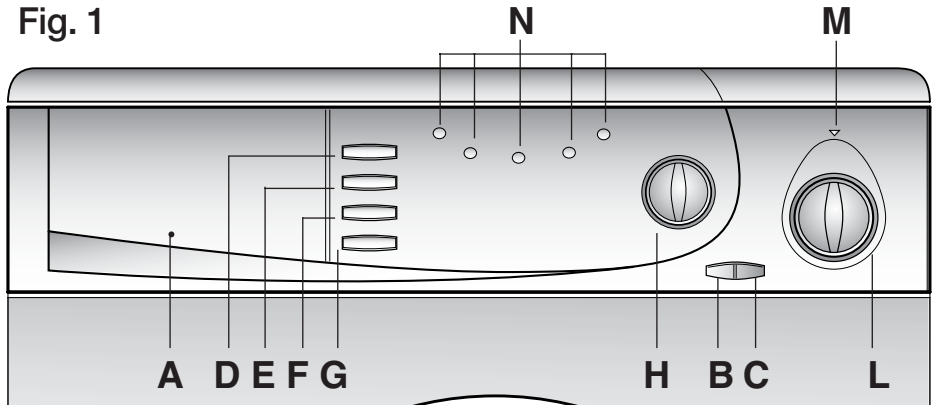

### Door open button **B**

A special safety device prevents the porthole from being opened immediately after the end of the cycle. **Wait for 2 minutes** after the wash cycle has finished before opening the door.

### Start button **C**

Press to start the selected cycle (according to the selected cycle one indicator lights will go on). **Note: When the START button has been pressed, the appliance can take few seconds before starts working.**

### Changing the settings after the programmes has started (Pause)

Once the programme has started the settings can only altered by pressing the relevant buttons. Release the START button.

The indicator lights time to end will flash, make your changes and press the START button once more.

If you wish to add or remove items during washing, release the START button and wait 2 minutes until the safety device unlocks the door.

When you have carried out the manoeuvre, close the door, press START button and the appliance will continue working where it left off.

### Cancelling a selected programme

The programme can be cancelled at any time in the following way:

Release the START button

Turn the selector knob first to the OFF position and then away from it

Wait around 5 seconds

The machine will be ready for another programme or to be switched off.

### ATTENTION:

The door cannot be opened until the START button has been released

The machine **on indicator light** is illuminated when the on/off button is pressed.

**M**

### **Indicator lights showing which phase the programme is in**

Lights will come on to indicate the wash stage of the programme.

**N**

### **QUICK WASH button**

**D**

Pressing this button reduces the time of the wash programme by a maximum of 50 minutes depending on the programme and the temperature selected. The quick wash button can be used for washing loads of 1 to 4,5 kg. This option may only be utilised on cottons and synthetics programmes.

### **QUICK IRON button**

**E**

The Quick Iron function minimizes creases as much as possible with a uniquely designed anti-crease system that is tailored to specific fabrics.

**MIXED FABRICS** - the water is gradually cooled throughout the final two rinses with no spinning and then a delicate spin assures the maximum relaxation of the fabrics.

**DELICATE FABRICS** – final two rinses with no spinning and then the fabrics are left in water until it is time to unload. When you are ready to unload, press the Quick Iron button – this will drain and spin ready for emptying

**RESISTANT FABRICS AND WOOLLENS** - at the end of the final rinse, the fabrics are left in water until it is time to unload. When you are ready to unload, press the Quick Iron button – this will drain and spin ready for emptying

If you do not want to spin the clothes and activate drain only :

- ◆ release the START button
- ◆ turn the selector knob to the OFF position
- ◆ select programme drain
- ◆ wait around 5 seconds
- ◆ switch on the appliance again by pressing the START button

### **EXTRA RINSE button**

**F**

This function will allow an extra rinse or more water added at the rinse stage – depending on the programme selected. This is particularly important for avoiding skin irritation from detergent residues for people with particularly sensitive skin.

The extra rinse button is also recommended when washing heavily soiled fabrics, requiring the use of a lot of detergent, or when washing items made of towelling, whose fibres have a greater tendency to retain detergent.

### **STAIN BUSTER button**


**G**

This function which is available on all cotton programmes is very useful for heavy soiling. The temperature is kept constant throughout all the wash phases and the programme is extended to ensure an extra deep cleaning performance.


### **VARIABLE SPIN SPEED selector**

**H**

Can be turned in either direction

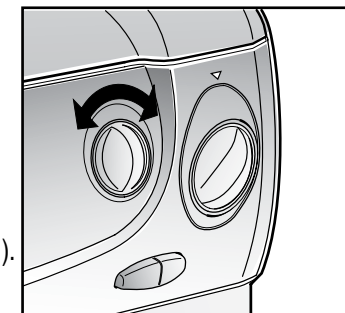

The spin stage plays a very important role in preparing the laundry for efficient drying and your model offers maximum flexibility to suit all your requirements.

The selector can be turned to reduce the maximum spin speed, right up to eliminating the spin completely (position  ). In programmes for mixed fibres, synthetics and delicates, the washing machine automatically lowers the spin speed.

In order not to damage fabrics, it is not possible to increase this spin speeds.

**Note: this model is fitted with an electronic device that checks the load is balanced correctly. If the load is slightly unbalanced the machine will re-balance it automatically to carry out the normal spin.**

**If, after several attempts, balance is not restored, a reduced spin speed will be used.**

**If loads are seriously unbalanced the spin stage will be cancelled.**

**This helps limit vibration, reduce noise output and improve the washing machine's lifespan.**

## PROGRAMME Selector with OFF position


L

### ROTATES IN BOTH DIRECTIONS

The On/Off indicator light will go on

The tables describe the washing programme on the basis of the number or symbol chosen.

N.B. To switch off the indicator light move the programme selector to the OFF position

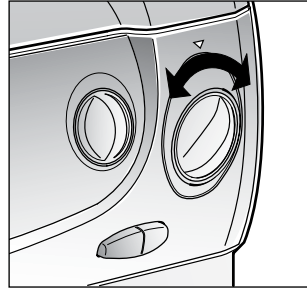


## Detergent drawer


A

The detergent draw is split into 4 compartments:

- the first, labelled "I", is for prewash detergent
- the second, labelled "II", is for main wash detergent

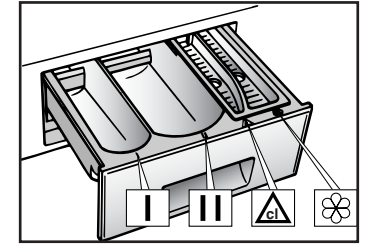

If liquid detergents are used, please insert the special container supplied into the compartment marked "II" in the detergent drawer. This ensures that the liquid detergent enters the drum at the right stage of the wash cycle.

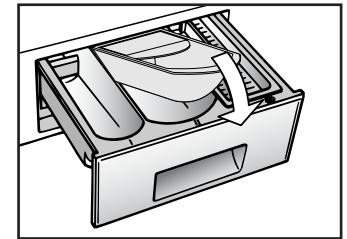

**Note: some detergents are difficult to remove. For these, we recommend you use the special dispenser which is placed in the drum.**

- the third, labelled "△", is for bleaching agents.

The machine is programmed to automatically take up the bleach during the first rinse in cotton cycles.

**Note: only put liquid products in the third and fourth compartments.**

- the fourth, labelled "⊗" is for special additives, fabric softeners, fragrances, starch, brighteners etc.

The machine is programmed to automatically take up additives during the final rinse stage for all wash cycles.

## Programme selector

For the various types of fabrics and various degrees of dirt the washing machine has 4 different programme bands according to: wash cycle, temperature and length of cycle (see table of washing cycle programmes).

### 1 Resistant Fabrics COTTONS

The programmes have been designed for a maximum wash and the rinses, with spin intervals, ensure perfect rinsing.

The final spin gives more efficient removal of water.

### 2 Mixed and Synthetic Fabrics SYNTHETICS

The main wash and the rinse gives best results thanks to the rotation rhythms of the drum and to the water levels.

A gentle spin will mean that the fabrics become less creased.

### 3 Special Delicate Fibres DELICATES

This is a new wash cycle which alternates washing and soaking and is particularly recommended for very delicate fabrics such as Pure Machine Washable Wool. The wash cycle and rinses are carried out with high water levels to ensure best results.

### 4. SPECIALS

#### HAND WASH 30°C

This washing machine also has a gentle Hand Wash programme cycle. This programme allows a complete washing cycle for garments specified as "Hand Wash only" on the fabric care label. The programme has a temperature of 30°C and concludes with 2 rinses and a slow spin.

#### SPECIAL "RINSE" PROGRAMME

This programme carries out three rinses with a spin at 800 rpm (which can be reduced or excluded by using the variable spin speed selector). It can be used for rinsing any type of fabric, eg. use after hand-washing.

#### SPECIAL "FAST SPIN" PROGRAMME

Programme "FAST SPIN" carries out a spin at 1400 rpm (which can be reduced by using the variable spin speed selector).

#### DRAIN ONLY

This programme drains out the water.

## "MIX & WASH SYSTEM" PROGRAMME 40° M&W

An ecological wash system which permits different types of fabric to be washed together.

### 32 MINUTE RAPID PROGRAMME 50°C



The 32 minute rapid programme allows a complete washing cycle to be carried out in approximately 30 minutes, with up to a maximum load of 2 kg and a temperature of 50°C. The maximum quantity of detergent that can be used is marked on the enclosed 32 minute gauge. The detergent must be placed in the main wash compartment (marked II) in the detergent dispenser.

## Main wash

### Automatic Variable Capacity

The washing machine is fitted with an automatic reduction in consumption system (known as Automatic Variable Capacity).

This system enables the machine to use the amount of water needed to wash and rinse the laundry in relation to the particular load.

This results in a reduction in the amount of water used and electricity needed to heat it to the minimum required, without in any way compromising the washing and rinsing performance. In fact the amount of water and electricity used will always be appropriate for the amount of washing.

The washing machine therefore ensures you achieve excellent washing results whilst respecting the environment and saving you money.


## Sorting the laundry

- It is recommended you wash only items which are machine washable with water and detergent and not dry-clean items.
- If you need to wash rugs, bedspreads or other heavy items, it is best not to spin them.
- Sort the laundry according to fabric type, degree of soiling and wash temperature: Always follow the wash care advice on the garment label for the most suitable care and treatment of the laundry

**Laundry for hot wash** 

**Coloured, easy-care materials**   


**Delicates and wool**  

**Wash by hand** 

Items labelled with the following symbol are not suitable for machine washing:

**Dry clean** 


For very delicate items, such as net curtains, underwear, tights etc., you are advised to use a laundry net or wash bag.

- Woollen items must be labelled with the "Pure New Wool" symbol to be washed in the machine , and must also be labelled "non-matting" or "machine washable".
- Colour often leaks from new coloured items. This can then colour other lighter items being washed. We therefore recommend that coloured items should be washed for the first time separately.

For future washes, colourfast items can only be washed with whites up to 40°C.

### Note: when sorting laundry

- check there are no metal objects in the laundry (such as paper clips, safety pins, pins, coins etc...);
- button up pillowcases, fasten zips, hook & eye fasteners, belts and long dressing gown cords;
- remove curtain hooks;
- pay close attention to the labels on items
- if you notice stubborn stains whilst sorting the laundry, remove them using a special detergent or a special stain remover.

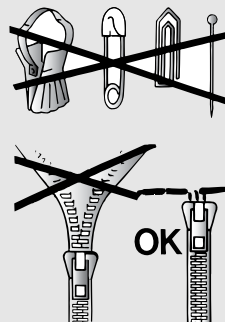

- We recommend that you do not do a full load of towelling items only as these become too heavy since they absorb a lot of water.

## The correct way to wash

### Preparing the laundry


**A) Select the laundry.**

### Loading the laundry

**B) Open the porthole.**

**C) Put the laundry in the washing machine.**


Close the porthole again, ensuring that no items of laundry are obstructing the lock.

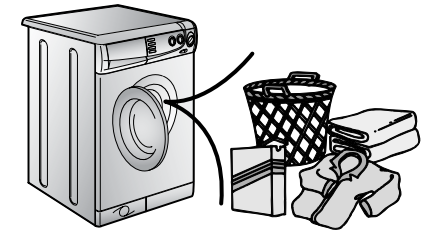

### Putting detergent in machine

**D) Open the drawer, choose the detergent and put in the correct amount, according to the manufacturer's instructions and the advice on page 18.**

Add any other laundry aids (see page 18). Close the drawer again.

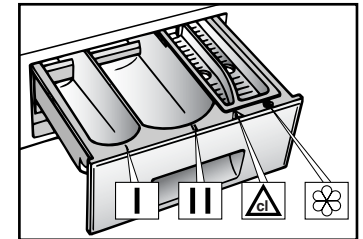

## Selecting the wash programme

**Note: when setting the programme, make sure that the Start button is not pressed.**


Refer to the programme guide or the programme descriptions on the machine to select the most suitable programme.

Turning the selector knob the required programme is activated.

When the START button is pressed the machine sets the working sequence in motion.

**Warning:** If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and, when the power is restored, it continues where it left off.

Check that the tap is turned on and that the discharge hose is positioned correctly.

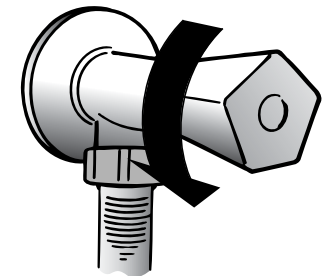











## When the programme is finished

Wait for the door lock to be released (about 2 minutes after the programme has finished).

Switch off the machine by resetting the on/off button, turn the timer knob for wash programme on the OFF position and open the door by pressing the door open button. Remove the laundry. Turn off the tap.

   

**TABLE OF PROGRAMMES**

 FABRIC	PROGRAM FOR	WEIGHT MAX kg	PROG.	TEMP. °C	CHARGE DETERGENT			
					I	II	△	✿
<b>Resistant fabrics</b> Cotton, linen	<b>Whites</b>	4,5	<b>90</b>	90°		●	●	●
	<b>Whites with Prewash</b>	4,5	<b>60 P</b>	60°	●	●	●	●
Cotton, mixed resistant	<b>Fast coloureds</b> (*)	4,5	<b>60</b>	60°		●	●	●
	<b>Fast coloureds</b>	4,5	<b>40</b>	40°		●	●	●
	<b>Non fast coloureds</b>	4,5	<b>30</b>	30°		●		●
Cotton	<b>Non fast coloureds cold wash</b>	4,5		-		●		●
<b>Mixed fabrics and synthetics</b> Mixed, resistant	<b>Fast coloureds with Prewash</b>	2	<b>60 P</b>	60°	●	●		●
	<b>Fast coloureds</b> (*)	2	<b>60</b>	60°		●		●
Cotton, mixed fabrics, synthetics	<b>Fast coloureds</b>	2	<b>50</b>	50°		●		●
	<b>Non fast coloureds</b>	2	<b>40</b>	40°		●		●
Synthetics (nylon, perlon), mixed cotton	<b>Non fast coloureds</b>	2	<b>30</b>	30°		●		●
	<b>Non fast coloureds cold wash</b>	2		-		●		●
Mixed, delicate synthetics	<b>Delicates</b> (*)	1,5	<b>40</b>	40°		●		●
	 <b>"MACHINE WASHABLE" woollens</b>	1	<b>30</b>	30°		●		●
<b>Very delicate fabrics</b>	 <b>"MACHINE WASHABLE" woollens</b>	1		-		●		●
	<b>Hand wash</b>	1		30°		●		●
<b>Specials</b>	<b>Rinse</b>	-		-				●
	<b>Fast spin</b>	-		-				
	<b>Drain only</b>	-		-				
	<b>Mix &amp; Wash system programme</b>	4,5	<b>M&amp;W</b>	40°		●		●
	<b>Rapid 32 minute</b>	2		50°		●		

**Please read these notes**

When washing heavily soiled laundry it is recommended the load is reduced to 3 kg maximum.

In programmes shown in the wash guide, automatic bleaching is possible by pouring the liquid bleach into the detergent draw △ .

\* Programmes according to GENELEC EN 60456.

The spin speed may also be reduced, to match any guidelines suggested on the fabric label, or for very delicate fabrics cancel the spin completely this option is available with a spin speed selector.

**Get the best results from your new Candy machine**

To ensure you get the best results from your new Candy machine it is important to use the right detergent in your everyday wash. There are many detergents available in the market and making a choice from the wide range available can often be confusing.

At Candy we regularly test many different types of detergent to assess which give the best wash results in our machines. We found only one brand always lives up to our exacting standards and provides outstanding cleaning across a broad range of dirt and stains, as well as providing high levels of fabric care. That's why Candy gave Ariel their official seal of approval.



## Detergents, washing aids and amounts to use

### Choice of detergent

#### General purpose detergents

- **Powder detergents**, for a thorough wash, with bleaching agent, particularly suitable for use in hot wash programmes (60°C and over), for heavily soiled and stained laundry.
- **Liquid detergents**, particularly suitable for grease stains, such as greasy skin marks, cosmetics and oil.  
These detergents are not suitable for washing stained laundry, as they do not contain bleach.
- **Biological detergents**, not all the products available give a really thorough wash.

#### Special detergents

- **Detergents for coloureds and delicates**, without added bleach, also often without any optical brightening agents, to preserve the colour.
- **Detergents for a thorough wash**, without added bleach or enzymes, particularly suitable for handling woollen fibres.
- **Detergents for curtains** with optical brightening agents, resistant to light, to prevent yellowing from sunlight.
- **Special detergents** for programmed use of chemical substances, depending on fabric type, degree of soiling and water hardness.  
Here basic detergents, softeners, bleaches/stain removers can be added separately.

#### Additional laundry aids

- **Water softener**, means less detergent can be used where water hardness is classed as hard to very hard.
- **Prewash substances**, for the programmed treatment of stains prior to the main wash.  
Using them means the subsequent wash can be at a low temperature or with bleach-free detergents.
- **Fabric softener**, prevents static build-up in synthetic fabrics and softens fabrics.  
If you own a tumble dryer, clothes are softened even without the use of a fabric softener.

#### Do not put solvents in the washing machine!

Keep detergents and other laundry products out of children's reach.

Before pouring in the detergent check that there are no foreign bodies in the detergent drawer.

Dosage details are usually shown on the detergent packaging. Follow those instructions.

## Dosages

Only use detergents which are suitable for use in a washing machine.

You will obtain the best results from your wash with the minimum use of chemical products and the best care for your laundry if you take into consideration the degree of soiling as well as the type of detergent to choose.

The amount of detergent to use depends on:

- water hardness: depending on the hardness of the water and the type of detergent used, it is possible to reduce the amount of detergent.
- the degree of soiling: it is possible to reduce the amount of detergent used depending on the degree of soiling.
- amount of laundry: it is possible to reduce the amount of detergent when washing only a small amount of laundry.

### Dosage for powder detergent

**For normal and low concentration detergents:** for normally soiled laundry choose a programme without prewash.

Put the detergent in compartment "II" of the drawer.

For heavily soiled laundry, choose a programme with prewash.

Put 1/4 of the detergent in compartment "I", 3/4 in compartment "II" of the drawer.

When using water softeners, first put in the detergent, then add the softener to compartment "II".

For highly concentrated detergents not in single dose format, follow what is shown on pack exactly as regards type and amount of dosage.

To avoid the difficulty of checking if the detergent has been taken up, use the dosage aids provided in the detergent packaging.

### Liquid detergent dosage

Liquid detergents may be used in accordance with the instructions on the relevant packaging, for all programmes without prewash, by using the special container which is placed in the drum or, for those models that have it, in the special insert for liquid detergents.

## Cleaning and routine maintenance


Do not use alcohol-based scourers and /or thinners on the outside of your washing machine, just a wipe with a damp cloth will suffice. The washing machine needs very little maintenance:

- Cleaning the drawer compartments.
- Cleaning the filter.

### Cleaning the drawer compartments

Even if it is not strictly necessary, it is good to clean the compartments for bleaching detergents and additives occasionally.

- To do this you just need to pull them out firmly, but without forcing them.
- Clean everything in the compartment under running water.
- Put everything back in its proper place.

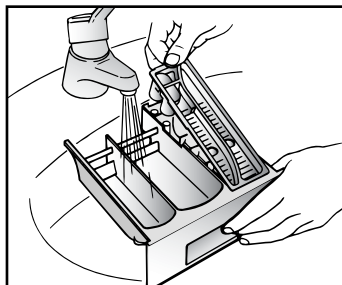


### Cleaning the filter

The washing machine is fitted with a special filter for handling large deposits which could block the discharge hose (coins, buttons etc.) and which can, therefore, be easily retrieved.

**We recommend that the filter be cleaned at least once a month.**

The cleaning operation is as follows:

- Ease off the plinth cover as shown in picture.
- Turn the filter anti-clockwise until it stops in the vertical position. Remove and clean.
- After cleaning, replace the filter. Then follow all procedures described above in reverse order.
- Insert the inner hinges of the plinth in the special grooves and slide over to the right to fix in position securely.

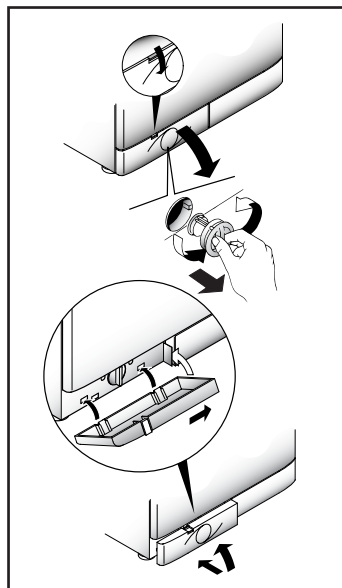


**Attention: if the filter needs cleaning while there is washing still in the drum, follow the instructions on the following page to empty the water. This will prevent excessive loss of water via the filter.**

## Transporting the appliance or long periods when appliance is not in use

If the appliance is being transported or is out of use for long periods in unheated places, all remaining water must be completely removed from the hoses.

Ensure mains power is off, then unclip the hose and point it downwards into a basin until all the water has emptied out.

When finished, repeat the operation in the reverse order.

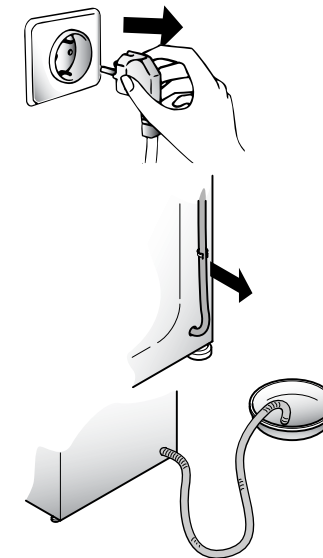

# Investigating malfunctions

## What might be the cause of... Defects you can remedy yourself

MALFUNCTION	CAUSE	REMEDY
1. Does not work on any programme	Plug not in socket. Not switched on. Power failure. Fuse blown. Door open.	Plug it in. Switch on. Check. Check. Close door.
2. Does not fill with water	See cause 1. Tap turned off. Programme selector not correctly positioned.	Check. Turn on tap. Position programme selector correctly.
3. Water does not drain away	Kink in discharge hose. Foreign bodies in filter	Straighten discharge hose. Examine filter (see pages 20-21)
4. Water on floor around the washing machine	Leaking gasket between tap and water inlet hose.	Replace gasket and tighten hose and tap well.
5. Does not spin	Water has not yet drained away. "No spin" selected (certain models only).	Wait a few minutes for machine to empty. Reset button or turn "no spin" knob.
6. Machine vibrates a lot during spin	Washing machine not completely level. Transit brackets not removed yet. Load not distributed evenly.	Adjust the special adjustable feet. Remove transit brackets. Rearrange the laundry evenly.
7. Door will not open	Two minutes have not elapsed since the programme finished.	Wait two minutes.

**The machine makes a different noise when spinning! This is because it has a manifold motor for better performance.**

**Only a small level of water can be seen in the drum! This is because new machines do not use much water, yet achieve the same standard of washing and rinsing.**

### Note:

The use of environmentally-friendly, phosphate-free detergents can have the following effects:

- waste water from rinsing may be cloudier because of the presence of zeolites held in suspension, without the rinse performance being adversely affected;
- presence of white powder (zeolites) on laundry after washing, which is not absorbed by the fabric and does not alter the colour of the fabric.
- The presence of foam in the final rinsing water is not necessarily an indication of poor rinsing.
- Anionic surfactants used in washing detergent formulae often prove to be difficult to remove from the laundry itself and, even in small quantities, can still cause considerable foam production.
- Carrying out more rinse cycles does not serve any purpose in such cases.

## CUSTOMER SERVICE AND GUARANTEE

Your new appliance is fully guaranteed by the manufacturer for 12 months against electrical/mechanical breakdown excluding:

- A.** Any faults which occur due to bad installation or misuse of the machine.
- B.** Any faults which occur due to repair of, or interference with, the machine by any person not authorised by the manufacturer to carry out service.
- C.** Any faults which arise from parts fitted to the machine which are not the manufacturers original parts.
- D.** Any faults arising from non-domestic use or unusual or abnormal use of the machine.
- E.** Any faults arising from operation at an incorrect voltage.
- F.** Any faults arising from incorrect operation of the machine.

The guarantee applies to Gt. Britain and Northern Ireland only, and is an addition to your statutory rights.

### After Sales Service

If, having investigated the possible malfunctions on the chart on the previous page, you believe the appliance is not working correctly, please call our After Sales Service dept. on telephone number 08705 990011

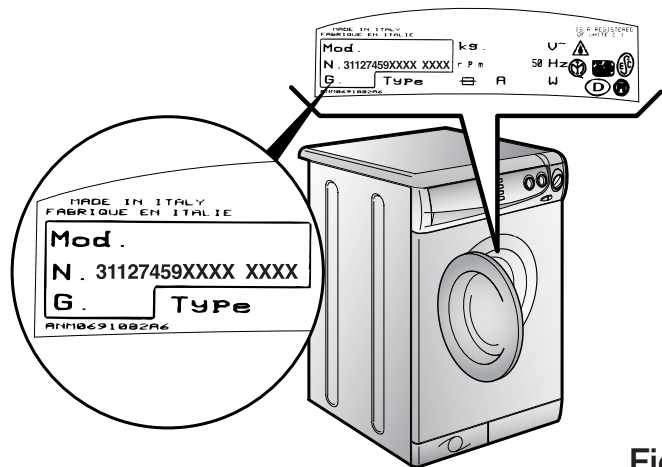


Fig. 2

## Technical data

- Max. load of dry laundry
- Water pressure
- Spin speed

4,5 kg  
0,05 ÷ 0,8 MPa  
1400 rpm

### Measurements

- Width
- Depth
- Height


60 cm  
52 cm  
85 cm

NB: For specifications regarding electrical data, see the data panel on the front of the washing machine (porthole area) - as shown in diagram above.




EC Appliance complies with European Directive 89/336/EEC, 73/23/EEC and subsequent amendments.

## SETTING UP + INSTALLATION

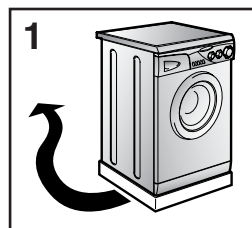

Remove the polystyrene base and place the machine near its permanent position (diagram 1).




Carefully cut through the hose retaining clip at the rear of the appliance (diagram 2).

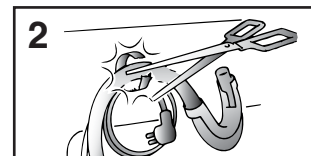

Unscrew the central bolt (A); unscrew the 4 lateral screws (B) and remove the cross piece (C) (diagram 3).


Lean the machine forward and remove the plastic bags containing the two polystyrene blocks at the sides, pulling downwards (diagram 4).

Press the plug (to be found in the envelope with the instructions) into the hole and rotate to lock into position (diagram 5).

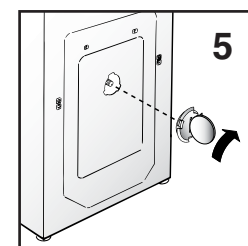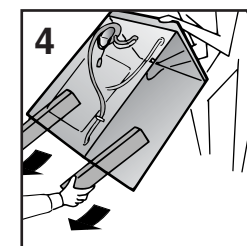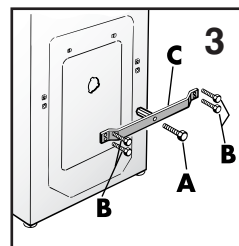


**WARNING:**  
DO NOT LEAVE THE PACKAGING WITHIN REACH OF CHILDREN AS IT IS A POTENTIAL SOURCE OF DANGER.

Apply the insulation sheet of corrugated material to the base as shown.

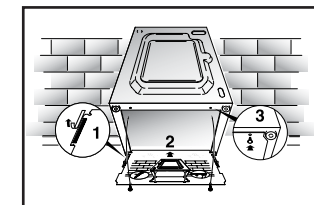

Level the machine by means of the front feet.

- a) Turn the nut clockwise to release the screw adjuster on the foot.
- b) Rotate the foot to raise or lower it until it stands firmly on the ground.
- c) Lock the foot in position by turning the nut anti-clockwise until it comes up against the bottom of the machine.

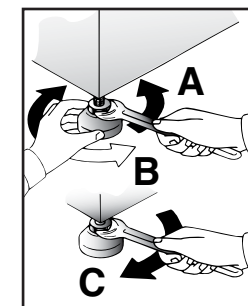

**Note:** we recommend you keep the transit bracket, braces and screws to immobilise the machine for future transit.



The Manufacturers will not be responsible for any possible damage to the machine caused by not following the rules relating to releasing the mechanism. The user is responsible for all costs of installation.

### Water connection

The appliance must be connected to the water mains using new hose-sets.

The old hose-sets should not be reused.

Your machine may either be plumbed in or connected to existing taps, using a tap adaptor with a 3/4 B.S.P. threaded end connection. The water supply hoses to be found inside the drum are terminated in two different ways. One end which has a 90° elbow is to be connected to the appliance water connection E while the straight end is to be connected to the domestic supply tap. The hose with the white collar should be connected to the cold tap, and the hose with the red collar to the hot tap. The appliance is not suitable for use with mixer taps.

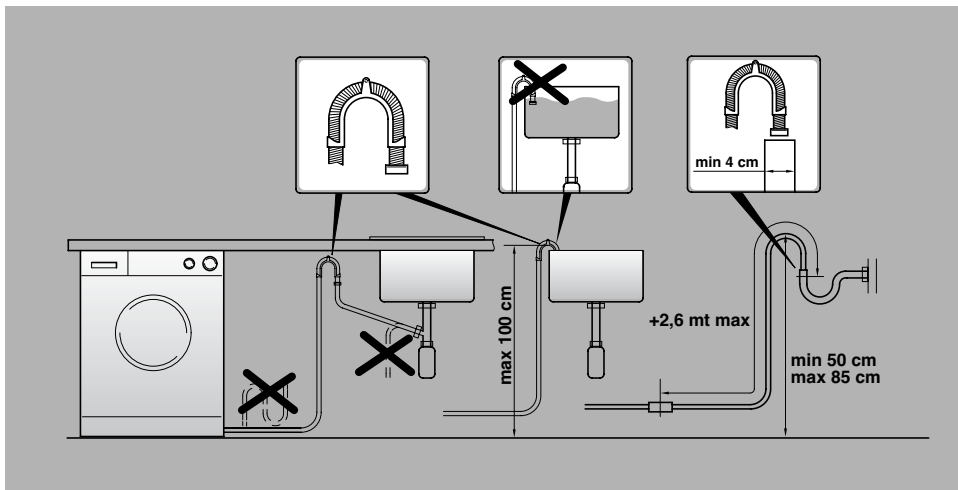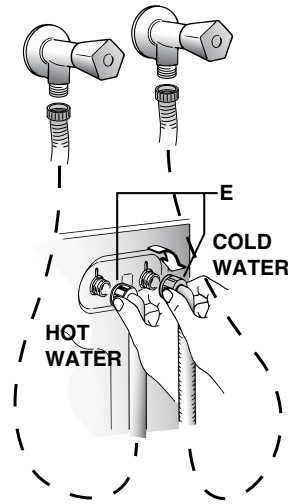

**Note:** it is advisable to turn off the tap after each wash to isolate the washing machine from the water supply.

For the washing machine to function properly the terminal end of the discharge hose (mouth) must be at a minimum of 50 cm and a maximum of 85 cm from the ground.


### ELECTRICAL CONNECTIONS

After installation, the appliance must be positioned so that the plug is accessible.

If the plug we supply does not fit

**CUT IT OFF AND DESTROY IT!**

You can't use it on other appliances, and the exposed wires could be dangerous if plugged in. To fit a replacement plug, proceed as follows:

Connect	to the terminal in the plug
green and yellow wire	marked with the letter E, OR marked with the symbol,  OR coloured green, OR coloured green and yellow.
blue wire	marked N OR coloured black.
brown wire	marked L OR coloured red.

### WARNING

This appliance must be earthed

Fuses and plugs

This appliance should be used only on a socket with a minimum rating of 13 Amp.

Our ready-fitted plug is already equipped with a 13 amp fuse which is BS 1362 ASTA approved. Any replacement should be exactly the same.

If the fuse cover is lost, do not use the plug until it is replaced. A correct replacement fuse cover (obtainable from your local retailer) must be the same colour as shown or named on the insert on the base of the plug.

# NOTES

Lined area for notes on page 28.

Lined area for notes on page 29.

Lined writing area with 25 horizontal dotted lines.

The manufacturer declines all responsibility in the event of any printing mistakes in this booklet. The manufacturer also reserves the right to make appropriate modifications to its products without changing the essential characteristics.



---

---

**CANDY**

---



03.03 - 41007699 - Printed in Italy - Imprimé en Italie