

BOSE[®]




Wave[®] Music System Multi-CD Changer



Owner's Guide





Please read this owner's guide

Please take the time to follow the instructions in this owner's guide carefully. It will help you set up and operate your system properly and enjoy all of its advanced features. Save your owner's guide for future reference.

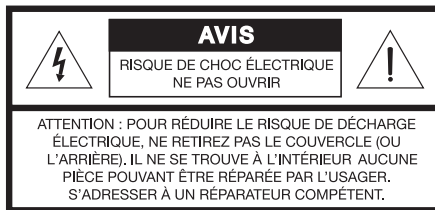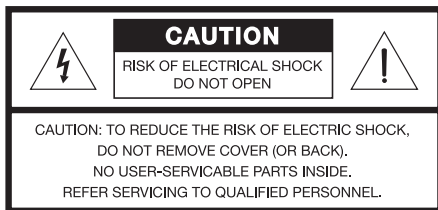-  **WARNING:** To reduce the risk of fire or electric shock, do not expose the product to rain or moisture.
-  **WARNING:** The apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on the apparatus. As with any electronic product, use care not to spill liquids into any part of the multi-disc changer. Liquids can cause a failure and/or a fire hazard.
-  **WARNING:** No naked flame sources, such as lighted candles, should be placed on the apparatus.






 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle, as marked on the system, is intended to alert the user to the presence of important operating and maintenance instructions in this owner's guide.

 
Class B emissions limits

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

-  **CAUTION:** To prevent electric shock, match the wide blade of the line cord plug to the wide slot of the AC (mains) receptacle. Insert fully.
-  **CAUTION:** DO NOT place the product on any heat-sensitive surface, such as the finished surface of fine furniture. Like all electrical equipment, it generates some heat.
-  **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. The multi-disc player should not be adjusted or repaired by anyone except properly qualified service personnel.


Class 1 Laser Product



This CD changer is classified as a CLASS 1 LASER PRODUCT according to EN 60825-1:1994 + A1+A2, IEC60825-1:1993+A1+A2.



Notes:


- The product label is located on the bottom of the product.
- Where the mains plug is used as the disconnect device, such disconnect device shall remain readily operable.
- The product must be used indoors. It is neither designed or tested for use outdoors, in recreation vehicles, or on boats.
- This product is intended to be used only with the Bose® Wave® music system.

 The disc changer conforms to the EMC directive 89/336/EEC and to the Low Voltage Directive 73/23/EEC. The complete Declaration of Conformity can be found on www.bose.com.

-  **WARNING:** Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100°C (212°F), or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.
-  **WARNING:** Danger of explosion if battery is incorrectly replaced. Replace only with Duracell, Eveready, Energizer, Maxell, Toshiba, or Shun Wo CR2032 or DL2032 3-volt lithium battery.



Please dispose of used batteries properly, following any local regulations. Do not incinerate.

1. **Read these instructions** – for all components before using this product.
2. **Keep these instructions** – for future reference.
3. **Heed all warnings** – on the product and in the owner's guide.
4. **Follow all instructions.**
5. **Do not use this apparatus near water or moisture** – Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. **Clean only with a dry cloth** – and as directed by Bose Corporation. Unplug this product from the wall outlet before cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions** – To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
8. **Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.**
9. **Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wider blade or third prong are provided for your safety. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet.**
10. **Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
11. **Only use attachments/accessories specified by the manufacturer.**
12. **Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.** 
13. **Unplug this apparatus during lightning storms or when unused for long periods of time** – to prevent damage to this product.
14. **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power-supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped** – Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Bose to be referred to an authorized service center near you.
15. **To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.**
16. **Do not let objects or liquids enter the product** – as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
17. **See product enclosure bottom for safety related markings.**

Information about products that generate electrical noise

If applicable, this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: *Unauthorized modification of the receiver or radio remote control could void the user's authority to operate this equipment.*

This product complies with the Canadian ICES-003 Class B specifications.


Important Safety Instructions

18. **Use Proper Power Sources** – Plug the product into a proper power source, as described in the operating instructions or as marked on the product.
19. **Avoid Power Lines** – Use extreme care when installing an outside antenna system to keep from touching power lines or circuits, as contact with them may be fatal. Do not install external antennas near overhead power lines or other electric light or power circuits, nor where an antenna can fall into such circuits or power lines.
20. **Ground All Outdoor Antennas** – If an external antenna or cable system is connected to this product, be sure the antenna or cable system is grounded. This will provide some protection against voltage surges and built-up static charges.

Section 810 of the National Electrical Code ANSI/NFPA No. 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the ground electrode. Refer to the antenna grounding illustration on this page.

Antenna grounding

Example of antenna grounding as per National Electrical Code, ANSI/NFPA 70.

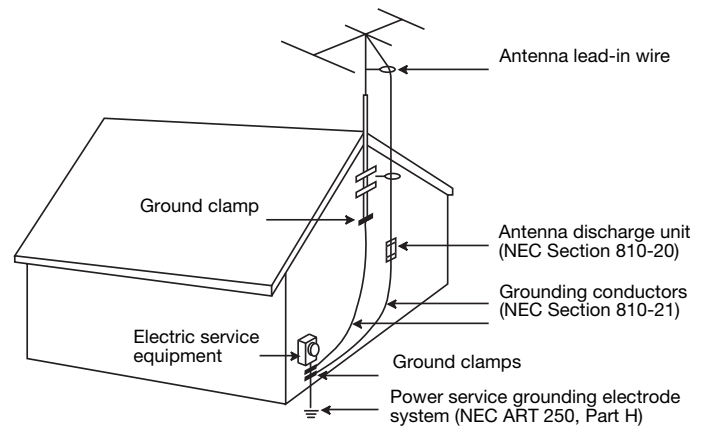

Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC (of USA) that provides guidelines for proper grounding. In particular, it specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as is practical.

Setup	4
Before you begin	4
Unpacking the carton	4
Selecting a location for your system	5
Seating your Wave® music system on the multi-CD changer	5
Connecting the multi-CD changer to your Wave® music system	6
Updating your Wave® music system	7
Operation	8
Remote control guide	8
Turning your multi-CD system on and off	8
Loading CDs into the Wave® music system	9
Loading CDs into the multi-CD changer	9
Playing CDs	10
Moving to another CD	10
Stopping a CD	10
Ejecting a CD	10
Play modes for audio CDs	11
Play modes for MP3 CDs	11
Listening to an External Audio Source	12
Connecting an external audio source	12
Playing a connected audio source	12
Care and Maintenance	13
Cleaning	13
Replacing the remote control battery	13
Troubleshooting	14
Customer Support	14
Warranty	15
Technical Information	15

Before you begin

Thank you for purchasing the Bose® Wave® music system Multi-CD Changer accessory. Adding the Multi-CD Changer to your Wave® music system provides you with some valuable benefits:

- **A four-disc Wave® music system** – Allows you to load and play up to four audio CDs. Provides hours of uninterrupted CD music.
- **Elegant integrated pedestal design** – Using the same footprint as the Wave® music system, the changer complements the elegance and simplicity of the system.
- **One integrated remote control** – Provides the simplicity of using one remote control and one-touch selection of all built-in sources.
- **Multiple source switching** – By adding two input connections for external audio devices, you can enjoy listening to one or two other audio sources in your home through the Wave® music system.


Unpacking the carton

Carefully unpack your Wave® music system Multi-CD Changer and save all packing materials for possible future use. The original packing materials provide the safest way to transport your new Multi-CD Changer.


Make sure you received the parts shown in the following diagram. If any part appears damaged, do not attempt to use it. Notify Bose customer service immediately (see phone numbers on the inside back cover).

IMPORTANT

Your Wave® music system requires updating before it can operate the Multi-CD Changer. Be sure to use the supplied update disc at the appropriate time during the setup process.

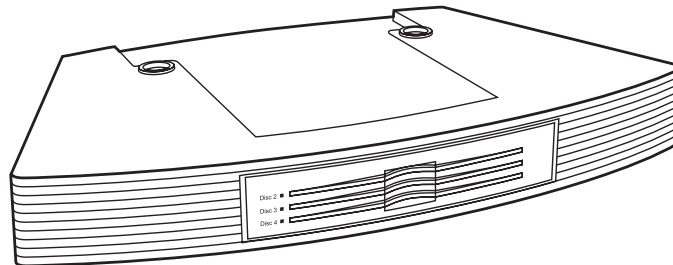

Wave® music system Multi-CD Changer

 

Wave® music system update disc



Wave® music system remote control

For your records

Now is a good time to record the serial number of your new Multi-CD Changer. The serial number is located on the bottom of the product.

Serial number _____

Purchase date _____

We suggest you keep your sales receipt together with this owner's guide.

Selecting a location for your system

Your Multi-CD Changer is designed to fit directly under your Wave® music system. Before you connect the Multi-CD Changer to the Wave® music system, select a good location for the complete system using the following guidelines.

- Place the system on a table or other flat surface.
- To enjoy maximum performance, place the system across the room from where you will be listening.
- Place the system within two feet of a wall, and avoid placing it directly in a corner.

⚠ CAUTION: DO NOT place your system on a heat-sensitive surface. Like all electrical equipment, it generates some heat.


⚠ CAUTION: DO NOT use your system in a damp location or any other place where moisture can get inside.

🎵 Note: DO NOT place your system on a metal surface. It could interfere with AM reception.

Seating your Wave® music system on the Multi-CD Changer

With the changer placed in your chosen location, carefully set your Wave® music system on top of the changer.

- Make sure the rear feet of the Wave® music system fit into the recesses on top of the changer.
- Make sure the Wave® music system sits flat and the side edges of both units are aligned.

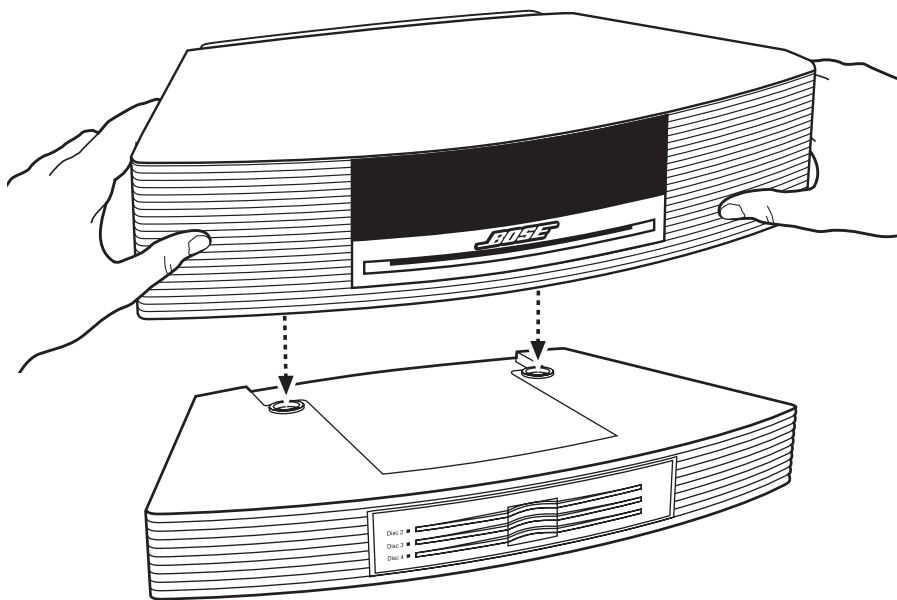



Connecting the Multi-CD Changer to your Wave® music system

If you have already set up your Wave® music system, disconnect the power cord on the back panel and set it aside. You will need to use it again during this setup procedure.

1. Plug the Bose® link cable from the changer into the Bose® link connector on your Wave® music system.
2. Plug the AC power cord from the changer into the AC power input connector on the back of the Wave® music system.
3. Plug the Wave® music system AC power cord into the AC power input connector on the back of the changer.
4. Plug the other end of the power cord into an AC (mains) wall outlet. For best FM reception, straighten the power cord as much as possible. Your Wave® music system uses the power cord as an FM antenna.
5. Turn to “Updating your Wave® music system” on page 7 and follow the instructions for running the Wave® music system update disc.

IMPORTANT

Make sure you perform step 5. This enables your Wave® music system to operate the disc changer.

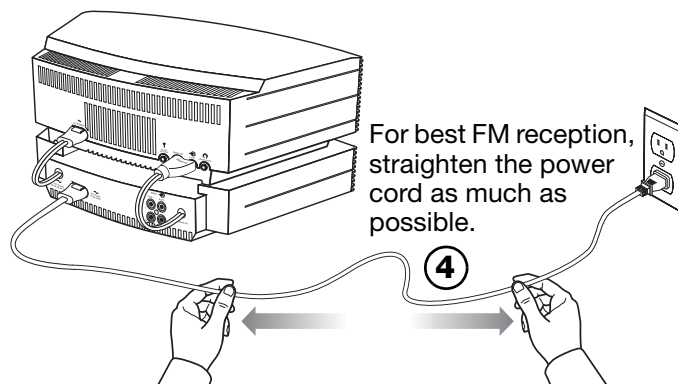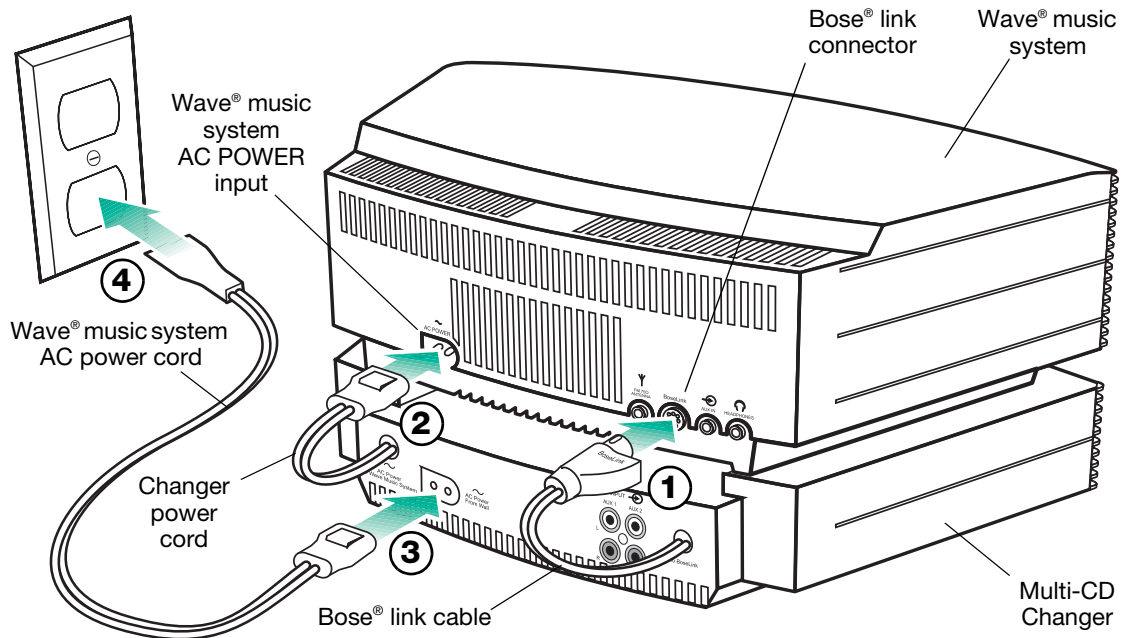

Updating your Wave® music system


To enable your Wave® music system to operate the Multi-CD Changer, run the update disc included with the changer. The display will tell you when the update is finished.

1. Insert the update disc into the Wave® music system CD slot (not into a changer CD slot).
2. Wait approximately 20 seconds while your Wave® music system performs the update. The display will show you a series of messages during this process:

LOADING → UPDATING → FINISHED → EJECTING

3. **Wait for the system to automatically eject the update disc after updating is finished. DO NOT eject the disc yourself.**

After updating your system, refer to “Operation” on page 8 for operating information.

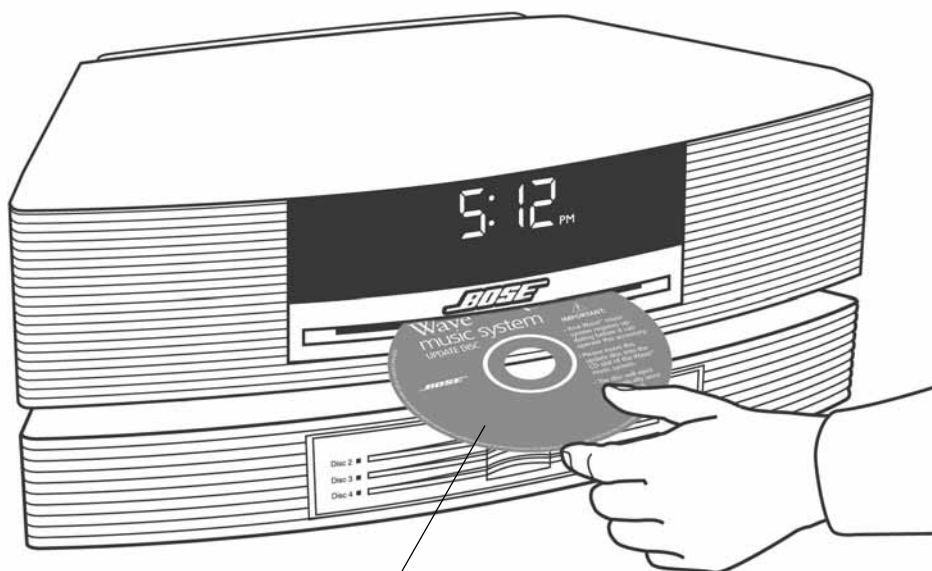

Wave® music system update disc

Remote control guide

An additional remote control is included with your Wave® music system Multi-CD Changer. This remote is identical to the one used to control your Wave® music system. So, you can use either remote to control the completed multi-CD system. Just aim the remote at the front panel and press the buttons. The remote normally works within 20 feet of the front panel.

The following diagram describes the buttons used for playing CDs using the disc changer.

Seek/Track

- **Press:** Skips to next/previous CD track on the current disc.
- **Press and hold:** Rapidly skips to next/previous CD track on the current disc.

Tune/MP3

- **Press:** Navigates between folders when playing MP3 CDs.
- **Press and hold:** Rapidly scans forward/backward through a CD track.

Play Mode

- Selects CD play modes (page 11).



CD

- **Press:** Selects the CD source (page 10).
- **Press again:** Moves to the next disc (page 10).

AUX

- **Press** to hear audio from an external source connected to either the AUX 1 or AUX 2 input on the changer (page 12).
- **Press** to switch between the AUX 1 and AUX 2 input (page 12).

Stop/Eject

- **Press once:** Stops playing the current CD (page 10).
- **Press again:** Ejects the stopped CD.
- **Press and hold:** Ejects a playing CD.

Play/Pause

- **Press:** Plays the current CD.
- **Press again:** Pauses a playing CD.

🎵 **Note:** Press-and-hold operations require holding the button down for at least one second.

🎵 **Note:** Pressing **FM/AM**, **CD**, or **AUX** automatically turns on the Wave® music system to the source selected.

Throughout this owner's guide you will see button icons to the left of the operating instructions. These icons refer to buttons located on the remote control.

Turning your multi-CD system on and off



Press **On/Off** once to turn your multi-CD Wave® music system on or off. The system turns on to the last source played. If the last source was CD, the last disc selected starts to play.

Press **On/Off** again to turn the system off.

OR




Press **CD** to turn the system on to the CD source. The last disc selected will play.

Loading CDs into the Wave® music system

Insert the disc, label side up, into the CD slot below the display. The disc player will automatically pull the disc in and begin playing.




Press **CD** if the CD source is not selected.

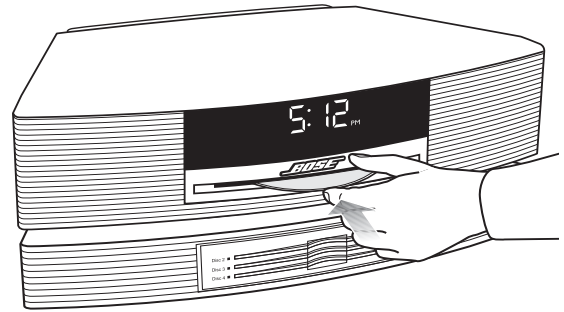

Loading CDs into the Multi-CD Changer

1. Insert a disc, label side up, into an empty slot. An empty slot is indicated by an unlit disc slot indicator.
2. With your fingers on the outside edge of the disc, push the disc all the way into the slot.

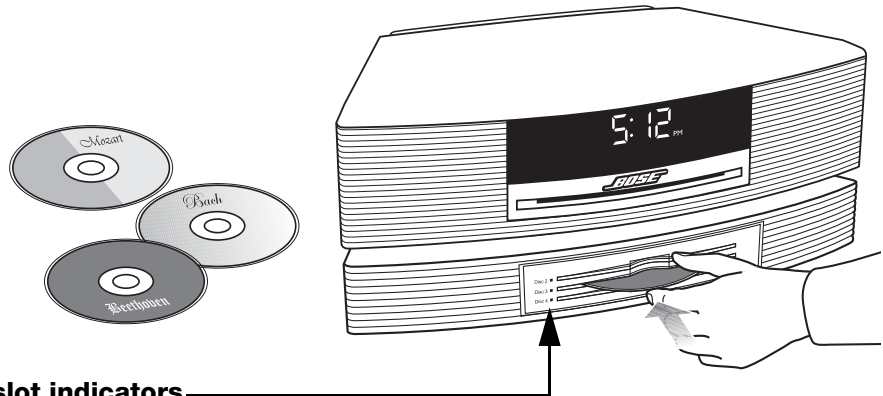

Disc slot indicators

- Off Empty disc slot.
- Pulsating green The disc slot contains a CD which is playing, paused, or in a fast forward/backward scan.
- Solid green The disc slot contains a CD, but it is not currently playing.
- Solid amber The CD is being ejected.

CAUTION:

- *DO NOT INSERT mini CDs or non-circular CDs into the disc changer. These discs may not play properly and could interfere with the system's ability to eject them.*
- *DO NOT INSERT more than one disc at a time into any disc changer slot. Doing so can cause damage to the disc and/or the disc changer.*

Playing CDs

With the Multi-CD Changer installed, your Wave® music system operates as a four-disc changer. Now, when you play CDs, all the normal CD information appears on the display with one addition – the selected CD slot number (d1, d2, d3, or d4) appears above the elapsed track time.



Note: When switching from the FM, AM, or AUX source to the CD source, the CD in the most recently used slot begins playing automatically. If that slot is empty, the next slot containing a CD is selected.

The following information describes functions related to the Multi-CD Changer. Refer to your Wave music system owner's guide for complete instructions on playing the selected CD.

Moving to another CD



Press **CD** to move to the next CD slot. The CD number on the display tells you which CD slot is currently selected.

Stop / Eject



Stopping a CD

Press **Stop/Eject** once to stop a playing CD.

Stop / Eject



Ejecting a CD

Press **CD** on the remote to move to the CD you want to eject. Press **Stop/Eject** once to stop a playing CD and then, press again to eject the CD.

Note: Pressing Stop/Eject when the CD source is not selected ejects a disc from the most recently used slot. If that slot is empty, the next CD found is ejected.

Play modes for audio CDs

Additional audio CD play modes are available on your Wave® music system after adding the CD changer.



While playing a CD, press **Play Mode** repeatedly until the play mode you want is displayed:

- **NORMAL PLAY**Plays all tracks on the selected CD once in order.
- **SHUFFLE**Plays all CDs once in random order. Plays tracks on each CD in random order.
- **SHUFFLE dISC**Plays all tracks on the selected CD once in random order.
- **SHUFFLE RPT**Repeats all tracks on all CDs in a random order that changes each time the CD is repeated.
- **SHUFFLE RPT dISC**Repeats all tracks on the selected CD in a random order that changes each time the CD is repeated.
- **REPEAT**Continuously repeats all CDs in order.
- **REPEAT dISC**Continuously repeats all tracks on the selected CD in order.
- **REPEAT TRACK**Continuously repeats the selected track on the selected CD.

Play modes for MP3 CDs



While a music file CD is playing, you can change the way it is played. Press **Play Mode** repeatedly until the play mode you want is displayed:


- **NORMAL PLAY**Plays all tracks on the selected CD once in order.
- **SHUFFLE**Plays all CDs once in random order. Plays tracks on each CD in random order.
- **SHUFFLE dISC**Plays all tracks on the selected CD once in random order.
- **SHUFFLE FOLDR**Plays all tracks in the selected folder in random order.
- **SHUFF RPT**.....Repeats all tracks on all CDs in a random order that changes each time the CD is repeated.
- **SHUF RPT dISC**Repeats all tracks on the selected CD in a random order that changes each time the disc is repeated.
- **SHUF RPT FLDR**Repeats all tracks in a folder in a random order that changes each time the folder is repeated.
- **REPEAT**Continuously repeats all CDs in order.
- **REPEAT dISC**Continuously repeats all tracks on the selected CD in order.
- **REPEAT FOLDER**Continuously repeats all tracks in a folder in order.
- **REPEAT TRACK**Continuously repeats the selected track on the selected CD.

Connecting an external audio source

The Wave® music system Multi-CD Changer provides two rear panel inputs (AUX 1 and AUX 2) for external audio devices such as TV, VCR, DVD player, cassette player, or MP3 player. This gives you the advantage of hearing Wave® music system sound from a range of sources.

To connect a device, you will need a stereo RCA cable. Connect one end of the cable to the audio output jacks of the source and the other end to one of the AUX inputs on the changer. Be sure to match the red and white plugs on the cable to the red (R) and white (L) AUX jacks on the changer.

Connection example: a TV connected to the Multi-CD Changer

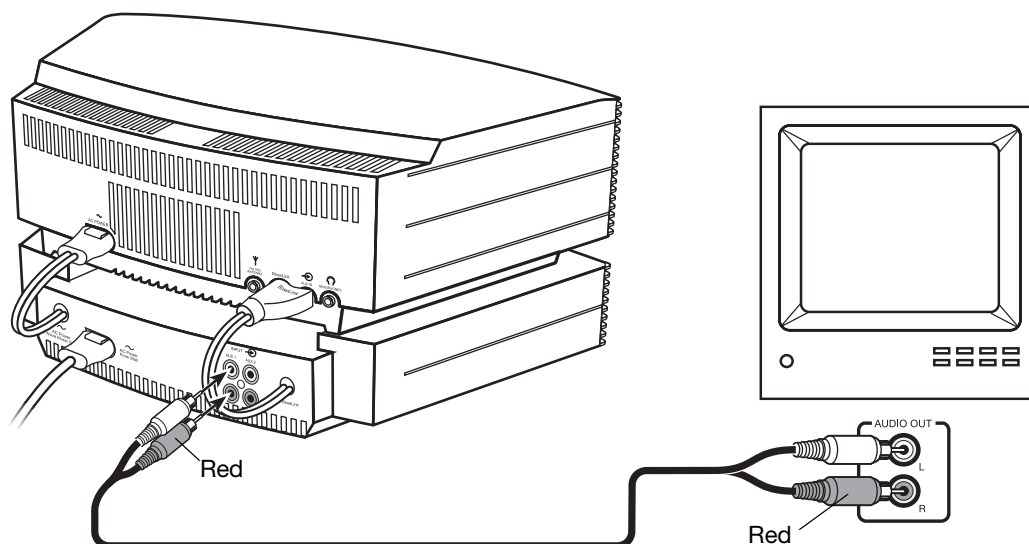

Use only a stereo connection. You will not hear the connected device if just the left (L) or right (R) channel is connected.

Playing a connected audio source

To listen to a connected source:

1. Turn on the external device.
2. Press **AUX** on the Wave® music system remote control. Press **AUX** again to switch between the AUX 1 and AUX 2 inputs. AUX 1 or AUX 2 appears on the display to confirm your selection.
3. Adjust the volume using the Wave® music system remote control.

AUX

♪ **Note:** The Wave® music system remote control cannot turn a connected AUX device on or off, or change its settings or selections.

♪ **Note:** Neither AUX 1 or AUX 2 can be selected as an alarm source.

Cleaning

Use only a soft dry cloth to clean your Wave® music multi-CD system. If necessary, you may use a soft-bristled attachment to gently vacuum across the front. Do not use any liquid cleaning solutions, solvents, chemicals, alcohol, ammonia, or abrasives.

⚠ CAUTION: Do not allow liquids to spill into any openings in the enclosure. If liquids get into the unit, turn it off immediately. Call Bose® Customer Support as soon as possible to arrange for service. See the list of phone numbers inside the back cover.


Replacing the remote control battery

⚠ WARNING: Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 212°F (100°C), or incinerate. Dispose of a used battery promptly. Replace only with a battery of the correct type and model number.


⚠ CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with Duracell, Eveready, Energizer, Maxell, Toshiba, or Shun Wo CR2032 or DL2032, 3-volt lithium battery.

To replace the remote battery:

1. Place the remote face down on a flat surface.
2. Using your finger, push the tab lock to the side as shown and hold. Slide the battery compartment open.

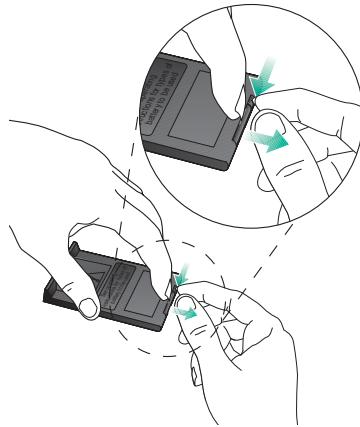

3. Remove the old battery and install the new one with the plus (+) symbol facing up.

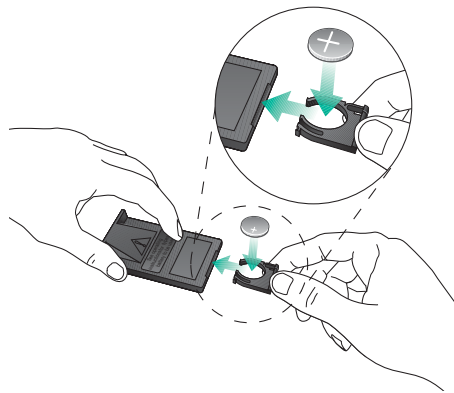

4. Gently slide the battery compartment closed. It locks automatically.

Troubleshooting

Problem	What to do
No system operation	<ul style="list-style-type: none"> • Check the power connections between the Wave® music system and the changer. Refer to “Connecting the Multi-CD Changer to your Wave® music system” on page 6. • Make sure you ran the update disc. Refer to “Updating your Wave® music system” on page 7.
The system ejects the update CD but does not perform the update	<ul style="list-style-type: none"> • Make sure you insert the update CD into the Wave® music system disc slot and not a changer disc slot.
No sound or sound is muffled	<ul style="list-style-type: none"> • Make sure the Wave® Multi-CD Changer is plugged into a live power outlet and is turned on. • Check the connections between the Wave® music system and the changer. Refer to “Connecting the Multi-CD Changer to your Wave® music system” on page 6.
CD skips	<ul style="list-style-type: none"> • Make sure the system is not getting bumped in its current location. If so, move it to a more protected location. • Check the CD for smudges or dirt. If cleaning is necessary, wipe the CD straight out from the center (NOT in a circular motion) to clean it.
CD does not play	<ul style="list-style-type: none"> • Make sure there is a CD in the selected CD slot. • Make sure CD is selected on the display of the Wave® music system.
A CD is playing, but none of the Multi-CD Changer LEDs are lit	<ul style="list-style-type: none"> • Check to see if the CD slot in the Wave® music system is selected, instead of a slot in the Multi-CD Changer.
No sound heard from the AUX device	<ul style="list-style-type: none"> • Make sure the RCA plugs on the stereo cable are pushed in as far as they can go. • Press AUX on the remote and select the AUX input used by the device (AUX 1 or AUX 2). • Make sure the AUX device is turned on.

Customer Support

For additional help in solving problems, contact Bose® Customer Support. Refer to the address list on the inside back cover of this guide.

Limited warranty

What is covered:

All parts defective in material or workmanship.

For how long:

One year from the purchase date.

What we will do:

We will, at our sole option, repair or replace any defective parts free of charge.

What you must do:

- A. Call Bose® Customer Service and ask for shipping instructions.
- B. Properly pack the unit, if possible, in the original carton for shipping.

Other conditions:

This limited warranty is fully transferable for the one-year period following purchase.

THE PROVISIONS OF THIS LIMITED WARRANTY ARE IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BOSE CORPORATION'S MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT. IN NO EVENT SHALL BOSE BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT DAMAGES.

This limited warranty does not cover a defect that has resulted from improper or unreasonable use or maintenance, accident, improper packing, or unauthorized tampering, alteration, or modification as determined solely by us. This limited warranty is void if the label bearing the serial number has been removed or defaced.

Other Legal Rights:

This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state or country to country. Some places do not allow limitations on implied warranties or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

Technical information

Multi-CD Changer power rating

120V~ 50/60 Hz, 80W

Dimensions

2.6"H x 14.5"W x 9.9"D
(6.6 cm x 36.8 cm x 25.2 cm)

Weight

4.5 lb (2.04 kg)

Color

Graphite Gray or Platinum White



USA Customer Support

Bose Corporation, The Mountain
Framingham, MA 01701-9168
1-800-367-4008

USA Customer Service

Bose Corporation, 1 New York Ave.
Framingham, MA 01701-9168
1-508-766-1900

Canada Customer Support

Bose Ltd., 1-35 East Beaver Creek Rd.
Richmond Hill, Ontario L4B 1B3
1-800-465-2673

European Office

Bose Products B.V., Nijverheidstraat 8
1135 GE Edam, Nederland
TEL 0299-390111
FAX 0299-390114

Australia

Bose Pty Limited,
Unit 3, 2 Holker Street,
Newington NSW, 2127
TEL +61 (0)2 8737 9999
FAX +61 (0)2 8737 9924

Deutschland

Postfach 1468
48504 Nordhorn
TEL 05921 3030 123
FAX 05921-724250

Bose AG
Hauptstraße 134
CH-4450 Sissach
TEL 061 975 77 33
FAX 061 975 77 44

Bose Ges.m.b.H
Wienerbergstraße 7
A-1100 Wien
TEL 01 604 043 40
FAX 01 604 043 423

France

Bose S.A.S
12 rue de Témara
F-78100 ST. GERMAIN-EN-LAYE
France
TEL 0820 820 995
FAX 01 30 61 63 88

**United Kingdom
Customer Support**

Freepost EX 151
Exeter EX1 1ZY
TEL 0800 614 293
FAX 0870 240 2013

Poland

Bose Sp. z o.o.
ul. Woloska 12
02-675 Warszawa, Poland
TEL (48-22) 852-2928
FAX (48-22) 852-2927

Nederland

Bose B.V., Nijverheidstraat 8
1135 GE Edam, Nederland
TEL 0299-390111
FAX 0299-390114

Bose China

Bose Electronics (Shanghai Co., Ltd)
2203-2205 22F, West Gate Tower
1038 West Nanjing Road
MeiLongzhen Plaza
Shanghai 200041,
Peoples Republic of China
TEL 86 21 62713800

Bose Hong Kong

Bose Limited
Suite 2410-11 Shell Tower
Times Square
1 Matheson Street
Causeway Bay, Hong Kong
TEL 852 2110 3330

Bose Taiwan

Worldwide House
Room 905, Floor 9
131 Min Sheng East Road
Section 3
Taipei, Taiwan
TEL 886 2 2514 7676

Bose India

Bose Corporation India Private Limited
4th Floor, Shriram Bhartiya Kala Kendra
1 Copernicus Marg
New Delhi 110 001, India
TEL 91 11 2307 3825 / 26 /27
India Toll Free: 1600 11 2673
Website: www.boseindia.com

Atlas Hi-Fi Pte. Ltd.

68 Orchard Road
#03-19/21 Plaza Singapura
Singapore 238839,
Republic of Singapore
TEL 65-6-339-0966

The Asavasopon Co. Ltd.

50-52 Siphya Road
Mahaprudtharam, Bangrak
Bangkok 10500,
Thailand
TEL 66-2-234-6467

PT Audio Pratama

JL. Lodan Raya No. 1
Block CO/CN
Jakarta 14430,
Indonesia
TEL 62-21-659-8719

CSI Corporation

Seki Building
23, 2-Ga Namsan-Dong
Joong-Gu
Seoul 100-042,
South Korea
TEL 82-2-344-635-114

**Eleksis Marketing
Corporation**

269 Connecticut Street
Greenhills East
Mandaluyong City
Metro Manila 1550,
Philippines
TEL 63-2-724-9566

G&M International LLC

P.O. Box 1229
Dubai, United Arab Emirates
TEL 971-4-2669-000

Sound Imports

Shop 40
The Mall of Rosebank
Cradock Avenue
Rosebank 2196,
South Africa
TEL 27-11-880-1933

World Wide Web

www.bose.com



284228-001

BOSE[®]
Better sound through research[®]

©2005 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
284228 AM Rev.00 CCM-001476