

disabilidades.

3. This appliance should not be used by, on or near children or individuals with certain disabilities.

appliance.

2. Do not pull, twist, or wrap line cord around

tended when plugged in.

1. **This appliance should never be left unat-**ended when plugged in.

electrocution, fire, or injury to persons;

WARNING - To reduce the risk of burns,

immediately. **Do not reach into the water.**

5. If an appliance falls into water, unplug it immediately.

liquid.

4. Do not place in, or drop into, water or other

fall or be pulled into a tub or sink.

3. Do not place or store appliance where it can

2. Do not use while bathing or in the shower.

after using.

1. **Always unplug appliance immediately**

risk of death by electric shock:

live even when the switch is off. To reduce the risk of death by electric shock:

KEEP AWAY FROM WATER

BEFORE USING

READ ALL INSTRUCTIONS

following:

tions should always be followed, including the when children are present, basic safety precau- tions should always be followed, including the

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially

When using electrical appliances, especially damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.

SAVE THESE INSTRUCTIONS

in use.

15. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when

14. Do not touch hot surfaces of the appliance.

appliance.

13. Do not use an extension cord with this ap- ppliance.

Keep the air openings free of lint and other de- bris.

couch, where the air openings may be blocked, or place on a soft surface such as a bed or

12. Never block the air openings of the appliance

any surface while it is hot or plugged in.

11. **Do not place the heated unit directly on** surface touch eyes or skin.

10. Unit is hot when in use. Do not let heated

oxygen is being administered.

9. Do not use outdoors or operate where aero- sol (spray) products are being used or where

ing or hose.

8. Never drop or insert any object into any open-

7. Never use while sleeping.

6. Keep the cord away from heated surfaces.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

 


FUNDAMENTOS DEL RIZADO

Para lograr resultados óptimos, aplique una loción fijadora ligera al cabello antes de secarlo.

➊ Divida el cabello en secciones de 1 pulgada (2.5 cm).

➋ Empezando a 2 pulgadas (5 cm) de la raíz, enrolle el cabello alrededor del tubo hacia la extremidad.

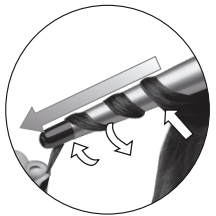

➌ Sostenga el cabello por las puntas durante 5 a 8 segundos (según el tipo de cabello), luego desenrolle delicadamente el cabello. Siempre obtendrá hermosos resultados, fácil y rápidamente. Para obtener rizos más apretados, divida el cabello en secciones más finas. Para obtener ondas más sueltas, enrolle más cabello. Permita que el cabello enfríe antes de peinarlo para "fijar" los rizos.

➍ Repita el proceso con las otras secciones de cabello.

4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

6. Keep the cord away from heated surfaces.

7. Never use while sleeping.

8. Never drop or insert any object into any open- ing or hose.

9. Do not use outdoors or operate where aero- sol (spray) products are being used or where oxygen is being administered.

10. Unit is hot when in use. Do not let heated

11. **Do not place the heated unit directly on** any surface while it is hot or plugged in.

12. Never block the air openings of the appliance

13. Do not use an extension cord with this ap- ppliance.

14. Do not touch hot surfaces of the appliance.

15. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when

LED TEMP. CONTROL	HAIR TYPE	
Power/Low 285°F	Delicate, thin, easy-to-curl hair	
Medium 310°F	Average-to-thick or treated hair	
Med-High 330°F	Thick or wavy hair	
High/Max 360°F - 400°F	Hard-to-curl hair	

Temperature Setting Guide

particular need!

the wand's temperature according to your hair, keep the heat setting on high. You can vary results. If you have thick, wavy or hard-to-curl fine hair, a low temperature will provide the best styling versatility for all hair types. If you have

The wand's unique 5 ultra-high heat temperature settings and Instant Heat technology provide curling wand has been turned on.

WARNING: The curling wand's barrel will get very hot within a few seconds and should not be placed in contact with the skin after the

This curling wand is intended for household use. Use on Alternating Current (60 hertz) only. This 285°F setting will become illuminated. Allow unit to heat up for 30 seconds.

Hair should be clean and completely dried before

GETTING STARTED

using the curling wand. Plug the wand into an electrical outlet. Turn on unit. The Power/Low

285°F setting will become illuminated. Allow unit to heat up for 30 seconds.

14. No toque las partes calientes de este aparato. Utilice las asas o las perillas.

15. El cuerpo del aparato cerca de la salida de aire se vuelve muy caliente durante el uso. No lo toque.

GUARDE ESTAS INSTRUCCIONES

DE OPERACIÓN INSTRUCCIONES

Para uso doméstico solamente. Úselo solamente con Corriente Alterna (60 Hz) de 120 voltios (120V AC).

El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en el tomacorriente polarizado. Si no entrara en el tomacorriente, inviértela. Si aún no entrara completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

Some experience is necessary when learning hair until you achieve the hair style you desire.

➋ Repeat process on additional sections of hair until you achieve the hair style you desire.

➌ Brush hair until it cools.

more hair. To "set" the curl, do not comb or

roll less hair. For loose, free flowing curls, roll hair without kinks. For tighter, bouncier curls, then release. No clamp allows you to easily curl

tip for 5-8 seconds depending on hair type, and then recover system that maintains the wand heating provide you with a uniform and improved

Conair's professional salon standards of engi-

Uniform Heat Recovery System

and helps you create the look you want.

ture range that's gentle and safe for every type of hair, from the finest to the most resistant,

This Instant Heat technology has 5 ultra-high heat temperature settings. There is a tempera-

precision styling.

This styling wand features a ceramic heater that

maintains constant temperature during use for

USING INSTANT HEAT, THE 5 ULTRA-HIGH HEAT TEMPERATURE SETTINGS

within 60 minutes.

the wand off, it will shut itself off automatically

unattended. However, should you fail to turn

Never leave your curling wand on and

before blow-drying hair.

For best results, use a light styling product

from the scalp.

➊ Take a 1" wide section of hair, starting 2"

portion of the barrel towards the cool tip.

➋ Wind the section of hair around the thicker

2. No jale, retuerza ni enrolle el cable alrededor del aparato.

3. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad.

4. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.

5. **No opere este aparato si el cordón o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.**

6. Mantenga el cable alejado de superficies calientes.

7. Nunca utilice este aparato mientras esté dormido/a o adormilado/a.

8. Nunca deje caer ni inserte un objeto en ninguna de las aberturas.


 
9. No lo utilice en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.

10. Este aparato se vuelve muy caliente. Mantenga los ojos y la piel alejados de las superficies calientes.

11. **No coloque el aparato en ninguna superficie mientras esté caliente o conectado.**

12. Nunca bloquee las aberturas de aire ni coloque el aparato en una superficie blanda, como una cama o un sofá, donde se puedan obstruir. Mantenga las aberturas libres de pelusas, cabellos y elementos similares.

13. No utilice una extensión con este aparato.

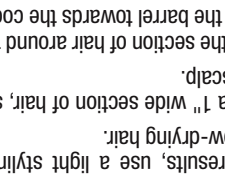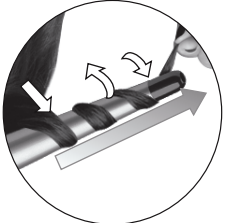

TO CURL HAIR



Conair's professional salon standards of engineering use. This provides consistent styling power results, unlike other units, which lose heat dur- ously and quickly delivered for optimal styling surge of power to ensure that heat is continu- at constant temperatures. There is a constant heat recovery system that maintains the wand heating provide you with a uniform and improved

Uniform Heat Recovery System

and helps you create the look you want.

ture range that's gentle and safe for every type of hair, from the finest to the most resistant,

This Instant Heat technology has 5 ultra-high

precision styling.

This styling wand features a ceramic heater that

USING INSTANT HEAT, THE 5 ULTRA-HIGH HEAT TEMPERATURE SETTINGS

within 60 minutes.

the wand off, it will shut itself off automatically

unattended. However, should you fail to turn

Never leave your curling wand on and

before blow-drying hair.

For best results, use a light styling product

from the scalp.

➊ Take a 1" wide section of hair, starting 2"

portion of the barrel towards the cool tip.

➋ Wind the section of hair around the thicker

2. No jale, retuerza ni enrolle el cable alrededor del aparato.

3. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad.

4. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.

5. **No opere este aparato si el cordón o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.**

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

MANTÉNGALO ALEJADO DEL AGUA

PELIGRO - Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de muerte o herida por descarga:

1. **Siempre desconecte el aparato inmediatamente después de usarlo.**

2. No lo use en el baño o la ducha.

 
3. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.

4. No coloque el aparato ni lo deje caer al agua u otro líquido.


5. Si el aparato cayera al agua, desconéctelo inmediatamente. **No toque el agua.**

ADVERTENCIA - Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. **Nunca deje el aparato desatendido mientras esté conectado.**

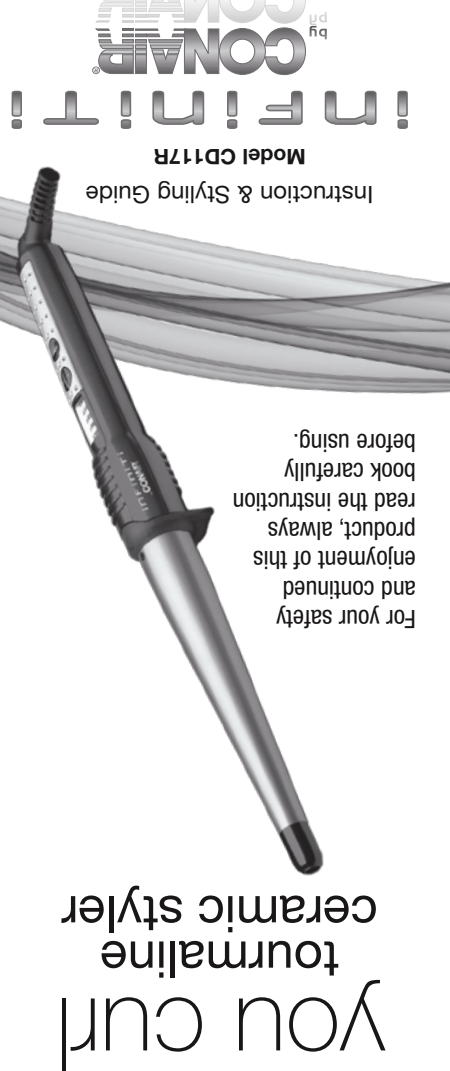

FAMILIARÍCESE CON SU RIZADOR

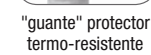

"guante" protector termo-resistente

10PA112660 IB-9897

 
For info on any Conair or Infiniti by Conair product, call: 1-800-3-CONAIR or visit us on the web at: www.conair.com/infiniti

SERVICE CENTER
CONAIR CORPORATION
7475 N. Glen Harbor Blvd
Glendale, AZ 85307
©2010 Conair Corporation

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

**ADVERTENCIA:
SI CREE QUE NO HAY
CORRIENTE CUANDO
EL APARATO ESTÁ
APAGADO, ESTÁ
EQUIVOCADO.**


**MANTÉNGALO ALEJADO
DEL AGUA**

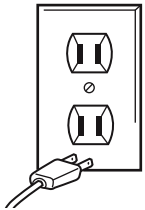

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después de usarlos.

**SIEMPRE DESENCHUFE
LOS APARATOS PEQUEÑOS**

 **WARNING:
IF YOU THINK
THE POWER IS OFF
OR THE SWITCH
IS OFF,
YOU'RE WRONG.
KEEP AWAY FROM WATER**

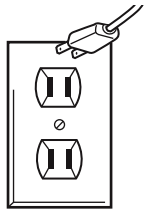

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

LIMITED FIVE YEAR WARRANTY
Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

CENTRO DE SERVICIO

 
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd
Glendale, AZ85307
©2010 Conair Corporation

Para más información sobre los productos Conair o Infiniti by Conair™, llame al 1-800-3-CONAIR o visítenos en www.conair.com/infiniti

10PA112660

IB-9897

you curl
rizador tourmaline
ceramic™

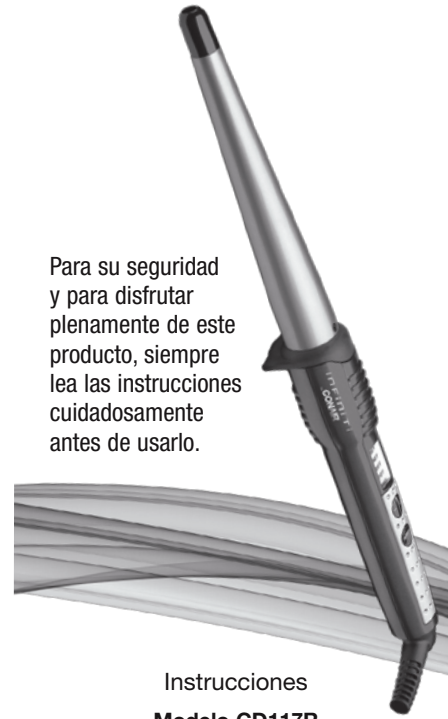

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

Instrucciones
Modelo CD117R



CAUTION
NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

USER MAINTENANCE
Your curling wand is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

