


# User Quick Guide

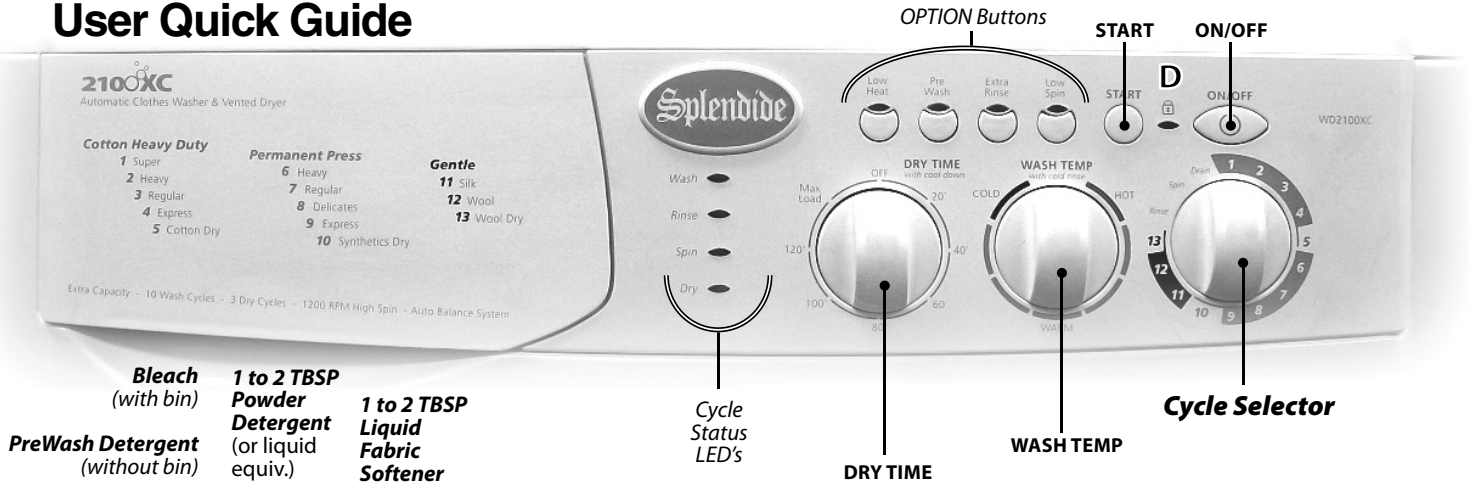

## LOAD SIZES

For best results, DO NOT load the drum more than 1/2 to 2/3 full when DRYING.

WASH	Fabric Type	Maximum Load
	Cottons	2 to 15 lbs.
	Synthetics	2 to 9 lbs.
	Delicates	2 to 8 lbs.
	Wools	2 to 3 lbs.

DRY	Fabric Type	Maximum Load*
	ALL TYPES	8 to 11 lbs.

\* MAX LOAD on the DRY TIME knob is meant only for very full/11lb-loads and will run for 180 minutes.

## DRYING RESULTS

Your washer-dryer operates on 110V and has a 1300W dryer. It will take longer to dry than a traditional dryer (which operates on 220V, 5000W). However, you can increase the efficiency of the dryer by following these tips:

- Try to keep the **door closed** during the dry cycle. This conserves energy by trapping heat,
- use a **LOW SUDSING DETERGENT**.
- use **FABRIC SOFTENER** or a detergent with built-in softeners,
- **DO NOT OVERLOAD** the drum,
- **DO NOT OVERDRY** your laundry.

## Before setting the controls, always make sure,

- the drum is loaded correctly (see left);
- the door is closed;
- the ON/OFF button has been pressed, so power is ON;
- laundry aids have been added to the Dispenser Drawer (see left);
- the DOOR LOCK LED (D) is flashing.

## WASH-TO-DRY AUTOMATICALLY

- |   |  |
|---|--|
| <b>WASH</b>   | <ul style="list-style-type: none"> <li>• Select the wash cycle using the <b>Cycle Selector</b>;</li> <li>• select the wash water temperature using the <b>WASH TEMP</b> knob;</li> <li>• if desired, press any available <b>OPTION</b> button(s);</li> </ul> |
| <b>DRY</b>  | <ul style="list-style-type: none"> <li>• select the length of drying time using the <b>DRY TIME</b> knob;</li> </ul>   |
| <p>• press <b>START</b>.</p> <p><i>You will hear a 'click' when the Child Door Lock engages and the cycle will start. When the wash cycle ends, the appropriate dry cycle will begin automatically.</i></p> |  |

**NOTE: To CANCEL a cycle and clear the controls, press and hold the START button.**

## WASH ONLY

- |   |   |
|---|---|
| <b>WASH</b>   | <ul style="list-style-type: none"> <li>• Select the wash cycle, temperature and any wash options (see WASH above);</li> </ul> |
| <b>DRY</b>  | <ul style="list-style-type: none"> <li>• set the <b>DRY TIME</b> knob to the <b>OFF</b> position;</li> </ul>                  |
| <ul style="list-style-type: none"> <li>• press the <b>START</b> button.</li> </ul> <p><i>When the wash cycle ends, the machine will stop.</i></p> |   |

## DRY ONLY

- |             |  |
|-------------|--|
| <b>WASH</b> | <ul style="list-style-type: none"> <li>• Set the <b>Cycle selector</b> to position <b>5, 10, or 13</b>;</li> <li>• select the length of drying time using the <b>DRY TIME</b> knob;</li> </ul> |
| <b>DRY</b>  | <ul style="list-style-type: none"> <li>• press the <b>START</b> button.</li> </ul> <p><i>When the dry cycle ends, the machine will stop.</i></p>   |

## CHILD DOOR LOCK

Your washer-dryer is equipped with a Child Door Lock. For your child's safety, the door stays locked for the duration of the WASH and DRY cycles. However, the 'Add-An-Item' feature allows you to unlock the door when needed.

**NOTE: The 'Add-An-Item' feature is not available whenever it is unsafe to open the door (i.e. during high spins, if water level is to high, etc.)**

## 'Add-An-Item'

- |               |  |
|---------------|--|
| <b>Unlock</b> | <ul style="list-style-type: none"> <li>• Press the <b>ON/OFF</b> button;</li> </ul> <p><i>You will hear 2 'clicks' when the door unlocks. It is now safe to open the door.</i></p> |
| <b>Resume</b> | <ul style="list-style-type: none"> <li>• Close the door;</li> <li>• press the <b>ON/OFF</b> button to resume the cycle.</li> </ul>   |

**IMPORTANT: Never attempt to open the door when the Door Lock LED (D) is LIT SOLID.**

## COMBO WASHER-DRYER LAUNDRY TIPS

### DOING LAUNDRY IN A COMBO

- **Don't let laundry pile up.** Keep up with laundry by doing a small load every day or two. Make it part of your routine to throw a load in after your workout or before you go to bed and let your Splendide do the rest!
- Because your washer-dryer is **front-loading and operates on 110V**, cycle times may be longer than what you're used to: 40 to 80 minutes to wash. 90 to 110 minutes to dry.
- Your washer-dryer is extremely efficient. You might not be able to see water in the drum during wash. **This is normal.**
- Once set, the Dry Time, Water Temp, and Cycle **knobs WILL NOT move.** The 'Status LED's' will let you know the progress of your cycle.
- **Always use fabric softener** for WASH-TO-DRY LOADS. Using softener assures that the laundry falls easily from the drum after high spin and tumbles freely during the dry cycle.

### FOR BEST RESULTS,

- **NEVER OVERLOAD THE DRUM.**
- **NEVER EXCEED** the recommended detergent and softener amounts.
- **USE FABRIC SOFTENER**, or a detergent with built-in softeners.
- **NEVER OVERDRY LAUNDRY.** Moisture is what makes fabrics soft and fluffy.
- Use 'Cotton Heavy Duty' cycles **ONLY** for heavy cottons (towels, jeans, etc.)
- For items that may wrinkle, use 'LOW SPIN' in wash and/or 'LOW HEAT' with 'Synthetics Dry.'
- For mixed loads, remove items that may wrinkle while still damp (dress shirts, etc.) Hand press and hang them. Then, continue drying the rest of the load (underwear, towels, etc.)
- After washing, shake out **LARGE ITEMS** (pants, sheets, etc.) Loosely fold them and place them back in the drum. Then dry them. This will improve drying times and reduce fabric wrinkling.

### WHERE'S THE LINT FILTER?

Your washer-dryer is so gentle on fabrics, that very little lint is produced. It passes safely through a special, 'self-cleaning' pump system and then out the drain and/or dryer vent of your washer-dryer. There's no filter for you to clean!

**However, if your washer-dryer is vented (Model 2100XC)**, it's recommended that you occasionally, go outside and check the dryer vent for proper airflow. Assure that the vent and ducting are lint-free.

### ABOUT VENTLESS DRYING

**If your washer-dryer is ventless, (Model 7100XC)**, when you remove items after the self-condensing drying process, they may feel slightly damp. **THIS IS NORMAL.** Simply shake items out to allow any steam to dissipate (a few seconds) before folding or hanging them as you usually would. **NOTE: Splendide's self-condensing drying process will not add heat or humidity to the surrounding area.**

## SPECIAL WINTERIZATION INSTRUCTIONS FOR RV/MARINE INSTALLATIONS:

	To winterize your washer-dryer,	To use your washer-dryer again,	Optional Winterization instructions
<b>WINTERIZE</b>	<ol style="list-style-type: none"> <li>1. With washer-dryer power OFF, pour ½ quart of RV-type antifreeze into washer drum;</li> <li>2. Close door. Advance <b>Cycle Selector</b> to '<b>Spin</b>';</li> <li>3. Press <b>ON/OFF</b> button, then press <b>START</b>. let the washer-dryer run for 1 to 2 minutes;</li> <li>4. Press <b>ON/OFF</b> button to turn power OFF.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reconnect water inlet hoses to corresponding HOT/COLD faucets. Turn faucets ON. <i>NOTE: Check water inlet hoses and pump periodically (see Users Guide);</i></li> <li>2. Plug washer-dryer into appropriate electrical outlet (see Users Guide) - <b>OR</b> reconnect power supply;</li> <li>3. With washer-dryer power OFF, pour 1/2 TBSP. of powder detergent (or liquid equiv.) into <b>compartment '2'</b> inside <b>Dispenser Drawer</b>;</li> <li>4. Advance <b>Cycle Selector</b> to <b>position '9'</b>;</li> <li>5. Press <b>ON/OFF</b> button, then press <b>START</b>.</li> </ol>	<p>If you're currently pumping antifreeze through your fresh water system, you can follow these steps to winterize your washer-dryer:</p> <ol style="list-style-type: none"> <li>1. With machine power OFF, turn <b>WASH TEMP</b> knob to '<b>HOT</b>';</li> <li>2. Advance <b>Cycle Selector</b> to <b>position '3'</b>;</li> <li>3. Press <b>ON/OFF</b> button, then press <b>START</b>. Let machine fill until the drum turns (could take up to 1 to 2 minutes);</li> <li>4. Press <b>ON/OFF</b> button to turn power OFF;</li> <li>5. Advance <b>Cycle Selector</b> to '<b>Spin</b>';</li> <li>6. Press <b>ON/OFF</b> button, then press <b>START</b>.</li> </ol>
<b>END</b>	<ol style="list-style-type: none"> <li>5. Unplug washer-dryer from electrical outlet (or disconnect power);</li> <li>6. Turn water supply faucets OFF. Disconnect inlet hoses from faucets;</li> <li>7. Drain remaining water from the hoses. <b>FINISHED.</b></li> </ol>	<ol style="list-style-type: none"> <li>6. Allow machine to run through the complete cycle to clean out any remaining antifreeze. <b>FINISHED.</b></li> </ol>	<b>Winterization Option</b>
<b>END</b>		<b>END</b>	<ol style="list-style-type: none"> <li>7. After letting antifreeze drain completely from drum, press the <b>ON/OFF</b> button to turn power OFF. <b>FINISHED.</b></li> </ol>

