 
 


Installation Guide

ML-85G/85G plus



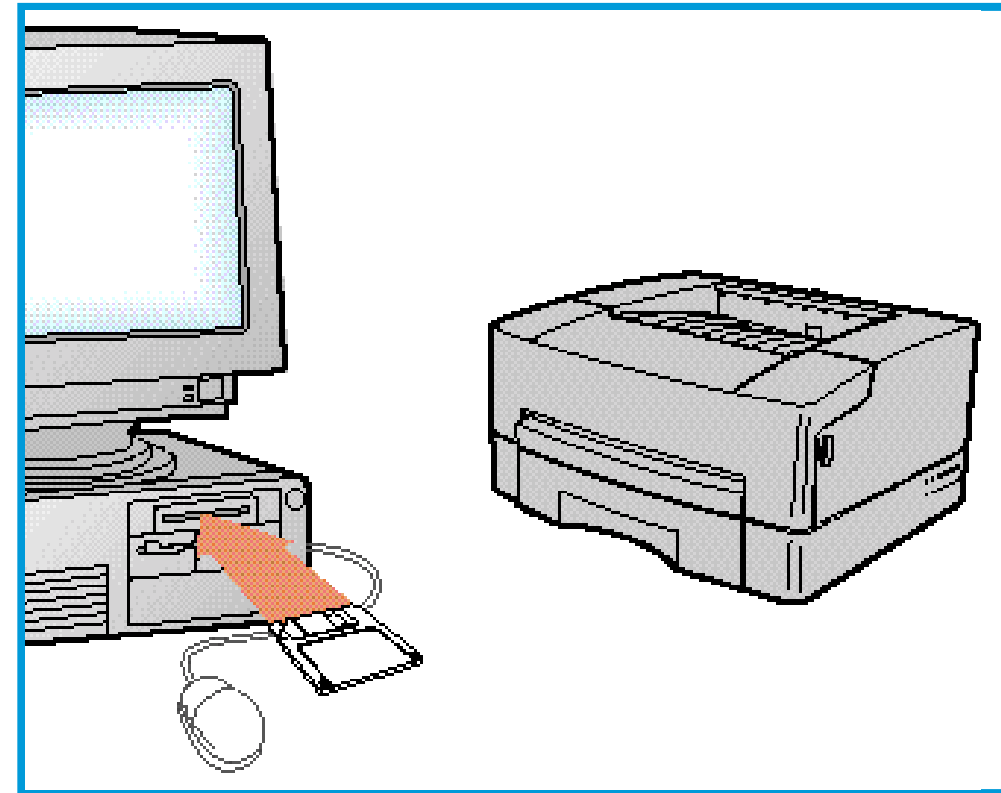

Contents



Before using



Installing the Toner Cartridge	1
Supplying Paper	2
Connecting Computer and Power Cables.....	3
Installing Printer Driver and Printing	4

Driver Setup




Printing (Windows® 95)	5
Installing Driver	5
Setting as Default Printer	7
Printing	8
Uninstalling Drivers	9
Printing (Windows 3.x)	10
Installing Driver	10
Setting as Default Printer	12
Printing	13
Uninstalling Drivers	14
Printing to a Network Printer ...	15
Setting up a Host PC	15
Setting up WPS Driver onto the Client PC	17
Client PC Sharing Setup	18





Installing the Toner Cartridge

 
- Remove contents and packing material.

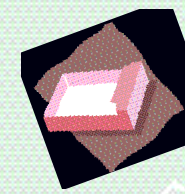

Supplying the Paper

1

 
Place the cartridge on a stable surface, then pull out the tape attached to top of cartridge, as shown.

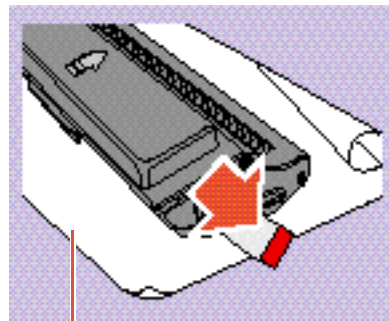


- Place a protective sheet of paper underneath the cartridge, in case of toner leakage.
- Be careful not to tear the tape while removing.

2

 Open the Top Cover by pressing the release button.

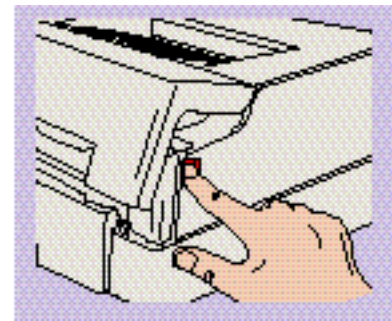


 - Rock the toner cartridge to distribute toner material evenly, as shown below:

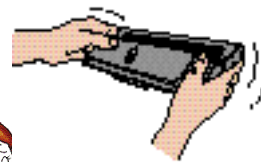

3

 
Insert the cartridge and close the cover.

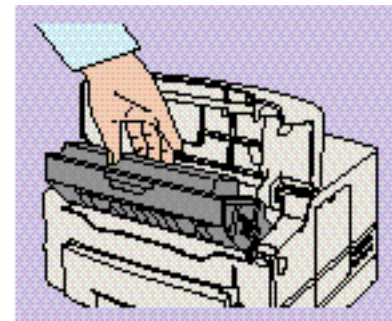

- Close the cover by pressing down until it clicks.


Note • Be careful not to spill toner material when removing the tape.

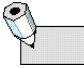

 • Follow the above steps to install the toner cartridge.


1

 Remove the sealing tapes and slide out the Paper Cassette.

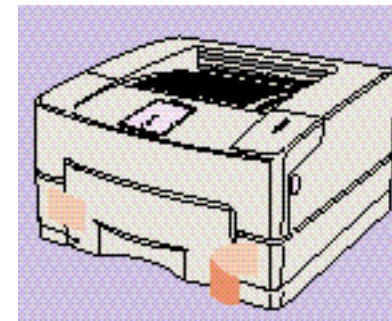

2

 
Place blank paper into the Cassette.

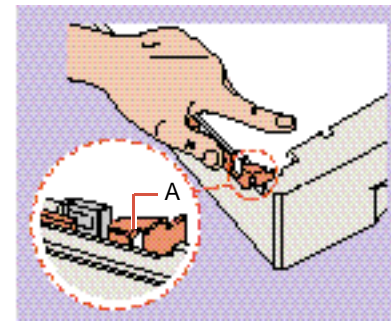



- Insert the corner of the paper stack under metal tab (A).

3

 Push the Cassette back into place.

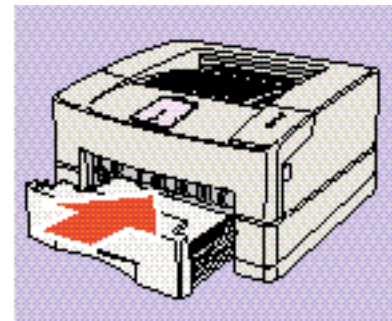


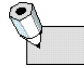  • Refer to page 4-1 in Operator's Guide to set the paper size.

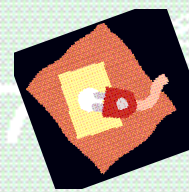

Connecting Computer and Power Cables

 
- Be sure to remove power from both computer and printer.

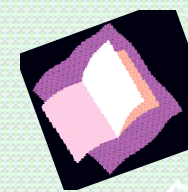

Installing Printer Driver and Printing

1 Connect printer to computer.

 - A printer cable is not included with the printer, and must be supplied by the user.
- For best performance, use a good quality shielded cable with IEEE 1284-compatible pin configuration (Centronics).

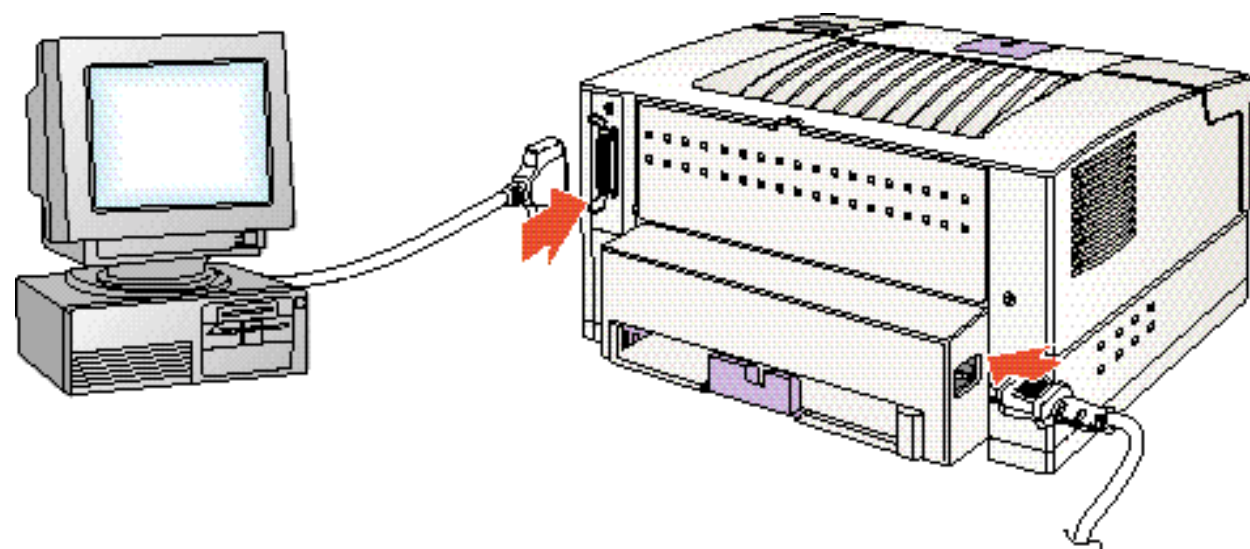

- Note** At temperatures below 50°F (10°C), apply printer power at least an hour before using.
- This will help maintain print quality.
 - In winter time, it is recommended to keep printer on (Power Save mode).

2 Plug in the power cord.

- Note that this printer does not have a power switch. It will automatically shut off after a period of non-use.

From this point forward, you will be guided through driver installation and printing documents.

The setup program is compatible with Windows 3.x and Windows 95.

This *Installation Guide* describes only setup and printing examples. To learn more details about the product, read the *Operator's Guide* supplied with the printer.

 
System Requirement

(Note that the ML-85G/85G plus printer does not support switchbox connections.)

- IBM or compatible with 386 or higher processor
- Free disk space of at least 4Mb
- More than 8Mb RAM memory (16Mb recommended, and note print speed will increase as system memory is increased.)

Before Installation

Remove all other printer drivers before running Setup program, or change the printer ports to 'FILE'. If not, printing operation may fail.

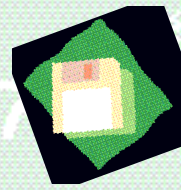

Printing (Windows 95)

Installing driver

 
Turn on printer and computer.

1 When Windows 95 senses the printer and alerts you with the message below, click **OK**.




• If no message appears: Select **Run** under Start menu and type a:\setup (or b:\setup) on the command line, then press **Enter**.

2 Insert diskette #1 into the floppy drive and click **OK**.

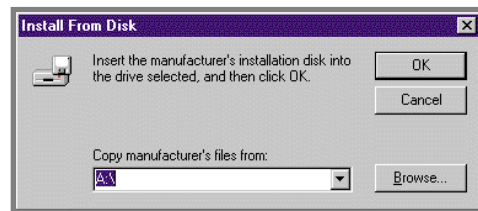


3 Type your name and company

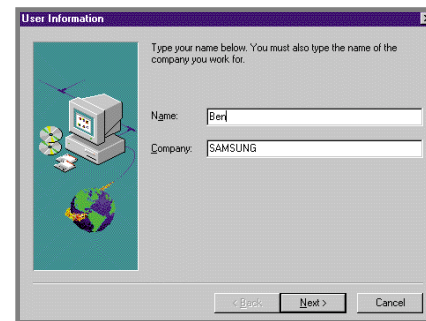 


• The information is the same as entered when Windows 95 was installed. Change and/or click **Next** if correct.

 
4 If the below message appears during installation, insert next diskette and click **OK**.

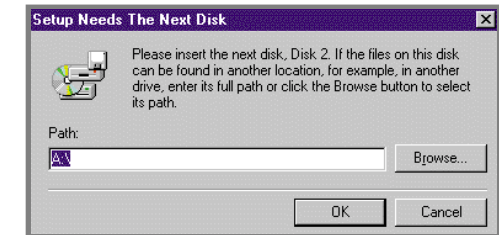

5 Setup resumes the installation.

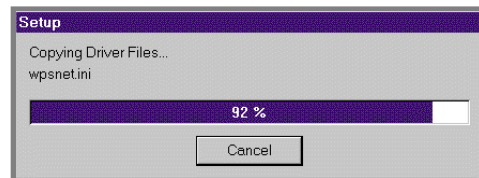 

 6 When installation is complete, click **Finish**.

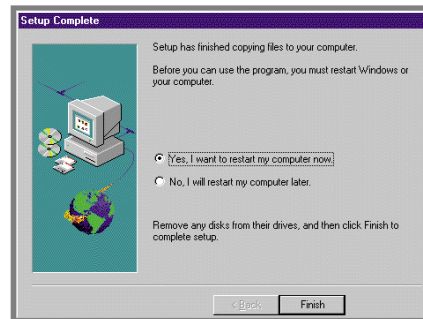

• Setup exits and Windows 95 restarts.

Printing (Windows 95)

Setting as default printer

 


Printing (Windows 95)


Printing




1 Select **Printers** under **Settings** in **Start** menu.

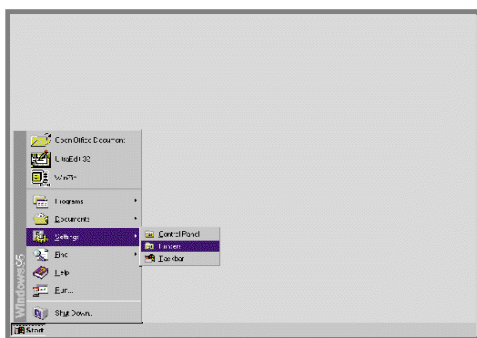

 2 Double-click the **ML-85G/85G plus** icon.

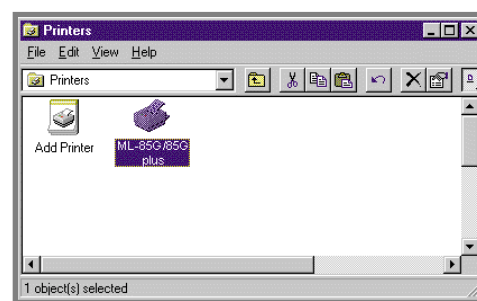

 
3 Select **Set As Default**. A check mark will confirm the selection next time you open the **Printer** menu.

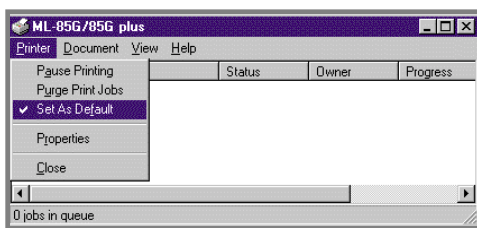


Set as default printer.

The following sample instructions show how to print using Microsoft® Word.

 
1 Open the file you want to print.

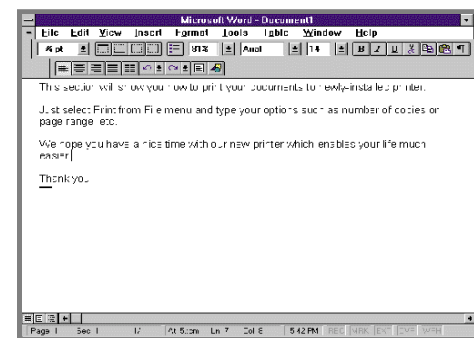

2 Select **Print** in **File** menu.

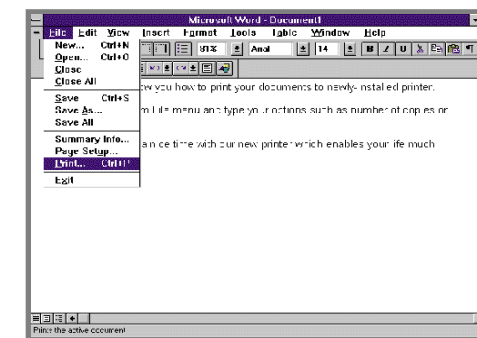 

 3 Enter the number of copies and pages to print, and click **OK**.

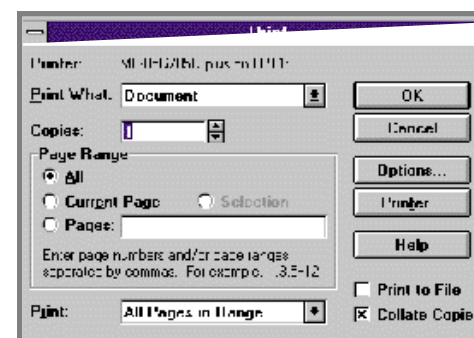

If printing fails, there may be a problem with the PC CMOS setup.


To solve this problem:

- Uninstall the previous printer driver (see next page), then re-install it. If set to **output only**, printing may fail.
- Reboot your PC, run CMOS setup, and set the LPT mode to **bi-directional**.


Windows 95
Uninstalling driver

Printing (Windows 3.x)
Installing driver

 
1 Select **ML-85G&85G plus** uninstaller.

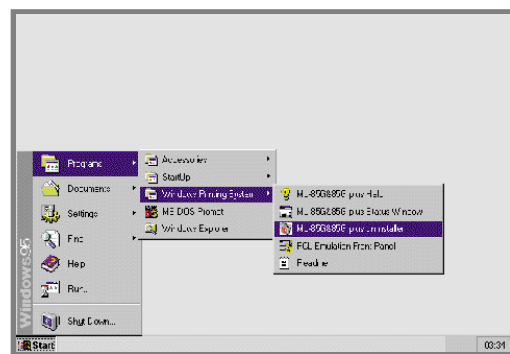

2 Click **Yes**.

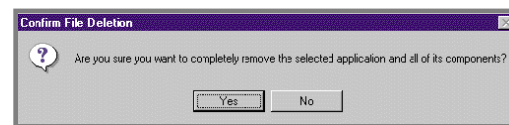 


 3 Uninstaller removes printer driver program, and restarts Windows 95.

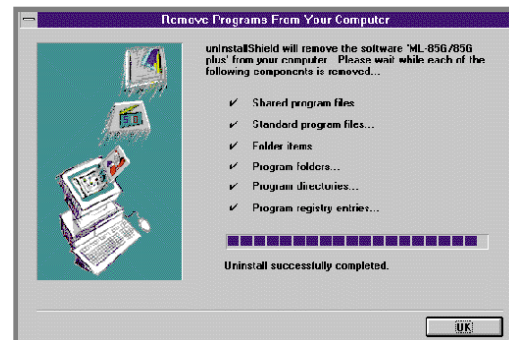


Turn on printer and computer.

 
1 Insert diskette #1 into the drive.

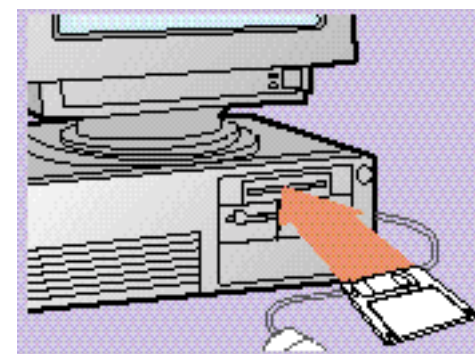

 
3 Type `a:\setup` (or `b:\setup`) on the command line, then click **OK**.

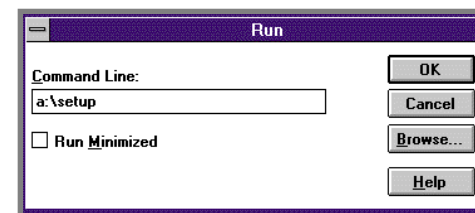

 2 Select **Run** from the Program Manager File menu.

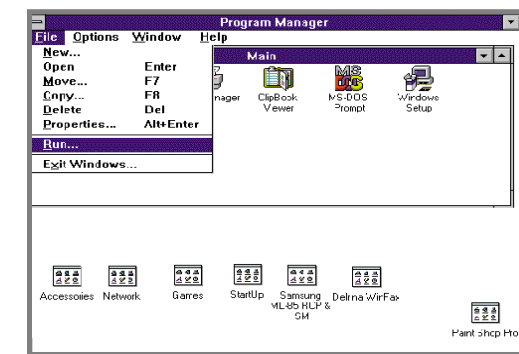

 4 Type your name and company name, and click **Next**.

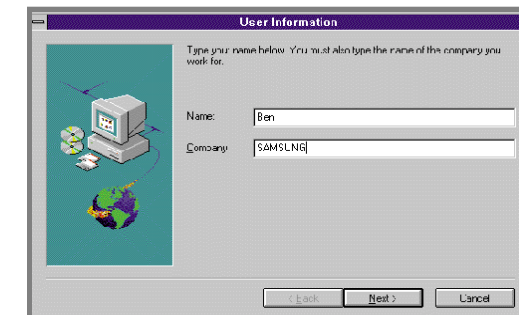


• The information is the same as entered when Windows was installed. Change and/or click **Next** if correct.

Printing (Windows 3.x) Installing driver




Printing (Windows 3.x) Setting as default printer

 
5 When the following message appears, insert the next diskette and click **OK**.

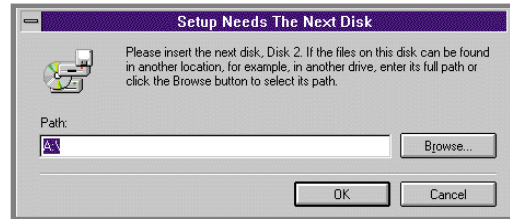


6 Setup resumes the installation.

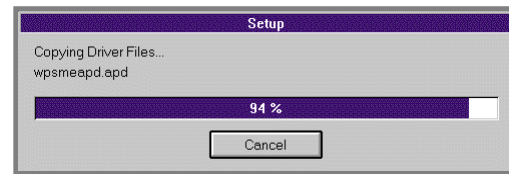 

 
1 Double-click the **Printers** icon in Control Panel.

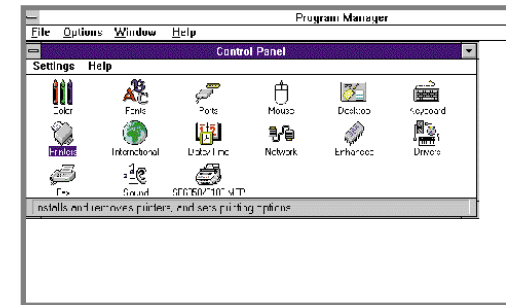

 2 Select **ML-85G/85G plus**, click **Set As Default Printer**, then **Close**.

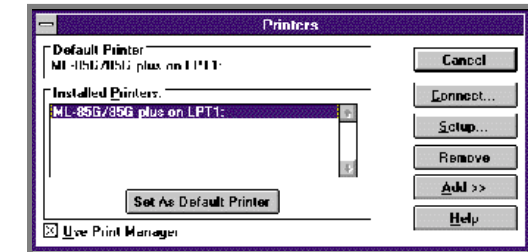

 7 When installation is complete, click **Finish**.

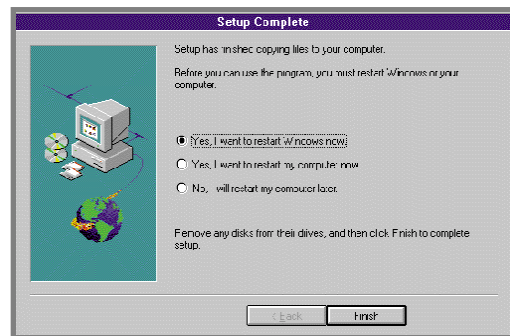

• Setup exits, and Windows restarts.

Set as default printer.

Printing (Windows 3.x)

Printing




Windows 3.x


Uninstalling driver

The following sample instructions show how to print using the Microsoft® Word application.

 
1 Open a file to print.

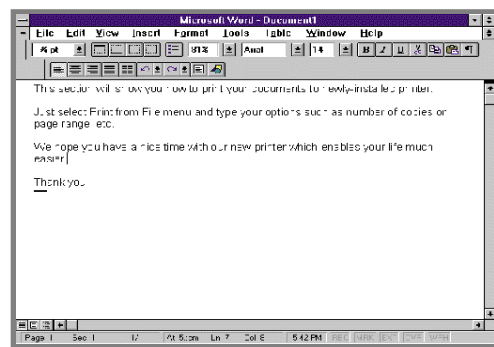

 2 Select **Print** from the **File** menu.

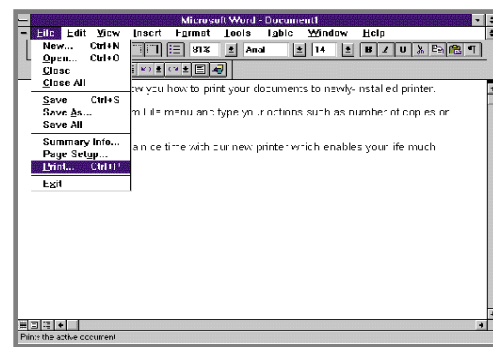

 
3 Enter the number of copies and pages to print, then click **OK**.

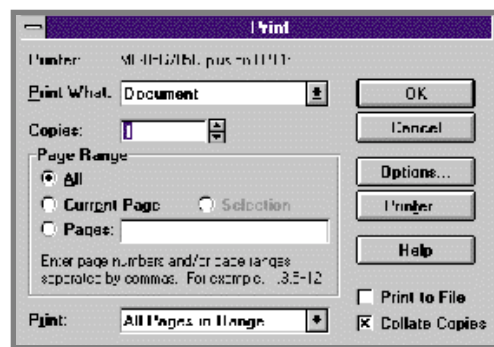


If printing fails, reboot your PC, and run **CMOS setup** to set the LPT mode to **bi-directional**. If set to **output only**, printing may fail.

Uninstall the previous printer driver (see next page), then re-install it.

 
1 Open Program Manager and double-click the **ML-85G/85G plus uninstaller**.

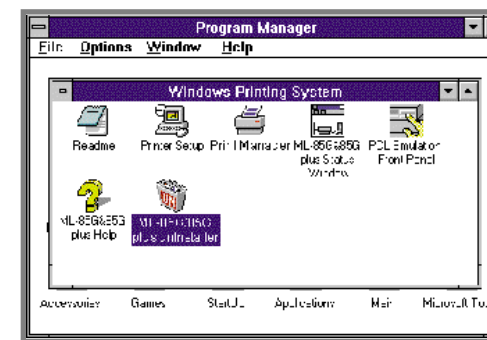


2 Click **Yes**.

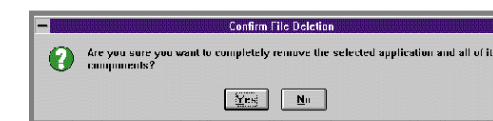 

  3 Uninstaller removes printer driver program and restarts Windows.

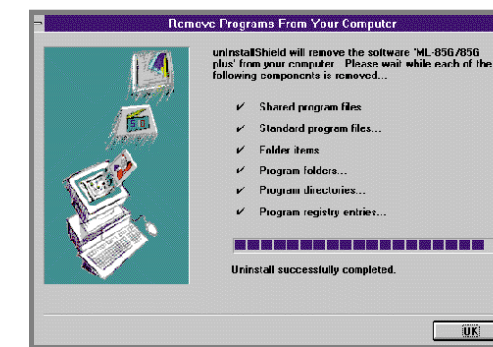

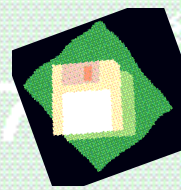


Printing on a network printer

Setting up a Host PC printer


Install the print driver before setting up sharing.

See pages 5 through 14 for instructions on installing drivers.

 
1 Click Start menu, select Control Panel, and double-click the **Network** icon.

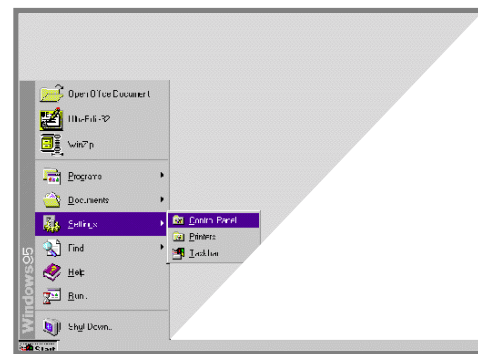

 
2 Click **File and Print Sharing**, check box(es), then click **OK**.

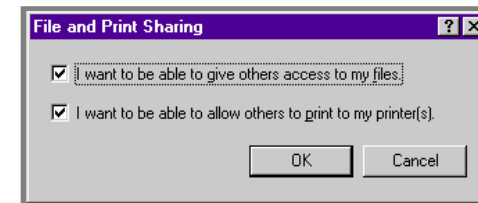

 
3 Click Start menu and select Printers in Settings, then double-click the **ML-85G/85G plus**.

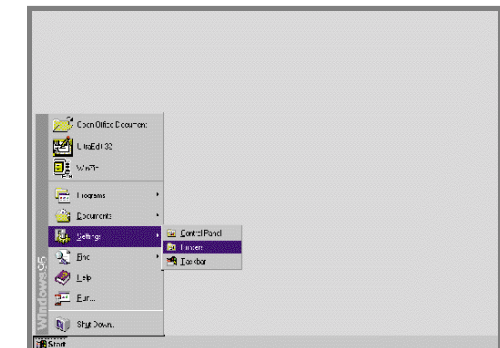

 4 Select **Properties** in Printer menu.

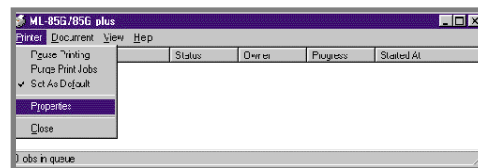

 5 Click the **Sharing** tab, check **Shared As**, fill in the Shared Name field, and click **OK**.

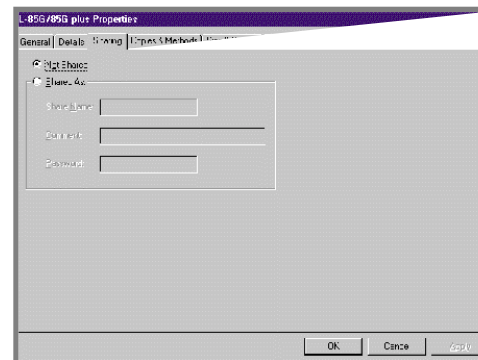

Printing on a network printer

Installing driver onto a client PC

Printing on a network printer

Client PC Sharing setup

Before setting up sharing, printer driver should be installed.
See pages 5 through 14.

1 Click Start menu, select Control Panel, then double-click **Printer**.

2 Double-click **ML-85G/85G plus**, then choose **Properties** from the Printer menu.

1 Click **Add Port** in Details section.

2 Click Browse, select your printer's name, then click **OK**.

