 


Institutional Monitor

Instructions for Use PS1132C

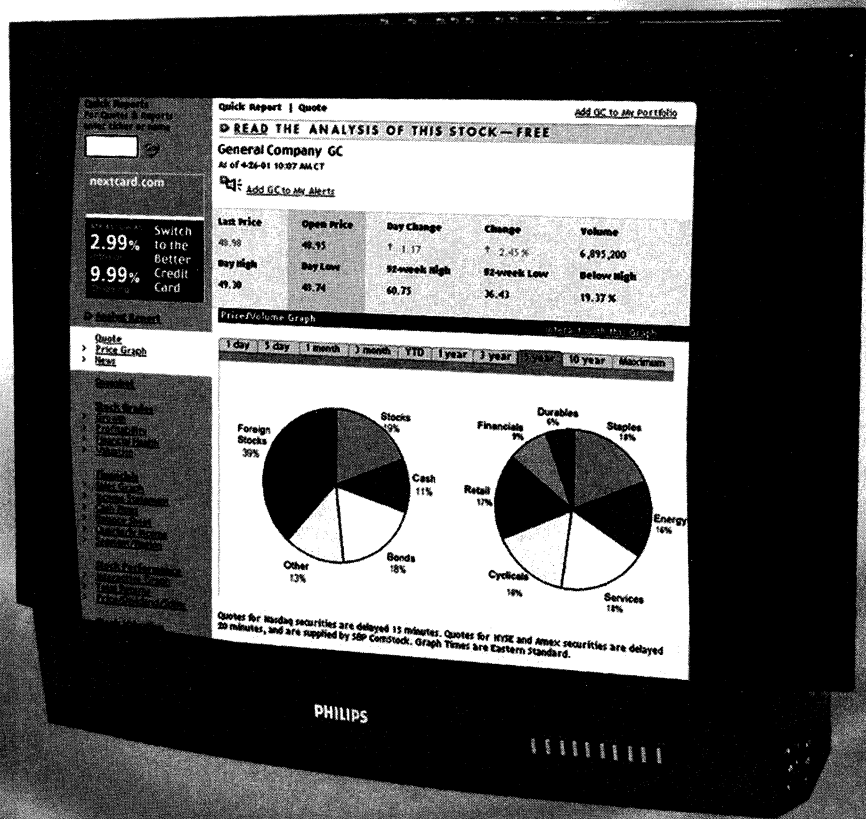

Setting Industry Standards™

Let's make things better.



PHILIPS



INTERNATIONAL
HOTELS



USA PHILIPS INC.




PHILIPS



SAFETY INSTRUCTIONS - Read before operating equipment

 
This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Water and Moisture** - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
6. **Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A.  An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 6B. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. **Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

11. **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
12. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
13. **Power Lines** - An outdoor antenna should be located away from power lines.
14. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.
Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Fig. below.
15. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
16. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
17. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
18. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of Antenna Grounding as per NEC - National Electric Code

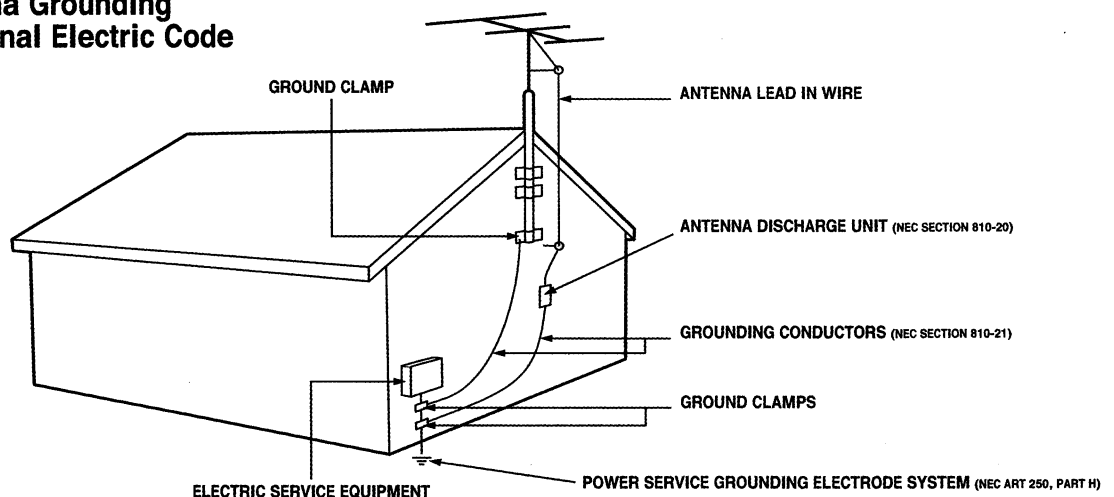

1. The first part of the document discusses the importance of maintaining accurate records of all transactions and activities. It emphasizes that proper record-keeping is essential for ensuring transparency and accountability in the organization's operations.

2. The second part of the document outlines the various methods and tools used to collect and analyze data. It highlights the need for consistent data collection procedures and the use of advanced analytical techniques to derive meaningful insights from the data.

3. The third part of the document focuses on the implementation of data-driven decision-making processes. It describes how the organization leverages its data to identify trends, assess risks, and optimize its performance across different areas.

4. The fourth part of the document addresses the challenges and opportunities associated with data management. It discusses the importance of data security, privacy, and access control, as well as the potential for data to drive innovation and growth.

5. The fifth part of the document provides a summary of the key findings and recommendations. It concludes that a robust data management strategy is critical for the organization's long-term success and sustainability.





17.1



Thank you for purchasing PHILIPS PS1132C Large Screen Display

FEATURES

- 34-inch CRT with 32-inch viewable image.
- Auto-scanning frequency of 30-48 kHz horizontally and 50-120 Hz vertically. This allows compatibility with video equipment and personal computers.
- Loud speakers 2 x 10W.
- OSD controls of Contrast, Brightness, Color Temperature, Color Adjustment, Degauss for Video adjustments; Treble, Bass, Balance, Surround, DYN. Bass Boost, Parallelogram, Speaker for Audio adjustments; V-Size/Position and H-Size/Position for screen Size and Position adjustments; Tilt, Pincushion and Trapezoid for Geometry adjustments and Factory Reset.
- Capable of connecting various multimedia and home entertainment equipment; for example, VCR, DVD player, LD player, stereo systems, cable television, video camera or Set-Top-Box, etc.
- Y-Cb-Cr Video Input Connector for enhanced DVD Performance.
- Dynamic Focusing Circuit for advanced clarity.
- Scan Velocity Modulation Circuit for rich colored images.
- Compatible with VGA, SVGA, XGA, VESA of PC standard signal, 1024 x 768.
- IR remote control
- Built-in microprocessor controls picture size and centering in accordance with input signals. It also memorizes the picture data.

PLEASE READ IMPORTANT SAFETY FEATURES AND INSTRUCTIONS THOROUGHLY BEFORE USAGE.

Continuation of FD-302 of [REDACTED], dated [REDACTED]

Page [REDACTED]

IDENTIFICATION

1. Name of person to whom referred: [REDACTED]
2. Address of person to whom referred: [REDACTED]
3. Date of birth: [REDACTED]
4. Sex: [REDACTED]
5. Race: [REDACTED]
6. Height: [REDACTED]
7. Weight: [REDACTED]
8. Hair: [REDACTED]
9. Eyes: [REDACTED]
10. Complexion: [REDACTED]
11. Build: [REDACTED]
12. Occupation: [REDACTED]
13. Education: [REDACTED]
14. Date of last contact: [REDACTED]
15. Name of last contact: [REDACTED]
16. Address of last contact: [REDACTED]
17. Date of last contact: [REDACTED]
18. Name of last contact: [REDACTED]
19. Address of last contact: [REDACTED]
20. Date of last contact: [REDACTED]
21. Name of last contact: [REDACTED]
22. Address of last contact: [REDACTED]
23. Date of last contact: [REDACTED]
24. Name of last contact: [REDACTED]
25. Address of last contact: [REDACTED]
26. Date of last contact: [REDACTED]
27. Name of last contact: [REDACTED]
28. Address of last contact: [REDACTED]
29. Date of last contact: [REDACTED]
30. Name of last contact: [REDACTED]
31. Address of last contact: [REDACTED]
32. Date of last contact: [REDACTED]
33. Name of last contact: [REDACTED]
34. Address of last contact: [REDACTED]
35. Date of last contact: [REDACTED]
36. Name of last contact: [REDACTED]
37. Address of last contact: [REDACTED]
38. Date of last contact: [REDACTED]
39. Name of last contact: [REDACTED]
40. Address of last contact: [REDACTED]
41. Date of last contact: [REDACTED]
42. Name of last contact: [REDACTED]
43. Address of last contact: [REDACTED]
44. Date of last contact: [REDACTED]
45. Name of last contact: [REDACTED]
46. Address of last contact: [REDACTED]
47. Date of last contact: [REDACTED]
48. Name of last contact: [REDACTED]
49. Address of last contact: [REDACTED]
50. Date of last contact: [REDACTED]

Continuation of FD-302 of [REDACTED], dated [REDACTED]

Page [REDACTED]

Contents

1	PACKAGE CONTENTS	6
2	INSTALLATION AND PREPARATION	6
2.1	REAR PANEL CONNECTORS.....	6
2.2	USA POWER CORD CONNECTOR	7
2.3	FRONT PANEL CONNECTORS	8
3	PANEL BUTTONS	8
3.1	FRONT PANEL BUTTONS.....	9
4	REMOTE CONTROL KEYS	10
5	OSD CONTROLS	12
5.1	MAIN MENU	12
5.2	VIDEO	13
5.3	AUDIO.....	14
5.4	SIZE AND POSITION	15
5.5	GEOMETRY	16
5.6	FACTORY RESET.....	16
5.7	EXIT.....	16
6	PC MODE MENU QUICK GLANCE	17
7	POWER CONSUMPTION	18
8	PRESET MODES	18
9	SPECIFICATIONS	19
10	WARRANTY INFORMATION	21

PS1132C

 
1 Package contents

Check that 5 items are present and in good condition:

1. PHILIPS PS1132C Large Screen Display (with attached power cord)
2. Remote control
3. 2 AAA batteries
4. 15-pin video signal cable
5. User manual

2 Installation and Preparation

2.1 REAR PANEL connectors

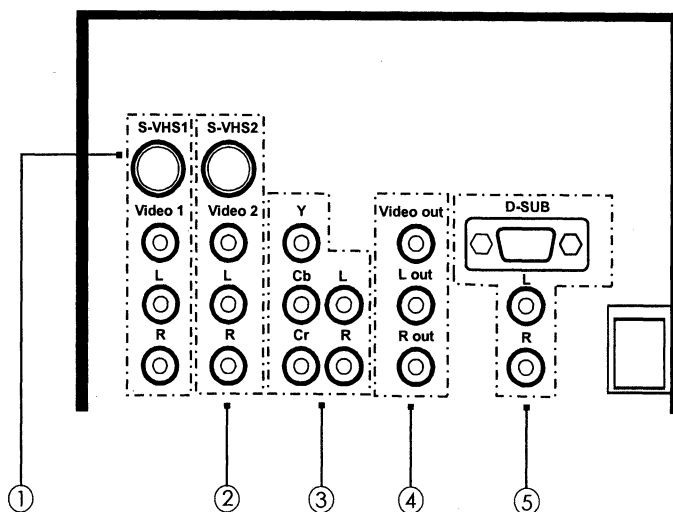

- ① **S-VHS-1:** connect to equipment such as VCR, DVD, LD, camcorder, TV game with an s-video signal cable.
- VIDEO 1:** connect to a device such as TV Game, CATV, VCR, DVD, LD, camcorder, etc..
- L/R audio jacks:** connect to CD player or audio system.

Note: If both S-VHS-1 and VIDEO 1 are occupied, the monitor will select the output to S-VHS-1 connection for better picture quality.

- ② **S-VHS-2:** function the same as S-VHS-1.
- VIDEO 2:** function the same as Video 1.
- L/R audio jacks:** connect to audio system.

18112

18112-10000

18112-10000

18112-10000

18112-10000

18112-10000

18112-10000

18112-10000

18112-10000

18112-10000



18112-10000

18112-10000

18112-10000

18112-10000

18112-10000

18112-10000

18112-10000

18112-10000

18112-10000

 
18112-10000

18112-10000

- ③ **Y-Cb-Cr jacks:** connect to DVD player.
L/R audio jacks: connect to audio system.
- ④ **VIDEO out:** connect to VCR with video signal.
L out/R out: connect to VCR with audio signal.
- ⑤ **PC 1:** connect the 15-pin video signal cable to your PC system.
L/R audio jacks: connect to PC, Internet / Intranet with audio signal.

2.2 USA power cord connector

For USA area, connect the 15-pin video signal cable to the PC 1 jack. Plug the power cord to the power outlet.

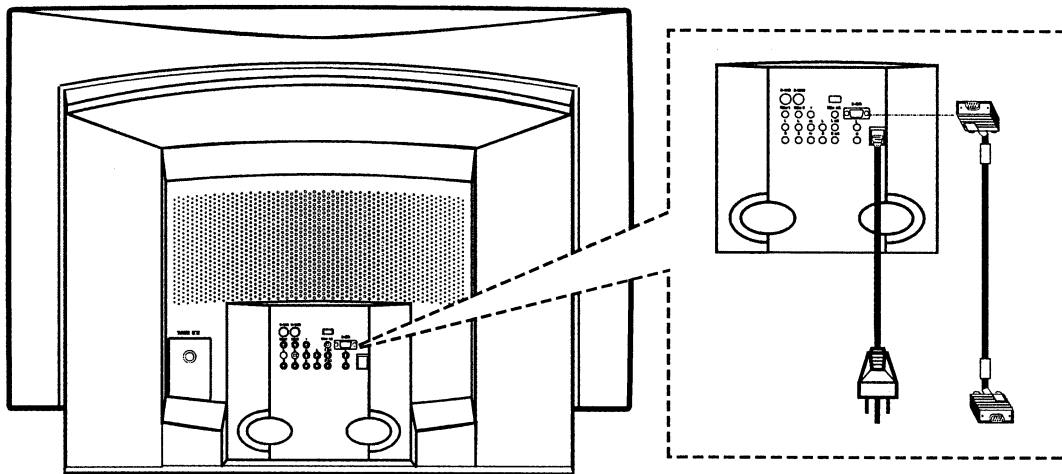


1. The following are the main components of a computer system:
 a. Hardware
 b. Software
 c. Data
 d. User
2. The following are the main components of a computer system:
 a. Hardware
 b. Software
 c. Data
 d. User
3. The following are the main components of a computer system:
 a. Hardware
 b. Software
 c. Data
 d. User



PS1132C

 2.3 FRONT PANEL connectors

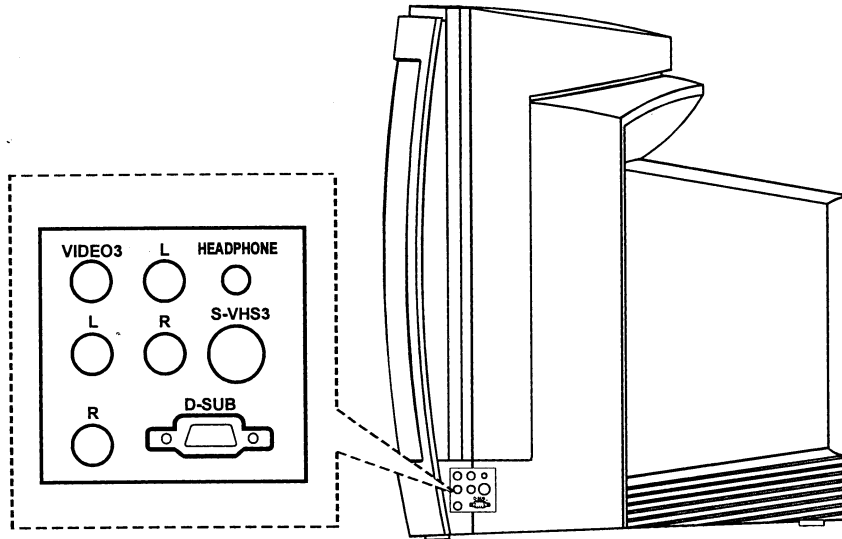

VIDEO 3 input jack: connect to VCR, DVD, etc..


HEADPHONE: connect to headphones.

S-VHS-3: connect to equipment such as VCR, DVD, LD, camcorder, TV game with a s-video signal cable.

PC 2: The 2nd source of PC input connection. It is connected by a 15-pin video cable to your PC.

3 Panel buttons

 MASTER POWER switch is located on the lower left hand side of the cabinet.

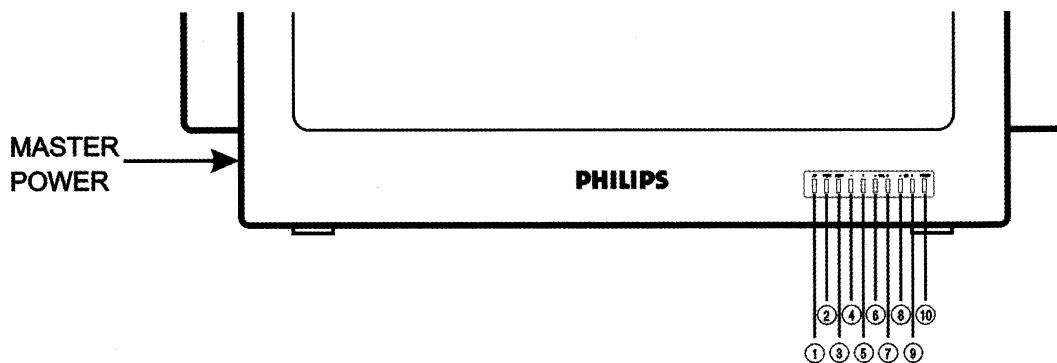

PS. Q10

5. (a) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(b) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(c) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(d) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(e) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(f) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(g) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(h) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(i) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(j) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(k) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(l) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(m) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(n) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(o) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(p) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(q) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(r) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(s) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(t) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(u) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(v) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(a) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(b) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(c) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(d) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(e) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(f) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(g) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(h) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(i) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(j) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(k) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(l) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(m) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(n) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(o) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(p) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(q) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(r) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(s) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(t) $\frac{1}{2} \times 1000 \times 1000$

2.5 million

(u) $\frac{1}{2} \times 1000 \times 1000$

 
2.5 million

(v) $\frac{1}{2} \times 1000 \times 1000$

2.5 million



3.1 FRONT PANEL buttons

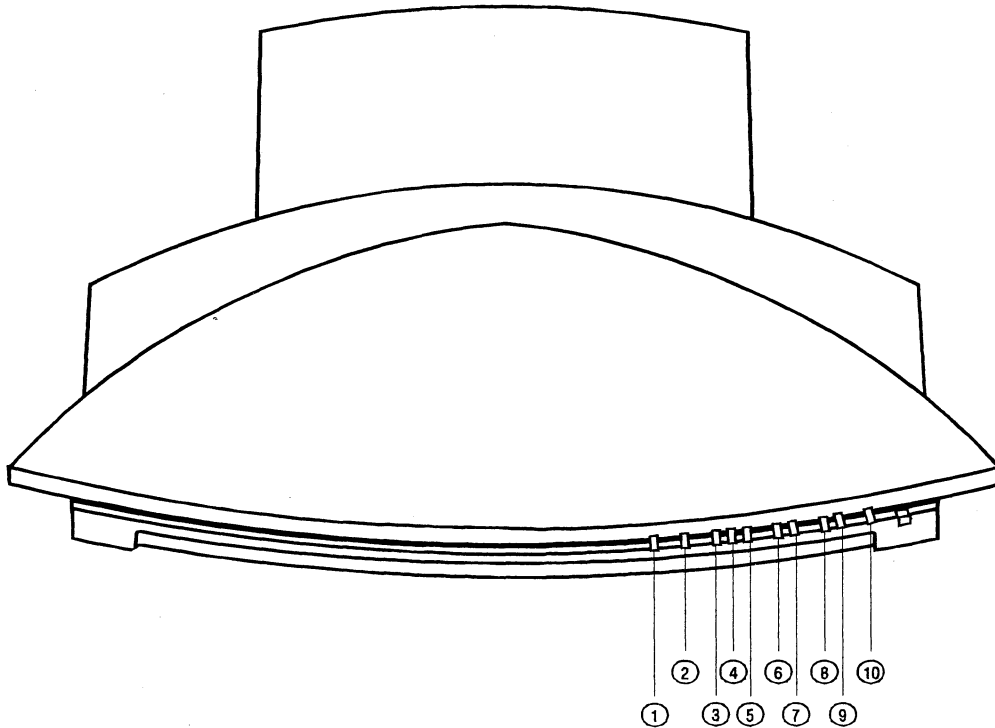


- ① **TV/AV:** select the video source among TV/AV1/AV2/AV3.
- ② **PC/VIDEO:** select the input source among Video/PC1/PC2.
- ③ **MENU:** activate the main menu; selects or executes a function.
- ④ **'-' key:** move the highlighted bar down or decreases the value of a parameter.
- ⑤ **'+' key:** move the highlighted bar up or increases the value of a parameter.
- ⑥ **VOL (-) key:** decrease volume.
- ⑦ **VOL (+) key:** increase volume.
- ⑧ **CH (-) key:** step down the channels; for previous channel.
- ⑨ **CH (+) key:** step up the channels; for next channel.
- ⑩ **POWER/ Stand-by:** switch the power ON/stand-by.



- 1. The first node is connected to the second node.
- 2. The second node is connected to the third node.
- 3. The third node is connected to the fourth node.
- 4. The fourth node is connected to the fifth node.
- 5. The fifth node is connected to the sixth node.
- 6. The sixth node is connected to the seventh node.
- 7. The seventh node is connected to the eighth node.
- 8. The eighth node is connected to the ninth node.
- 9. The ninth node is connected to the tenth node.
- 10. The tenth node is connected to the eleventh node.
- 11. The eleventh node is connected to the twelfth node.
- 12. The twelfth node is connected to the thirteenth node.
- 13. The thirteenth node is connected to the fourteenth node.
- 14. The fourteenth node is connected to the fifteenth node.
- 15. The fifteenth node is connected to the sixteenth node.
- 16. The sixteenth node is connected to the seventeenth node.
- 17. The seventeenth node is connected to the eighteenth node.
- 18. The eighteenth node is connected to the nineteenth node.
- 19. The nineteenth node is connected to the twentieth node.
- 20. The twentieth node is connected to the twenty-first node.
- 21. The twenty-first node is connected to the twenty-second node.
- 22. The twenty-second node is connected to the twenty-third node.
- 23. The twenty-third node is connected to the twenty-fourth node.
- 24. The twenty-fourth node is connected to the twenty-fifth node.
- 25. The twenty-fifth node is connected to the twenty-sixth node.
- 26. The twenty-sixth node is connected to the twenty-seventh node.
- 27. The twenty-seventh node is connected to the twenty-eighth node.
- 28. The twenty-eighth node is connected to the twenty-ninth node.
- 29. The twenty-ninth node is connected to the thirtieth node.
- 30. The thirtieth node is connected to the thirty-first node.
- 31. The thirty-first node is connected to the thirty-second node.
- 32. The thirty-second node is connected to the thirty-third node.
- 33. The thirty-third node is connected to the thirty-fourth node.
- 34. The thirty-fourth node is connected to the thirty-fifth node.
- 35. The thirty-fifth node is connected to the thirty-sixth node.
- 36. The thirty-sixth node is connected to the thirty-seventh node.
- 37. The thirty-seventh node is connected to the thirty-eighth node.
- 38. The thirty-eighth node is connected to the thirty-ninth node.
- 39. The thirty-ninth node is connected to the fortieth node.
- 40. The fortieth node is connected to the forty-first node.
- 41. The forty-first node is connected to the forty-second node.
- 42. The forty-second node is connected to the forty-third node.
- 43. The forty-third node is connected to the forty-fourth node.
- 44. The forty-fourth node is connected to the forty-fifth node.
- 45. The forty-fifth node is connected to the forty-sixth node.
- 46. The forty-sixth node is connected to the forty-seventh node.
- 47. The forty-seventh node is connected to the forty-eighth node.
- 48. The forty-eighth node is connected to the forty-ninth node.
- 49. The forty-ninth node is connected to the fiftieth node.
- 50. The fiftieth node is connected to the fifty-first node.
- 51. The fifty-first node is connected to the fifty-second node.
- 52. The fifty-second node is connected to the fifty-third node.
- 53. The fifty-third node is connected to the fifty-fourth node.
- 54. The fifty-fourth node is connected to the fifty-fifth node.
- 55. The fifty-fifth node is connected to the fifty-sixth node.
- 56. The fifty-sixth node is connected to the fifty-seventh node.
- 57. The fifty-seventh node is connected to the fifty-eighth node.
- 58. The fifty-eighth node is connected to the fifty-ninth node.
- 59. The fifty-ninth node is connected to the sixtieth node.
- 60. The sixtieth node is connected to the sixty-first node.
- 61. The sixty-first node is connected to the sixty-second node.
- 62. The sixty-second node is connected to the sixty-third node.
- 63. The sixty-third node is connected to the sixty-fourth node.
- 64. The sixty-fourth node is connected to the sixty-fifth node.
- 65. The sixty-fifth node is connected to the sixty-sixth node.
- 66. The sixty-sixth node is connected to the sixty-seventh node.
- 67. The sixty-seventh node is connected to the sixty-eighth node.
- 68. The sixty-eighth node is connected to the sixty-ninth node.
- 69. The sixty-ninth node is connected to the seventieth node.
- 70. The seventieth node is connected to the seventy-first node.
- 71. The seventy-first node is connected to the seventy-second node.
- 72. The seventy-second node is connected to the seventy-third node.
- 73. The seventy-third node is connected to the seventy-fourth node.
- 74. The seventy-fourth node is connected to the seventy-fifth node.
- 75. The seventy-fifth node is connected to the seventy-sixth node.
- 76. The seventy-sixth node is connected to the seventy-seventh node.
- 77. The seventy-seventh node is connected to the seventy-eighth node.
- 78. The seventy-eighth node is connected to the seventy-ninth node.
- 79. The seventy-ninth node is connected to the eightieth node.
- 80. The eightieth node is connected to the eighty-first node.
- 81. The eighty-first node is connected to the eighty-second node.
- 82. The eighty-second node is connected to the eighty-third node.
- 83. The eighty-third node is connected to the eighty-fourth node.
- 84. The eighty-fourth node is connected to the eighty-fifth node.
- 85. The eighty-fifth node is connected to the eighty-sixth node.
- 86. The eighty-sixth node is connected to the eighty-seventh node.
- 87. The eighty-seventh node is connected to the eighty-eighth node.
- 88. The eighty-eighth node is connected to the eighty-ninth node.
- 89. The eighty-ninth node is connected to the ninetieth node.
- 90. The ninetieth node is connected to the hundredth node.


PS1132C

 4 Remote control keys

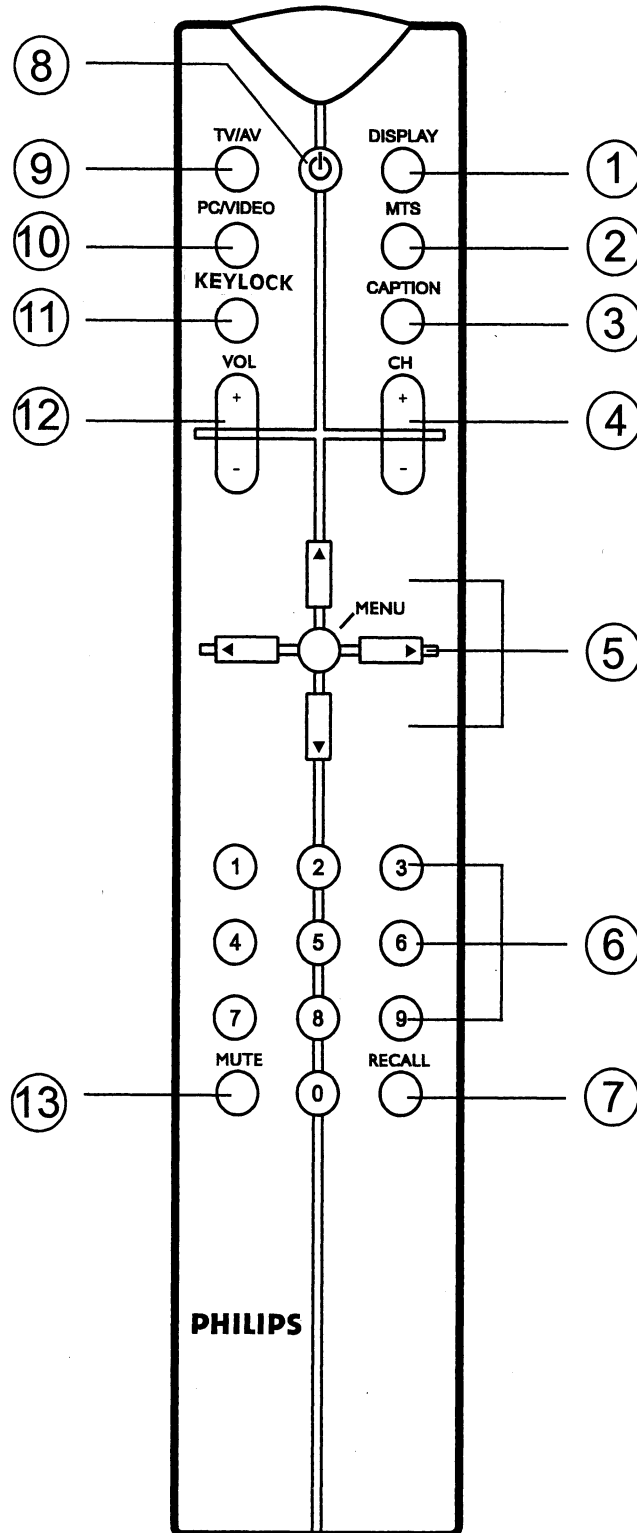

STAIRS

 1000



1000

1000

- 1 **DISPLAY:** show the current status of the setting mode.
- 2 **MTS key:** select multi-audio mode from MAIN/SAP/DUAL.
- 3 **CAPTION:** select closed caption from OFF/CC1/CC2/CC3 /CC4/T1/T2.
- 4 **CH (+) key:** step up the channels; for next channel.
CH (-) key: step down the channels; for previous channel.
- 5 **MENU:** activate the main menu; select or execute a function.
 - ▲ **key:** move the highlighted bar up or increase the value of a parameter.
 - ▼ **key:** move the highlighted bar down or decrease the value of a parameter.
 - ▶ **key:** increase the value of a parameter or go to the next menu.
 - ◀ **key:** decrease the value of a parameter or go back to the previous menu.
- 6 **0--9 keys:** number keys to select TV channels directly.
- 7 **RECALL:** jump to the last viewing channel.
- 8 **POWER/ Stand-by:** switch the power ON/OFF.
- 9 **TV/AV:** select the video source from TV/AV1/AV2/AV3.
- 10 **PC/VIDEO:** select the input source from Video/PC1/PC2.
- 11 **KEYLOCK :** For PANEL BUTTON lock / unlock.
- 12 **VOL (+) key:** increase volume.
VOL (-) key: decrease volume.
- 13 **MUTE:** switch audio to the mute mode.


Note: Install two AAA batteries into the compartment using correct polarity (+,-).

PS1132C

5 OSD controls

This screen adjustment tool offers user-friendly functions for setting adjustment. Users can make necessary changes to the pre-set resolutions. Settings will be automatically saved and recalled each time a display mode is altered.

 Basic operation:

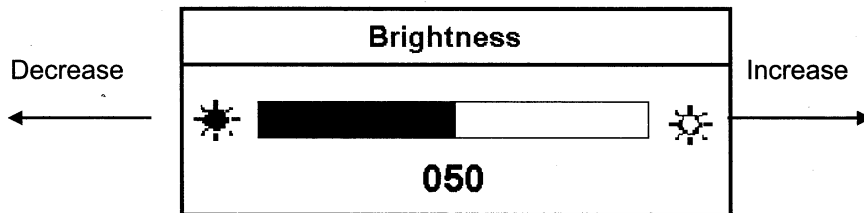

Step 1: Press MENU key to go to the main menu.

Step 2: Use ▲/▼ or ◀/▶ key on the remote control to adjust parameters.

 
Use "+" or "-" key on the control panel to adjust parameters.

Step 3: Press MENU key to return to the previous menu.

- Note:**
1. Use ◀ or ▶ key to navigate through pages (page-up or page-down) while you are not in the adjusting bar menu.
 2. Move the highlighted bar to RETURN and press MENU to go back to the previous menu.

5.1 MAIN MENU



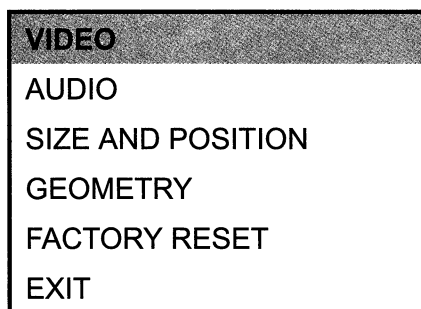

Press MENU key to display the main menu. Use ▲ or ▼ key to move up and down the highlighted bar to select an option and press MENU to choose it.



5.2 VIDEO

This function adjusts the video image of the screen.

CONTRAST
BRIGHTNESS
COLOR TEMPERATURE
COLOR ADJUSTMENT
OSD ON / OFF
DEGAUSS
RETURN

Functions	-	+	Description
Contrast			adjust the image contrast in relation to the background
Brightness			control the brightness level of the picture.
Color Temperature		9300K 6500K USER1 USER2	choose a preset color or a user set color mode.
Color Adjustment		R/G/B/ Reset to 9300K/6500K	increase or decrease the intensity of Red, Green or Blue colors or reset to the preset color of 9300K/6500K.
OSD ON / OFF		ON / OFF	show a display mode during input signal change.
Degauss		ON / OFF	demagnetize the monitor and correct color impurity caused by external magnetic field.

PS1132C

5.3 AUDIO

This function adjusts the audio sound of the display. Options include Treble, Bass, Balance, Surround and Speaker.

 

 





VOLUME
TREBLE
BASS
BALANCE
SURROUND
SPEAKER
RETURN

Functions	-	+	Description
Volume			adjust volume of sound.
Treble			adjust high pitch tone of sound.
Bass			adjust low pitch tone of sound.
Balance			control volume between left and right stereo speakers.
Surround		Surround OFF MOVIE MUSIC PSEUDO	select sound effects: Movie and Music are Stereo sources, while Pseudo is a simulated sound for monaural source.
Speaker		ON/OFF	turn speaker's on/off.

5.4 SIZE AND POSITION

This function adjusts the size and position of the screen image, such as vertical size/position and horizontal size/position.

   VERTICAL SIZE
VERTICAL POSITION
HORIZONTAL SIZE
HORIZONTAL POSITION
RETURN















Functions	-	+	Description
Vertical size			increase or decrease the display size vertically.
Vertical position			move the display position up or down.
Horizontal size			increase or decrease the display size horizontally.
Horizontal position			move the display position left or right.

 PS1132C

5.5 GEOMETRY

This function adjusts the geometric screen image, including tilt, pincushion and trapezoid.

TILT
TRAPEZOID
PARALLELOGRAM
PINCUSHION BALANCE
PINCUSHION
TOP – CORNER
BOTTOM – CORNER
RETURN

Functions	-	+	Description
Tilt			rotate image clockwise or counter clockwise.
Trapezoid			minimize trapezoid distortion of the screen.
Parallelogram			adjust the parallelogram of the screen.
Pincushion Balance			adjust the concavity of the screen.
Pincushion			curve left and right sides of the screen inward or outward.
Top – Corner			correct the top corner of left / right.
Bottom – corner			correct the bottom corner of left / right.

5.6 FACTORY RESET

 
This function resets the on-screen parameters to its factory settings.

5.7 EXIT

Quit the OSD menu.

6 PC mode menu quick glance

The following flowchart summarizes the OSD procedure for the monitor.

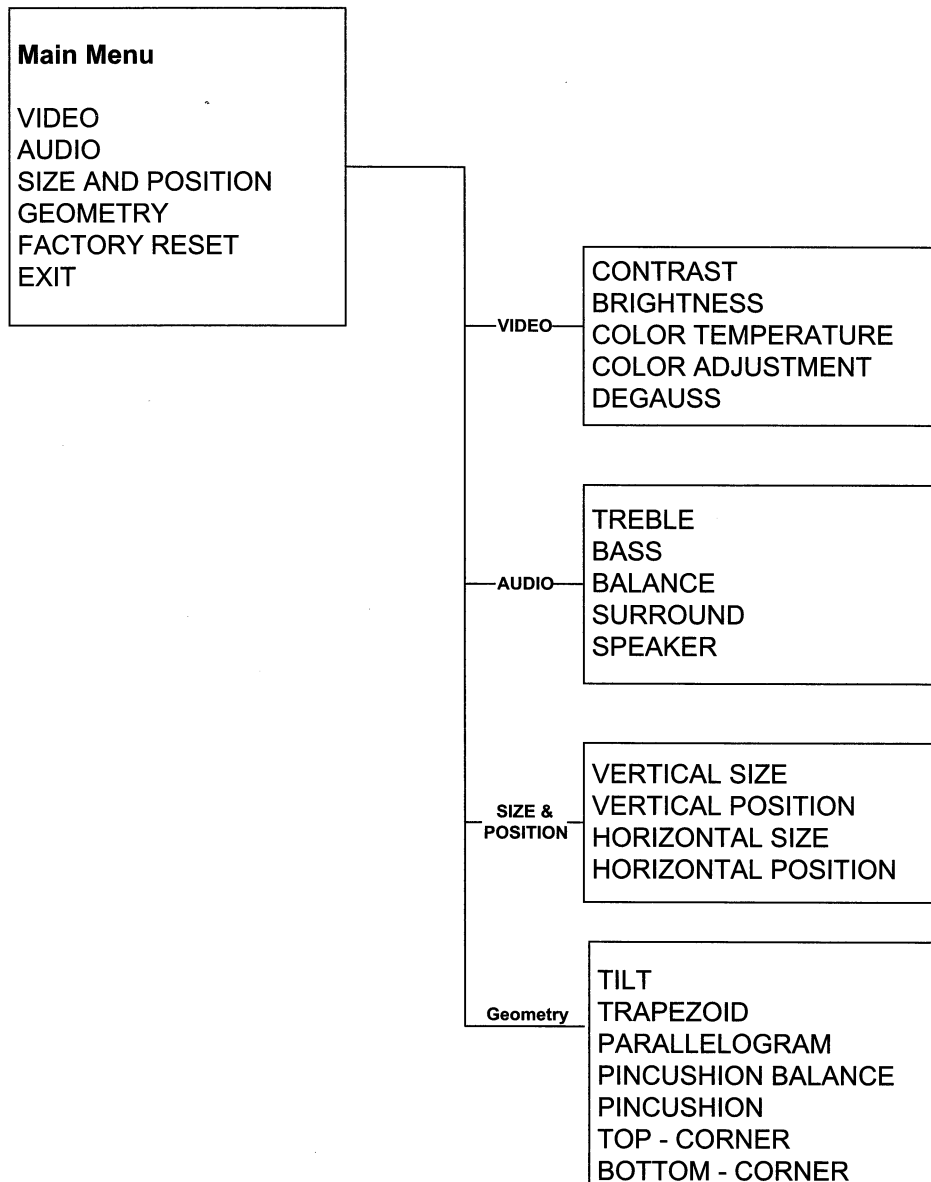

PS1132C

7 Power Consumption

This monitor comes with a power-saving feature that controls the power consumption of the monitor; therefore, you may put the monitor into a reduced power consumption mode when it is not in use. This feature complies with EPA's Energy Star requirements. It conforms to DPMS power-down signaling method approved by Video Electronics Standard Association (VESA).

Mode	H-Sync	V-Sync	Power Consumption
Normal	Active	Active	350W
Stand-by	Active	Inactive	15W
Suspend	Inactive	Active	15W
OFF	Inactive	Inactive	8W

8 Preset modes

Preset modes are standard timings pre-set by the factory. This monitor contains 5 preset modes and 18 user modes.

Preset mode	F _H	F _V
VGA 640 x 480	31.5K	60 Hz
VESA 640 x 480	37.5K	75 Hz
VGA 720 x 400	31.5K	70 Hz
SVGA 800 x 600	37.8K	60 Hz
XGA 1024 x 768	48.3 k	60 Hz

9 Specifications

CRT/Viewable image	34 "/32 "
Strip trio pitch	0.8 mm (center)
Max. resolution	1024 x 768
Face glass	Dark tinted
Input signal	VIDEO input: NTSC, PAL, SECAM standard signal, RGB analog signal PC Input: VGA/SVGA/XGA Standard
Scanning frequency	Horizontal multi-frequency: 30 to 48 kHz Vertical frequency: 50 to 120 Hz
Display area	625mm x 465mm
Audio	Loud speakers: 2 x 10W (RMS) Smart surround control Balance control Bass/Treble control
Connectors	Y/Cb/Cr x 1 rear S-Video x 1 front and x 2 rear A/V-in x 1 front and x 2 rear A/V-out x 1 rear 15-pin D-sub x 1 front and x 1 rear Audio-in for PC sound card x 1 front and x 1 rear Headphone jack
Front panel controls	POWER, TV/AV, PC/VIDEO, MENU, +/-, VOLUME +/-, CH +/-
Infrared remote control unit	TV/AV, PC/Video, Keylock., VOL +/-, Display, MTS, Caption, CH +/-, Arrow keys, Menu, Number keys, Mute and Recall.
OSD controls	Brightness, Contrast, Color Temperature, Color Adjustment, Degauss, Treble, Bass, Balance, Speaker, V- Size, H-Size, V-Position, H-Position, Pincushion, Pincushion Balance, Tilt, Parallelogram, Trapezoid,

PS1132C

Power input	90 - 132 VAC, 60 Hz 180 - 260 VAC, 50 Hz
Power consumption	Operating maximum: 350 W Standby mode: 15 W
Dimension	(W x H x D) 34.9" x 26.6" x 23.9"
Weight	Approx. 165 lbs.

NOTICE:

DUE TO OUR POLICY OF CONTINUOUS PRODUCT IMPROVEMENT, THE SPECIFICATIONS ABOVE ARE SUBJECT TO CHANGES WITHOUT NOTICE. WE SHALL NOT BE LIABLE FOR TECHNICAL OR EDITORIAL ERRORS OR OMISSIONS CONTAINED HEREIN; NOR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER RESULTING FROM FURNISHING, PERFORMANCE OR USAGE OF THIS MATERIAL.

LIMITED WARRANTY

CRT MONITOR

One Year Free Labor

One Year Free Service on Parts (Two Years Free Service on Color Picture Tube)

This product can be repaired in-home.

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For one year thereafter, all parts will be repaired or replaced, and labor is free. From one to two years from the day of purchase, you pay for the replacement or repair of all parts except the picture tube, and for all labor charges. After two years from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges. All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Contact a Philips factory service center (see enclosed list) or authorized service center to arrange repair.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

TO GET WARRANTY SERVICE IN CANADA...

Please contact Philips at:

1-800-661-6162 (French Speaking)
1-800-363-7278 (English Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____

SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips Service Company, P.O. Box 2976, Longview, TX 75606, (903) 242-4800







NJ931A002B