Life Fitness 9100 Series Treadmills

How To...REMOVE AND REPLACE THE WAX PUMP NORPRENE HOSE

Tools Required: Phillips screwdriver, vise grips or clamp, hex key wrench set, socket and ratchet set

Step 1

Turn the power OFF at the switch and unplug the unit at the electrical outlet.

Step 2

Separate the FRONT and REAR FRAME ASSEMBLIES (See "How To...").

Step 3

LOCATE the WAX MOTOR on the user LEFT side of frame chassis.

Step 4

With your fingers, remove the HOSE CLAMP leading from the WAX CONTAINER and temporarily seal off the HOSE to prevent spillage while disconnecting it.

Step 5

Remove the SPRING CLAMP and DISCONNECT the HOSE leading to the SPRAY NOZZLE.

Step 6

 
Use a PHILLIPS HEAD SCREWDRIVER and remove the 3 screws and remove the cover on the wax pump.


Step 7


Remove the old NORPRENE HOSE and discard. Reinstall the new NORPRENE HOSE.

Step 8

Reverse Steps 1 through 6 to return all parts to their proper positions taking special note to unkink the WAX CONTAINER HOSE prior to rejoining the FRONT and REAR FRAME ASSEMBLIES.



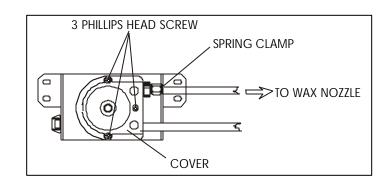

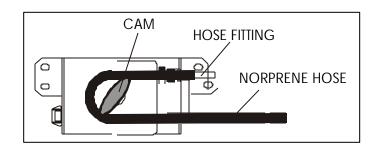

NOTE: THIS IS NORMALLY AN OPPORTUNE TIME TO INSPECT THE WAX SPRAY NOZZLE.

BETWEEN THE BOTTOM OF THE FRAME AND THE STRIDING BELT. PRESS THE

SPRAY NOZZLE IN AND TWIST IT 1/4 TURN TO REMOVE. CLEAN OR REPLACE THE

SPRAY NOZZLE AS DEEMED NECESSARY AND COMPLETE GENERAL CLEANING OF THE UNIT.