



C2931M (7/05)

PMCD750 DLP™ Display

Removable On-Screen Code Chart

The PMCD750 will flash a sequence of red and amber lights on the screen to indicate current status or if a fault exists. Cut out these cards for convenient referencing of the on-screen codes.

	Condition	Priority	Each block represents 0.2 seconds														
Starts with red; lamp is off	Door open	1	R		R		R										
	Power supply fan failed	2	R		Amber												
	DLP fan failed	3	R		Amber			R									
	350V failed	4	R		R		Amber										
	Optical engine failed	5	R		R		Amber			R							
	Lamp failed	6	R		R		R		R								
	Lamp off (wait, auto off) ²	7	R		R			Amber			Amber						
	Wait (lamp off, cooling)	8	R		R			R		R							
Starts with amber	Lamp off (lamp saver) ³	9	Amber				Amber			R							
	Lamp off (ready to turn on)	10	Amber				Amber										
	Lamp striking (starting)	11	Amber				Amber			Amber							
	Lamp on, no alarms	12	Amber on continuously														

See footnote 1

R = Red To show the code, press MONITOR button once.

¹With Priority 1-6, to turn lamp on, cycle off, and then on. If Auto Codes in the Miscellaneous menu is checked, events with Priority 1-5 start the on-screen code automatically.

²Lamp Saver turned lamp off; lamp is cooling and will turn on at end of cooling period.

³A Lamp On command from the remote or from RS-232 commands will turn lamp on.

	Condition	Priority	Each block represents 0.2 seconds														
Starts with red; lamp is off	Door open	1	R		R		R										
	Power supply fan failed	2	R		Amber												
	DLP fan failed	3	R		Amber			R									
	350V failed	4	R		R		Amber										
	Optical engine failed	5	R		R		Amber			R							
	Lamp failed	6	R		R		R		R								
	Lamp off (wait, auto off) ²	7	R		R			Amber			Amber						
	Wait (lamp off, cooling)	8	R		R			R		R							
Starts with amber	Lamp off (lamp saver) ³	9	Amber				Amber			R							
	Lamp off (ready to turn on)	10	Amber				Amber										
	Lamp striking (starting)	11	Amber				Amber			Amber							
	Lamp on, no alarms	12	Amber on continuously														

See footnote 1

R = Red To show the code, press MONITOR button once.

¹With Priority 1-6, to turn lamp on, cycle off, and then on. If Auto Codes in the Miscellaneous menu is checked, events with Priority 1-5 start the on-screen code automatically.

²Lamp Saver turned lamp off; lamp is cooling and will turn on at end of cooling period.

³A Lamp On command from the remote or from RS-232 commands will turn lamp on.