

# ***SYLVANIA***

**SDVD7027**



**USER'S MANUAL**

 


## Table Of Contents

|                    |    |
|--------------------|----|
| Safety Precaution  | 1  |
| Package            | 2  |
| Main Features      | 2  |
| Main Unit Controls | 3  |
| System Connection  | 4  |
| The Remote Control | 7  |
| Basic operation    | 9  |
| System Setup       | 14 |
| Specification      | 17 |
| Troubleshooting    | 18 |

## Safety Precaution

Thank you for choosing our portable DVD player. It includes a 7" wide screen and a DVD player. The unit applies the latest state of art electronics and is designed for use at home, in hotels and in offices etc for relaxation. The compact size makes carrying easier as well as installation. Please read the manual carefully prior to use and keep it well for later consultation.

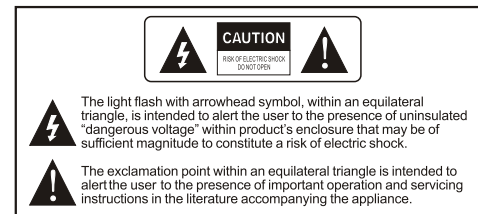

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- 1) Please read the instruction manual carefully and follow all the requirements of safe operation to operate the device.
- 2) Do not use this unit near water. Do not place over the unit any container with liquid inside.
- 3) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 4) Unplug this unit during lightning storms or when unused for long time.
- 5) About Cleaning: Unplug the system, use only wet cloth to clean. Do not use liquid detergent or aerosol.
- 6) Only use accessories specified by the manufacturer.
- 7) Refer all servicing to qualified service personnel, servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, exposed to moisture, does not operate normally. Don't try to repair the machine by yourself because of the danger of high voltage and electric shock.
- 8) Do not use irregular shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction.

## Package

 
|                             |   |
|-----------------------------|---|
| DVD Player                  | 1 |
| Remote Control with battery | 1 |
| Audio/Video Cable           | 1 |
| AC/DC Power Adapter         | 1 |
| Cigarette Lighter Adapter   | 1 |
| User Manual                 | 1 |
| Earphone                    | 1 |
| Carrybag                    | 1 |

## Main Features


- High brightness color 7" LCD screen
- Compatible with disc of DVD, VCD, MP3, CD, JPEG, etc.
- Built-in stereo speaker
- Built-in rechargeable Lithium polymer battery
- Support PAL or NTSC system
- Support Multi-language OSD, speed forward/backward, repeat function
- Zoom in/out function

## Swiveling LCD screen

You can swivel the LCD screen of this player clockwise a maximum of 180° for use.

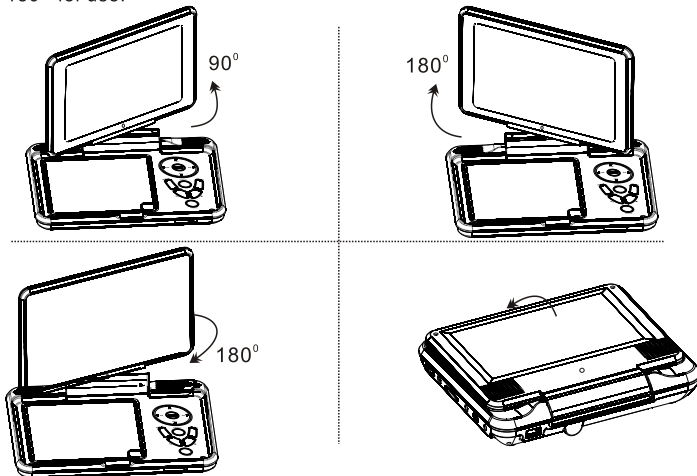

## Main Unit Controls

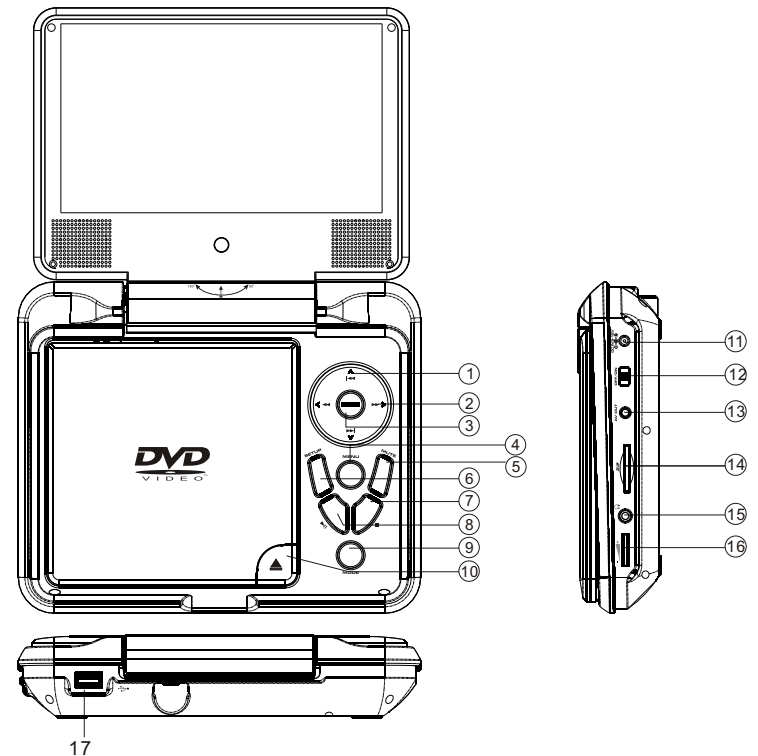 


1. ▲▼◀▶ button
2. ◀▶◀▶ button
3. ENTER button
4. MENU button
5. MUTE button
6. SETUP Button
7. STOP Button
8. PLAY/PAUSE Button
9. MODE Button

10. Open knob
11. DC IN 9-12V
12. Power ON/OFF switch
13. AV OUT
14. SD card slot
15. Earphone jack
16. Volume knob
17. USB port

## System Connection

 
### Powering and installation

Plug one end of the AC/DC power adaptor into the DC IN 9-12V jack on the right of the machine, then plug the other end into the AC power receptacle. Please refer to the following illustration



If using car cigarette lighter adaptor to connect to the power:

 Plug one end of the cigarette lighter adaptor into the DC IN 9-12V jack on the unit, plug the other end into the car cigarette lighter socket. See illustration below.

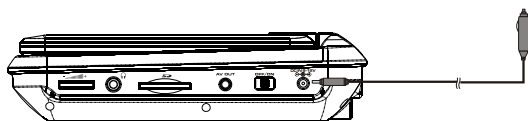


Notice:

1. Car cigarette lighter adaptor can't be used to recharge the battery.
2. Car cigarette lighter adaptor is available to use only when the car power supply is 9-12V negative grounding.


### Using SD/MMC card

 Upon using an SD or MMC card, insert it into the corresponding slot flatly with the label side upward until you hear a click.




### Using USB

 Upon using an USB, insert it into the USB slot directly.



## Connecting to TV

 
You can also connect the unit to a TV to enjoy high quality picture and stereo sound. Please refer to the following illustration:

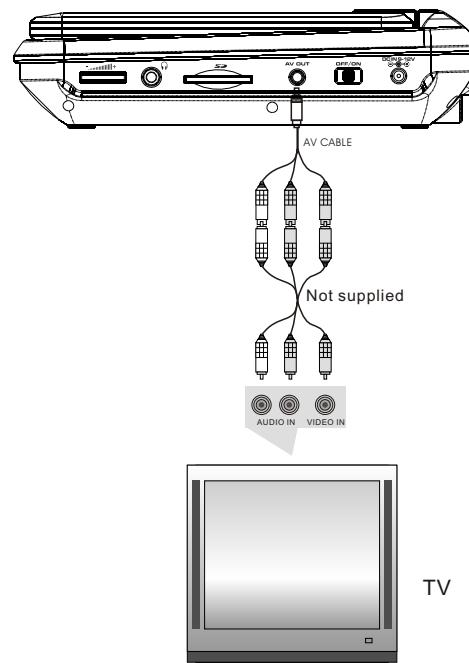

Please use AV cable to connect the machine and the TV. Make sure it is connected correctly.


## Connecting with external Speaker

 The unit can be connected with external speaker. Please see the following illustration

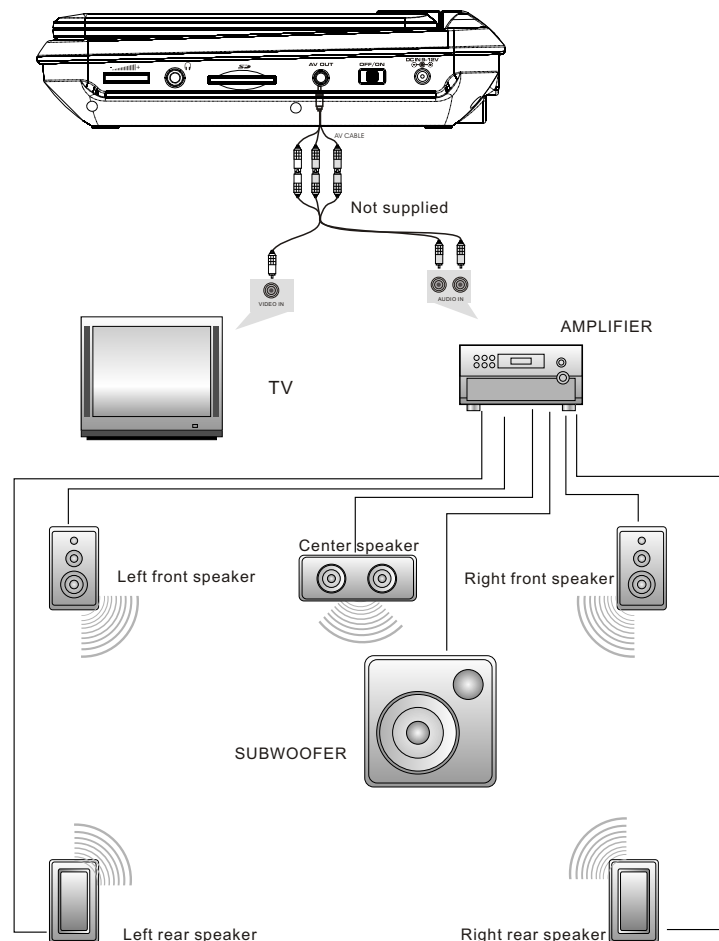

Notice: There is no 5.1 channel in the unit, however, after connecting to APM it is available to output audio in 5.1 channel


## The Remote Control

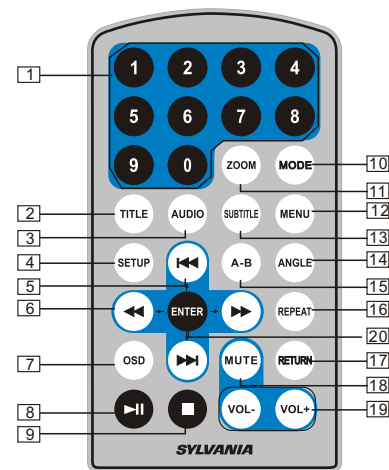 


- |  |  |
|--|--|
| 1. Number button   | 11. ZOOM (To zoom in/out the image during the playback)  |
| 2. TITLE (To display title information)  | 12. Menu (To enter or exit menu root)  |
| 3. AUDIO (To select audio language)  | 13. Subtitle (To select subtitle language when playing DVD disc)                               |
| 4. SETUP (To go to or exit setup menu)   | 14. Angle (To change viewing angle when playing disc with multi-angle)                         |
| 5. Previous/Next button (To go to previous/next chapter or scene during playing)   | 15. A-B (Repeat a specific portion from point A to B, press it again to cancel repeat playing) |
| 6. Fast forward/backward button (To scan forward/backward at 2, 4, 8, 16, or 32 times)   | 16. Repeat (To repeat playing title, chapter or track)   |
| 7. OSD (To display disc information during playing such as elapsed and remaining time)   | 17. Return (To return to the main menu)  |
| 8. Play/pause  | 18. MUTE (To turn to mute)   |
| 9. Stop (press once to stop playback, then press ► to resume playback from the point where you stopped; press stop button twice to stop playback completely) | 19. VOL +/- (To adjust the volume)   |
| 10. MODE (To select the source)  | 20. Enter (To confirm)   |

## The Use of Remote Control

 Please put the battery into the remote control as per below illustration

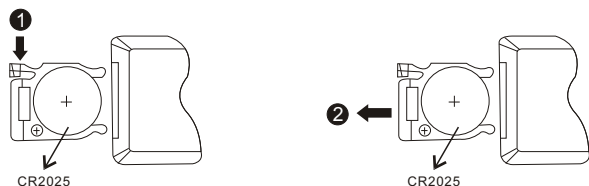

 When using remote control, make sure the infrared window is pointed to infrared receiving window of the machine. The distance between machine and remote control must be within 3 metres. Please refer to the following illustration.

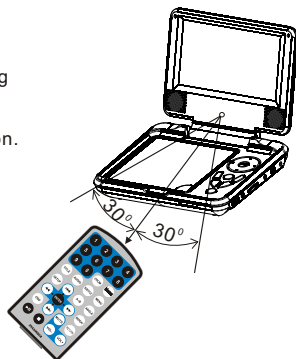

## Notice

1. To avoid falling off or place near damp environment.
2. To avoid infrared receiving window of the unit being under direct sunlight
3. Please use a new battery to replace old one if the remote control doesn't work.

## Basic Operation



Playing disc of DVD, MPEG4, SVCD, VCD, CD, MP3, Xvid

 
1. After connecting power to the unit, turn on the unit by sliding the ON/OFF switch to ON, the source menu will be displayed on the screen:

DVD  
MEDIA

Press **◀▶** to enter DVD mode or Media mode and press **OK** button to confirm. When selecting "Media", ensure to insert USB or SD/MMC card properly

2. Open the disc door and insert a disc into the door with the label side facing up.
3. Close the disc door. The unit will load the disc and start playing.
4. Press **■** to once to stop playback; then press **▶||** to resume playback from the point where you stopped; press **■** twice to stop playback completely.
5. During playback, press **▶||** to pause; press it again to resume playback.
6. When the playing is finished, please turn off the power by sliding ON/OFF switch to OFF.
7. For some DVD disc with Title or Chapter menu, press "MENU" button to enter menu page, and use **◀▶** to select. Press **ENTER** to confirm.


**Note:** Please do not disconnect USB devices or plug out SD/MMC cards while they are working with the unit. Functional failure may occur in case of wrong operations.

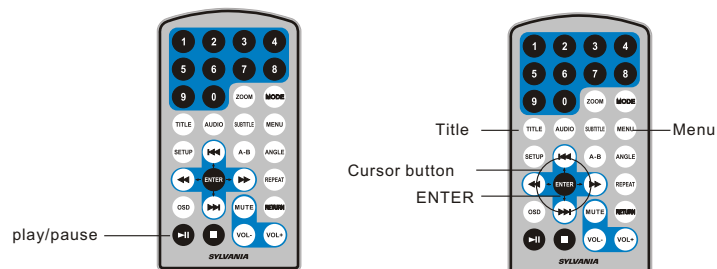


## Fast forward and fast backward

When playing disc of DVD, MPEG4, SVCD, VCD, CD, the unit can search forward or backward.

 
1. Press **FF**, the unit will search forward. Press it repeatedly, the unit will play at 2, 4, 8, 16, 32 times of speed.

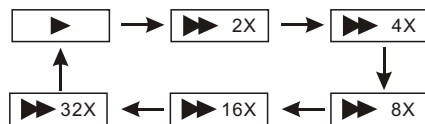

 2. Press **REW**, the unit will search backward. Press it repeatedly, the unit will play at 2, 4, 8, 16, 32 times of speed.

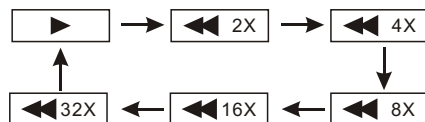


## Repeat playing

 

When playing disc of DVD, MPEG4, SVCD, VCD, CD, user can repeat playing one chapter, title or all the whole disc.

 For DVD disc, press "repeat" button, user can repeat playing one Chapter; press it again to repeat playing Title; press it the third time to repeat playing the whole disc.



For MP3 disc, press "repeat" to repeat playing present file; press it again to repeat playing the folder; press it the third time to cancel repeat playing.




## Repeat playing of favorite scene



 When playing disc of DVD, MPEG4, SVCD, VCD, CD, Mp3, user can repeatedly play a specific section. During playback, press "A-B" button at a point A, then press this button again in point B, the unit will automatically repeat playing the part between A-B



Press it the third time, the unit will return to normal playback.

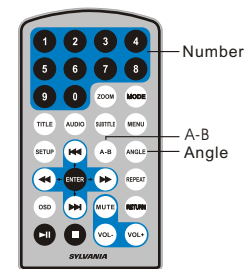

## Angle

During playing DVD disc with multi-angle, press "Angle" button, the followings will be displayed on screen:



Press number buttons to select the angle you desire



To return to normal playing, please press "Angle". The unit will play the disc in the default angle.

 


## Notice

The function is available only for discs with multi-angle.



## Zoom in/ out




When playing disc of DVD, MPEG4, SVCD, VCD, user can zoom in or zoom out the image.

During playback, press "Zoom" button, the image will be enlarged; press it again the image will be enlarged again; press it fourth time, the image will zoom out, press it repeatedly and the image will return to normal status.

When the image is enlarged, user can press ◀ ▶ to move the image



 Zoom in/out

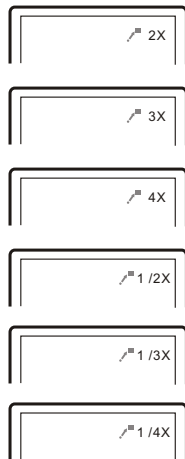


## Playing JPG file

1. Place a JPG disc into the tray, the unit will start reading and play.
2. Press "MENU" to browse JPG files.
3. Press ▲ ▼ to select a JPG file and press "ENTER" button to confirm.  
Note: you can press MENU to return to the folder list. Press ▶▶ or "ENTER" to preview the file selected
4. To rotate the picture counter-clockwise, press "◀"; Press "▶" to rotate the picture clockwise
5. Press OSD button when viewing pictures, you can select different refresh mode as follows:
  - ①. from top to bottom
  - ②. from bottom to top
  - ③. from left side to right side
  - ④. from right side to left side
  - ⑤. from left top to right bottom
  - ⑥. from right top to left bottom
  - ⑦. from left bottom to right top
  - ⑧. from right bottom to left top
  - ⑨. from horizontal center to both sides
  - ⑩. from vertical center to both sides
  - ⑪. from top and bottom to center.
  - ⑫. from right and left to center.
  - ⑬. from four window's top side to bottom side.
  - ⑭. from four window's left side to right side.
  - ⑮. from 4 edges to center.
6. During viewing files, "⊘" may appear when pressing "Angle" or "Subtitle" or "Audio" or "A-B" or "Title" etc; in this situation these options are unavailable to operate.
7. When viewing JPG files, press "■", pictures will be displayed in thumbnail mode, press ▲ ▼ ◀ ▶ or "ENTER" button to select one picture to view


## Playing MP3 files

 1. Place MP3 disc into the disc door or insert USB disc, SD card to USB port or SD card slot. Press "▲/▼" or "ENTER" button to choose a MP3 file; Press "▶▶" or "ENTER" button to play the file selected.




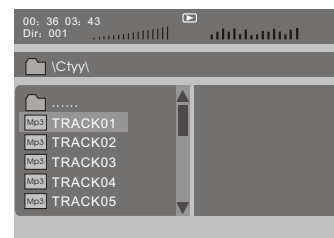





## System Setup

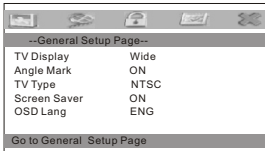 
|  |  |
|--|--|
|  <p>--General Setup Page--</p> <p>TV Display Wide<br/>Angle Mark ON<br/>TV Type NTSC<br/>Screen Saver ON<br/>OSD Lang ENG</p> <p>Go to General Setup Page</p> | <p>Press "Setup" button, the main menu will be displayed on the screen.</p> <p>In the General Setup Page, Press ◀▶ button to highlight this item.</p> <p>Press ENTER button to access.</p> <p>Press ▲▼ button to select the setting.</p> <p>Press ENTER button to confirm your selection.</p> <p>Press ◀ button to exit.</p> |
|--|--|

### General Setup Page

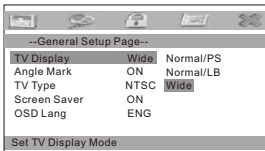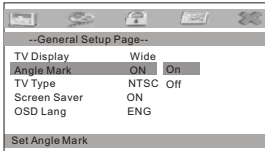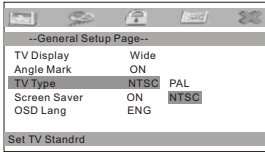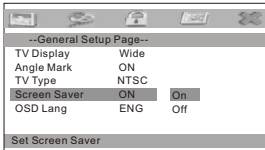    
|  |  |
|--|--|
|  <p>--General Setup Page--</p> <p>TV Display Wide Normal/PS<br/>Angle Mark ON Normal/LB<br/>TV Type NTSC Wide<br/>Screen Saver ON<br/>OSD Lang ENG</p> <p>Set TV Display Mode</p> | <p><b>TV display:</b></p> <p>Enter this option, user can set screen display format (Normal/PS, Normal/LB, Wide)</p> <p>The default is "Wide"</p> <p><b>Note:</b></p> <p>☆ The function depends on the display ratio with which the DVD disc is recorded.</p> <p>☆ Please choose "Wide(16:9)" when using a 16:9 widescreen TV set</p> |
|  <p>--General Setup Page--</p> <p>TV Display Wide<br/>Angle Mark ON On<br/>TV Type NTSC Off<br/>Screen Saver ON<br/>OSD Lang ENG</p> <p>Set Angle Mark</p>                        | <p><b>Angle Mark:</b></p> <p>Enter this option to set the angle during playback.</p> <p>Optional setting: ON, OFF</p> <p>The default is: ON</p>  |
|  <p>--General Setup Page--</p> <p>TV Display Wide<br/>Angle Mark ON<br/>TV Type NTSC PAL<br/>Screen Saver ON NTSC<br/>OSD Lang ENG</p> <p>Set TV Standard</p>                     | <p><b>TV Type:</b></p> <p>Enter this option to select TV type (PAL, NTSC)</p> <p>The default is PAL.</p>   |
|  <p>--General Setup Page--</p> <p>TV Display Wide<br/>Angle Mark ON<br/>TV Type NTSC<br/>Screen Saver ON On<br/>OSD Lang ENG Off</p> <p>Set Screen Saver</p>                     | <p><b>Screen Saver:</b></p> <p>Enter this option to set whether to activate the screen saver function.</p> <p>The default is ON.</p>   |
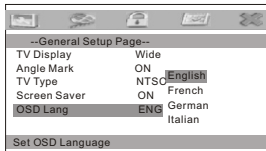 
|   |   |
|---|---|
|  <p>--General Setup Page--</p> <p>TV Display Wide<br/>Angle Mark ON English<br/>TV Type NTSC<br/>Screen Saver ON French<br/>OSD Lang ENG German<br/>Italian</p> <p>Set OSD Language</p> | <p><b>OSD Language:</b></p> <p>In the option user can set OSD menu language (English, French, German, Italian).</p> <p>The default: English</p> |
|---|---|



### Video Setup Page



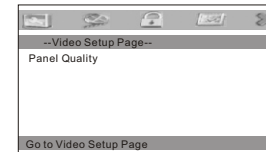 
|  |   |
|--|---|
|  <p>--Video Setup Page--</p> <p>Panel Quality</p> <p>Go to Video Setup Page</p> | <p>Enter this option, user can adjust picture quality of video output. There are items available to be adjusted: Brightness, Contrast, Hue and Saturation.</p> <p>For all these items the default is 00</p> |
|--|---|

### Password Setup Page
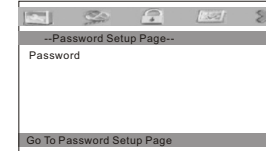 
|   |   |
|---|---|
|  <p>--Password Setup Page--</p> <p>Password</p> <p>Go to Password Setup Page</p> | <p>Enter this option, you can set a password (four numbers).</p> <p>All parental control features are password protected.</p> <p>The default is 8888.</p> |
|---|---|

### Preference Page
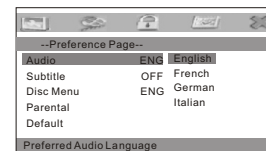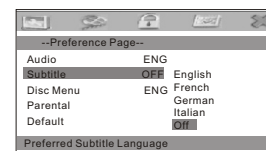  
|  |  |
|--|--|
|  <p>--Preference Page--</p> <p>Audio ENG English<br/>Subtitle OFF French<br/>Disc Menu ENG German<br/>Parental Italian<br/>Default</p> <p>Preferred Audio Language</p>      | <p><b>Audio:</b></p> <p>Enter this option, user can select your preferred audio language for DVDs.</p> <p>The default is English.</p> <p><b>Note:</b></p> <p>☆ The audio language depends on the material on each disc.</p> <p>☆ User can also change the audio language during playback by pressing the Audio button.</p> |
|  <p>--Preference Page--</p> <p>Audio ENG<br/>Subtitle OFF English<br/>Disc Menu ENG French<br/>Parental German<br/>Default Italian</p> <p>Preferred Subtitle Language</p> | <p><b>Subtitle:</b></p> <p>Select your preferred language to show the subtitles on the screen.</p> <p>The default is OFF</p> <p>The subtitle languages depend on the information available on each disc. You can also change the subtitle language during playback by pressing the SUBTITLE button.</p>                    |
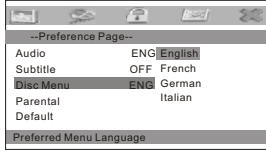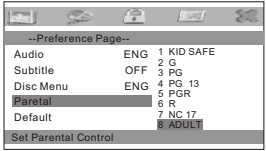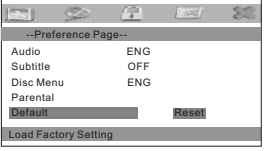   
|   |   |
|---|---|
|  | <p><b>Disc Menu:</b><br/>This function allows you to choose the menu language stored on the disc.<br/>The default is English.<br/>Note: the disc menu languages depend on the information available on the disc.</p>  |
|  | <p><b>Parental:</b><br/>Enter this option to set the parental control level to some unsuitable disc scenes being watched by the children.<br/>Optional parental control levels: KID SAFE, G, PG, PG 13, PGR, R, NC 17, ADULT.<br/><br/>The default of this option is ADULT.</p> |
|  | <p><b>Default:</b><br/>Select this item and press ENTER button to reset all settings to the original factory settings.</p>  |

## Specification

Compatible disc: DVD/VCD/CD/MP3/MPEG4  
 Signal system: PAL/NTSC  
 Panel size: 7 inch  
 Picture resolution: 480x234(RGB)  
 Frequency response: 20 Hz to 20 kHz  
 Video output: 1Vp-p/75 Ohm, unbalanced  
 Audio output: 1.4Vrms/10kOhm  
 Audio S/N: Better than 80 dB  
 Dynamic range: Better than 85 dB  
 USB: support USB 1.1  
 Laser: Semiconductor Laser, Wave Length: 650 nm/795 nm  
 Power source: DC 9-12V  
 Power consumption: 10 W  
 Operating temperature: 5~40°C  
 Weight: 0.82kg  
 Dimensions (W x D x H): 213 x 175.5 x 42 mm  
 Battery Type: Li Polymer

## Rechargeable battery use

The unit utilizes long-life Li polymer battery for portable power supply. The battery has no "Memory Effect" and thus can be recharged safely regardless of whether the battery is fully or partially discharged. It's enough to recharge no longer than 6H each time, fully recharged battery can last about 2 hours.


## Precautions related to Battery Recharge

The battery can be only recharged when turning power to OFF state, and keep continuous power supply, the red light will be on, and the light will turn yellow when it's fully charged.

## Using and Maintaining Rechargeable Battery

1. The normal working temperature is: 0°C ~40°C ;
2. Always unplug AC/DC power supply for the unit when not in use;
3. Heat will create during playing, it's normal, while avoid long time playing and unattended;
4. Avoid having the unit collide with any objects, and place away from all possible heat sources or damp areas.

## Troubleshooting

| PROBLEM  | SOLUTION   |
|--|--|
| No sound or distorted sound  | Make sure the machine is connected properly. Make sure all cables are securely inserted into the appropriate jacks.  |
| Can't advance through a movie  | You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.  |
| The icon  appears on screen | The feature or action cannot be completed at this time because: <ol style="list-style-type: none"> <li>1. The disc's software restricts it.</li> <li>2. The disc's software doesn't support the feature (e.g., angles)</li> <li>3. The feature is not available at the moment.</li> <li>4. You've requested a title or chapter number that is out of range.</li> </ol> |
| Picture is distorted   | The disc might be damaged. Try another disc; It is normal for some distortion to appear during forward or reverse scan.  |
| No forward or reverse scan   | Some discs have sections that prohibit rapid scanning or chapter skip; If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.   |

*Owing to continuous improvement, no prior notice will be given regarding changes on above feature and spec.*