



 
# 12-Number Memory Two-Line Telephone User's Guide

2-9421

## BEFORE YOU BEGIN

### MODULAR JACK REQUIREMENTS

You need an RJ11C or RJ14C type modular jack, which is the most common type of phone jack and might look like the one pictured here. If you don't have a modular jack, call your local phone company to find out how to get one installed.

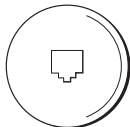

### INSTALL THE BATTERIES

#### BATTERIES FOR SUPPLEMENTARY POWER

Four 'AA'-size alkaline batteries (not included) provide power for LINE 1 and LINE 2 indicator lights. If you want the line indicators to light when a line is in use or ringing, install the optional batteries.

1. If telephone is wall mounted, remove from mounting.
2. Unplug modular jack from the phone wall outlet.
3. Slide memory directory up and off phone to expose battery compartment door.
4. Slide flat blade screwdriver down between the cabinet and top of door and snap open door. Remove battery door.
5. Install 4 'AA' batteries (2 for each line) as indicated on the diagram in the battery compartment. If using this phone for one line operation, only insert the two batteries for that line.

Battery compartment



 
**Note:** If one line is disconnected (i.e., unplugged from the phone jack), the indicator light for that line will stay lit until the line is reconnected or the batteries for that line are removed.

6. Replace door and directory.
7. Plug the phone into modular jack.

#### BATTERIES FOR BACKUP MEMORY

A consumer replaceable long-life lithium battery (3V) is installed in the phone to provide backup power for retaining numbers in memory. The lithium battery compartment is located on the bottom of the telephone base.

1. If telephone is wall mounted, remove from mounting.
2. Unplug modular jack from the phone wall outlet.
3. Remove wall mount to expose battery compartment.
4. Using a pointed object open the battery door and remove.
5. Insert a pointed object, in opening at either end of the battery cartridge and lift up.
6. Slide battery cartridge out and dispose of immediately.
7. Insert replacement battery cartridge and snap into place. The battery cartridge can be inserted only one way. Replace door.
8. Replace wall mount.
9. Plug the phone into modular jack.
10. You may have to reprogram some or all of the numbers into memory.

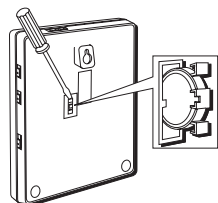

### BATTERY SAFETY PRECAUTIONS

- Do not disassemble, mutilate, puncture, wet, or dispose of battery in fire. Like other batteries of this type, if it is burned or punctured, it could release toxic materials which can cause injury.

## VOLUME

The volume controls for the handset and line ringers are separate on this phone so you can adjust one without affecting the others.

To adjust the handset volume, use the RECEIVER HI MID LO switch on the right side of the phone.

To adjust RINGER 1 and RINGER 2 volumes, use the switches on the front of the base unit to choose HI, LO or OFF. Note that, if in the OFF position, that line will not ring. Your telephone has separate and distinct ringer sounds for each line allowing you to determine (audibly) the line of an incoming call.

 
## CHAIN DIALING

Number is For	Memory Location
Long distance access number	7
Authorization code	8
Frequently called long distance number	9

1. Pick up the handset to get a dial tone.
2. Press MEMORY DIAL and then press 7.
3. When you hear the access tone, press MEMORY DIAL and then press 8.
4. At the next access tone, press MEMORY DIAL and then 9.

## INSTALLATION

### DESKTOP INSTALLATION





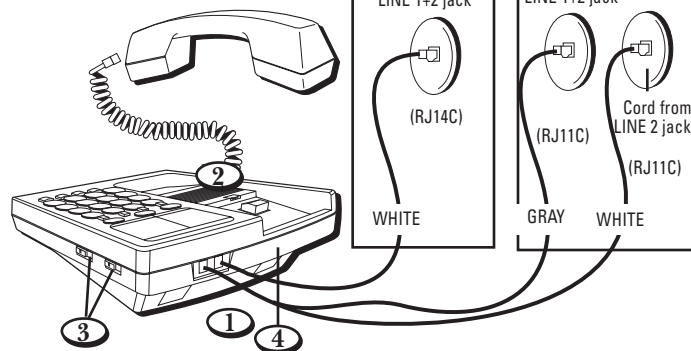


A coiled handset cord and two straight telephone line cords are packaged with your unit.

1. **(See Figure 1) If you have one dual-line phone jack (RJ14C).**  
Plug the white straight cord in the LINE 1+2 jack at the top of the base. Plug the opposite end of the cord into the modular RJ14C dual-line jack. **(See Figure 2) or if you have two single-line phone jack (RJ11C).**  
Plug the grey straight cord in the LINE 1+2 jack at the top of the base. Plug the white straight cord into the LINE 2 jack. Then, plug the opposite end of the cords into the modular RJ11C jacks.
2. Plug one end of the coiled handset cord into the handset and the opposite end into the base.
3. Set the RINGER 1 and RINGER 2 volume switches to HI, LO or OFF. Note in OFF position that line will not ring. Your telephone has separate and distinct ringer sounds for each line this will allow you to determine (audibly) the line of an incoming call.
4. Set mode switch to TONE. Note that if you have problems dialing switch to PULSE.

### WALL MOUNT INSTALLATION

     1. Rotate the handset hook.
2. Press down and out on the two snap tabs located on the top of the wall mount. Lift adapter off.
3. Plug white straight line cord into base jack LINE 1+2. Note that you must use a RJ14C jack.
4. Reverse the wall mount so that the thickest part is at the bottom of the base. Place about 3" of the cord through the opening in the wall mount.
5. Replace the wall mount by inserting the top end in first and slide the base down.
6. Connect to the RJ14C wall jack and position wall mount holes over the wall plate and slide down until wall mount/base assembly is firmly in place.
7. Plug one end of the coiled handset cord into the handset and the opposite end into the base.
8. Set the RINGER 1 and RINGER 2 volume switches to HI, LO or OFF. Note in OFF position that line will not ring. Your telephone has separate and distinct ringer sounds for each line this will allow you to determine (audibly) the line of an incoming call.
9. Set mode switch to TONE. Note that if you have problems dialing switch to PULSE.

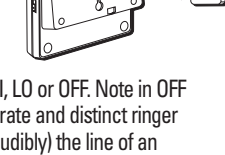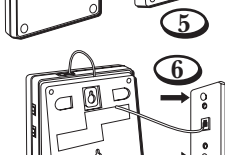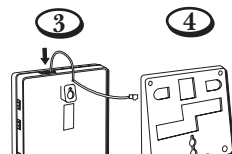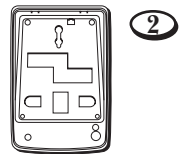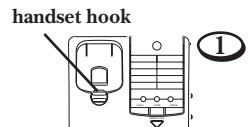

## TELEPHONE OPERATION

### TEMPORARY TONE FEATURE

If you have Pulse (rotary) service, and want to access customer calling services that require tone dialing, such as getting information from a local bank, you can use this feature.

1. Press the TONE BUTTON (\*) after you have connected to the service to enable Tone dialing.
2. When you hang up, the phone automatically returns to Pulse dialing mode.

To Make a Call	To Receive a Call
1. Pick up the handset.	1. Press the line number of the flashing indicator.
2. Press LINE 1 or LINE 2.	2. Pick up the handset.
3. Replace the handset to hang up.	3. Replace the handset to hang up.

## MAKING AND RECEIVING CALLS

### CHOOSE A LINE

- Press LINE 1 or LINE 2. When the handset is off hook, an indicator lights above the button indicating the line is in use.

**NOTE:** You can use the telephone if you have only one incoming line. However you cannot access a second line. Also see "Batteries for Supplementary Power".

### REDIAL

Use REDIAL, to quickly redial the last number that was manually dialed. This is useful when a line is busy for a long time.

1. Pick up the handset.
2. Wait for dial tone.
3. Press the REDIAL button. The phone automatically redials the last number that was dialed (up to 32 digits).

### FLASH BUTTON

Press the FLASH button to activate custom calling services such as call waiting or call transfer, which are provided by your local phone company. Do not use the hook switch because you might hang up the phone.

### HOLD BUTTON

- Press HOLD button and hang up the handset. The LINE indicator blinks to indicate the party is on hold.

### TO CONTINUE THE CONVERSATION

At this phone	From another phone
1. Pick up handset.	1. Pick up handset.
2. Press LINE on hold.	

### CONFERENCE BUTTON

Enables you to carry on three-way conversation using LINES 1 and 2 simultaneously.

1. Place first party on HOLD.
2. Press the alternate LINE.
3. Dial phone number for second party.
4. Press CONF and talk to both parties.
5. When finished with conference press LINE 1 or 2 to talk privately and disconnect other line.
6. When finished hang up.

## MEMORY

Each of the memory buttons is capable of storing phone numbers that are up to 16 digits. A, B and C memory locations are accessible by one press. Memory locations 1-9 require you to press MEMORY DIAL for access.

### STORING A NUMBER IN MEMORY

1. Pick up the handset.
2. Press the STORE button.
3. Dial the number to be stored (up to 16 digits).
4. Press STORE again.
5. Press a memory location button (A, B, C, or 1-9).
6. Remove the memory directory from underneath its plastic cover and record the name of the person whose number you stored.
7. Hang up the handset.

### INSERTING A PAUSE IN THE DIALING SEQUENCE

Press the REDIAL button to insert a delay in the dialing sequence of a stored telephone number when a pause is needed to wait for a dial tone (for example after you dial 9 for an outside line, or to wait for a computer access tone). Each pause counts as 1 digit in the dialing sequence.

### CHANGING A STORED NUMBER

To change a stored number, you just replace it with a different number using the procedure for storing a number.

### DIALING A STORED NUMBER

1. Pick up the handset, and wait for a dial tone.
2. Press A, B or C to access those stored numbers. For numbers stored at memory locations 1-9, press DIAL and then number of the location in which the desired number is stored.

**CAUTION:** If you make test calls to emergency numbers, remain on the line and explain the reason for the call to the dispatcher. Also, make these calls in off-peak hours, such as early morning or late evening.

**NOTE:** If you make a mistake while storing a number, hang up and repeat the storing procedure.

## GENERAL PRODUCT CARE

To keep your Telephone working and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose to direct sunlight or moisture.
- Avoid dropping the unit and/or other rough treatment.
- Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this will damage the finish.
- Retain the original packaging in case you need to ship it at a later date.

## TROUBLESHOOTING TIPS

Problem	Solution
No dial tone. Won't dial out	<ul style="list-style-type: none"> <li>• Check hook switch to make sure it pops up.</li> <li>• Make sure TONE/PULSE is set to correct position.</li> <li>• Check if a LINE button depressed.</li> </ul>
Phone doesn't ring	<ul style="list-style-type: none"> <li>• Check RINGER VOLUME.</li> <li>• You might have too many phones on one line.</li> </ul>
Light and tone fluctuating with phone outpulsing.	<ul style="list-style-type: none"> <li>• This is normal as power is feedback flutter when dialing in pulse mode.</li> </ul>
Can't be heard by other party	<ul style="list-style-type: none"> <li>• Make sure phone line is connected properly.</li> <li>• Make sure other phones are not OFF hook at the same time. If so, this is normal condition as volume drops when additional phones are used at once.</li> </ul>
Memory dialing	<ul style="list-style-type: none"> <li>• Make sure you entered numbers correctly. (See "Memory.")</li> </ul>
Memory Loss	<ul style="list-style-type: none"> <li>• Is Lithium battery installed correctly.</li> <li>• Does lithium battery need to be replaced.</li> </ul>
Indicator lights do not Turn on or off properly	<ul style="list-style-type: none"> <li>• Check all of the phones on this line.</li> <li>• Check the "AA" batteries.</li> <li>• Switch the line cord jacks for lines 1 and 2.</li> </ul>

## ACCESSORY ORDERING INFORMATION

Please call 1-800-338-0376 Monday through Friday between 8 AM and 8 PM to order a lithium battery cartridge (part number 5-1923; price \$2.95 plus \$5.00 for shipping and handling).

## LIMITED WARRANTY

### What your warranty covers:

- Any defect in materials or workmanship.

### For how long after your purchase:

- One year.

(The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.)

### What we will do:

- Provide you with a new or, at our option, a refurbished unit.
- The exchange unit is under warranty for the remainder of the original product's warranty period.

### How to make a warranty claim:

- Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
- Include in the package evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send standard UPS or its equivalent to:

**Thomson Consumer Electronics, Inc.**  
**Product Exchange Center**  
**32B Spur Drive**  
**El Paso, Texas 79906**

- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
- Insure your shipment in case of loss or damage. Thomson accepts no liability in case of damage or loss.
- A new or refurbished unit will be shipped to you prepaid freight.

### What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of God, such as but not limited to lightning damage.

### Product Registration:

- Please complete and mail the Product Registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

### How state law relates to this warranty:

- This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

### If you purchased your product outside the USA:

- This warranty does not apply. Contact your dealer for warranty information.

### FCC REGISTRATION INFORMATION

Your GE telephone equipment is registered with the Federal Communications Commission and is in compliance with parts 15 and 68, FCC Rules and Regulations.

1. Notification to the Local Telephone Company  
On the bottom of this equipment is a label indicating, among other information, the FCC Registration number and Ringer Equivalence Number (REN) for the equipment. You must, upon request, provide this information to your telephone company. The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. To be certain of the number of devices you may connect to your line as determined by the REN, you should contact your local telephone company.

- Notes
- This equipment may not be used on coin service provided by the telephone company.
  - Party lines are subject to state tariffs, and therefore, you may not be able to use your own telephone equipment if you are on a party line. Check with your local telephone company.
  - Notice must be given to the telephone company upon permanent disconnection of your telephone from your line.

2. Rights of the Telephone Company  
Should your equipment cause trouble on your line which may harm the telephone network, the telephone company shall, where practicable, notify you that temporary discontinuance of service may be required. Where prior notice is not practicable and the circumstances warrant such action, the telephone company may temporarily discontinue service immediately. In case of such temporary discontinuance, the telephone company must: (1) promptly notify you of such temporary discontinuance; (2) afford you the opportunity to correct the situation; and (3) inform you of your right to bring a complaint to the Commission pursuant to procedures set forth in Subpart E of Part 68, FCC Rules and Regulations. The telephone company may make changes in its communications facilities, equipment, operations or procedures where such action is required in the operation of its business and not inconsistent with FCC Rules and Regulations. If these changes are expected to affect the use or performance of your telephone equipment, the telephone company must give you adequate notice, in writing, to allow you to maintain uninterrupted service.

### INTERFERENCE INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).
- Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.
- Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio/TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402. Please specify stock number 004-000-00345-4 when ordering copies.

### HEARING AID COMPATIBILITY

This telephone system meets FCC standards for Hearing Aid Compatibility

FCC NUMBER IS LOCATED ON THE CABINET BOTTOM  
 REN NUMBER IS LOCATED ON THE CABINET BOTTOM

**THOMSON CONSUMER ELECTRONICS**  
 P.O. Box 1976, Indianapolis, IN 46206  
 © 1998 Thomson Consumer Electronics, Inc.  
 Trademark(s) ® Registered  
 Marc(s) Registrad(s)

Model 2-9421  
 20904200 (Rev. 2 E/S)  
 98-45  
 Printed in Philippines

*We bring good things to life.*