# MAXO<sub>2</sub>®

## OXYGEN MONITOR



## MODEL OM-25ME

(OM-25ME-L)

USER'S GUIDE AND OPERATING INSTRUCTIONS

R213M05 Rev. H

manufactured by:





Manufacturer: Maxtec, Inc



European Representative
Airox S.A.
Parcd'activities Pau-Pyrenees
L'echangeur BP833
64008 PAU Cedex

#### PREFACE

This manual describes the function, operation and maintenance of the Maxtec Model OM-25ME and OM-25ME-L oxygen monitors. Notes are included where differences may occur between the two monitors. As members of Maxtec's MAXO<sub>2®</sub> line of oxygen analyzers and monitors, the OM-25ME utilizes the Maxtec MAX-250E oxygen sensor and is engineered for fast response, maximum reliability and stable performance. The OM-25ME is designed primarily for continuous monitoring of oxygen levels delivered by medical oxygen delivery equipment and respiratory care systems. Adjustable high and low level alarm setpoints make the OM-25ME ideal for use in neo-natal, anesthesia, and respiratory care.

#### THANK YOU

Thank you for your purchase of a Maxtec MAXO<sub>2</sub>® oxygen monitor. We appreciate the time and energy you invest in selecting the equipment best suited to your needs. As repayment, we are supplying you with a reliable, high-quality instrument that, with proper care and operation, will provide you with years of exceptional service. We also encourage your comments or suggestions as to how our equipment, in any way, can better serve your needs. Please feel free to write, FAX or e-mail us at the address on the back of this manual c/o the Maxtec Marketing Department.

NOTE: In order to obtain optimum performance from your MAXO2® monitor, all operation and maintenance must be performed in accordance with this manual. Please read the manual thoroughly before using the monitor and do not attempt any repair or procedure that is not described herein. Maxtec cannot warrant any damage resulting from misuse, unauthorized repair or improper maintenance of the instrument.



## / WARNING

The sensor of the MAXO<sub>2</sub> Oxygen Monitor (MAXO<sub>2</sub>) has been tested with various anesthesia gases including Nitrous oxide, Halothane, Isoflurane, Enflurane, Sevoflurane and Desflurane and found to have acceptable low interferance, the device in its entirety (including electronics) is not suitable for use in the presense of a flammable anesthetic mixture. Only the threaded sensor face, flow diverter, and "T" adapter may be allowed to contact such a gas mixture.

To avoid explosion, do not operate the Oxygen monitor in the presence of flammable anesthetics or in an atmosphere of explosive gases. Operating the oxygen monitor in flammable or explosive atmospheres may result in fire or explosion.

Never allow an excess length of cable near the patient's head or neck, as such could result in strangulation. Secure excess cable to the bed rail or suitable object.

Never use a MAXO<sub>2</sub> monitor with a cable that appears worn, cracked or has damaged insulation

Before use, all individuals who will be using the MAXO<sub>2</sub> must become thoroughly familiar with the information contained in this Operation Manual. Strict adherance to the operating instructions is necessary for safe effective product performance. This product will perform only as designed if installed and operated in accordance with the manufacturer's operating instructions.

Use only genuine Maxtec accessories and replacement parts. Failure to do so may seriously impair the monitor's performance. Repair or alteration of the MAXO<sub>2</sub> beyond the scope of the maintenance instructions or by anyone other than an authorized Maxtec service person could cause the product to fail to perform as designed.

Calibrate the MAXO<sub>2</sub> weekly when in operation and if environmental conditions change significantly. (ie, Temperature, Humidity, Barometric Pressure. --- Refer to Calibration section of this manual).

Use of the MAXO<sub>2</sub> near devices that generate electrical fields may cause erratic readings.

If the MAXO $_2$  is ever exposed to liquids (from spills or immersion) or to any other physical abuse, turn the instrument OFF and then ON. This will allow the unit to go through its self test and make sure everything is operating correctly.

Never autoclave, immerse or expose the MAXO $_2$  (including sensor) to high temperatures (>70 $^{\circ}$ C). Never expose the device to pressure, irradiation vacuum, steam, or chemicals.

To protect the unit from potential leaky battery damage always remove batteries when the unit is going to be stored (not in use for 1 month) and replace dead batteries with recognized name brand AA Alkaline batteries. The OM-25ME-L<sup>™</sup> oxygen monitor has been manufactured with a low alarm setting adjustable down to 15% This change is within the guidelines set forth in ASTM Specification F1462-93. The OM-25ME-L<sup>™</sup> is labeled to indicate this feature.

#### Classification:

Protection against electric shock: Internally powered equipment.

Protection against water: Ordinary equipment

Mode of Operation: Continuous Sterilization: See section 6

Safety of application in the presensence of a flammable aesthetic

mixture: See section 8.1

FAILURE TO COMPLY WITH THESE WARNINGS AND CAUTIONS COULD RESULT IN INSTRUMENT DAMAGE AND POSSIBLY JEOPARDIZE THE WELL BEING OF THE PATIENT AND/OR HEALTH CARE PROFESSIONAL.

#### **TABLE OF CONTENTS**

1.	<b>SYST</b>	EM OVERVIEW	1	
	1.1	Base Unit Description	1	
	1.2	Components Description	2	
	1.3	MAX-250E Oxygen Sensor	6	
2.	SET-UP PROCEDURE			
	2.1	Battery Installation	7	
	2.2	Calibrating the MAXO <sub>2</sub> ® Monitor	7	
		2.2.1 Before You Begin	7	
		2.2.2 To Calibrate the MAXO <sub>2</sub> ® Monitor	8	
		2.2.3 Automatic Calibration to Room Air	9	
		2.2.4 Factors Influencing Calibration	10	
3.	OPER	ATING INSTRUCTIONS	12	
	3.1	Alarm Setting Procedure	12	
		3.1.1 Low Alarm Setting	12	
		3.1.2 High Alarm Setting	12	
	3.2	Basic Operation	13	
	3.3	Alarm Conditions	13	
4.	SENS	OR REMOVAL AND REPLACEMENT	14	
5.	PROE	BLEM SOLVING	15	
6.	CLEANING AND MAINTENANCE 1			
7.	7. SPECIFICATIONS			
	7.1	Base Unit Specifications	16	
	7.2	Sensor Specifications	16	
8.	<b>APPL</b>	ICATIONS	17	
	8.1	Exposure to Anesthetic Gases	17	
	8.2	Calibration Techniques in Pressurized		
		Systems	17	
	8.3	Calibration Errors	18	
	8.4	Atmospheres of High Humidity	18	
9.	<b>SPAR</b>	E PARTS AND ACCESSORIES	20	
10	.WARF	RANTY	21	

#### 1. SYSTEM OVERVIEW

#### 1.1 Base Unit Description

The MAXO $_2$ <sup>®</sup> (Model OM-25ME) provides unparalleled performance and reliability, due to an advanced design that includes the following features and operational benefits.


- Fast-responding, oxygen-specific, galvanic sensor that achieves
   90% of final value in approximately 15 seconds at room temperature.
- Extra-life oxygen sensor of approximately 900,000 O<sub>2</sub> percent hours (minimum 2 years in most applications).
- External probe with 10 ft., extendible cable and diverter fitting for standard 15 mm "T" adapter.
- Operation using 2 AA alkaline batteries (2 x 1.5 volts) for approximately 3000 hours of performance in typical usage (not in alarm conditions). For extra extended long life, 2 AA lithium batteries may be used.
- Durable, compact case that weighs less than 1 pound and permits comfortable, hand-held operation.
- Large, easy-to-read, 3 <sup>1</sup>/<sub>2</sub>-digit LCD display for readings in the 0-100% range.
- Adjustable high-level and low-level alarming capability with flashing LED and audible indication of alarm conditions.
- Simple operation and calibration using quick-calibrate key functions.
- Self-diagnostic check of analog and microprocessor circuitry.
- Low battery indication.

#### 1.2 Components Description (please refer to page 3)



#### **LCD Readout**

- 1 3 1/2-Digit Display- The 3 1/2-digit liquid crystal display (LCD) provides direct readout of oxygen concentrations in the range of 0-100%. It also displays "CAL" when the calibration mode is entered.
- 2 "%" Sign- In the calibration mode, the "%" sign flashes every second.
- 3 Low Battery Indicator- The low battery indicator appears on the LCD display when the power supply voltage drops below acceptable limits. When the "LOW BAT" icon is visible, batteries should be replaced immediately.
- 4 LOCKED Status Indicator- The presence of the "LOCKED" icon on the LCD readout is an indication that the unit is in its normal "LOCKED" state. The unit must be unlocked, using the LOCK key, in order to be calibrated or to change the high and low alarm settings.
- Low Alarm Indicator- The low alarm setting is displayed at all times just below the "LOW" icon on the LCD readout. The indicated value represents the oxygen percentage at which the low alarm will be activated. In the low alarm set mode, the "LOW" icon will flash at a 1 second rate. In a low alarm condition, the low alarm value will flash in conjunction with the low alarm light emitting diode (LED).
- High Alarm Indicator- The high alarm setting is displayed at all times just below the "HIGH" icon on the LCD readout. The indicated value represents the oxygen percentage at which the high alarm will be activated. In the high alarm set mode, the "HIGH" icon will flash at a 1 second rate. In a high alarm condition, the high alarm value will flash in conjunction with the high alarm LED.
- **Threaded Mounting Bushing-** Threads to Table Top Swivel Stand. Also may be used with many third party camera mounting accessories.

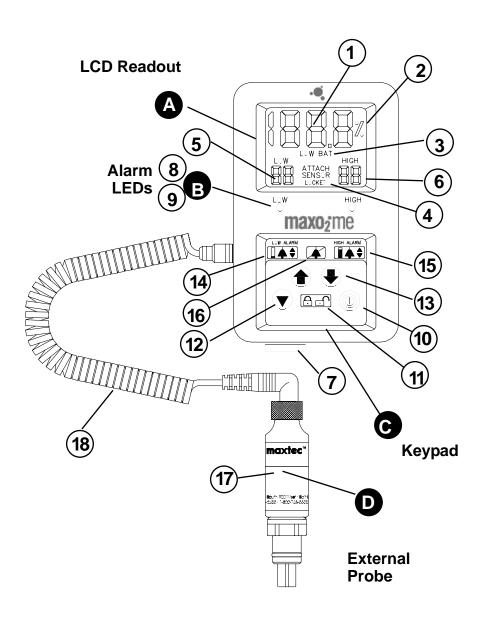

## **OM-25ME**

- **B** Alarm LEDs
- 8 Low Alarm LED- In a low alarm condition, the red "LOW ALARM" LED will flash each second, accompanied by the alarm beeper.
- High Alarm LED- In a high alarm condition, the red "HIGH ALARM" LED will flash each second, accompanied by the alarm beeper.
- **C** Keypad
- ON/OFF Key- (after Calibration) This key is used to turn the instrument on or off. When batteries are installed in the unit and the unit is in the power off mode, the display will be blank. When the ON/OFF key is pressed once, the unit will start to display the oxygen concentration and the keypad is activated. If the ON/OFF key is pressed again, the unit reverts to the power off mode.
- will unlock the keypad and cause the "LOCKED" icon to disappear from the LCD readout. The unit can then be calibrated and alarm settings can be changed if desired. If no other keys are pressed within 10 seconds, the "LOCKED" icon will reappear and the unit will revert to the "LOCKED" mode. When the unit is in the unlocked state, pressing the LOCK/UNLOCK key will also cause the "LOCKED" icon to reappear.
  - first time power is applied or the sensor is changed. This is indicated on the LCD by the word "CAL". Pressing the CALIBRATE key will allow the ↑ and ↓ arrow keys to calibrate the unit. Also when the keypad is unlocked, the CALIBRATE key is used in conjunction with the ↑ and ↓ arrow keys to calibrate the unit. When the CALIBRATE key is pressed, "CAL" appears on the LCD readout for 1 second and then the measured calibration concentration is displayed. The calibration value can then be changed using the ↑ and ↓ arrow keys. During calibration, the "%" sign will flash at a once per second rate. When the calibration value is set, pressing the CALIBRATE or LOCK/UNLOCK key will cause the unit to exit the calibration mode and return to normal operation. The unit will also revert to normal operation if 10 seconds elapse and no keys are pressed.

↑ and ↓ Keys- The ↑ and ↓ arrow keys are used in conjunction with the CALIBRATE key to calibrate the unit or in conjunction with the LOW SET and HIGH SET keys to adjust the alarm settings. When used after pressing the CALIBRATE key, pressing the ↑ or ↓ key will raise or lower the displayed oxygen value in .1% increments. When either of these keys are held down for more than 1 second, the display will scroll at a rate of .4% per second. When used after pressing either the LOW SET or HIGH SET keys, pressing the ↑ or ↓ key will raise or lower the displayed alarm setting in 1% increments. In the alarm set mode, holding these keys down for more than 1 second

will cause the display to scroll at a rate of 4% per second.

- LOW SET Key- When the keypad is unlocked, pressing the LOW SET key will cause the "LOW" icon to flash. The low alarm setting can then be changed using the 1 and 1 arrow keys. When the low alarm value is set and the LOW SET or LOCK/UNLOCK key is pressed again, the unit exits the alarm set mode and returns to normal operation. The unit will also revert to normal operation (storing the most recent alarm value) if 10 seconds elapse and no keys are pressed. The OM-25ME alarm setting is adjustable down to 18%. The OM-25ME-L low alarm setting is adjustable to 15%.
- HIGH SET Key- When the keypad is unlocked, pressing the HIGH SET key will cause the "HIGH" icon to flash. The high alarm setting can then be changed using the ↑ and ↓ arrow keys. When the high alarm value is set and the HIGH SET or LOCK/UNLOCK key is pressed again, the unit exits the alarm set mode and returns to normal operation. The unit will also revert to normal operation (storing the most recent alarm value) if 10 seconds elapse and no keys are pressed.
- deactivate the alarm beeper, but the alarm LED and display will continue to flash. In 120 seconds, the alarm beeper will sound again. This process will be repeated until the alarm condition is cancelled. For an alarm condition to be cancelled, the concentration must be .1% higher than the alarm setting (in the presence of a low alarm condition) or .1% lower than the alarm setting (in the presence of a high alarm condition).
- **External Probe**
- Sensor with Diverter- The sensor (with diverter) is designed to fit industry standard, 15 mm I.D. "T" adapters.
- **Extendible Cable-** The extendible cable allows the sensor to be positioned up to 10 feet from the side of the unit.

#### 1.3 MAX-250E Oxygen Sensor

MAX-250E oxygen sensors offer quick response, stability and extra life on the order of 900,000 percent hours.

The MAX-250E is a galvanic, partial pressure sensor that is specific to oxygen. It consists of two electrodes (a cathode and an anode), a teflon membrane and an electrolyte. Oxygen diffuses through the teflon membrane and immediately reacts electrochemically at a gold cathode. Concurrently, oxidation occurs electrochemically at a lead anode, generating an electrical current and providing a voltage output. Electrodes are immersed in a unique gelled weak acid electrolyte which is responsible for the sensors long life and motion insensitive characteristic. Since the sensor is specific to oxygen, the current generated is proportional to the amount of oxygen present in the sample gas. When no oxygen is present, there is no electrochemical reaction and therefore, negligible current is produced. In this sense, the sensor is self-zeroing.



CAUTION: The Maxtec MAX-250E oxygen sensor is a sealed device containing a mild acid electrolyte, lead (Pb), and lead acetate. Lead and lead acetate are hazardous waste constituents and should be disposed of properly, or returned to Maxtec for proper disposal or recovery.



CAUTION: Do not use ethylene oxide for sterilization. Do not immerse the sensor in any cleaning solution, autoclave or expose the sensor to high temperatures.



CAUTION: Dropping or severely jarring the sensor after calibration may shift the calibration point enough to require recalibration.



CAUTION: The flow diverter for the sensor is for use with flowing gases only. Do not use the diverter when performing static sampling, such as in incubators, oxygen tents, oxygen hoods, etc.

#### 2. SET-UP PROCEDURE

#### 2.1 Battery Installation

All MAXO<sub>2</sub>® units are powered by two, AA, alkaline batteries (2 x 1.5 Volts) and are shipped without the batteries installed. The battery compartment is accessible from the back side of the unit. To install the batteries:

- 1) With the thumb, press down on the center of the battery compartment cover and slide the cover off of the instrument case.
- 2) Install the two, AA, alkaline batteries (2 x 1.5 Volts) in the unit, observing the orientation shown on the label inside the compartment.
- Slide the battery compartment cover back onto the case. Make sure the tabs on the cover snap into position, securing the cover flush against the case.

When batteries are installed in the MAXO<sub>2</sub>®, the unit initiates a self-diagnostic test. All segments of the LCD readout are turned on for approximately 2 seconds. On OM-25ME units, the alarm beeper sounds and the high and low alarm LEDs are illuminated. When the diagnostic test is completed successfully, the word "CAL" will appear on the display, indicating that the unit is ready for calibration.

#### 2.2 Calibrating the MAXO<sub>2</sub>® Monitor

#### 2.2.1 Before You Begin

A protective film covering the threaded sensor face must be removed; wait approximately 20 minutes for the sensor to reach equilibrium. Next, the MAXO<sub>2</sub>® Oxygen Monitor should be calibrated. Thereafter, Maxtec recommends calibration on a weekly basis. However, more frequent calibration will not adversely affect product performance.

More frequent calibration is recommended when:

- Calibration of the instrument should be performed when the temperature of the gas stream changes by more than 3 degrees Celsius.
- Changes in elevation result in calibration error of approximately 1% of reading per 250 feet. In general, calibration of the instrument should

be performed when the geographic elevation at which the product is being used changes by more than 500 feet.

The sensor is best calibrated while mounted in the industry standard, 15mm I.D. "T" adapter. As in normal operation, the oxygen sensor responds best when installed in a vertical position with the sensor facing down.

In addition, calibration is recommended if the user is unsure when the last calibration procedure was performed or if the measurement value displayed is in question.

It is best to calibrate the MAXO<sub>2</sub>® Monitor to a known documented oxygen concentration at a pressure and flow similar to your clinical application. Calibrating the MAXO<sub>2</sub>® at lower concentrations with a known oxygen value is also acceptable and may provide additional accuracy if the calibration gas is closer to the environment in which the MAXO<sub>2</sub>® will be used. A "known" value of oxygen is defined as an oxygen source which has a traceable certificate and / or USP certification.

Note: Before beginning calibration the MAX-250E sensor must be in thermal equilibrium. You may also need to be aware of other factors which affect device calibration values. For more information, refer to "Factors Influencing Calibration and Performance" in this manual.

#### 2.2.2 To Calibrate the MAXO<sub>2</sub>® Monitor

- Place the external probe in a stream of gas of known oxygen concentration. Expose the sensor to the calibration gas at a regulated pressure and flow.
- 2) Using the ON/OFF key, make sure the unit is in the power on mode.
- 3) Allow the oxygen reading to stabilize. This will normally take about 30 seconds or more.
- 4) Press the LOCK/UNLOCK key to unlock the keypad. The "LOCKED" icon will disappear from the display.
- 5) Press the CALIBRATE key on the keypad. The word "CAL" will appear on the display for about 1 second and then the "%" sign will start to flash.

6) Use the ↑ and ↓ arrow keys to adjust the displayed oxygen concentration to the level of the known concentration. Pressing the arrow keys changes the value in .1% increments. If the keys are held down for more than 1 second the display will scroll at a rate of .4% per second.

Note: If 10 seconds elapse between key actuations, the system will store the latest calibration value and will revert to normal operation. If this occurs inadvertently, simply repeat the calibration procedure.

7) When the calibration value is set, press the CALIBRATE or LOCK\UNLOCK key again to accept the calibration setting and return to normal operation.

Note: If the message "CAL," followed by the message "Er" flashes on the display after entering the desired calibration value, the system has determined that the entered value will not allow operation within the specified output range of the sensor. This situation may occur if:

- a) the operator has inadvertently entered the wrong concentration for the calibration gas.
- b) the concentration of the calibration gas is not correct.
- c) the sensor is in need of replacement.
- d) the operator attempted to adjust the monitor before allowing sufficient time for the calibration gas to purge out the previous sample.
- e) the flow and pressure of the calibration gas was not properly regulated.

Check these items and repeat calibration. If calibration error continues to occur, contact the service department of the distributor from which the unit was purchased, or you may call Maxtec's Customer Service Department directly.

#### 2.2.3 Automatic Calibration to Room Air

The MAXO<sub>2</sub>® Monitor can quickly be calibrated to room air (20.9%) using a quick-key shortcut command. This function saves time by setting the calibration value to 20.9% without scrolling the display.

To use this function:

- Place the external probe in room air.
- 2) Press the LOCK\UNLOCK key to unlock the keypad.
- 3) Press and **hold down** the CALIBRATE key. When the "%" sign starts to flash, press the ↓ arrow key to set the calibration value to 20.9%.
- 4) Release **both** the CALIBRATE key and the  $\downarrow$  key.

The unit will automatically enter the "LOCKED" condition and return to normal operation.

#### 2.2.4 Factors Influencing Calibration

The primary factors influencing the MAXO<sub>2</sub>® Monitor are temperature, pressure, and humidity.

#### **Effects of Temperature**

The MAXO<sub>2</sub>® Monitor will hold calibration and read correctly within  $\pm 3\%$  when in thermal equilibrium within the operating temperature range. The device must be thermally stable when calibrated and allowed to thermally stabilize after experiencing temperature changes before reading are accurate. For these reasons, the following is recommended:

- 1) Allow adequate time for the sensor to equilibrate to a new ambient temperature.
- When used in a breathing circuit, place the sensor upstream of the heater.
- 3) For best results, perform the calibration procedure at a temperature close to the temperature where analysis will occur.

#### **Pressure Effect**

Readings from the MAXO<sub>2</sub>® Monitor are proportional to the partial pressure of oxygen. The partial pressure of Oxygen (PO<sub>2</sub>) is equal to the percentage of oxygen (%O<sub>2</sub>) times the absolute pressure (AP) at which the sample environment is measured. (PO<sub>2</sub>=%O<sub>2</sub> x AP). Thus the readings are proportional to the concentration if the pressure is held constant. Flow rate of sample gas can affect pressure at the sensor in that back pressure at the sensing point may change. For these reasons, the following is recommended:

- 1) Calibrate the MAXO<sub>2</sub>® Monitor at the same pressure as the sample gas.
- 2) If sample gases flow through tubing, use the same apparatus and flow rates when calibrating as when measuring.
- 3) The MAXO<sub>2</sub>® Monitor oxygen sensor has been validated at pressures up to 2 atmospheres absolute. Calibration or operation above this pressure is beyond the intended use.

#### **Humidity Effect**

Humidity has no effect on the performance of the MAXO<sub>2</sub>® Monitor other than diluting the gas, as long as there is no condensation. Depending on the humidity, the gas may be diluted by as much as 4%, which proportionally reduces the oxygen concentration from the dry concentration. Environments where condensation may occur are to be avoided since condensate may obstruct passage of gas to the sensing surface, resulting in erroneous readings and slower response time. For this reason, the following is recommended:

- 1) Avoid usage in environments greater than 95% relative humidity.
- When used in a breathing circuit, place the sensor upstream of the humidifier.

#### 3. OPERATING INSTRUCTIONS

#### 3.1 Alarm Setting Procedure

#### 3.1.1 Low Alarm Setting

To adjust the low alarm setting:

- 1) Press the LOCK/UNLOCK key to unlock the keypad.
- 2) Press the LOW SET key. The "LOW" icon will start to flash.
- 3) Use the ↑ and ↓ arrow keys to set the low alarm to the desired value. Pressing the arrow keys changes the value in 1% increments. If the keys are held down for more than 1 second the display will scroll at a rate of 4% per second.

Note: If 10 seconds elapse between key actuations, the system will store the latest low alarm value and will revert to normal operation. If this occurs inadvertently, simply repeat the alarm setting procedure.

The low alarm value cannot be set lower than 18%, nor can it be set closer than 1% from the high alarm value due to ASTM specifications (special applications requiring alarms below 18% can be accommodated by the model OM-25ME-L Monitor). For example, if the high alarm is set at 25%, the system will not accept a low alarm setting greater than 24%.

4) When the low alarm value is set, press the LOW SET or LOCK/UNLOCK key again to accept the low alarm setting and return to normal operation.

Note: To automatically set the low alarm to 18% without scrolling the display, hold the LOW SET key down and press the  $\downarrow$  arrow key when the "LOW" icon is flashing.

#### 3.1.2 High Alarm Setting

To adjust the high alarm setting:

- 1) Press the LOCK/UNLOCK key to unlock the keypad.
- 2) Press the HIGH SET key. The "HIGH" icon will start to flash.
- 3) Use the ↑ and ↓ arrow keys to set the high alarm to the desired value.

The high alarm value cannot be set closer than 1% from the low alarm value due to ASTM specifications. For example, if the low alarm is set at 50%, the system will not accept a high alarm setting less than 51%. Setting the high alarm to 100% turns off or deactivates the high alarm.

4) When the high alarm value is set, press the HIGH SET key again to accept the high alarm setting and return to normal operation.

Note: To automatically set the high alarm to 50% without scrolling the display, hold the HIGH SET key down and then press the  $\downarrow$  arrow key when the "HIGH" icon is flashing. To automatically turn off the high alarm or set it to 100%, hold the HIGH SET key down and then press the  $\uparrow$  arrow key when the "HIGH" icon is flashing.

#### 3.2 Basic Operation

To check the oxygen concentration of a sample gas:

 Place the external probe in the sample gas stream. When using a standard "T" adapter, make sure the sensor is mounted in the adapter with the flow diverter pointing downward. This will prevent moisture from draining into the sensor membrane.

Note: It is important that a tight fit exists between the probe and the "T" adapter.

- 2) Initiate flow of the sample gas to the sensor.
- 3) Using the ON/OFF key, make sure the unit is in the power on mode.
- 4) Allow the oxygen reading to stabilize. This will normally take about 30 seconds or more.

#### 3.3 Alarm Conditions

In the event of either a low alarm or high alarm condition, the corresponding LED will begin to flash, accompanied by the alarm beeper. Pressing the SILENT key will deactivate the buzzer but the LED and the alarm value digits on the display will continue to flash until the alarm condition has been rectified. If the alarm condition still exists 120 seconds after silencing the alarm beeper, the beeper will start to sound again.

A low alarm condition will remain until the actual concentration is .1% higher than the low alarm setting. A high alarm condition will remain until the the actual concentration is .1% lower than the high alarm setting.

#### 4. SENSOR REMOVAL AND REPLACEMENT

The OM-25ME is shipped with a new MAX-250E oxygen sensor installed. Although the sensor has a very long expected life, eventually the sensor will require replacement. Removing or installing a sensor, when necessary, is a very simple procedure. To remove and install a new sensor:

- Grasp the sensor in one hand and, with the other hand, unscrew the cable connector counter-clockwise at the sensor.
- 2) Pull out the cable connector plug from the expired sensor.
- Unscrew the flow diverter from the sensor and discard the expired sensor.

Note: The sensor contains lead and lead acetate, be sure to dispose of expired sensors in accordance with hospital, local, state and federal regulations.

- 4) Remove the new sensor from the packaging and remove the protective film from the sensor face.
- 5) Insert the cable connector plug into the receptacle of the new sensor and tighten the cable connector.
- 6) Screw the flow diverter onto the new sensor.
- 7) Wait approximately 20 minutes for the sensor to reach equilibrium.
- 8) Calibrate the new sensor.

Note: If the monitor is on when the sensor is detached and replaced, the monitor will automatically force a re-calibration. The display will read "CAL".

#### 5. PROBLEM SOLVING

- If the "LOW BAT" icon is displayed on the LCD readout at any time, the batteries should be replaced as quickly as possible.
- When the unit is in the power on mode and the LCD displays "000%,"
  the sensor is not connected properly. The "ATTACH SENSOR" icon
  will also appear on the display. Check the sensor connection and if
  the condition persists, contact Maxtec's Customer Service
  Department.
- If, at any time, "ErX" (i.e. Er1, Er4, etc.) appears on the LCD readout, contact Maxtec's Customer Service Department.

#### 6. CLEANING AND MAINTENANCE

- When cleaning or disinfecting the MAXO<sub>2</sub>® Monitor, take appropriate care to prevent any solution from entering the instrument.
- The MAXO<sub>2</sub>® Monitors surface may be cleaned using a mild detergent and a moist cloth.
- The MAXO<sub>2</sub>® Monitor may be disinfected using standard topical disinfectants.
- The MAXO<sub>2</sub>® Monitor is not intended for steam, ethylene oxide or radiation sterilization.
- Store the MAXO<sub>2®</sub> Monitor in a temperature similar to its ambient environment of daily use.

#### 7. SPECIFICATIONS

#### 7.1 Base Unit Specifications

Measurement Range: 0.0-100% Resolution: 0.1%

Accuracy and Linearity: ±1% of full scale at constant temperature, R.H.

and pressure when calibrated at full scale.

Total Accuracy: ±3% Actual Oxygen Level over full operating

temperature range.

Response Time: 90% of final value in approximately 15 seconds

at 23°C

Warm-up Time: none required

Operating Temperature: 15°C - 40°C (59°F - 104°F) Storage Temperature: -15°C - 50°C (5°F - 122°F) Humidity: 0-95% (non-condensing)

Power Requirements: 2, AA Alkaline batteries (2 X 1.5 Volts)
Battery Life: approximately 3000 hours in typical use.
Low Battery Indication: "LOW BAT" icon displayed on LCD
Sensor Type: Maxtec MAX-250E galvanic fuel cell

Expected Sensor Life: >900,000% O2 Hours

over 2 years in typical applications

Alarm System: high/low alarms, flashing red LEDs, nominal

2300Hz audible alarm beeper

Low Alarm Range: 18%-99% (>1% lower than high alarm)

15%-99% (>1% lower than high alarm)OM-25ME-L

High Alarm Range: 19%-99% (>1% higher than low alarm)

16%-99% (>1% higher than low alarm)OM-25ME-L

Alarm Accuracy: exact to displayed alarm value

Dimensions: 3.5"(W) x 5.5"(H) x 1.5"(D) [89mm x 140mm x 38mm]

Weight: approximately .92 lbs. (417g)
Cable Length: 10 ft. (3m) fully extended

Diverter Fitting: fits industry standard, 15 mm "T" adapter

#### 7.2 Sensor Specifications

Type: galvanic fuel sensor (0-100%)
Life: 2 years in typical applications

	_ ,	- p
<u>Interferent</u>	Volume % Dry	Interference in O2%
Nitrous Oxide	75%	<2%
Carbon Dioxide	10%	<2%
Halothane	5%	<2%
Enflurane	5%	<2%
Isoflurane	5%	<2%
Helium	70%	<2%
Sevoflurane	6%	<2%
Desflurane	15%	<2%

#### 8. APPLICATIONS

#### 8.1 Exposure to Anesthetic Gases

Because of the unique chemistry of the oxygen sensors provided with the MAXO<sub>2</sub>® Monitor, there are no significant effects when exposed to commonly used anesthetic gases, however, the monitor is not designed for exposure to flammable gas mixtures. (See WARNING page i)

#### 8.2 Calibration Techniques in Pressurized Systems

Similar to other oxygen sensors, the Maxtec MAX series sensors measure the partial pressure of oxygen in a gas stream. This is correlated to read "percent oxygen" on the MAXO<sub>2</sub>® Monitors. It is important to note that the sensor output is directly proportional to the pressure of oxygen. Thus, one must take into consideration the effect of exposing the sensor to various gas sample pressures.

For example, if a monitor is calibrated to read 20.9% in ambient air (atmospheric pressure) and then exposed to a pressurized gas sample containing a known concentration of oxygen, the monitor will display a reading greater than the actual oxygen percentage. This is because the monitor was originally calibrated at atmospheric pressure (0 psig) then exposed to a higher pressure sample (eg, 5 psig). The greater the difference in pressure, the greater the difference in sensor signal (oxygen reading on the monitor).

By the same token, if a monitor is calibrated on a pressurized gas sample containing a known concentration of oxygen and then exposed to ambient air (atmospheric pressure), the monitor will display a reading less than the actual oxygen percentage.

To avoid confusion, the monitor can be calibrated at a single point on a gas stream similar to the application. If, for example, the purpose of the monitor is to measure oxygen in a concentrator or anesthesia application, the optimal results may be attained by calibrating the instrument on a gas of similar concentration and pressure. This would typically be done by connecting to a cylinder of a known high concentration of oxygen calibration gas and adjusting the flow and pressure to match the application before calibrating the instrument.

#### 8.3 Calibration Errors

The MAXO<sub>2</sub>® Monitors have a self test feature built into the software to detect faulty calibrations. During calibration, if the signal from the oxygen sensor is outside the limits stored within the instrument's memory, a flashing "CAL Er" is displayed. The error code is displayed to indicate that either the sensor should be replaced or that there is a fault in the calibration process. A few simple hints can prevent calibration errors.

If you try to adjust the monitor display before the reading has stabilized, the "CAL Er" may appear. For example, if the monitor had just been calibrated on a known high concentration of oxygen source gas and then exposed to ambient air, you should wait until the reading has stabilized. If you try to adjust the display to read 20.9% before the sample line has cleared of high concentration O<sub>2</sub>, the sensor may actually be exposed to residual high % oxygen. The signal from the sensor would still be high and considered "out of spec" for air, thus resulting in a "CAL Er". The proper procedure is to wait for the reading to stabilize before adjusting the display. This may take 30 seconds or more.

Externally mounted sensors, as found on the **OM-25ME** or **OM-25ME-L** come equipped with diverter tips. The tips help direct the gas in a "T" fitting up to the sensor for analysis. The diverter tips should be only used with a flowing gas. When calibrating in a non-flowing environment, remove the diverter tip.

#### 8.4 Atmospheres of High Humidity

The MAXO<sub>2</sub>® Monitor can be used in applications where the relative humidity of the sample gas ranges from 0 to 95%, non-condensing. However, it should be noted that water vapor exerts its own pressure in the same manner as oxygen does in a sample gas stream.

For example, if the monitor is calibrated in dry gas and then the gas is humidified, the monitor will correctly display a reading which is slightly lower than previously displayed. This is due to the dilution of oxygen in the sample gas by water vapor.

This fact is important to note in systems where there exist both "wet" and "dry" gas streams such as in a ventilator circuit. If the monitor is measuring oxygen on the "dry side" of the ventilator, it will correctly indicate an oxygen concentration slightly greater than actually found in the "wet side" (delivered to the patient). The water vapor has diluted the gas stream.

Additionally, gas streams of high humidity may tend to condense on the sensor. Condensation on the sensor may eventually affect performance. For this reason, it is recommended that the sensor be mounted in a vertical position, facing downward to prevent condensate from flowing onto the sensing surface.

#### 9. SPARE PARTS AND ACCESSORIES

Part Number	<u>Item</u>
R12503-002 R212P91 R103P16 R212P17 R212P10 R212P30-001	MAX-250E Sensor Battery Cover Monitor/Analyzer External Cable Keypad LCD Display PCBA Board

#### Accessories

R106P15	Concentrator Adapter for Sensor Probe
R205P86	Monitor/Analyzer Wall Mount Bracket
R206P75	Monitor/Analyzer Pole Mount Clamp
R213P02	Monitor/Analyzer Protective Carrying Case
R213P31	Swivel Mount Stand
RP16P02	"T" Adapter (15 mm I.D.)
RP16P10	"T" Oxygen Sensor Activator System
R213M05	OM-25ME Manual
R213M66	Technical Service Manual

Although normal usage will not require repair, Maxtec will make available, on request, diagrams, descriptions and instructions to assist user's appropriately qualified technical personnel in repairing and replacing broken or worn components.

#### 10. WARRANTY

The MAXO<sub>2</sub>® Monitor is designed for medical oxygen delivery equipment and systems. Under normal operating conditions, Maxtec warrants the MAXO<sub>2</sub>® Monitor to be free from defects of workmanship or materials for a period of two (2) years from the date of shipment from Maxtec, provided that the unit is properly operated and maintained in accordance with Maxtec's operating instructions. Based on Maxtec's product evaluation, Maxtec's sole obligation under the foregoing warranty is limited to making replacements, repairs, or issuing credit for equipment found to be defective. This warranty extends only to the buyer purchasing the equipment directly from Maxtec or through Maxtec's designated distributors and agents as new equipment.

Maxtec warrants the MAX-250E oxygen sensor in the MAXO<sub>2</sub>® Monitor to be free from defects in material and workmanship for a period of two (2) years from Maxtec's date of shipment in a MAXO<sub>2</sub>® unit. Should a sensor fail prematurely, the replacement sensor is warranted for the remainder of the original sensor warranty period.

Routine maintenance items, such as batteries, are excluded from warranty. Maxtec and any other subsidiaries shall not be liable to the purchaser or other persons for incidental or consequential damages or equipment that has been subject to abuse, misuse, mis-application, alteration, negligence or accident. THESE WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.



Maxtec, Inc. 6526 South Cottonwood Street Salt Lake City, UT 84107 General Tel: 801-266-5300 Toll Free Dial: 800-748-5355

FAX: 801-270-5590

Home Page: http://www.maxtecinc.com email: sales@maxtecinc.com