



*User Manual* **2-Slice Toaster**

*Manual de Instrucciones* **Horno de 2 Rebanadas**

*Manuel d'Instructions* **Grille-Pain de 2 Tranches**

<b>MODELS/MODELOS</b>	<b>6240, 6241, 6243</b>
<b>MODÈLES</b>	<b>6244, 6245, 6246</b>



*Visit us at [www.oster.com](http://www.oster.com)*

P.N. 111320

# IMPORTANT SAFEGUARDS

When using your toaster, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USE

- Unplug toaster from outlet when not in use and before cleaning.
- Do not touch hot surfaces. Metal parts can become hot. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plug or toaster in water or other liquids.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Never leave appliance unattended when in use.
- Young children or incapacitated persons should not use this appliance. Supervise older children closely.
- Do not operate or place the toaster:
  - On non-heat-resistant or flammable surfaces.
  - Near a hot gas stove flame or electric element.
  - In a heated oven or microwave oven.
- To reduce the risk of fire or electric shock, do not insert:
  - Utensils or foil-covered or oversized foods into the toaster.
  - Fingers or metallic utensils into slots when toaster is plugged in.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not use foods that will drip coatings or fillings when heated. Such accumulations inside the toaster create unsanitary conditions and the possibility of fire or toaster malfunction. Clean out accumulated crumbs frequently to avoid risk of fire or toaster malfunction. Do not operate the toaster without the crumb tray being replaced in its correct position.
- Do not operate any appliance with a damaged cord or plug or after the appliance has malfunctioned or has been damaged in any manner. Return the toaster to the nearest Authorized Sunbeam Appliance Service Center for examination, repair or electrical or mechanical adjustment.
- Do not use the toaster outdoors or for commercial purposes; this appliance is for household use only.
- Use this appliance only for its intended use as described in this manual. Do not use attachments that are not recommended by the manufacturer; they may cause injury.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls and the like when in operation.
- Toaster lift lever must be in the normal up position before attaching or disconnecting the plug from the wall outlet.

# SAVE THESE INSTRUCTIONS

## Power Cord Instructions

 
Please follow the instructions below to ensure the safe use of the power cord.

- This toaster has a power cord area that allows you to adjust the length of the cord so that it is the appropriate length for your situation. Try to position the toaster near the power source to reduce the hazards associated with power cords (*such as becoming entangled or tripping over a long power cord*).
- You may use an extension cord, if necessary, but be certain to follow these guidelines:
  - The marked electrical rating of the extension cord must be at least 120/127 volt, 60 Hz.
  - The extension cord must be arranged so that it will not drape over the countertop or tabletop, will not be within the reach of children and will not be tripped over.
- For toasters purchased in the U.S. and Canada: This appliance has a polarized plug (*one blade is wider than the other*). To reduce the risk of electric shock, this plug will fit into a polarized plug in only one way. If you cannot completely insert the power plug into the power outlet, reverse the direction of the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- Do not pull, twist or otherwise abuse the power cord.
- Do not operate any electrical appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner.
- Unplug the toaster when it is not in use and before cleaning.
- Do not wrap the power cord around the main body of the toaster during or after use.


# Welcome

**Congratulations on your purchase of an OSTER® toaster! This toaster has TOAST LOGIC® technology** which gives you consistent and repeatable toasting performance. This means that you can expect your toast to be just the way you like it, slice after slice and day after day.

1. Lighter/Darker Knob
2. Lighter/Darker Indicator (TOAST WATCH™ control)
3. Frozen Button and Indicator
4. Warm Button and Indicator
5. Bagel Button and Indicator
6. Pastry Button and Indicator
7. Waffle Button and Indicator

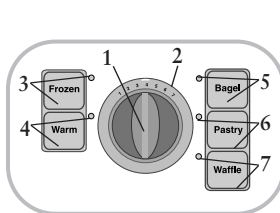


Models 6240 & 6243

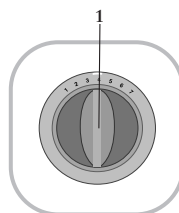 

Models 6241,  
6244, 6245, 6246

 8. Non-Stick Surface on the Top of Bread Slots
9. Extra-Wide Bread Slots
10. Stainless Steel Bread Guides
11. Cancel Button
12. Bread Carriage Lever
13. Toast Lift
14. Removable Crumb Tray
15. Cord Storage
16. Power Cord
17. Cool-Touch™ Exterior

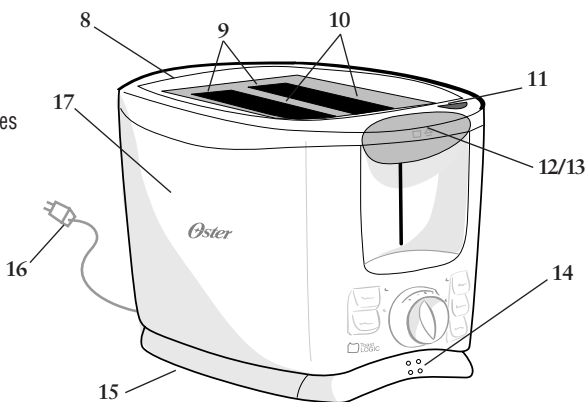

## Learning About Your Toaster

- 1. Lighter/Darker Knob** – Turn the knob to select how dark you would like your food toasted; 1 is lightest, 7 is darkest.
- 2. Lighter/Darker Indicator Light** (*Models 6240 & 6243 only*) – The Lighter/ Darker indicator will light above the corresponding setting you select.
- 3. Frozen Button and Indicator** (*Models 6240 & 6243 only*) – Press this button if your food is frozen and then select your bread type. The toaster will automatically defrost your food and then toast it in one easy step.
- 4. Warm Button and Indicator** (*Models 6240 & 6243 only*) – Press this button to warm your toasted food. The indicator will light to confirm your selection.
- 5. Bagel Button and Indicator** (*Models 6240 & 6243 only*) – Press this button if you want to toast a bagel. The indicator will light to confirm that “Bagel” is selected. Toast is the default setting.
- 6. Pastry Button and Indicator** (*Models 6240 & 6243 only*) – Press this button if you want to toast a pastry. The indicator will light to confirm that “Pastry” is selected. Toast is the default setting.
- 7. Waffle Button and Indicator** (*Models 6240 & 6243 only*) – Press this button if you want to toast a waffle. The indicator will light to confirm that “Waffle” is selected. Toast is the default setting.
- 8. Non-Stick Surface on the Top of Bread Slots** – Makes clean up easy.
- 9. Extra Wide Bread Slots** – Wide slots (1.3 inches) allow you to toast bagels, thickly sliced homemade bread, English muffins and pastries.
- 10. Dual, Auto-Adjusting, Stainless Steel Bread Guides** – Automatically adjust to bread thickness for even toasting.
- 11. Cancel Button** – Press the cancel button to pop the food out of the bread slots and stop the toasting process.

12. **Bread Carriage Lever** – Press to begin toasting your food.
13. **Toast Lift** – Press up on the bread carriage lever to lift food out of the bread slots.  
Convenient and safe way of retrieving the smallest of toasted items.
14. **Fully Removable, Non-Stick, Crumb Tray** - For convenient and easy clean up.
15. **Cord Storage** – Allows you to store extra cord under the toaster and out of the way.
16. **Power Cord**
17. **A Cool-Touch™ exterior** that keeps the toaster surface cool to the touch, even during use.

## TOASTER MODEL COMPARISON CHART

Toaster Model	Color	Seven Toast Shade Settings	Food Select Buttons (Frozen, Warm, Bagel, Pastry & Waffle)
6240	White with Gray Accents	Yes	Yes
6243	White with Silver Accents; Oster Badge	Yes	Yes
6241	White with Gray Accents	Yes	No
6244	White with Silver Accents; Oster Badge	Yes	No
6245	Black with Silver Accents;	Yes	No
6246	Black with Silver Accents; Oster Badge	Yes	No

### Preparing To Use Your Toaster for the First Time

If you are using your toaster for the first time, please be sure to:

1. Remove any stickers from the surface of the toaster and wipe the outside of your toaster with a damp cloth.
2. Insert the removable crumb tray into the crumb tray slot. *(Figure A)*
3. Make certain that the bread carriage lever is in the uppermost position before plugging in the toaster's power cord. *(Figure B)*
4. Select a location for the toaster. The location should be:
  - A flat, heat-resistant, non-flammable surface.
  - At least three inches away from walls or the back of countertops.
  - At least one foot away from any cabinet or shelving that may be above the toaster.
  - Away from flammable materials, such as curtains and wall fabric.
  - Away from a gas stove flame or electric element.
5. Plug the power cord into 120/127 volt, 60 Hz AC outlet.



FIGURE A



FIGURE B

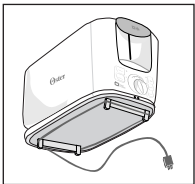 


FIGURE C



FIGURE D

#### Adjusting the power cord length

Your toaster's cord storage area allows you to adjust the length of the power cord so that it is the exact length you desire.

#### To adjust the length of the power cord:

Wrap the power cord around the cord storage posts on the base of the toaster until the cord is the length you desire. Be certain to read "Power Cord Instructions" on Page English-1 for safety information. *(Figure C)*

6. Without inserting any food into the bread slots, push the bread lever all the way down until it locks. *(The carriage will not lock if the toaster is not plugged into a power source.) (Figure D)*

The first toasting process will preheat the new elements and burn off any dust which may have accumulated during storage or manufacturing. It is normal for this burn off to create an odor.

Your OSTER® Toaster is now ready for use.



## Using the Seven Toast Shade Dial

You can adjust how light or dark the toaster toasts your food. The lightest setting is 1; the darkest setting is 7. Your selection should vary based on the moisture content, thickness of bread and your darkness preference.

### To select the darkness setting:

Turn the Lighter/Darker knob to the setting you desire.

As you adjust the setting, the Lighter/Darker indicator light changes.

This TOAST WATCH™ control offers a precise visual and audible indication of your toasting progress. *(Models 6240 & 6243 only)*

## Using the Frozen Food Feature

Your toaster can defrost your frozen food and then toast it. Now you can take a frozen bagel out of the freezer and defrost and toast it – all in your toaster – all in one easy step. *(Models 6240 & 6243 only)*

### To defrost and toast your food:

1. Press the Frozen button if the food is frozen, then select your food type.  
Toast is the default setting.

The Frozen indicator will light.

2. Press the bread carriage lever down to begin the cycle.

## Using the Warm Food Feature

 
 
 
Will your toasted food be ready before you are ready to eat it? This feature will allow you to warm your toasted food. *(Models 6240 & 6243 only)*

### To warm toasted food:

1. Press the Warm button.

The Warm indicator will light.

2. Press the bread carriage lever down to begin the cycle. The toaster will warm up your food.

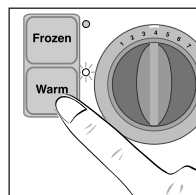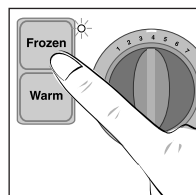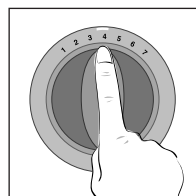


## Using the Food Select Feature (Bagel, Pastry, Waffle) *(Models 6240 & 6243)*

Your OSTER® Toaster will adjust the light/dark range based upon the type of food you are toasting. You must select which type of food you are toasting so that the toaster can adjust accordingly.

### To select the food type:

Choose between the Bagel, Pastry or Waffle mode.

 - If you would like to toast bread, make certain that the Bagel, Pastry or Waffle indicators are not lit. If they are unlit, then the toaster is set to toast bread.  
If either indicator is lit, press the corresponding button to deselect the food type and then the toaster will be set to toast bread. Toast is the default setting.
- Press the Bagel button if you are going to toast a bagel. The Bagel indicator will light. Bagel setting adjusts the temperature for bread thickness.
- Press the Pastry button if you are going to toast a pastry.  
The Pastry indicator will light. Pastry setting warms inside to perfection.
- Press the Waffle button if you are going to toast a waffle.  
The Waffle indicator will light. This function toasts waffles evenly.

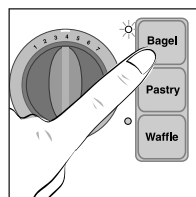

## Using the Cancel Function

### To cancel the toast process:

Press the Cancel button. The toaster will stop toasting immediately and the food will pop up automatically. The toaster will chime for Models 6240 & 6243.

# Helpful Tips

## Inserting the food into the bread slots and toasting

Now you are ready to insert your food into the bread slots. Keep the following tips in mind when inserting your food.

- Most types of breads and pastries can be toasted, such as bagels, tea cakes, thickly sliced breads, English muffins, waffles, etc. Slices should not, however, be so thick as to jam the bread slots.
- When toasting two slices at a time, the slices should be of equal size and freshness to ensure even toasting.
- When toasting two slices of bread, place one slice in the center of each bread slot.
- When toasting one slice of bread, place the slice in the center of either bread slot.

### After you insert the food into the bread slots:

1. Press the bread carriage lever down until it locks.

The Auto-adjusting, stainless steel bread guides will automatically center the food for even browning.

*Tip: Your toaster has been designed for optimum toast balance. Some elements on the inside of the toaster may glow more brightly than others when in use. This is part of normal toaster operation.*



After the desired level of darkness has been reached, the food will pop up automatically. The bread carriage lever will return to its original position and the indicator lights will turn off.

On Models 6240 & 6243, the TOAST WATCH™ control offers a precise visual and audible indication of your toasting. The toaster will chime and the food will pop up automatically.

2. Carefully remove the toasted food from the bread slots.

**WARNING: Toasted food can be very hot, especially pastry fillings. Handle with care.**

*Tip: To remove food jammed in the bread slots, unplug the toaster and remove the food once the toaster has cooled down.*

**WARNING: Never insert your fingers or metallic utensils into the bread slots.**

## Cleaning Your Toaster

After use and before cleaning, unplug the toaster power cord from the power outlet and wait for the toaster to cool.

1. Wipe the outside of the toaster with a damp cloth and then dry it with another cloth or paper towel. Do not use abrasive cleaners; they will damage the toaster's finish.

**WARNING: Do not use any pointed or sharp articles for cleaning the inside of the toaster; this may damage the toaster.**



2. Lightly tap the sides of the toaster to dislodge any crumbs caught in the toast chamber. Remove the crumb tray and empty it. Wipe the tray clean with a damp cloth or place it in the top rack of your dishwasher for cleaning. Be certain to put the crumb tray back into the toaster before using the toaster again.

**WARNING: Empty the crumb tray frequently. Crumbs will accumulate in the crumb tray and could catch fire if not emptied periodically.**

3. Wipe the non-stick surface on the top of the bread slots with a damp cloth and dry it with another cloth or paper towel.

## ***One-Year Limited Warranty***

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited (collectively “Sunbeam”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### **What Are the Limits on Sunbeam’s Liability?**

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### **How to Obtain Warranty Service**

In the U.S.A. –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada –

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourn Street, Mississauga, Ontario L5R 3V8.

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**



For product questions contact:  
Sunbeam Consumer Service

USA : 1.800.334.0759  
Canada : 1.800.667.8623  
[www.oster.com](http://www.oster.com)

©2003 Sunbeam Products, Inc. All rights reserved.

OSTER® and TOAST LOGIC® are registered trademarks of Sunbeam Products, Inc.  
COOL-TOUCH™ and TOAST WATCH™ are trademarks of Sunbeam Products, Inc.

Distributed by Sunbeam Products, Inc., Boca Raton, FL 33431

Pour les questions de produit:  
Sunbeam Consumer Service

États-Unis : 1.800.334.0759  
Canada : 1.800.667.8623  
[www.oster.com](http://www.oster.com)

©2003 Sunbeam Products, Inc. Tous droits réservés.

OSTER® et TOAST LOGIC® sont marques déposées de Sunbeam Products, Inc.  
COOL-TOUCH™ et TOAST WATCH™ sont marques de commerce Sunbeam Products, Inc.

Distribué par Sunbeam Products, Inc., Boca Raton, Florida 33431

Para preguntas sobre los productos llame:  
Sunbeam Consumer Service

EE.UU. : 1.800.334.0759  
Canadá : 1.800.667.8623  
[www.oster.com](http://www.oster.com)

©2003 Sunbeam Products, Inc. Todos los derechos reservados.

OSTER® y TOAST LOGIC® son marcas registradas de Sunbeam Products, Inc.  
COOL-TOUCH™ y TOAST WATCH™ son marcas comerciales de Sunbeam Products, Inc.

Distribuido por Sunbeam Products, Inc., Boca Raton, FL 33431