

Brookstone®

Mobile 7800 mAh Power Charger

ONE CHARGER FOR ALL



Made for
 iPod  iPhone  iPad

WARNINGS

Ensure your device can be charged safely by this type of power source.

1. Do not store this battery in high temperatures, damp areas or in direct sunlight.
2. Never disassemble the battery.
3. Never dispose of the battery in fire or water, which may result in explosion and/or injury.
4. Keep battery out of reach of children.
5. Do not touch battery with damp hands.
6. Dispose of the battery properly.
7. The battery must not be discarded with ordinary household waste.
8. Contact your local recycling center for proper disposal.

SAVE THESE INSTRUCTIONS!

Made for:

iPod touch (1st, 2nd,
3rd, and 4th generation)
iPod nano (1st, 2nd, 3rd, 4th, 5th,
and 6th generation)
iPhone 4S
iPhone 4
iPhone 3GS
iPad (3rd generation)
iPad 2
iPad

Also works with most:

Android™ Samsung® BlackBerry®
Other smartphones
Other micro/mini USB powered devices

ACCESSORIES

- Standard USB/30-Pin Cable
- Standard USB/Mini USB Cable
- Mini USB to Micro USB Type B Adapter
- 5V 2A Power Adapter
- Storage Pouch

CHARGING THE BATTERY

IMPORTANT: Fully charge this battery before charging a device for the first time.

1. Using the Mini USB to Micro USB Adapter with the Standard USB/Mini USB Cable, or the Mini USB Cable, insert the plug into one of the input jacks on the battery.
2. Connect the standard USB end of the cable to the USB port on your computer, or into the USB/AC Adapter and connect to an electrical outlet.
3. During charging the LEDs will illuminate one by one until all 9 are lit, telling you the battery is fully charged (approx. 5.5 hours).

Note: To ensure greatest battery life, charge the battery to its full capacity at least once every six months.

Find thousands more
great ideas online

Brookstone®

802205

Brookstone.com | 1-800-846-3000
One Innovation Way,
Merrimack, NH 03054

CHARGING A DEVICE

IMPORTANT: Fully charge this battery before charging a device for the first time.

1. Connect your device to the battery with one of the included cables to the output 1 or output 2 jack.

Note: If your device uses a cable other than the ones supplied, you may need to use a USB adapter that came with your device.

Check the specifications of your device to ensure it is safe to charge with this battery.

2. Press the POWER button on the battery.
3. Turn your device on. Refer to the device you are charging for battery level status in that device.
4. Press the POWER button on the battery for 3 seconds to turn it off.
5. Disconnect your device.

CHECKING BATTERY STATUS

The LED lights will illuminate when the POWER button is pressed to show the charge capacity left in the battery.

When the battery is fully charged, all 9 LED lights will illuminate. Recharge the battery when only one LED light is illuminated.

TROUBLESHOOTING

- A. No LEDs illuminate while attempting to charge my device.
- A. You need to refer to the device you are charging for battery level status in that device.
- A. The battery gets warm while charging or discharging.
- A. This is a common result of charging and discharging of energy. The heat is not enough to affect devices adversely.

SPECIFICATIONS

Ensure your device can be charged safely by this type of power source.

Input	DC 5V~2.1A (Max)
Output I	DC 5V~2.1A
Output II	DC 5V~2.1A
Capacity	7800mAh

iPhone and iPod are trademarks of Apple Inc., registered in the U.S. and other countries. "Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance. BlackBerry®, RIM®, Research In Motion®, and related trademarks, names and logos are the property of Research In Motion Limited and are registered and/or used in the U.S. and countries around the world. Android is a trademark of Google, Inc.

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than

Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.