

COMPETENCE 32081 B

Build-In-Double-Oven

Operating Instructions

Your new appliance

Thank you for purchasing an AEG appliance, we are confident you will enjoy using the appliance and also find cooking easier.

To enable you to use your appliance effectively and safely, please read this instruction book carefully before installing or using the appliance, and retain for future reference.

If you require further assistance or advice, please contact our customer care Department either by letter or telephone.

Customer Care Department
AEG Domestic Appliances Limited
PO Box 47
Newbury
Berkshire
RG14 5XL

Tel.: 01635 572700
Fax: 01635 42970

Accessories

The following accessories are available as optional extras, please consult the AEG price list or contact your retailer.

Catalytic liners
Baking Sheet
Meat Tin

Contents

Important Safety Information	
Safety Instructions	4
Environmental Information	6
Technical Data	7
Description of the appliance	
Control panel	8
Accessories	9
Before first use	
Setting the time of day	10
Pre-cleaning before use	11
Electronic Clock	
Minute minder	12
Automatic switch off	12
Automatic switch on and off	13
Main Oven	
Controls	14
Cooking Functions	15
Shelf levels	15
Fat Filter	16
Operating the main oven	17
Secondary Oven	
Controls	18
Cooking Functions	18
Shelf levels	19
Operating the secondary oven	19
Cooking Methods	
Baking	20
Baking Tables	21-22
Hints and Tips for baking	23
Roasting	23
Roasting Tables	24
Grilling (secondary oven)	25
Defrosting	26
Cleaning and care	
Interior and External Cleaning	27
Cleaning the fat filter	28
Care of Catalytic liners (optional extra)	28
Removing/refitting shelf supports	28
Removing/refitting oven door	29
Replacing oven light bulb/cleaning glass	30
Something Not Working	30
Service	31
Guarantee Conditions	32

Important Safety Instructions

These warnings are provided in the interests of your safety. Ensure you fully understand them before installing or using the appliance. Your safety is of paramount importance. If you are unsure about the meaning of these warnings contact the Customer Care Department for assistance.

Installation

The oven must be installed according to the instructions supplied. Any electrical installation work must be undertaken by a qualified electrician/competent person.

This oven is heavy, care must be taken when moving it. Do not try to move the oven by pulling the door handles.

All packaging, both inside and outside the oven must be removed before the oven is used.

It is dangerous to alter the specifications or modify the oven in any way. After installation please dispose of the packaging with due regard for safety and the environment.

Child Safety

This oven is designed to be operated by adults and children under supervision. Young children must not be allowed to tamper with the controls or play near or with the oven.

The oven and accessible parts become hot when the oven is in use. Keep children away until it has cooled.

During Use

Do not use this oven if it is in contact with water. Never operate it with wet hands.

Take great care when heating fats and oils as they will ignite if they become too hot.

This oven has been designed for cooking edible foodstuffs only, and must not be used for any other purposes.

Never place plastic or any other material which may melt in or on the oven.

Fruit juices dripping from an oven dish may leave marks on the enamel, which cannot be removed. Use a baking tray to protect the enamel.

Do not leave the grill pan handle in position when grilling and ensure oven gloves are used to remove and replace the handle, as it will become hot.

Always use oven gloves to remove and replace food in the oven.

Ensure that all vents are left unobstructed to ensure ventilation of the oven cavity.

Never line any part of the oven with aluminium foil. Do not allow heat proof cooking material, e.g. roasting bags to come into contact with oven elements because they may catch fire.

Always stand back from the oven when opening the oven door to allow any build up of steam or heat to release.

Stand clear when opening the drop down oven doors. Support the doors using the handles until fully open.

Do not place sealed cans or aerosols inside the oven. They may explode if they are heated.

Ensure that all control knobs are in the OFF position when not in use.

Do not stand on open oven doors.

Do not hang towels, dishcloths or clothes from the oven or its handles.

Cleaning and Maintenance

The oven is heavy and care must be taken when moving it.

This oven should be kept clean at all times. A build-up of fats or other foodstuffs could result in a fire, especially in the grill pan.

Do not leave cookware containing foodstuffs, e.g. fat or oil in the oven in case it is inadvertently switched on.

Always allow the cooling fan to cool the oven down before switching off at the wall prior to carrying out any cleaning/maintenance work.

Only clean this oven in accordance with the instructions given in this book.

Service

Repairs should not be carried out by inexperienced persons as this may cause injury or serious malfunction. This oven should only be serviced by an authorised AEG Service Engineer and only genuine approved spare parts should be used.

Important Safety Instructions

Environmental Information

Packaging

AEG is an environmentally conscious company, packaging materials are therefore kept to a minimum.

All transit packaging materials are environmentally compatible and can be reused. Wood is untreated. The cardboard boxes consist of between 80–100 % recycled paper. The sheeting is made out of polyethylene (PE) and the strapping of polystyrol (PS) which are pure hydrocarbon compounds and can be recycled. By treating and re-using them, raw materials can be saved and the volume of waste reduced.

Please dispose of the packaging with due care for the environment.

Old appliances

When disposing of your old appliance:

Make the appliance unusable by cutting off the cable, and remove any door catches to ensure small children cannot become trapped inside.

Help to keep your country tidy - use an authorised disposal site.

Technical Data – Competence 32081 B

Aperture Dimensions

Height	88.5 cm
Width	59.2 cm
Depth	56.3 cm

Internal Oven Dimensions (Main Oven)

Height	33.0 cm
Width	45.0 cm
Depth	41.0 cm
Oven Capacity	61.0 Ltr.

Oven Ratings (Main Oven)

Oven Element	1840 W
Convection Fan	30 W
Oven Light	40 W
Cooling Fan	20 W
Total Rating	1950 W

Internal Oven Dimensions (Secondary Oven)

Height	18.0 cm
Width	45.0 cm
Depth	41.0 cm
Oven Capacity	33.0 Ltr.

Oven Ratings (Secondary Oven)

Oven Element	920 W
Grill Element	1840 W
Double Grill Element	2800 W
Total Rating	2800 W

Total Connected Load 4750 W

Cable

Cable Cross-section	6 mm
Fuse (min.)	30 amp


CE This appliance complies with the following EC Directives:
LVD (Low Voltage Directive) 73/23/EC dated 19. 02. 1973
EMC (Electromagnetic Compatibility) 89/336/EC dated 03. 05. 1989
(including amendment Directive 91/31/EC)

This appliance must be installed by a qualified competent person in accordance with existing rules and regulations.

If this appliance is not installed in accordance with the instructions supplied, the warranty will not be valid.

Description of the appliance


Control Panel

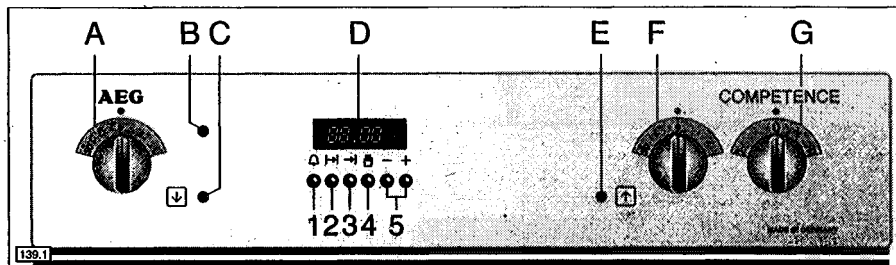


- A. Temperature selector for the main oven**
- B. Pilot light for oven**
- C. Thermostat control light for the main oven**
- D. Electronic timer for the main oven:**
 - 1. Minute minder button
 - 2. Button to set cooking duration
 - 3. Button to set end of cooking time
 - 4. Selector button for automatic or manual operation
 - 5. Time selection (increase and decrease) buttons
- E. Thermostat control light for secondary oven**
- F. Temperature selector for the secondary oven**
- G. Cooking function selector for the secondary oven**

Oven Accessories


Wire Shelf, large x 2

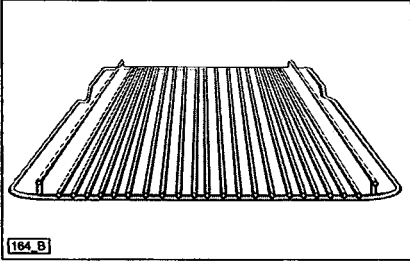


Meat Tin

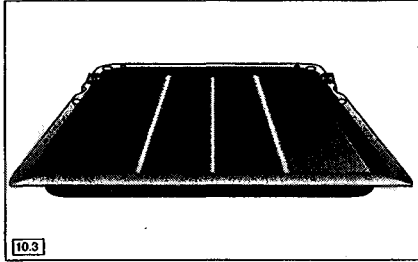


Grill Pan

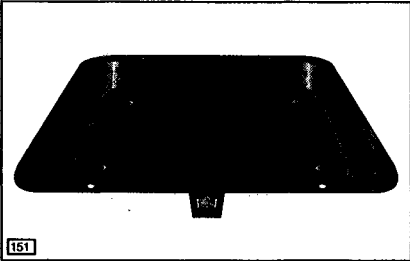

Grill Pan Grid

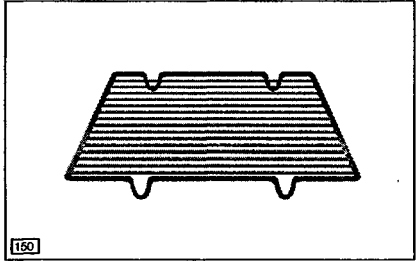


Grill Pan Handle

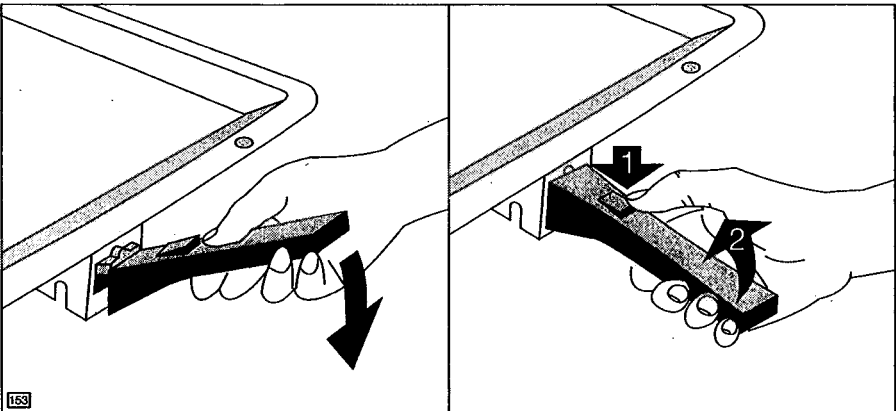

Description of the appliance

Anti-tip

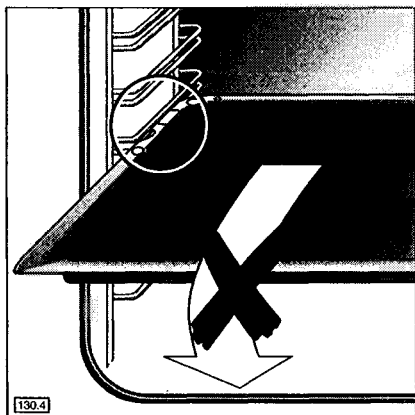

The wire shelves and meat tray are fitted with an anti-tip device, so that they cannot be pulled out completely by accident. Ensure that these are fitted correctly, with the shelf stoppers at the rear.


Before use

Ensure all packaging inside the oven has been removed. Wipe down the front of the appliance with a damp cloth. Do not use caustic or abrasive cleaners, as these will damage the surface of the product (see maintenance and cleaning).

Before using the oven for the first time the oven should be pre-cleaned as described later in this section, however before this cleaning operation can be carried out the time of day must be set on the electronic timer.

Electronic timer – Setting the time of day


As soon as the appliance is switched on at the mains supply (and also after a power cut), the clock display will flash. Before the oven can be operated you will need to set the time of day.

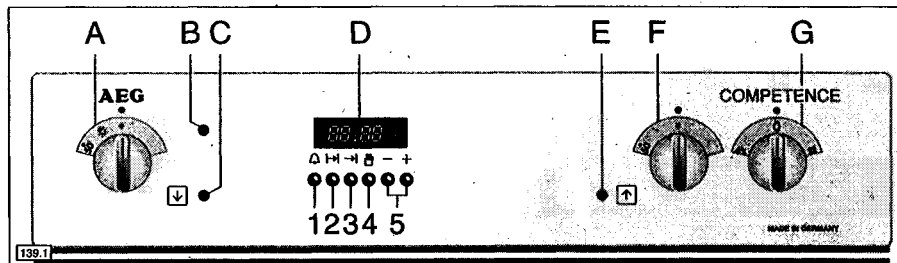

1. Press buttons **2** and **3** simultaneously.
2. Press buttons **5** until the correct time of day shows in the display.

Pre-cleaning the oven before use

Before using the oven for the first time all accessories (shelf supports, wire shelves etc) should be washed with warm soapy water (warm water with mild detergent), and the oven heated empty for 1 hour to burn off any residue from the internal surfaces.

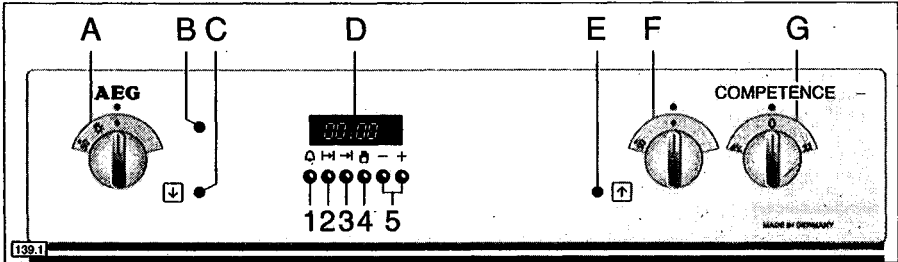


To burn off residue from internal surfaces

During this operation an unpleasant odour may be emitted, it is therefore advisable to open a window for ventilation.

Main oven

1. Turn the temperature selector A to 250 °C.

Secondary oven




1. Set the function selector G to conventional cooking 
2. Turn the temperature selector F to 250 °C.


When the oven has cooled, wipe down with a warm soapy water. Clean all the accessories and shelf supports in the same way.

Electronic Clock

Operating the Electronic Clock


To set the Minute minder

1. Press button **1**  and
2. Press buttons **5**  or  until the display shows the time required.

 
 
 
When the selected time has elapsed you will hear an audible signal (which will switch off automatically after approximately 2 minutes). To switch off the signal press button **1** . The display will show the time of day.

Programming the main oven to switch off automatically


The main oven can be programmed to switch off automatically.

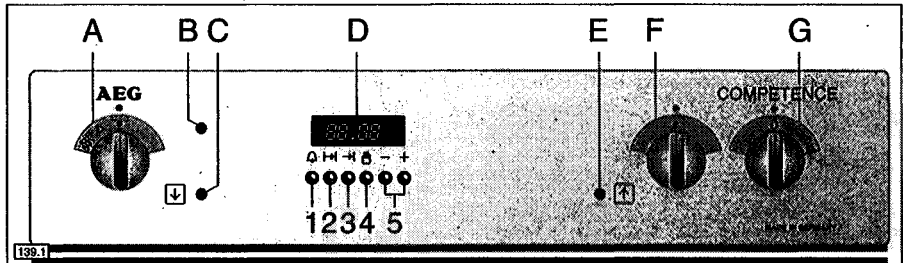
 


To programme the Main oven to switch off

1. Set the required temperature with temperature selector **A**.
2. Press button **2**  and enter the cooking time required with buttons **5**  and .

 
 
 

The **"AUTO"** symbol will light up (**Automatic operation**) and the oven will switch off automatically when the cooking time has elapsed.

At the end of the cooking period, the oven will switch off, the audible signal will sound and the **"AUTO"** symbol will flash. To switch off the audible signal button **4** .

Press button **4**  again to switch off the flashing **AUTO**  symbol and return the oven to manual function.


Turn the temperature selector dial to the OFF position.







To cancel a programme

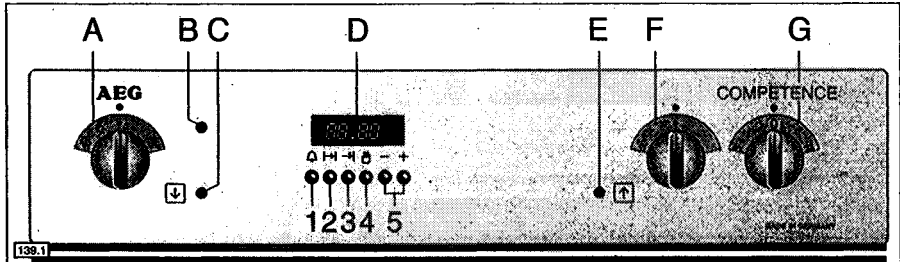1. Press button **2** , and return the length of cooking time to zero using buttons **5**  and .
2. Press button **4**  to return the cooker to manual function.

Programming the main oven to switch on and off automatically



The main oven can be programmed to switch on and off automatically.




1. Set to required temperature using temperature selector **A**.
2. Press button **2**  and select the length of cooking time required using buttons **5**  and .
3. Press button **3**  and enter the required finish time using buttons **5**  and .

The  symbol and the time of day will appear again in the display.


The oven pilot light will illuminate when the oven switches on. The thermostat control light will illuminate while the oven is heating, and will cycle on and off during cooking to show that temperature is being maintained.

At the end of the cooking period, the oven will switch off, the audible signal will sound and the  symbol will flash. To switch off the audible signal press button **4** .

To return the oven to manual operation press button **4** , and turn the temperature Off.

Main Oven

Controls for the Main Oven

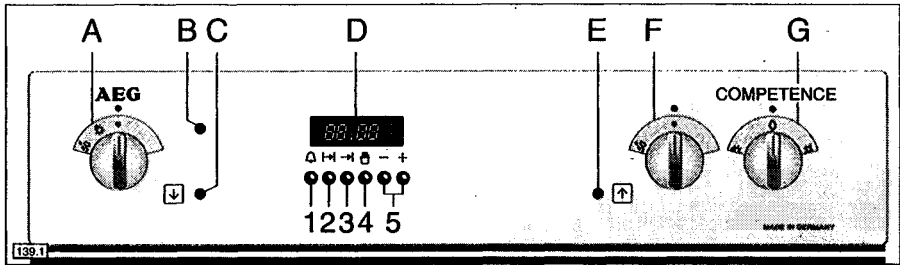

A. Temperature selector, adjustable from 50–275 °C

B. Oven pilot light

C. Thermostat control light

D. Electronic timer for bottom oven only with:

1. Minute minder button
2. Button to set cooking duration time for the oven
3. Button to set end of cooking time for the oven
4. Selector button for automatic or manual operation
5. Time selection (increase and decrease) buttons

Functions – Main Oven

The main oven is a hot air oven, Ventitherm cooking.



Oven Lighting

The oven light will be on when the oven is in use, however you may select this function to illuminate the oven for cleaning purposes.




Ventitherm fan cooking

The main oven is a fan oven only. A fan in the rear of the oven ensures that hot air is continuously circulated around the oven, allowing you to cook, bake and roast simultaneously using any shelf. This cooking method uses lower temperatures than conventional cooking and is therefore highly energy efficient.

Shelf levels – main oven

The oven has shelf supports on either side, which provide 6 cooking levels. Please note that when using the cooking tables provided in this instruction book, the levels are counted from the top downwards.

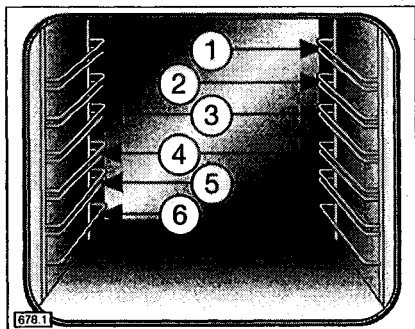

Main Oven

Fat filter for the main oven.

The fat filter supplied with the appliance protects the fan against soiling. The filter must always be used when:


- Cooking meat in an uncovered container using the Ventitherm cooking mode (fan oven).

Note

Do not use the fat filter when baking.

Fitting the fat filter.


Hold the fat filter by the handle and fit both tabs downwards into the slots in the back panel of the oven, thereby covering the fan opening. Please note that the fat filter must cover the fan opening completely.

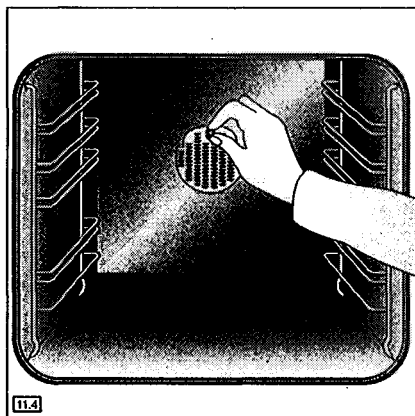

Removing the fat filter.

Hold the fat filter by the handle, unhook and pull upwards. For information on cleaning the fat filter, please see the maintenance and cleaning section.

To Operate the Main Oven

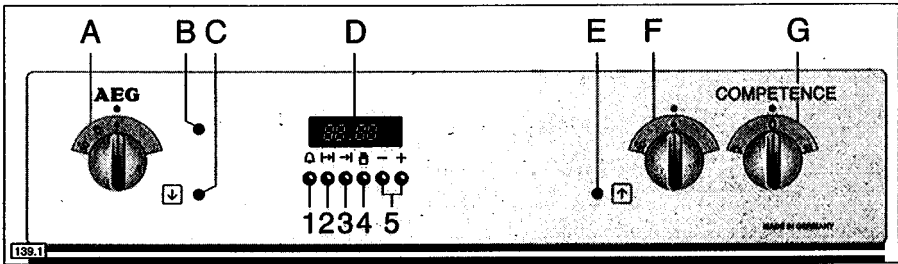

1. Turn cooking function selector **A** to the required temperature.
2. Set the temperature with temperature selector **B**.

The oven pilot light will illuminate when the oven is switched on.


The oven thermostat control light will illuminate while the oven is heating up and will cycle on and off, when the pre-selected temperature has been reached. It will continue to cycle on and off to show that the set temperature is being maintained.

Pre-Heating

In general it is not necessary to pre-heat the oven when using Ventitherm roasting. However, if pre-heating is required select the required temperature for the oven. When the oven has reached the pre-selected temperature the thermostat control light **D** will go out.

Secondary Oven

Controls for the Secondary Oven

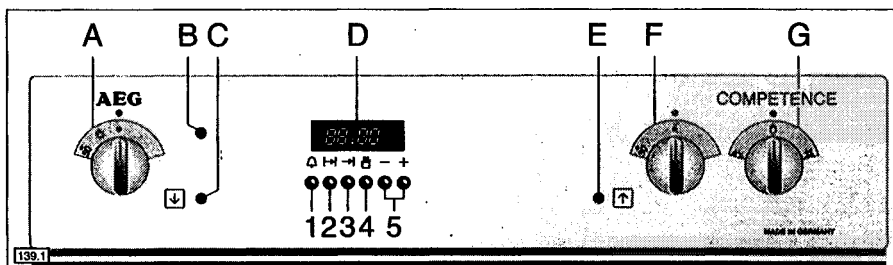

B Oven pilot light

E. Secondary Oven thermostat control light

F. Temperature selector adjustable from 50–275 °C

G. Cooking function selector

Cooking functions – Secondary Oven



Oven Lighting

The oven light will be on when the oven is in use, however you may select this function to illuminate the oven for cleaning purposes..



Conventional Cooking

This method of cooking uses the top and bottom element. To ensure a uniform distribution of heat, you should cook on one level only.



Grilling

The source comes from grill elements mounted in the oven ceiling. This method of grilling is particularly suitable for grilling flat pieces of meat e.g. steaks, fish or toast.




Dual circuit grill

You can use the large grill surface  for grilling or toasting larger quantities. For grilling smaller quantities (e.g. steaks, possibly 4 pieces of toast) use the smaller grill area .


Shelf levels – Secondary Oven

The oven has shelf supports on either side, which provide 4 cooking levels. Please note that when using the cooking tables provided in this instruction book the levels are counted from the top downwards.

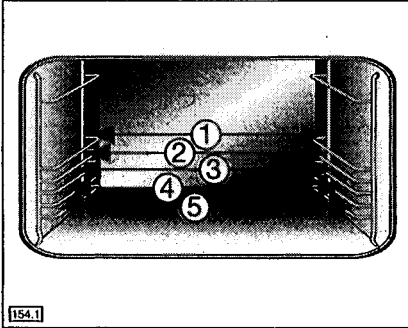

134.1

To Operate the Secondary Oven

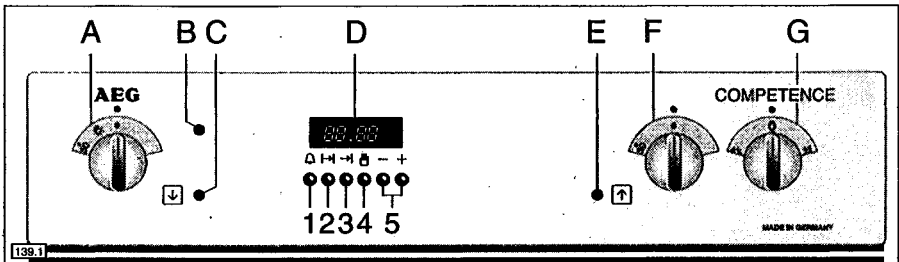

139.1

1. Turn the cooking function selector **G** to the required cooking method.
2. Set the required temperature with temperature selector **F**.

The oven pilot **B** will illuminate. The oven thermostat control light **E** will remain illuminated while the oven is heating up, it will then cycle on and off when the pre-selected temperature has been reached and will continue to cycle on and off to show that the temperature is being maintained.

Pre-Heating

If pre-heating is required, set the temperature required. When the oven reaches the correct temperature the thermostat light **E** will cycle on and off.

Cooking Methods

Baking

Bakeware


How bakeware affects browning:

1. Bakeware, which is dark in colour, has a non-stick coat or is made from aluminium absorbs more heat which is then transferred to the cake resulting in shorter cooking times, lower energy consumption and increased base browning.
2. Bakeware which is light in colour or is made of tin reflects the heat away resulting in longer cooking times and less base browning.

Shelf Levels

When using the following cooking charts please note that the shelf levels are counted from the top downwards.

Baking using the conventional cooking function in the secondary oven (upper/lower elements) should be carried out on one shelf level only. When possible place cakes in trays in the centre of the shelf. If you are using two trays place the trays side by side on one shelf, the cooking times may have to be extended.

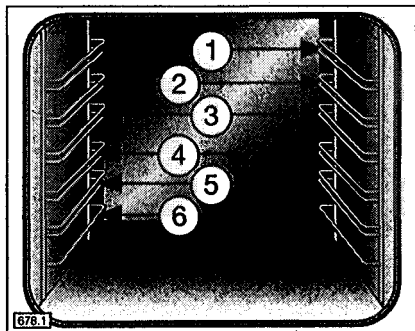

You can bake on three shelf levels at the same time when using the Ventitherm (fan) cooking method.

- 1 Baking tray**
- 2 Baking trays**
- 3 Baking trays**

- Use shelf level 3**
- Use shelf levels 3 and 6**
- Use shelf levels 1, 3 and 6**

Baking tables

You will find the temperatures, cooking times and shelf settings for a selection of foods/cakes in the tables.

Ranges are given for temperature and baking times as these will depend on the composition of the mixture, the quantity and the type of foods being baked.

When baking on two levels simultaneously, extend the baking time for the lower level by 5–10 minutes as necessary.

Moist cakes to be cooked (i.e. pizzas/cakes with fruit filling etc.) should only be baked on one shelf setting.

We recommend that you set the lower temperature when baking a dish for the first time and adjust the temperature as required e.g. for extra browning or if the baking time is too long.


If you are able to locate actual timings for a recipe of your own, use the temperatures given for a similar cake as a guide.

Switch off the oven 5–10 minutes before the end of the baking time (residual heat).

The tables apply for placing cakes in a cold oven, unless otherwise stated.

Cooking Methods

Baking with Ventitherm in the main oven

Type of Food	Ventitherm 		Time
	Shelf Position (from top)	Temperature	
Using cake tins			
Cakes in Guelhopf tins	3	160–170	60–70
Cakes in loaf tins	3	150–160	1¼–1½ hr
Madeira cake	3	150–160	60–70
Dundee cake	3	130–140	2½–3 hr
Christmas cake (10")	3	130	4½–5 hr
Victoria sandwich	3+6	160–170	25–35
Pastry cases	3	170–180	10–25
Bakewell tart	3	160–170	45–55
Swiss roll	2	170–180*	10–15
Flans & quiches	3	170–180	30–50
Using baking sheets			
Shortbread	3	140–150	40–50
Biscuits	3	150–170	15–25
Macarons	3	140–150	25–35
Apple strudel	3	170–180*	30–50
Choux pastry buns	3	170–180*	20–35
Buns/cup cakes	3	150–160*	25–35
Scones	3	190–200*	10–15
Meringues	3	75–100	3½–4½
Sausage rolls	3	170–180*	20–35
Pizza	3	180–200	30–50
Bread			
Wholemeal bread	3	200–210*	30–40
White bread	3	200–210*	35–40
Desserts			
Apple pie	3	180–190	45–50
Rice pudding	3	130–140	2–2½
Fruit crumble	3	160–170	50–70
Pineapple upside down cake	3	160–170	35–45
Pavlova	3	130–140	60–70
Baked custard	3	160–160	45–60
Baked apples	3	160–170	40–55
Bread and butter pudding	3	170–180	40–60
Apple charlotte	3	180–190	40–55
Souffle – sweet/savoury	3	170–190	30–45

Note: Select the lower temperature to start with, then select the higher one only if required.

Always remove the fat filter before baking

*Pre-heat the oven

Hints and Tips on baking

Checking if the cake is cooked

Pierce the cake at its highest point through the centre with a wooden cocktail stick. If no mixture sticks to the wood, you can switch off the oven and use the residual heat to complete cooking.

The cake sinks

(becomes 'sad' – heavy and very moist in the centre)

Check your recipe. Next time use less liquid. Observe the mixing times, especially when using electric mixers. Use baking margarine or butter.

The cake is too light at the bottom

Use a dark baking tray or put the cakes at a lower level.

The cake is too dark at the bottom

Use a lighter reflective baking tray, or position at a higher level.

Cakes with moist toppings e.g. cheese cakes, or rich fruit cakes are not baked through.

Bake at a lower temperature and for longer.

Roasting

Important: Use fat filter when roasting!

Roasting Utensils

You can use any heat resistant utensils or roasting pan for roasting. Attention should be paid to utensils with plastic handles that these are heat resistant.

Larger joints can either be placed directly into the roasting pan or on a wire grid tray in the roasting pan. Place small joints in a suitable smaller size dish or tin to help reduce fat splashing. The use of aluminium foil for most of the cooking time will also help to keep fat and juice splashes to a minimum. Remove for the last 30 minutes or so to increase browning if required.

Information on the roasting charts

Information on temperature settings, cooking times and shelf levels are given for the various types of meat. However, the cooking temperature and times are only intended as a guide, as much depends on personal preferences. Be prepared to adjust them to your own requirements.

We recommend that only pieces of meat and fish which are larger than 1 kg are roasted in the oven.

Roasting

Type of Food	Quantity	Ventitherm		Time for all types of cooking
		Shelf level (from top)	Temperature	
Pork Shoulder leg rolled boned spare rib loin of pork		4	170-180	30-35 mins per 450 g plus 30-35 mins over. For Rotitherm roasting and joints of 2.5 kg and over eliminate the additional 30-35 mins
Veal		4	170-180	
Lamb		4	170-180	
Beef Prime cuts: Rare Medium Well Done Inexpensive cuts		4 4 4 4	170-180* 170-180 170-180 160-170	20/25 mins per 450 g plus 20/25 mins 30/35 mins per 450 g plus 25/30 mins 35/40 mins per 450 g plus 35/40 mins For Rotitherm roastings and joints of 2.5 kg eliminate the additional time.
Poultry/Game Chicken Chicken Duck Goose Turkey Turkey Pheasant/rabbit/wild/ duck Partridge/pigeon	1 kg 1.5 kg 1.5-2 kg 3.5-5 kg 2.5-3.5 kg 4-6 kg 1 kg per 300-500 g	4 4 4 4 or 5 4 4 or 5 4 4	170-180 170-180 180-190 170-180/200 160-170 150-160 190-200 190-200	50-70 1¼-1½ hr 1¼-1¾ hr 2½-3 hr 1½-2 hr 2½-4 hr 30-60 50-60
Fish Whole fish Fish pies/bakes	1-1.5 kg 750 g-1 kg	4 4	170-180 180-200	30-60 15-45

Always use the fat filter when roasting. * Pre-heat oven

Grilling in secondary oven

To grill food place grill pan and wire grill tray on the second shelf level. Ensure the grill tray with the food on is not pushed too far towards the back of the oven.

Turn over pieces of meat or fish half way through the grilling time.


Always grill with the door open.

Grill Pan Handle




The grill handle must be removed whilst grilling. Failure to remove the grill handle will result in the handle overheating, this could result in damage the handle and cause it to break. Always use oven gloves when removing or attaching the grill pan handle.

Inserting the handle

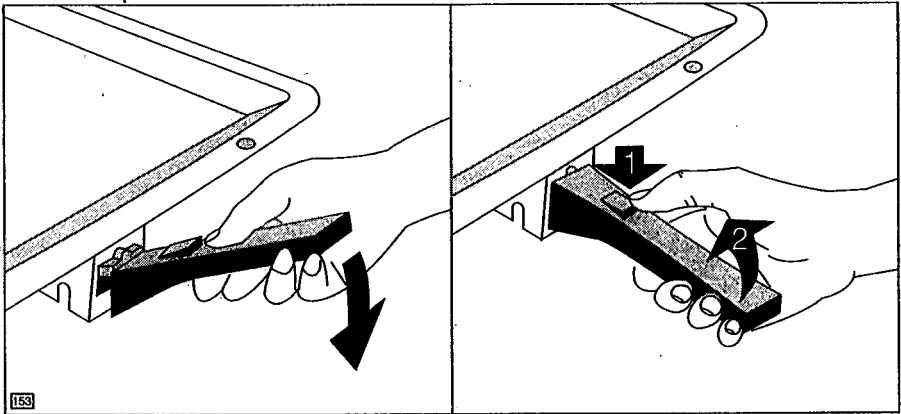Lock it into the grip at the front of the pan. See illustration.



Ensure the handle is firmly attached.

1. Turn the cooking function selector **G** to symbol  or .
2. Set temperature selector **F** at symbol .
3. Pre-heat the oven empty for 5 minutes.

The grilling table


The grilling times are intended only as a guide and actual times will depend on the type and quality of the food to be grilled. Grilling is particularly suitable for flat pieces of fish and meat.

Food	Shelf Level (from top)	Grilling Time (Minutes)	
		First Side	Second Side
Rissoles	2.	8-10	6-8
Pork Fillet	2.	10-12	6-10
Sausages	2.	8-10	6-8
Beef/lamb steaks	2.	6-7	5-6
Beef fillet / Roast Beef (approx. 1 kg)	2.	10-12	10-12
Toasted Sandwiches	2.	6-8	
Toast	2.	2-3	2-3

Cooking Methods

Defrosting

The defrosting function allows you to defrost frozen foods. The oven fan operates without heat and circulates the air, at room temperature, inside the oven. This increases the speed of defrosting. This function is particularly suitable for delicate food which could be damaged by heat, e.g. cream filled gateaux, iced cakes, pastries, bread and other yeast products.

1. Using Function Selector A select defrost .
2. Use shelf level 4

Cover if necessary with transparent foil or parchment. Do not use plates or bowls to cover the food as this will increase the defrosting time.

Food	Defrosting time (Mins)	Standing Time (Mins)	Note
Chicken 1000 g	100-140	20-30	Place chicken on an inverted saucer on a large plate. Defrost open and turn at half time or defrost covered with foil.
Meat 1000 g	100-140	20-30	Defrost open and turn at half time or cover with foil.
Meat 500 g	90-120	20-30	As above
Trout 150 g	25-35	10-15	Defrost open
Strawberries 300 g	30-40	10-20	Defrost open
Butter 250 g	30-40	10-15	Defrost open
Cream 2 x 200 g	80-100	10-15	Defrost open (cream is easy to whip even if parts of it are still slightly frozen)
Cake 1400 g	60 min	60 min	Defrost open

The times quoted in the chart should be used as a guide only, as the speed of defrosting will depend on the kitchen temperature. For example, the colder the ambient temperature the longer the defrosting time.

Maintenance and Cleaning

Always allow the oven to cool, and switch off at the mains supply before carrying out any cleaning or maintenance.

Cleaning materials

Before using any cleaning materials on your cooker check that they are suitable and that their use is recommended by the manufacturer.

Cleaners that contain bleach should not be used as they may dull the surface finishes. Harsh abrasives, caustic cleaners or abrasive objects should also be avoided.

External Cleaning

Regularly wipe over the control panel, and oven doors using a soft cloth and warm soapy water.

Oven Cavity

The enamelled oven cavity is best cleaned whilst the oven is still warm. Wipe the oven cavity after every use, with a soft cloth soaked in warm soapy water with a few squirts of vinegar added. However if the oven is cold and the soilage has become set, the following process (steam cleaning) will help to soften the splatters to help make cleaning easier.

Steam Cleaning

1. Place the grill/meat pan on the oven shelf positioned on the lowest runner.
2. Add a few drops of washing-up liquid to the pan and fill to about 12 mm with boiling water from the kettle.
3. Close the oven door and set the fan oven to 50 °C.
4. After 15 minutes, turn off the thermostat, and allow the fan oven to continue without heat (Cold defrost position) for a further 5 minutes, when the temperature of the water will have cooled down.
5. Carefully remove the pan of water from the oven and use normal oven cleaners to clean away soil residues.
6. Leave a little of the soapy water to soak into any burned on spillage on the floor of the oven for a longer time if necessary.

Important:

The steam cleaning process must not be carried out if catalytic liners are fitted.

From time to time it may be necessary to carry out a more thorough cleaning, using a proprietary oven cleaner, please ensure you observe the manufacturer's directions.

Accessories

Rinse the accessories after every use and dry well. Soak for a short while to make cleaning easier.

Maintenance and Cleaning

Cleaning the fat filter

The fat filter should be cleaned after every use. The filter may be washed in a dishwasher on a 65 °C wash. If the filter is heavily soiled, place the filter in a saucepan of water with approximately 1 tsp of automatic washing powder or dishwasher powder. Bring to the boil and leave to soak for approximately 30 minutes or longer depending on the degree of soiling. Ensure the solution does not boil over as it could mark your hob. Rinse filter in clear water and dry.

Care of liners (Optional extra)

The secondary oven has a catalytic roof.

The catalytic liners are self cleaning and will destroy splashes of food and fats while the oven is on. To aid this process and to ensure continued good performance of the liners, we recommend you run the oven, without food, once a week at 250 °C for at least 1 hour.

Important:

The steam cleaning process recommended for enamelled ovens must not be carried out if catalytic liners are fitted.


Manual cleaning of the catalytic liners is not recommended. Damage will occur if oven sprays or abrasives of any kind are used.

Slight discoloration of the Catalytic surfaces may occur in time. This does not affect the Catalytic properties in any way.

Additional Catalytic panels are available as an optional extra, please consult the AEG price list.

Shelf supports

The shelf supports can be removed to clean the side walls of the oven (refer to diagram).

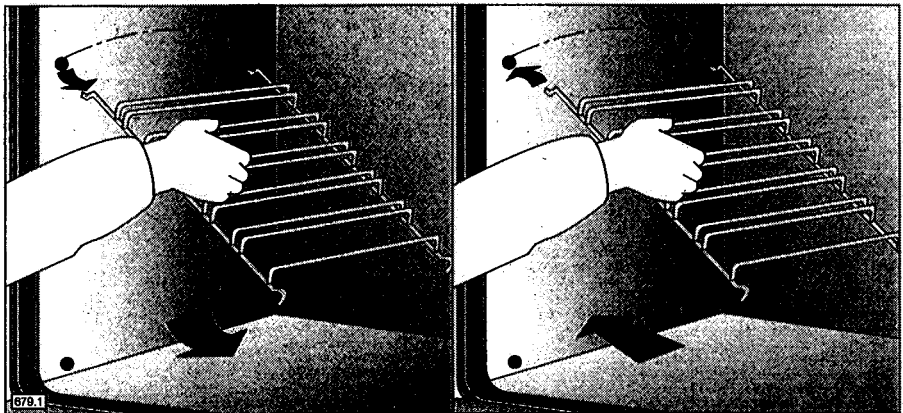


Hold the shelf support at the bottom, lift up towards the centre of the oven and unhook at the top. Reverse the procedure to fit.

Maintenance and Cleaning

Removing the oven door (main and secondary)

Removal


Fully open the door and lift both catches on the door hinges (1).

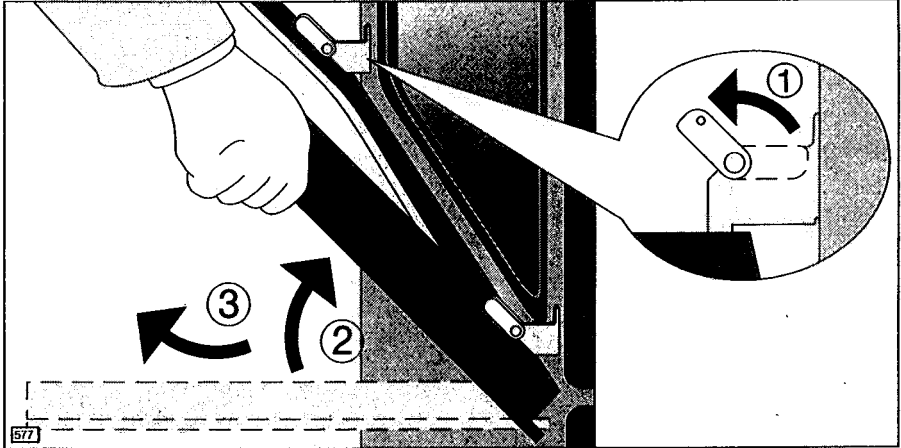

Hold the door by the sides (not by the door handle), lift in the direction that the door is closed (2) and pull out towards the front (3).

Refitting

Hold the door by the sides (not by the door handle), slide in both hinges at an angle from above (1). Fully open door downwards (2) and push back door catches.

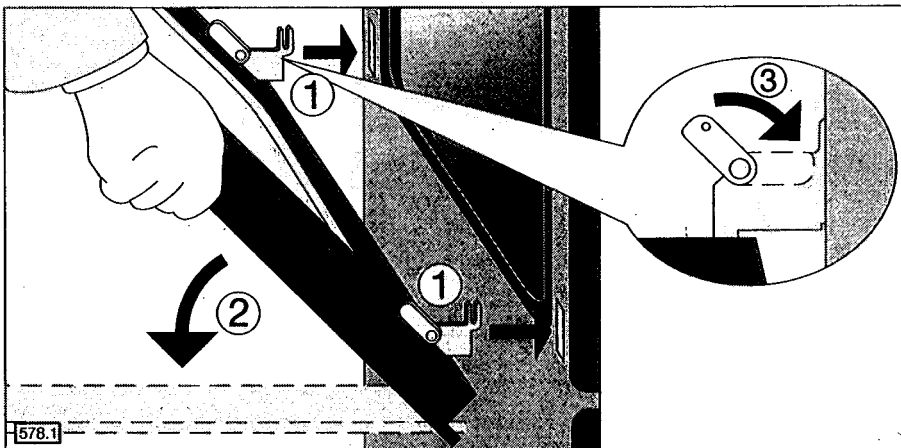

Maintenance and Cleaning/Something not working

Replacing oven light bulb and cleaning glass cover

Warning: Ensure the oven is isolated from the mains supply, before replacing the light bulb.

1. Place a cloth on the oven floor
2. Unscrew the glass cover clockwise
3. Clean the glass cover and replace the bulb if necessary
4. Replace the glass cover and remove the cloth from the oven

Replacement bulbs are available from your local service centre and must comply to the following:

Main oven: 40 watt, 230 V, heat resistant to 300 °C

Secondary oven: 40 watt, 230 V, heat resistant to 300 °C



Something not working

Please carry out the following checks before contacting your local AEG service centre.

The oven cannot be switched on:

- Check there is an electrical supply to the oven
- Ensure the time of day has been set.
- Ensure the oven is in manual operation

The oven light fails to work:

- Check that there is an electrical supply to the oven
- Check the bulb in the oven and replace if necessary.

Service

If after carrying out the necessary checks there is still a fault with your appliance please contact your local AEG Service Centre.

In guarantee customers should ensure that the suggested checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for in-guarantee service calls.


Service & Spare Parts

If you require a service engineer or wish to purchase spare parts, contact your local AEG Service Centre, by telephoning

0990 234 234

Help us to help you

Please determine your type of enquiry before telephoning. When you contact us we need to know.

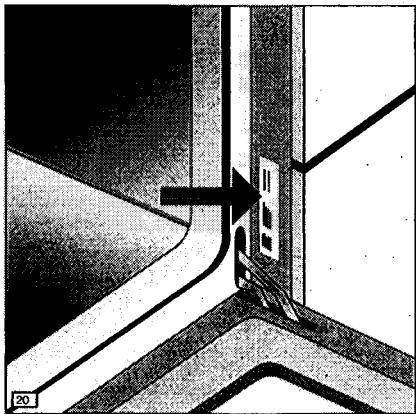

1. Your name, address and post code.
2. Your telephone number
3. Clear and concise details of the fault.
4. The model, production number and product identification number.
5. Date of purchase

This information can be found on the rating plate, so you have this number to hand we recommend you write it below.

KD - /
(Product Identification No.) (Date Code) (Production No.)

Customer Care

For general enquiries regarding your AEG appliance, or further information on AEG products please contact our customer care department.

Customer Care Department
AEG Domestic Appliances Limited
PO Box 47
Newbury
Berkshire RG14 5XL

Tel.: 01635 572700
Fax: 01635 42970

Guarantee Conditions

AEG offer the following guarantee to the first purchaser of this appliance.

1. The guarantee is valid for 12 months commencing when the appliance is handed over to the first retail purchaser, which must be verified by purchase invoice or similar documentation.

The guarantee does not cover commercial use.

2. The guarantee covers all parts or components which fail due to faulty workmanship or faulty materials. The guarantee does not cover appliances where defects or poor performance are due to misuse, accidental damage, neglect, faulty installation, unauthorised modification or attempted repair, commercial use or failure to observe requirements and recommendations set out in the instruction book.

This guarantee does not cover such parts as light bulbs, removable glassware, dust bags or filters.

3. Should guarantee repairs be necessary the purchaser must inform the nearest customer service office (manufacturer's service or authorised agent). AEG reserves the right to stipulate the place of the repair (i.e. the customer's home, place of installation or AEG workshop).
4. The guarantee or free replacement includes both labour and materials.
5. Repairs carried out under guarantee do not extend the guarantee period for the appliance. parts removed during guarantee repairs become the property of AEG.

AEG Hausgeräte AG
Postfach 1036
D-90327 Nürnberg 1

© Copyright by AEG

H 259 230 140 - 08970.5/03 -

AEG Domestic Appliances Ltd
Customer Care Department
55-77 High Street
Slough
Berkshire SL1 1DZ

Telephone: 08705 350350