

PACKAGE CONTENTS

- 3" LCD hood
- *Quick Setup Guide*

FEATURES

- Blocks glare and reflections on the camera's LCD screen.
- Compatible with most 3" or smaller LCD screens.
- Protects the LCD screen from accidental scratches.
- Attaches securely to the frame of the LCD screen.
- Removable hinged hood.



Before using your new product, please read these instructions to prevent any damage.

ATTACHING YOUR LCD HOOD

- 1 Thoroughly clean your camera's LCD screen.
- 2 Carefully peel off the adhesive covering from the hood assembly.



- 3 Align the hood assembly with your camera's LCD screen with the hinged cover at the top.
- 4 Gently press the hood into place.



USING YOUR LCD HOOD

Using the LCD while taking photos:


- 1 Open the LCD cover by pulling on the center tab at the bottom of the screen, then set the camera to View on LCD mode.
- 2 Look at the LCD screen through the hood to frame your shot.
- 3 Take the picture.

Using the camera viewfinder for taking photos:

- Leave the hood closed then take the picture as you normally would. To view the picture or to setup the camera menu, open the hood or remove the hood.

REMOVING YOUR LCD HOOD

- 1 Close the hood.
- 2 Slide the hood to the right.

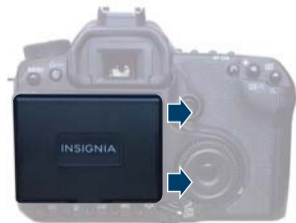

- 3 Gently, lift the hood off of the screen protector.

SPECIFICATIONS

- Net Weight: 0.5 oz
- Color: Black
- Material: Plastic
- Fits most cameras with a 3" or smaller screen

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 Best Buy. All rights reserved.
Made in China