

# VACUUM CLEANER

## OWNER'S MANUAL

DAEWOO

### **SPECIFICATIONS**

**Model** RCG-110

**Rating** 230V~50Hz

**Watts** 1600W

**Weights(net)** 4.1 kg

**Dimension(L \* H \* D)** 355X225X250mm


**Cord length** 5 m

# DESCRIPTION AND OPERATION

## HOSE CONNECTION




- Connecting the hose : insert the hose firmly into the hose inlet. ("Click")

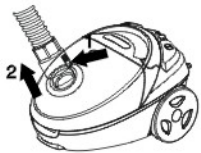


- Disconnecting the hose: press the button and pull the hose out of the vacuum cleaner.

## SUCTION CONTROL

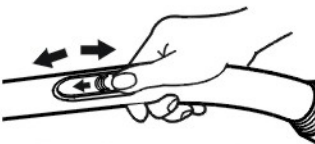

- The suction power control at the hand grip enables you to control suction power.

## ON/OFF SWITCH

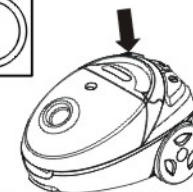


- turn the unit off(on) by pressing the ON/OFF switch button on the unit

## CORD REWIND BUTTON




- Rewind the power cord by pressing the cord rewind button.

## PIPE CONNECTION

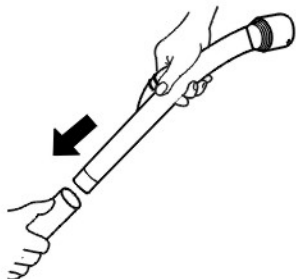

- To connect the nozzle, hold the tubes and the handle: insert the narrowed section into the wide section.

## WIDE SUCTION NOZZLE

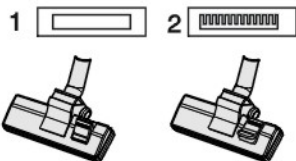

- Use this nozzle for cleaning both carpeted and uncarpeted floors.


## UPHOLSTERY NOZZLE



## COMBI CREVICE NOZZLE



## COMBI CREVICE NOZZLE

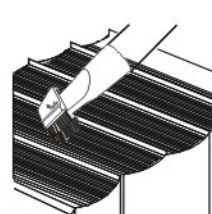


## DUST METER




- When the color of the dust meter is changed to RED for long time, change the dust bag.

## PRACTICAL PARKING

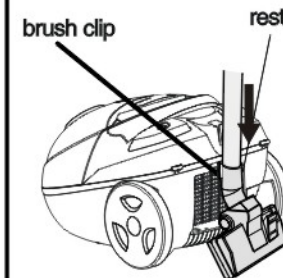




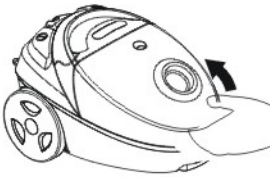
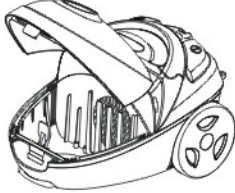

- cleaning for a while, you can place the brush clip into the rest.

## STORAGE

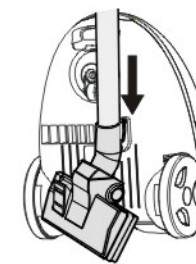
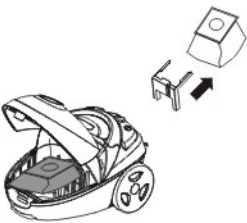



- If you want to store the cleaner, hitch the brush clip onto the vacuum cleaner.

## CLEANING THE FILTER

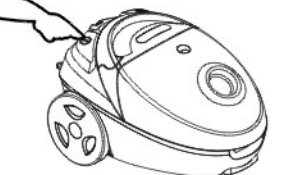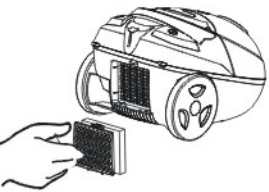



<p><b>EXHAUST FILTER</b></p>  <ul style="list-style-type: none"> <li>• Switch off.</li> </ul>	 <ul style="list-style-type: none"> <li>• Press the clamp position of the air outlet cover to discharge the air outlet cover for clean up or a new replacement.</li> </ul>	 <ul style="list-style-type: none"> <li>• Separate the filter from the filter case and shake the dust out of the filter.</li> </ul>
<p><b>MOTOR PROTECTION FILTER</b></p>  <ul style="list-style-type: none"> <li>• Switch off and open the cover.</li> </ul>	 <ul style="list-style-type: none"> <li>• Take the dust bag holder with dust bag out from the dust compartment</li> </ul>	 <ul style="list-style-type: none"> <li>• Shake the dust out of the filter.</li> </ul>

## CHANGING THE DUSTBAG

 <ul style="list-style-type: none"> <li>• Switch off and open the cover.</li> </ul>	 <ul style="list-style-type: none"> <li>• Take the dust bag holder with dust bag out from the dust compartment</li> </ul>	 <ul style="list-style-type: none"> <li>• Insert the new dust bag into the dust bag holder properly as shown in picture.</li> </ul> <p><b>Note:</b> If no dustbag has been placed into the dustbag holder, the cover cannot be closed.</p>
---	--	--

## PRECAUTIONS FOR SAFE USE

This vacuum cleaner should only be used for normal dry household dust and dirt. The manufacturer cannot be responsible for any damage caused by use or operation of the cleaner contrary to these instructions. If the cleaner is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.
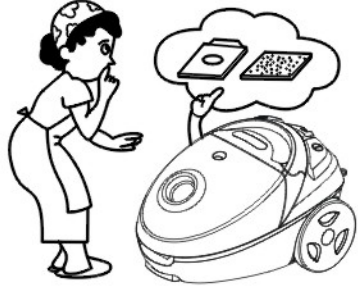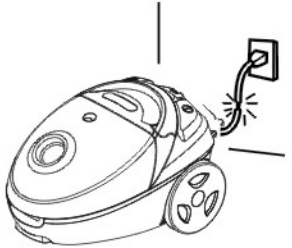
<ul style="list-style-type: none"> <li>• Do not vacuum areas which contain moisture or water and inflammable matter, needles, pins, razor blades, matches, cigarette-ends, etc., since they may damage the cleaner or dust bag or cause a fire.</li> </ul> 	<ul style="list-style-type: none"> <li>• When rewinding the power cord, hold the plug body before pressing the cord rewind button to prevent whipping.</li> <li>• Do not pull the power cord beyond the specified length.</li> </ul> 
<ul style="list-style-type: none"> <li>• Make sure a dust bag and a motor protection filter are always inserted.</li> </ul> 	<ul style="list-style-type: none"> <li>• This product provided with a cable which, if damaged, must be replaced by a repair shop authorized by the manufacturer since special tools are required.</li> </ul> 

## BEFORE ASKING FOR SERVICE

■ Before Asking for Service, please check each item below if you have trouble with your cleaner.

Problem	Check Point	Measure
Suction power is weak.	<ul style="list-style-type: none"><li>• Dust bag</li><li>• Pipe or hose</li></ul>	If dust bag is dirty, replace it. If clogged or blocked, remove the object.
The cleaner does not work.	<ul style="list-style-type: none"><li>• Power cord</li><li>• on/off switch</li></ul>	Check if power cord is plugged. Check if the power switch is turned on.
Power cord does not rewind.	<ul style="list-style-type: none"><li>• Power cord</li></ul>	Pull the power cord out a little and press the cord rewind button.



### Disposal of Used Electrical & Electronic Equipment

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.