

MODEL H6139 1/2" REVERSIBLE AIR DRILL

INSTRUCTION SHEET



Introduction

Features include a pistol grip with trigger switch, forward and reverse switch and 1/4" NPT female air inlet. The 1/2" chuck accepts drill bits down to 1/64" and includes a chuck key. The auxiliary handle can be positioned anywhere around the drill body.

Inventory

Α.	Air Drill	. 1
	1/4" NPT Quick Connect Fitting (male)	
	Chuck Key	
	Handle	
E.	Lock Collar	. 1

Operation

Tool requires 90 PSI to operate correctly.

To improve tool lifespan, use a filter/lubricator/ regulator as shown in **Figure 2**. Otherwise, lubricate daily with a couple drops of pneumatic tool oil directly into the air fitting as shown in **Figure 3**.



Figure 1. Model H6139.

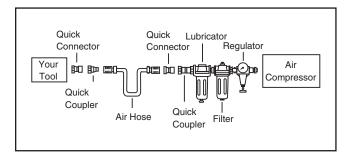


Figure 2. Installing your tool.


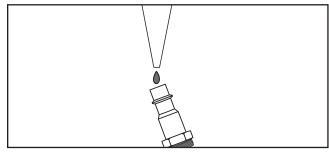


Figure 3. Lubricating directly into air fitting.

If you need help with your new pneumatic tool, call our Tech Support at: (570) 546-9663.

H6139 Parts Breakdown and List

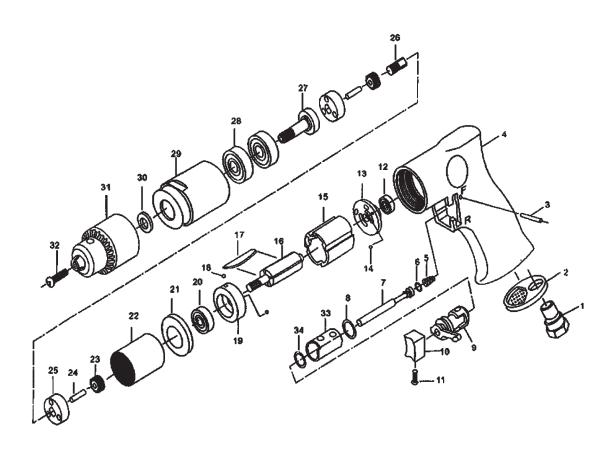

PART #	DESCRIPTION
PH6139001	AIR INLET
PH6139002	EXHAUST DEFLECTOR
PH6139003	SPRING PIN
PH6139004	HOUSING
PH6139005	SPRING
PH6139006	O-RING
PH6139007	VALVE STEM
PH6139008	O-RING
PH6139009	REVERSE LEVER
PH6139010	TRIGGER
PH6139011	SCREW
PH6139012	BEARING
PH6139013	REAR PLATE
PH6139014	STEEL BALL
PH6139015	CYLINDER
PH6139016	ROTOR
PH6139017	ROTOR BLADE
	PH6139001 PH6139002 PH6139003 PH6139004 PH6139005 PH6139006 PH6139008 PH6139009 PH6139010 PH6139011 PH6139012 PH6139013 PH6139014 PH6139015 PH6139016

REF	PART #	DESCRIPTION
18	PH6139018	STEEL BALL
19	PH6139019	FRONT PLATE
20	PH6139020	BEARING
21	PH6139021	WASHER
22	PH6139022	GEAR LINK
23	PH6139023	GEAR
24	PH6139024	PIN
25	PH6139025	GEAR PLATE
26	PH6139026	GEAR SHAFT
27	PH6139027	SHAFT
28	PH6139028	BEARING
29	PH6139029	CLAMP NUT
30	PH6139030	WASHER
31	PH6139031	DRILL CHUCK
32	PH6139032	CHUCK SCREW
33	PH6139033	BUSHING
34	PH6139034	O-RING