

mellerware®

TRENDS FOR LIFE

Odiseo Electric Frying Pan



complies with
INTERNATIONAL
IEC60355
SAFETY SPECIFICATIONS


m
1500W

CE
2 YEAR
GUARANTEE

Model:
27700

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee

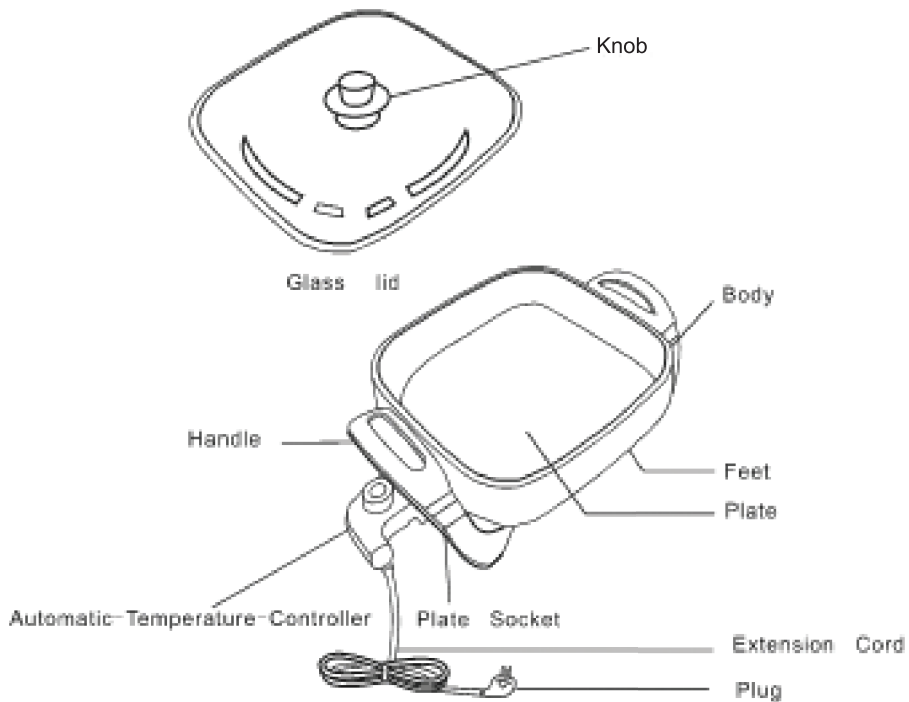

PRECAUTIONS

TO AVOID THE RISK OF FIRE, ELECTRIC SHOCK AND BURNING, PLEASE READ AND FOLLOW THE INSTRUCTIONS CAREFULLY:

1. Do not use on plastic or synthetic counter tops, or any unstable surface.
 2. Do not use this unit near flammable goods, such as Carpet, straw mat or curtain.
 3. Please be sure to use the correct power out let.
 4. Do not use this unit while cord or plug is damaged.
 5. Never impact this unit or drop from high place.
 6. Do not touch the plate surface while in use or before it has cooled down even if the power is switched to "OFF" POSITION.
 7. Do not unplug the Automatic-Temperature-Controller before it has cooled down because of the high temperature of the detector. Be sure to keep the unit away from children.
 8. Do not use a spatula or knife, otherwise it will scratch the NON-STICK coating.
 9. Do not wash directly with water as this will cause electric shock
- The appliance may be used only for its intended purpose. No responsibility can be taken for any possible damage caused through incorrect use or improper handling.
 - Before connecting the appliance to the power

source, check that the mains power supplier matches those given on the rating label on the underside of the appliance.

- Do not put the appliance or the plug in water or any other liquid.
- Never leave the appliance unattended while it is in use.
- Children and/or disabled persons may not always recognize the dangers involved in the incorrect use of electrical appliances. Therefore never allow children and/or disabled persons to use household appliances without supervision.
- Do not allow the cord to hang over the edge of the counter or table, and keep it well away from hot objects and open flames. Remove the plug from the socket only by holding the plug.

USING THE FRYPAN

***PLEASE APPLY SOME COOKING OIL ON PLATE SURFACE BEFORE USE ***

1. **PLUG THE UNIT IN:**
 - a. Plug the Automatic-Temperature-Controller Into the plate socket.
 - b. Connect the plug into power outlet.
2. **TEMPERATURE SETTING;**
 - a. Please refer to the indicated Table

THERMOSTAT SETTINGS





- 1 90°C
- 2 120°C
- 3 150°C
- 4 170°C
- 5 195°C

Turn dial to the desired temperature
Indicator Lamp will light up and Power will be on

3. START COOKING:

- a. The pilot light will switch off when the plate reaches its desired temperature, and then you can Start cooking.
- b. For your reference, it takes about 8 minutes .to Reach the required temperature on setting No. "5".

4. AFTER USE:

- a. Switch the Automatic-Temperature-Controller to "OFF" Position, and unplug the unit from power outlet.
- b. Push the plate ejector to detach the plate for easy Cleaning

If supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

FEATURES

Automatic-Temperature-Controller

- TEMPERATURE SWITCH

To select the suitable temperature you need.

-Pilot Light

To indicate the on-off status.

If the plate temperature reached the Selected degree, the power and the pilot light will turn off.

Otherwise, it will remain in "ON" Condition.

**Read all instructions before use.
Save these instructions for further reference.**

SPECIFICATIONS:

ELEC. SPEC. Please check the label indicated
On the product.

DIMENSIONS: Size:30cmx30cm / depth 6cm

TEMPERATURE RANGE

90 C ~ 195 C (1-2-3-4-5 scale)

CORD LENGTH

100cm

VOLTAGE

AC230V ~ 50Hz 1400W

ACCESSORY

Extension cord with Automatic-
Temperature-Controller.....1 PC
Glass Lid.....1 PC





creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za

