

morphy richards®



Juice extractor



Please read and keep these instructions

Getting the best from your new appliance...

Safety

Do not operate the juice extractor for more than 5 minutes at a time. Allow to cool down for 5 minutes.

Always ensure the juice extractor is unplugged when assembling, disassembling or cleaning.

Do not remove cover until juice extractor has stopped.

Operation

Rinse mesh filter after each use to avoid blockages occurring.



JUICE



To register for your 5 year guarantee ring the Helpline numbers below.

Please have the following information available:

Serial number: _____ and model number: 48951 (see page 8 for guarantee details)

 


 
For replacement parts, help with using your Morphy Richards products, problems and lots more, contact us by phone or through our website.



UK Helpline: 0870 060 2609
Replacement parts: 0870 167 6640
Ireland 1800 409119


www.morphyrichards.com





CONTENTS

Important safety instructions	3
Electrical requirements	3
Features	4
Before Use	4
Assembly	5
Juicing	5
Speed Selector Table	6
After use	6
Cleaning	7
Storage	7
Top tips	7
Dedicated helpline	7
Your guarantee	8

 

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following basic common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person

IMPORTANT: Damage to the appliance!

In addition we offer the following essential safety advice.

Location

- Remove all packaging and retain for future reference.
- Ensure the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or in a bathroom.
- Do not place the appliance on a highly polished wooden surface as damage may occur to the surface.
- Do not place the appliance on or near a hot surface such as a hot plate or radiant rings or near a naked flame.
- Do not let the mains lead overhang the edge of the table or work-top, or touch hot surfaces.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

Personal safety

- Avoid touching moving parts. Keep hands, hair, clothing as well as spatula and other utensils away from blades during operation, to prevent personal injury and/or damage to the appliance.
- **WARNING: To protect against risk of electric shock NEVER immerse the appliance body in water or in any other liquid and always ensure the electrical connections are kept dry.**

Other safety considerations

- Disconnect the appliance from the mains supply when not in use, before taking off attachments and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The power cord cannot be replaced. Contact Morphy Richards for advice.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the appliance for other than its intended use.

Product Specific Safety

- **WARNING: The teeth in the mesh filter are very sharp. Handle with care when using and cleaning.**
- Do not use the appliance if the mesh filter is damaged.

ELECTRICAL REQUIREMENTS

 
Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13amp plug require replacement, a 5 amp BS1362 fuse must be fitted.

WARNING: This appliance must be earthed.

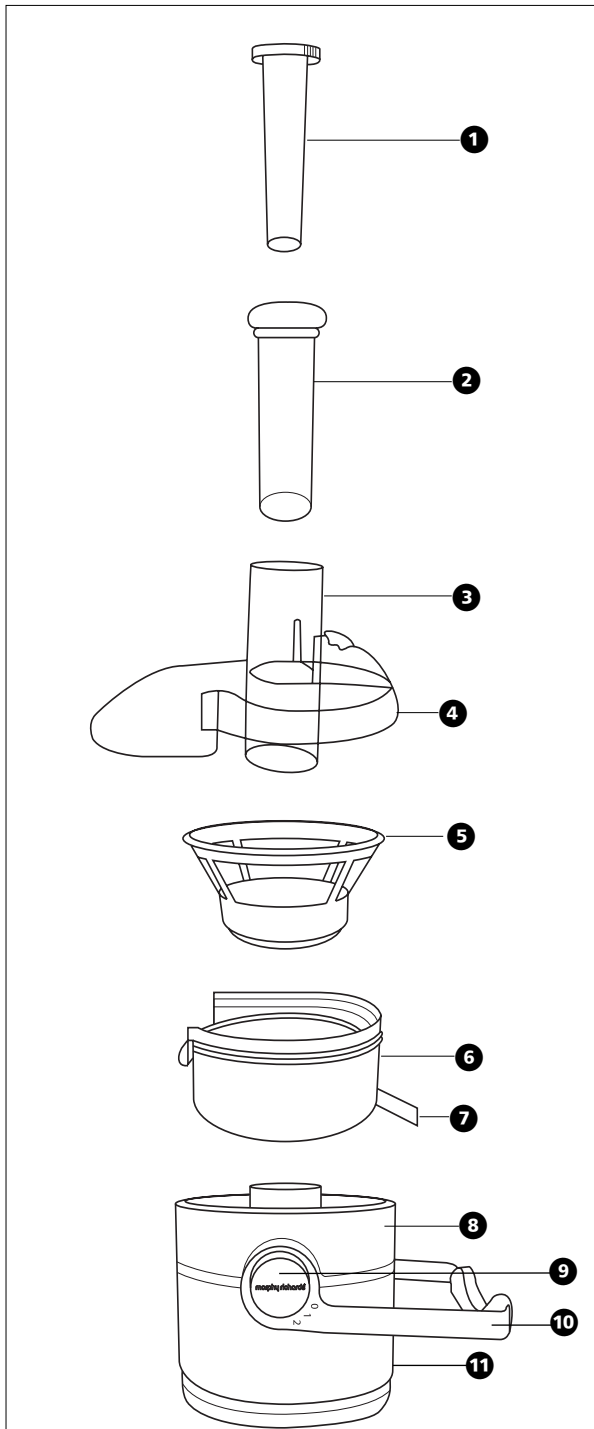


FEATURES

- 1 Small food pusher
- 2 Large food pusher
- 3 Fruit shoot
- 4 Juice cover
- 5 Mesh filter basket
- 6 Juice collector
- 7 Juice outlet spout
- 8 Motor base unit
- 9 On/off/speed selector switch
- 10 Locking arm
- 11 Cord storage
- 12 Pulp collection container
- 13 Juice container
- 14 Removable froth guard

BEFORE USE

WARNING: Never immerse the base unit in water.

 - Carefully unpack your juice extractor.
- Lower the locking arm to remove the washable parts.
- Wash all parts except from the motor unit in hot soapy water. Rinse well and dry thoroughly. (see Cleaning page 7).
- All parts must be dry before mounting on the base unit.
- Wipe the base with a soft, clean cloth to remove small particles that may have collected during packing and handling.

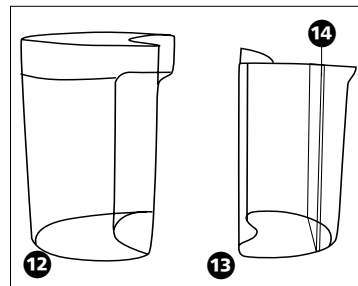

ASSEMBLY

- 1 Place juice collector on top of the motor base aligning the spout with the corresponding cut out in the base **A**.
- 2 Place the mesh filter basket inside, pushing down to make sure it clicks firmly into place **B**.
- 3 Place the juicer cover on top ensuring that the juice cover spout and outlet for the juice collector are aligned.
- 4 Lift the locking arm up and lock into place on top of the juicer cover **C**.

NOTE: The juice extractor will not work if the locking arm is not correctly in place **C**.

IMPORTANT: Do not pick up the juice extractor using the locking arm.

- 5 Tilt the pulp container slightly to fit under the juice cover **D**.
- 6 Put the juice container under the spout ensuring the froth guard is fitted correctly.
- 7 Place the large food pushers into the food shoot and the small food pusher can be locked into place by rotating.

 
 
 
 
 
 
JUICING

- 1 Plug the juicer into the electrical socket.
- 2 Ensure that both the juice container, pulp container and froth-guard are in place.
- 3 Most fruit and vegetables can be put into the Juice Extractor with the peel in place. Ensure the fruit or vegetables are thoroughly washed, to remove any dirt or chemicals, if you are concerned with the quality of the peel, remove it first. Remember what you put into the Juicer, you will get out as juice.
 - Citrus peel (eg. oranges, lemons) and thick fruit peel (eg. pineapple, bananas) must be removed first.
 - Stones or large pips will have to be removed before juicing. Pips from apples and oranges are acceptable, anything larger or harder will need to be removed.
 - Cut into suitable size pieces to fit into the fruit shoot. Usually apples need only to be cut in half.
- 4 Switch to the appropriate speed, as indicated in the Speed Selector table.
- 5 If juicing larger pieces, use the large food pusher (with the small pusher locked in place) apply gentle force, to press the fruit down **E**.

For juicing small pieces ie grapes, or carrots, unlock the small pusher (by rotating), place the large pusher in the fruit shoot, and feed the fruit/vegetables through the hole in the large pusher, apply gentle force to press the fruit down **F**.

Using the correct size pusher for the size of pieces being juiced is essential to prevent splashing and efficient juice yield.

- 6 With the motor running place food into the fruit shoot.

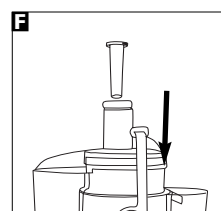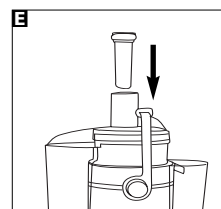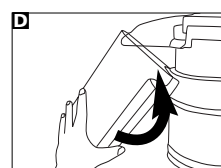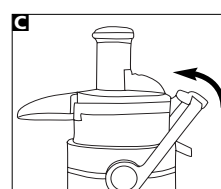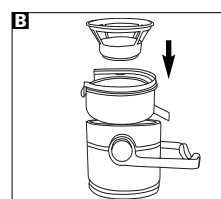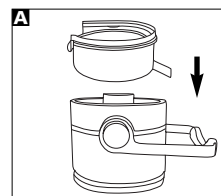

WARNING: Always use the food pusher to push fruit into the feed tube.

Never use utensils or your fingers to push fruit

down the feed tube. Ensure you use the food pusher at all times.

Never use the small food pusher without the large pusher inserted into the fruit shoot.

IMPORTANT

- The large fibrous pulp produced is thrown into the pulp collector, the finer pulp can rest on the inner surface of the mesh filter basket. With prolonged use this can reduce the efficiency of the juice extraction and cause a blockage.
 - When extracting large quantities of juice, it is advised to rinse out and clean the mesh filter basket during this process. This will prevent blockages and possible leakage of juice.
- 7** Repeat steps 2-6 until the desired amount of juice has been extracted.
- 8** When the juice container becomes full, pour slowly into a suitable container. Remove the froth guard and pour away the collected froth. Wash both parts and replace.
Do not continue to push the food through the tube or juice will overflow. Replace with the now empty juice container and, continue steps 2-6.

Speed selector table

Apples	2
Apricots (stone removed)	1
Beetroot	2
Carrots	2
Celery	2
Cucumber	1
Grapes (seedless)	1
Kiwi fruit	1
Mangoes	1
Melons	1
Nectarines (stone removed)	1
Oranges (peeled)	1 or 2
Peaches (stone removed)	1
Pears	2 for hard or 1 for soft
Pineapple (peeled)	2
Raspberries	1

After use

- 1** When finished, unplug the juice extractor from the electrical socket.
- 2** Disassemble the machine in the reverse procedure to assembly. Note: the mesh filter basket and juice collector must be removed together.

WARNING: Teeth in the filter basket are extremely sharp.

Cleaning

WARNING: Always unplug the unit from the mains before cleaning.

- 1** This appliance should be cleaned after each use.
- Do not allow water or any other liquid to get into the base.
- Do not use harsh or toxic cleaners to clean any part of the juicer. Do not use scouring pads.
- 2** Use the small stiff brush provided to help clean the mesh filter.
- 3** Rinse well and dry thoroughly.

WARNING: Teeth in the filter basket are extremely sharp.

- 4** Wipe the base of the juice extractor with a clean, slightly damp cloth.

Storage

- Store the product assembled in a clean dry place.
- The cord should be wrapped around the base. The plug should be inserted in the plug holder.
- The juice container can be stored inside the pulp container

TOP TIPS

- At least five servings of fruit and vegetables should be eaten every day to keep healthy. As the juice of the fruit and vegetables contains 95% of nutrients, juicing is an ideal and easier way to ensure that you get the necessary minerals and vitamins.
- Juices are quickly absorbed by the body and are therefore the fastest way to get nutrients into the body.
- Always use fresh fruit and vegetables for juicing, and ensure they are washed thoroughly before use.
- It will be necessary to remove any stones or pips from the fruit or vegetables before juicing.
- Use speed 2 for all firm fruit and vegetable types.
- Speed 1 is used for soft fruits and citrus fruits.
- Fruit juice will need to settle for a few minutes. It will not go clear. Remove the froth before drinking if preferred.
- It is not recommended to store the juice once extracted, as Nutritional values will be lost.

Dedicated Helpline

If you have any difficulty with your appliance, do not hesitate to call. We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your enquiry quickly:

- Name of the product
- Model number as shown on the underside of the appliance or rating plate
- Serial number

UK Helpline 0870 060 2609

Replacement Parts 0870 167 6640

Ireland Helpline 1800 409119

YOUR FIVE YEAR GUARANTEE

Available on registration



This 5 year guarantee is only valid when registered directly with Morphy Richards. If you do not register your product it is guaranteed for 2 years. To validate your 5 year guarantee, telephone our consumer helpline. Once you have registered your product you will receive written confirmation from Morphy Richards, please retain this information. Please refer to 2 year guarantee for more information.

Morphy Richards at the address shown. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase. Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt. If for any reason this item is replaced during the guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

- 4 (or authorised dealer). Where the appliance has been used for hire purposes or non domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.

YOUR TWO YEAR GUARANTEE



It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference. Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no. Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within the guarantee period from the original date purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to

To qualify for the guarantee the appliance must have been used according to the instructions supplied.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

morphy richards

**The After Sales Division
Morphy Richards Ltd**

Mexborough, South Yorkshire,
England, S64 8AJ
Helpline (Office hours)
UK 0870 060 2609
Republic of Ireland 1800 409119

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

FP48951MUK Rev 1 05/06