


# OPERATIONS MANUAL

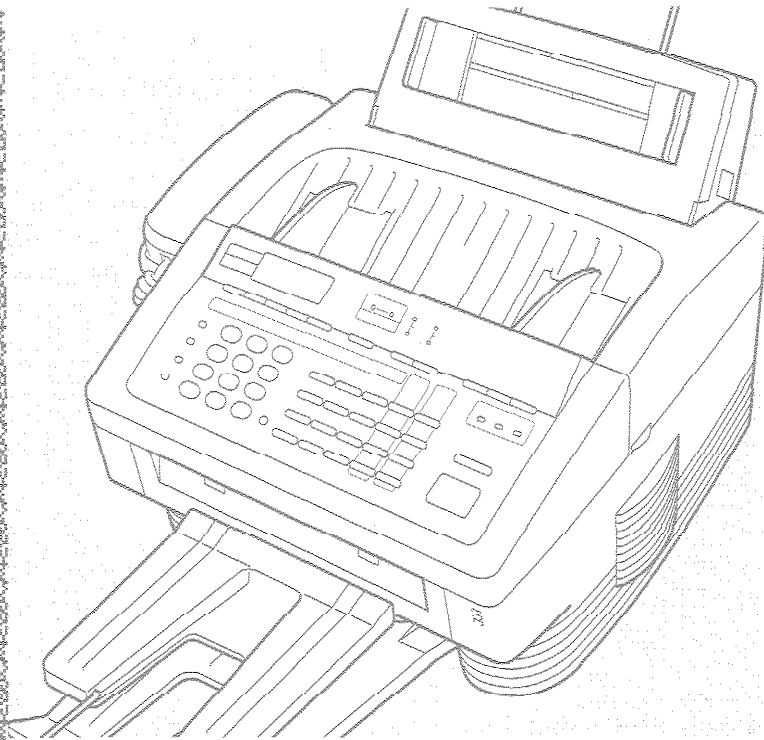

# MFC 7650MC

.....

brother


### Shipment of the Multi-Function Center (MFC)

If for any reason you must ship your MFC, carefully package the MFC to avoid any damage during transit. It is recommended that you save and use the original packaging. The MFC should be adequately insured with the carrier.


#### Warning

When shipping the MFC, the DRUM UNIT assembly including the TONER CARTRIDGE must be removed from the MFC and placed in the plastic bag. Failure to remove it and place it in the plastic bag during shipping, will cause severe damage to the machine and will VOID THE WARRANTY.


1. Remove the drum unit.

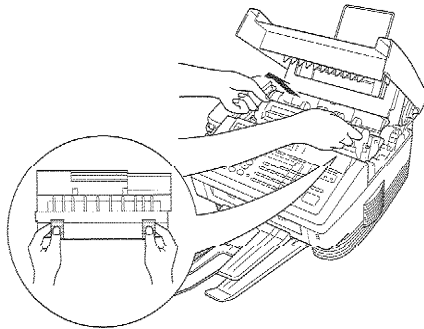

2. Place the drum unit in the plastic bag and seal it completely.

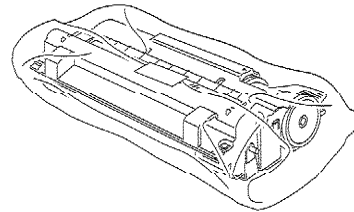

3. Repack the MFC.

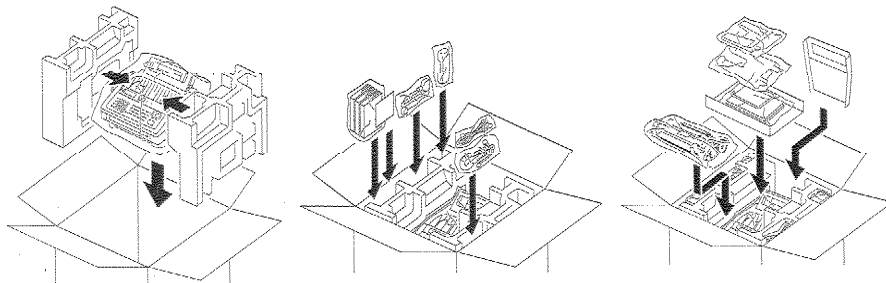

## Introduction to the Operations Manual (for Fax, Printer, Copier Operations)

---

- ▶ **Have you set up your MFC** and prepared your computer for the printer mode by following the instructions in the Setup Manual? The Setup Manual will help you prepare your MFC to use it as a fax, printer and copier.
- ▶ **Your Multi-Function Center 7650MC** has 6 performance modes in one machine. It is a Fax, Printer, Copier, Scanner, PC Fax and Message Center.
- ▶ After you complete setting up the MFC, **see this Operations Manual** for more information about your MFC, such as functions of the machine and the control panel. Information about maintenance, troubleshooting and technical specifications are also available in this manual.
- ▶ **Please keep this manual beside your MFC**, so you can access important information whenever necessary.
- ▶ **See the Multi-Function Link Pro Online Documentation** for information on how to set up your MFC and Personal Computer and how to use the Scanner and PC Fax.

# TABLE OF CONTENTS

• ..... For Your Information

<b>1. THE CONTROL PANEL KEYS</b> .....	<b>1</b>
TELEPHONE AREA .....	2
ONE TOUCH, PRINTER AND COPY AREA .....	3
LCD & USER SETUP AREA .....	5
MESSAGE CENTER AREA.....	7
<b>2. HOW TO USE ON-SCREEN PROGRAMMING (OSP) AND HELP KEY</b> .....	<b>8</b>
User-friendly Programming .....	8
Using the Function Mode to Access On-screen Programming (OSP) .....	8
Shortcut .....	9
Alternating Displays for On-screen Programming (OSP) .....	9
Function Selection Table .....	10
Using the Help Key .....	16
How to Enter Text in Function Mode .....	17
How to Enter Special Characters, Symbols and Punctuation Marks in Function Mode .....	18
How to Set the Sleep Time .....	19
<b>3. FUNCTION SETTINGS</b> .....	<b>21</b>
Setting the Dialing Mode (Tone/Pulse).....	21
Setting the Date and Time .....	22
Setting the Station ID .....	23
Setting the Beeper Volume Level .....	25
Storing the One Touch Dial Numbers .....	26
Storing the Speed Dial Numbers .....	27
• When You Wish to Change the Stored One Touch and Speed Dial Numbers.....	29
• Memory Storage/Temporary Battery Back Up.....	29
Setting Up Groups for Broadcasting .....	29
• Types of Numbers .....	31
<b>4. USING THE MFC AS A TELEPHONE</b> .....	<b>32</b>
Manual Dialing.....	32
One Touch Dialing .....	32
Speed Dialing.....	32
• Using Hold, Pause, # with the Telephone .....	32



## TABLE OF CONTENTS

• On Hook Dialing .....	33
Dialing Access Codes and Credit Card Numbers .....	33
Searching the Telephone Index.....	34
<b>5. SENDING FAXES .....</b>	<b>35</b>
A) DOCUMENT BASICS .....	35
The Size of Your Documents .....	35
How to Insert the Document.....	35
The Auto Document Feeder (ADF) .....	36
Getting Ready to Send a Fax .....	37
Setting the Resolution (Temporary Setting) .....	37
Setting the Contrast (Temporary Setting) .....	38
B) BASIC FAX TRANSMISSIONS.....	39
• Sending a Fax .....	39
• Talking to the Other Party When Sending a Fax .....	39
Sending a Fax Automatically .....	40
Dual Access .....	40
• If you Get a MEMORY FULL Message .....	41
Sending a Fax in Real Time (Temporary Setting) .....	41
Sending a Fax Manually .....	42
Automatic and Manual Redialing.....	43
• Optional Settings When You Send a Fax Manually .....	43
• Printing Page Headers .....	43
C) ADVANCED FAX TRANSMISSIONS .....	44
Setting the Daily Timer (for Delayed Transmissions) .....	44
Delayed Transmission .....	45
Broadcasting .....	46
• Getting Familiar with the Broadcasting Function .....	46
Interrupting the Timer and Polled Job .....	48
Checking Job Status .....	49
Canceling a Job.....	49
D) FAX TRANSMISSION OPTIONS .....	50
Setting the Overseas Mode (Temporary Setting).....	50
Setting Your MFC for Multiple Resolution Transmission (Temporary Setting) .....	51
Sending a Fax with an Electronic Cover Page Message.....	53
• Selecting a Comment for the Cover Page .....	53
Customizing Your Cover Page Comment .....	54
Printing a Sample Cover Page.....	55
To Always Send a Cover Page .....	55

## TABLE OF CONTENTS

• Sending an Automatic Cover Page .....	56
Sending a Fax When the Cover Page Is ON .....	56
Sending a Cover Page (Temporary Setting) .....	57
Sending a Fax with Call Reservation (Talking to the receiving party after fax transmission) .....	58
• Using the Call Reservation Function .....	58
Printing the Call Back Message .....	60
ECM (Error Correction Mode) .....	61
Error Retransmission .....	61

### **6. RECEIVING FAXES AND OTHER CALLS ..... 62**

A) BASIC SETUP TO RECEIVE FAXES .....	62
Selecting an Answer Mode .....	62
Manual Reception (Manual Mode) .....	63
Automatic Fax Only Reception (Fax Mode) .....	63
Setting the Ring Delay .....	63
The F/T Switch (Fax/Telephone Mode) .....	64
Recording an F/T Outgoing Message (OGM) .....	65
Setting the F/T Ring Time .....	66
Smoothing .....	67
Setting the Size of the Paper .....	68
Printing a Reduced Size Copy of the Incoming Document ...	69
Auto Reduction .....	69
Using Fixed Reduction Ratios .....	69
• Selecting the Ratios of Fixed Reduction .....	70
• Reception into Memory (Out of Paper Reception) .....	71
Setting the Print Density .....	71
Toner Save Function .....	72
Speaker Volume .....	72
Setting the Handset Volume .....	73
Ring Volume .....	74
B) REMOTE ACTIVATION .....	75
What is Remote Activation? .....	75
• Connecting an External or Extension Telephone .....	75
Using Remote Codes .....	76
Using the Activation Code .....	76
Using the Deactivation Code .....	76
Making the Remote Codes Easier to Use .....	77
Changing and Registering Remote Codes .....	77

## TABLE OF CONTENTS

C) CONNECTING AN EXTERNAL TELEPHONE	
ANSWERING DEVICE (TAD).....	78
How to Use an External TAD with the MFC .....	78
• Connecting an External TAD to the MFC .....	79
Flowchart of External TAD Reception.....	80
External TAD Hookup .....	80
Recording the TAD's Outgoing Message (OGM) .....	81
Troubleshooting .....	81
D) DISTINCTIVE RINGING .....	81
Distinctive Ringing.....	81
What Is Distinctive Ringing? .....	81
What Is the Advantage of Using the Distinctive Ringing Function? .....	81
Can My MFC Use Distinctive Ringing? .....	82
Can I Change the Setting Later? .....	82
How Will the MFC Treat All Other Numbers?.....	82
The Message Center Answers the Other Phone Number(s) on the Line: .....	82
External Telephone Answering Device (TAD) Answers Other Number(s) on the Line: .....	83
Retrieving Faxes from a Remote Site When Using Distinctive Ringing:.....	83
How Does the Distinctive Ringing Function Work?.....	83
Flowchart of an Incoming Call.....	84
Which Phone Number Should I Register? .....	85
What Must I Do to Set Up Distinctive Ringing? .....	85
Setting the Distinctive Ringing Function .....	85
How to Turn the Distinctive Ringing Function ON or OFF .	87
E) CALLER ID .....	87
What is Caller ID? .....	87
Advantages of Caller ID .....	87
How Does Caller ID Work? .....	88
The Caller ID Appears on the Display When Your Telephone Rings .....	88
The Caller ID is Stored in Your Machine's Memory .....	88
Scanning through the Caller IDs Stored in the Memory .....	88
• Clearing a Caller ID Stored in Memory .....	89
Printing the Caller ID List.....	90

# TABLE OF CONTENTS

<b>7. POLLING</b> .....	<b>92</b>
• What Is Polling? .....	92
• How Does It Work? .....	92
• When to Use Polling .....	92
Polling Another Fax Machine (Calling) (Temporary Setting) ....	93
Setting Up Polled Waiting (Being Called) (Temporary Setting) .....	94
Delayed Polling (Temporary Setting) .....	95
Sequential Polling (Temporary Setting) .....	96
<b>8. MESSAGE CENTER MODE SETTINGS</b> .....	<b>98</b>
A) GETTING STARTED .....	98
What Is the Message Center Mode? .....	98
What Do I Want the Message Center to Do? .....	98
Flowchart of an Incoming Call .....	100
Turning on the Message Center with 3 Basic Steps .....	103
Setting the Message Storage .....	103
Recording the MSG CTR Outgoing Message (MSG CTR OGM) .....	104
Activating the Message Center Mode .....	105
B) GETTING YOUR MESSAGES .....	106
How Will I Know Messages Have Been Received? .....	106
• What Happens When the Memory Is Full... ..	106
Playing an Incoming Voice Message (ICM) and Recorded Memo (or Voice Alarm) .....	107
Backup Printing Option .....	107
Printing a Fax Message .....	108
• Erasing and Printing FAX Messages .....	109
Calling Your Message Center for Messages (See Remote Retrieval) .....	109
C) ERASING YOUR MESSAGES .....	110
Erasing Incoming Voice Messages, Fax Messages and Recorded Memo (or Voice Alarm) .....	110
One by One Erasing .....	110
All in One Erasing .....	110
D) CHANGING THE OUTGOING MESSAGE .....	111
Playing Your Outgoing Message (OGM) .....	111
Erasing Your Outgoing Message (OGM) .....	112

## TABLE OF CONTENTS

E) MORE FEATURES .....	113
Setting the Toll Saver .....	113
Setting the Maximum Time for Incoming Messages (ICM MAX. TIME) .....	114
Playing OGM (Outgoing Message) ON/OFF Setting .....	115
Recording a Conversation .....	115
Recording a Memo .....	116
F) PAGING/FAX FORWARDING .....	117
What Is Paging/Fax Forwarding? .....	117
Setting Up Paging (Registering the Paging Number) .....	118
Setting Up Fax Forwarding (Registering the Fax Forwarding Number) .....	120
• Memory Backup of Message Center Memory .....	120
Changing the Fax Forwarding Number Remotely .....	121
G) REMOTE RETRIEVAL .....	121
What Is Remote Control Access? .....	121
Setting the Remote Access Code .....	121
Using the Remote Access Code .....	122
Remote Control Commands .....	123
Retrieving the Memory Status List and Fax Messages Remotely .....	124
Changing the Fax Forwarding Number Remotely .....	124
H) VOICE ALARM .....	125
Voice Alarm .....	125
Setting the Voice Alarm .....	125
• Recording Voice Messages for the Voice Alarm .....	126
How Will the Voice Alarm Perform When the Scheduled Time Arrives... ..	127
Using the Voice Alarm: Playing Entries, Erasing Entries One by One, Erasing All at Once .....	128
Remote Control of the Voice Alarm .....	129
<b>9. USING THE MFC AS A PRINTER .....</b>	<b>130</b>
Acceptable Paper .....	130
Control Panel Keys .....	133
Simultaneous Operation .....	133
On/OffLine Key .....	133
FF/Cont Key .....	133
Test/Reset Key .....	134

## TABLE OF CONTENTS

Print Priority Key .....	134
• Windows® Printing .....	135
• Remote Printer Console Program for DOS .....	135
• Popular Printer Emulation Support .....	135
• Bi-directional Parallel Interface .....	135
• Enhanced Memory Management .....	135
Multi-purpose Sheet Feeder .....	136
Manual Feed Slot .....	138
When you load one sheet of paper manually: .....	138
When you load more than one sheet of paper manually: .....	138
• Paper Tray .....	139
Printing the Internal Font List .....	140
Printing the Print Configuration List .....	141
Restoring to the Factory Default Settings .....	142
Printing PC Data in Hexadecimal .....	143
<b>10. PRINTING REPORTS AND LISTS .....</b>	<b>144</b>
How to Print Reports and Lists .....	145
Activity Report Interval .....	146
Printing the All Dial List .....	148
Transmission Verification (Xmit) Report .....	149
Memory Status List .....	151
<b>11. HOW TO USE THE COPY FUNCTION .....</b>	<b>152</b>
Making a Single Copy .....	152
Making Multiple Copies .....	153
Stacking Multiple Copies .....	153
• What to Do When You Get a MEMORY FULL Message while Making Copies .....	154
Sorting Multiple Copies .....	154
• What to Do When You Get a MEMORY FULL Message while Sorting Multiple Copies .....	155
Reducing and Enlarging Copies .....	155
Copying a Photograph .....	156

## TABLE OF CONTENTS

<b>12. REPLACING TONER CARTRIDGE AND DRUM UNIT .....</b>	<b>158</b>
Toner Empty Indicator .....	158
Replacing the Toner Cartridge .....	158
Replacing the Drum Unit .....	162
<b>13. REGULAR MAINTENANCE .....</b>	<b>165</b>
Regular Maintenance .....	165
Cleaning the Drum Unit .....	166
Packing and Shipping the MFC .....	167
Paper Jams .....	170
Fixing a Document Jam .....	170
Fixing a Paper Jam .....	170
<b>14. OPTIONAL ACCESSORIES .....</b>	<b>173</b>
Connecting the Serial Interface Board (RS100M) .....	173
Setting the Serial Interface Parameters .....	175
Memory Board .....	178
Optional Memory for the Printer & Fax Operations .....	178
Installing the Optional Memory Board .....	179
<b>15. TROUBLESHOOTING .....</b>	<b>181</b>
Fax-Back System .....	181
Brother On the World Wide Web .....	181
Brother Bulletin Board .....	181
Error Messages .....	182
If You Are Having Difficulty with Your MFC .....	185
Troubleshooting Tips .....	191
<b>16. SPECIFICATIONS .....</b>	<b>198</b>
Parallel Interface Specifications .....	200
Resident Fonts .....	200
Symbol Sets/Character Sets .....	201


# TABLE OF CONTENTS

<b>17. IMPORTANT INFORMATION .....</b>	<b>203</b>
Standard Telephone and FCC Notices (Applies only to 120V model) .....	203
Important Safety Instructions .....	205
<b>INDEX .....</b>	<b>208</b>
<b>FOR CUSTOMER SERVICE .....</b>	<b>211</b>
<b>ORDERING ACCESSORIES AND SUPPLIES ...</b>	<b>212</b>




# 1. THE CONTROL PANEL KEYS

MFC 7650MC

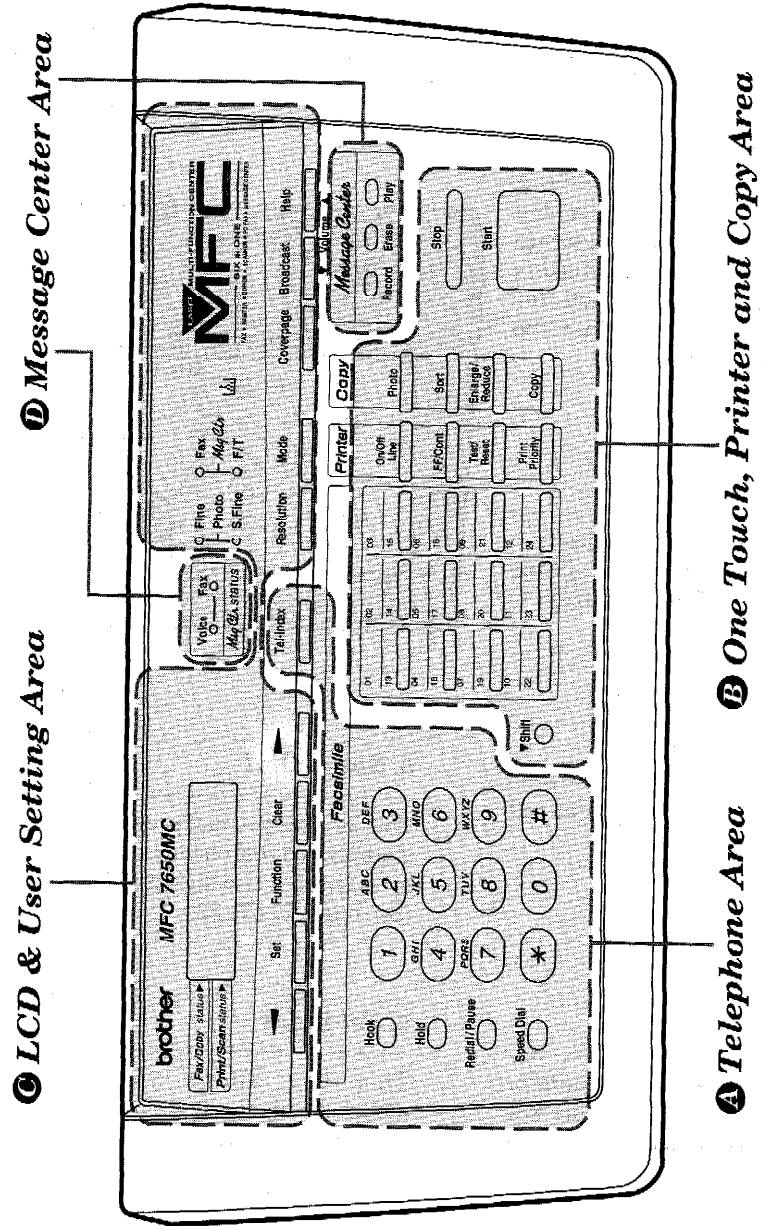

## ④ TELEPHONE AREA

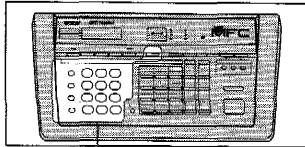

### 1. Dial Pad

These twelve keys are used to dial phone and fax numbers (see page 32), and also can be used as an alphanumeric keyboard for entering information into the MFC. (See pages 17-19.)

### 2. Hook


This key lets you dial telephone and fax numbers without lifting the handset. (See pages 32-33.)

### 3. Hold

You can use this key to put a call on hold. (See page 32.)

### 4. Redial/Pause

This key redials the last number called. (See page 43.) This key is also used to insert a pause in autodial numbers. (See pages 27, 32.)

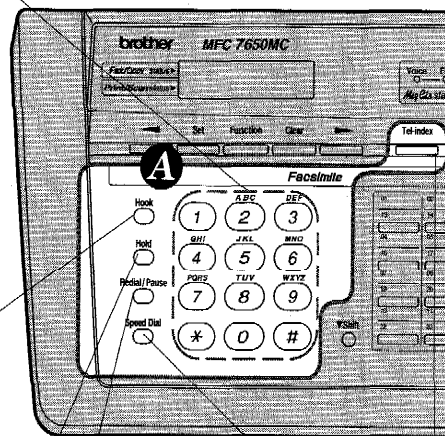


### 5. Speed Dial

This key lets you dial previously stored Speed Dial phone numbers by entering a two-digit number. (See pages 27-29, 32.)

### 6. Tel-index

This key allows you to alphabetically look up numbers stored in the dialing memory. (See page 34.)

**② ONE TOUCH, PRINTER AND COPY AREA**

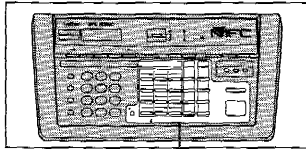


**7. Shift**

This key is used to access the "13" through "24" One Touch keys. (See page 26.) In the printer mode when **Shift** is pressed together with **Test/Reset**, it resets and restores the MFC to the factory default settings. (See page 134.)

**8. One Touch Dial Keys**

These 12 keys give you instant access to previously stored phone numbers. (See pages 26-27, 32.)

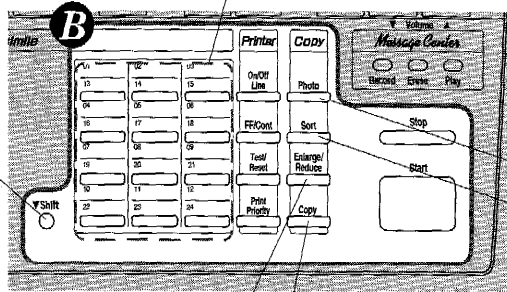

**9. Enlarge/Reduce**

This **Enlarge/Reduce** key will reduce or enlarge copies depending on the ratio you select: 200%, 150%, 125%, 120%, 100%, 93%, 87%, 75%, and 50%. You can also use the Auto Reduction function to have the MFC automatically calculate the reduction ratio that fits the size of your recording paper. (See pages 155-156.)

**10. Copy**

Press this key to make a copy. (See pages 152-157.)


**11. Sort**

This key is used to copy original multiple pages copied in order. (See pages 154-155.)

**12. Photo**

This key is used to copy photographs. (See pages 156-157.)

## ③ ONE TOUCH, PRINTER AND COPY AREA

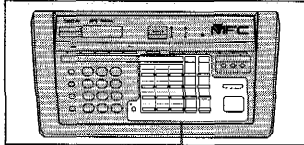

### 13. On/OffLine

This key is used to turn the printer online (ready to receive PC data) and offline (not ready to receive PC data) alternately. When the printer is online, the LCD displays ONLINE. (See page 133.) SLEEP will be displayed when the MFC is in energy-save mode.

### 14. Stop


This key stops a fax, cancels an operation, or exits from function mode. (See page 9.)

### 15. Start

Use this key to start an operation, such as sending a fax. (See page 40.)

### 16. FF/Cont

When the LCD shows REMAINED DATA, you can turn the MFC OFFLINE and then press this key to print the data that is in the memory. Also, it clears some operation and machine errors. (See pages 133-134.)

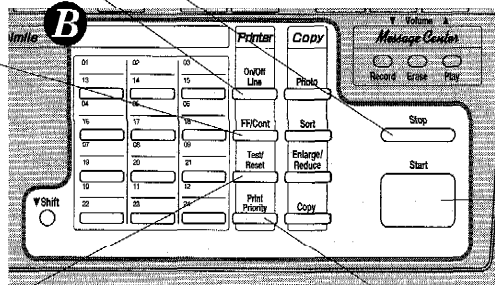


### 17. Test/Reset

This key is used to print a test page. When it is pressed together with **Shift**, it clears data from the printer memory, cancels an error status, and then resets and restores to the factory default settings. (See page 134.)

### 18. Print Priority

When this key is pressed all faxes will be received into memory without first printing and can be printed later. This key also increases the memory available for printing. (See page 134.)

© LCD & USER SETUP AREA

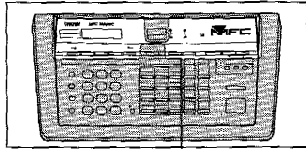

**19.** ◀ (Left Arrow)

This key moves the LCD cursor to the left. It also allows you to back up one step when you are in function mode (see page 8) or Telephone Index. (See page 34).

**20.** ▶ (Right Arrow)


This key moves the LCD cursor to the right, and it also lets you advance one step when you are in function mode (see page 8) or Telephone Index. (See page 34).

**21. Liquid Crystal Display**

The LCD displays messages that will help you set up and operate your MFC (On-Screen Programming); the upper row shows fax and copy status and the lower row shows printer and scanner status. (See page 8.)

**22. Clear**

This key deletes entered data or backs up one step in function mode. (See page 9.)

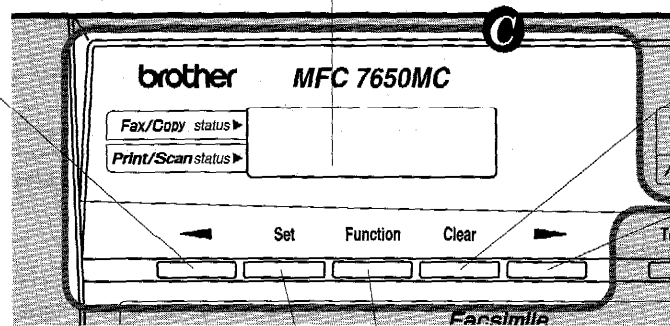


**23. Set**

This key is used for storing a function setting into the MFC. (See page 9.)

**24. Function**

This key accesses the function and programming mode (OSP), so you can alter various settings. (See page 8.)

## Ⓒ LCD & USER SETUP AREA

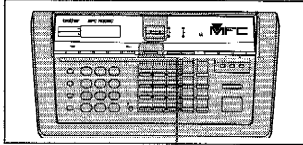

### 25. Mode

This key is used to specify how the MFC should handle incoming calls. (See page 62.)


### 27. Resolution

This key is used to set the resolution requirements when sending a fax. (See page 37.)

### 26. Broadcast

Use this key whenever you want to send faxes to many different locations, maximum of 174 locations at once. (See pages 46-47.)

You can gradually decrease the speaker volume and handset volume for the current call by pressing this key.

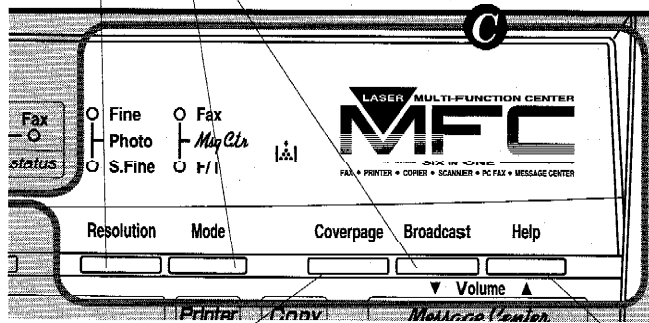

### 28. Coveragepage


This key is used to send a Cover Page as the first page of a fax transmission. (See pages 57-58.)

### 29. Help

Press this key whenever you want a quick reference Help List printed. This Help List will give you information on how to perform settings for a function, how to register information, or how to get basic information. (See pages 8, 16.)


You can gradually increase the speaker volume and handset volume for the current call by pressing this key.

**D MESSAGE CENTER AREA**

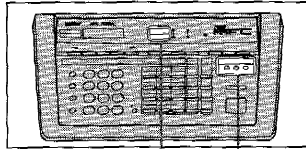

**30. Voice and Fax Indicator Lights**

These lights tell you whether voice or document messages are stored in the memory. (See page 106.)

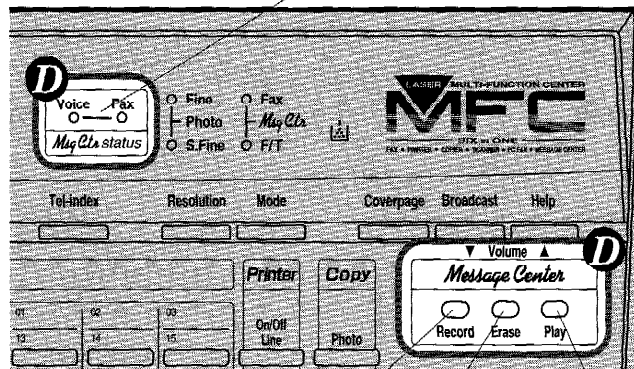

**31. Record**

Use this key to record outgoing voice messages, memo and voice alarm messages into your MFC. (See pages 104-105, 116, 126-127.)

**32. Erase**

This key erases voice or fax messages stored in your MFC. (See pages 110, 112, 128.)

**33. Play**

Use this key to listen to incoming voice messages, outgoing voice messages, memos and voice alarm messages stored in your MFC. (See pages 107, 110, 111, 128.)

## 2. HOW TO USE ON-SCREEN PROGRAMMING (OSP) AND HELP KEY


### *User-friendly Programming*

We have designed your MFC with on-screen programming and a **Help** key, user-friendly programming that helps you take full advantage of all the functions your MFC has to offer.

Since your MFC programming is done on the LCD, we created step-by-step on-screen prompt messages to help you program your machine. All you have to do is follow the prompt instructions as they guide you through the function menu selections and programming options and settings.

### *Using the Function Mode to Access On-screen Programming (OSP)*

You can access the Function mode by pressing **Function** and waiting for two seconds. Then select FAX or PRINTER by pressing **1** or **2**. (See page 8.)

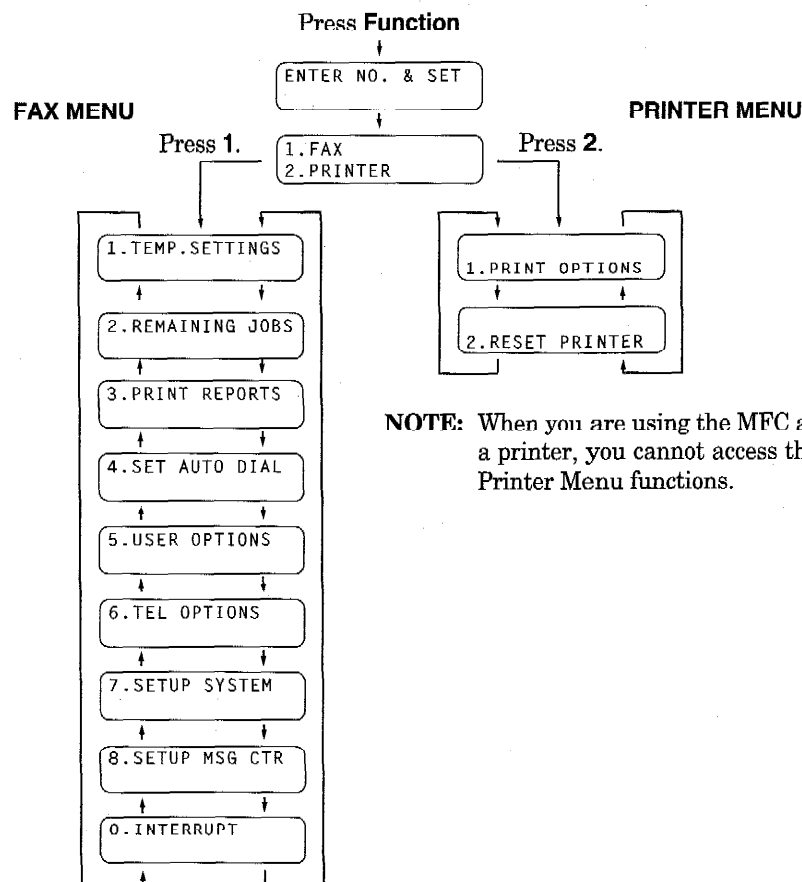

**NOTE:** When you are using the MFC as a printer, you cannot access the Printer Menu functions.



## ON-SCREEN PROGRAMMING (OSP) AND HELP KEY

When you enter Function mode, your MFC will display a list of Level One Functions to choose from (see pages 10 through 15 for these Level One Functions), as seen on previous page.

These function options will appear one after the other on the display. You can then choose one of these options by pressing **Set** when the option you want appears on the LCD.

You can also move through the function menu options at a faster rate by pressing **▶** (right arrow). (See page 5 to locate this key on your Control Panel.) When you find the option you want, press **Set**.

After you select either FAX MENU or PRINTER MENU, you can simply press the Level One Function number, then press the Level Two Function number associated with each option (refer to pages 10 through 15).

To exit function mode, press **Stop**. If you selected the wrong menu and want to return to the previous step, press **Clear**.


### **Shortcut**

The functions in this manual list each step in detail, showing the LCD display prompts after you press each key: **Function, 1 (FAX)—OR—2 (PRINTER)**, Level One number, and Level Two number. Then you are in the function where you must either use the **◀**(left arrow) or **▶**(right arrow) to select an option or enter the information using the dial pad.

To bypass the LCD displays and go directly into a function without waiting, do not pause between the above four key strokes. For example, the shortcut to access the DATE/TIME function is: Press **Function, 1, 7, 1**.

Once you are comfortable with skipping these LCD displays, you can program most functions directly from the Function Selection Table (see pages 10-15).

### **Alternating Displays for On-screen Programming (OSP)**

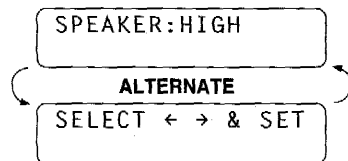

When you see alternating displays, the LCD will usually alternate between the currently selected option, and a help message giving brief instructions on how to proceed. The example shows the current speaker volume is high and prompts you to use **◀** (left arrow) and **▶** (right arrow) to change the setting, and then to press **Set** to store it.

## ***Function Selection Table***

If you have a basic understanding of how to program your MFC, you can perform most of the programming settings without this Operations Manual. To help you understand the function selections, options, and settings that are found in your MFC programs, we have the following Function Selection Table.

Read through this table to gain a basic understanding of what your new Multi-Function Center can do, and then the next section will begin instructing you how to use On-Screen Programming.

### **<1. FAX MENU FUNCTIONS>**

<b>Level one function</b>	<b>Level two function</b>	<b>Explanation of Options</b>	<b>Factory setting</b>	<b>Page</b>
<b>1. TEMP. (TEMPORARY) SETTINGS</b>	1. TIMER	Use TIMER to send your documents at a later time.	—	44
	2. POLLING	Polling is the process of retrieving faxes from another machine. ON/OFF	OFF	92-97
	3. CALL RESERVE	You can send a fax and then talk to the recipient using the CALL RESERVE function. ON/OFF.	OFF	58-60
	4. CONTRAST	There are three types of contrast settings. Usually the AUTO setting is acceptable. But if you want to send or copy an especially light or dark document, you should change this setting. AUTO: Default is AUTO. Contrast setting always reverts to AUTO after the current operation. S. LIGHT: To send very light documents. S. DARK: To send very dark documents.	AUTO	38
	5. RESOLUTION	If you need to send a set of originals at various resolutions, this function will allow you to set the required resolution page by page. (If all documents are the same resolution, use the Resolution key. See page 6 #27.) STANDARD/FINE/S. FINE/PHOTO	STANDARD	51-52
	6. OVERSEAS MODE	If you have trouble when sending overseas, you may want to set OVERSEAS MODE to ON. ON/OFF	OFF	50-51
	7. REAL TIME TX	You can send the documents in the feeder in real time without using memory. ON/OFF	OFF	41-42

Level one function	Level two function	Explanation of Options	Factory setting	Page
2. REMAINING JOBS		If you wish to check or cancel a job that has been set with the timer, a polled job etc., use this function.		49-50
3. PRINT REPORTS	See page 144 for a list of reports.	You can print several different lists and reports, which are available under function item 3. PRINT REPORTS.		144-151
4. SET AUTO DIAL	1. ONE-TOUCH DIAL	If you register names and numbers on One Touch dial keys, you can dial a number automatically just by pressing a One Touch key. (Max. of 24 locations)	---	26-27
	2. SPEED-DIAL	If you register names and numbers as Speed Dial numbers, you can dial a number automatically just by pressing Speed Dial key and a two-digit number using the dial pad. (Max. of 100 locations)	---	27-28
	3. SETUP GROUPS	This is used for setting up a group number used for broadcasting.	---	29-31
5. USER OPTIONS	1. SMOOTHING	Smoothing enhances the appearance of incoming faxes. If you keep SMOOTHING set to ON, you will receive messages with the smoothing enhancement. ON/OFF	ON	67
	2. BEEPER	You can adjust the volume of the beeper with this function. OFF/LOW/HIGH	LOW	25
	3. COVERPG ON/OFF	If you set COVERPAGE to ON, you can send your documents with a Cover Page generated by your MFC. When the COVERPAGE setting is ON, you can select a Cover Page comment. ON/OFF	OFF	55-56
	4. ERROR RE-TX	If you set ERROR RE-TRANSMISSION to ON, the MFC automatically resends the page once an error occurs. ON/OFF	OFF	61
	5. REDUCTION	You can avoid having your incoming data separated by printing a reduced copy of the incoming document. The reduction methods are AUTO or Fixed ratio: AUTO/100%/93%/87%/75%	AUTO	69-70

Level one function	Level two function	Explanation of Options	Factory setting	Page
5. USER OPTIONS	6. RCD PAPER	You can select one of 3 sizes of paper. If you selected AUTO reduction, the MFC automatically will adjust the size of the incoming fax document so that it fits the paper size you have selected. LETTER/LEGAL/A4	LETTER	68
	7. TONER SAVE	You can extend the life of the toner by conserving its use. ON/OFF	OFF	72
	8. SLEEP MODE	This mode reduces the power consumption when the MFC is idle. The time period before the MFC drops into the mode is user selectable. 00-99 minutes	00MIN	19-20
	9. PRINT DENSITY	You can adjust Print Density with this function.	—	71
6. TEL OPTIONS	1. TONE/PULSE	There are two different dial types and you must select the type of signal suitable for your telephone line. TONE/PULSE	TONE	21
	2. RING DELAY	This is the number of rings before the MFC answers the call when in F/T or Fax Mode. 0/1/2/3/4 rings	2	63-64
	3. SPEAKER VOLUME	You can adjust the speaker volume with this function. OFF/LOW/HIGH	LOW	72-73
	4. F/T RING TIME	F/T RING TIME sets the "double ring" in F/T mode. 10/20/30/60 seconds	20	66-67
	5. RING VOLUME	The settings are OFF/LOW/HIGH.	HIGH	74
	6. DISTINCTIVE	If you have distinctive ringing service from your phone company, you can use this function to register the ringing pattern of your fax number. And if you set it to ON, you can use the registered number as a fax number only. OFF/ON/SET	OFF	85-87
	7. CALLER ID	You can display the last 30 Caller IDs that are stored in the memory.	—	88-89

Level one function	Level two function	Explanation of Options	Factory setting	Page
7. SETUP SYSTEM	1. DATE/TIME	If you enter the date and time in 24-hour format, the LCD will display the date and time and they will be printed on outgoing faxes.	01/01/1999 00:00	22
	2. DAILY TIMER	If you frequently have delayed jobs, all for execution at same time each day, you can program that time. Once you register it, you do not have to enter that time, just set Timer Transmission in temporary settings.	00:00	44
	3. INTERVAL	You can select the time interval at which the activity report is printed. 6/12/24 hours, 2/4/7 days, OFF	OFF	146-147
	4. STATION ID	You can enter your name or company name, fax number and telephone number in STATION ID. It is printed at the top of each page of every outgoing fax. It is also printed on the automatic Cover Page.	---	23-24
	5. REMOTE CODE	If you enter a REMOTE CODE, you can activate or deactivate the MFC from a remote telephone. ON/OFF	ON *51 (ACT.) #51 (DEACT.)	76-77
	6. SET COVERPAGE	You can register your own two custom comments on the Cover Page.	---	54
	7. MF LINK	When you use the application software included into the MFC, you can select if your PC connected to your MFC will receive voice and fax messages. ON/OFF	ON	See the Multi-Function Link Pro Online Documentation
8. SETUP MSG CTR	1. MSG STORAGE	You can select the Message Storage of the MFC in Message Center mode. FAX:ON/OFF, VOICE:ON/EXT/OFF	FAX:OFF VOICE:ON	103-104
	2. BACKUP PRINT	You can set the MFC to print a backup copy of faxes that are received into the Message Center memory. ON/OFF	ON	107-108

Level one function	Level two function	Explanation of Options	Factory setting	Page
8. SETUP MSG CTR	3. FAX FWD/ PAGING	You can choose either PAGING, FAX FORWARDING or OFF. PAGING ON will cause the MFC to page you when it receives a fax message. FAX FORWARDING ON will cause the MFC to send any stored faxes that are received to another predetermined fax number. OFF/FAX FORWARD/PAGING	OFF	117-121
	4. REMOTE ACCESS	You can register a REMOTE ACCESS CODE (3 digits) allowing you to remotely operate the MFC. (Example : Retrieving an incoming fax message.)	159*	121-124
	5. ICM MAX. TIME	This is the maximum length of voice information in Message Center, Memos and Voice Alarm recordings. 20/25/30/35/40/45/50/55/60 seconds	30	114
	6. OGM	The MFC has two types of OGM (Outgoing Messages) for MSG CTR and FAX/TEL switch. After selecting the message type, you can play, record or erase.	MSG CTR OGM	65-66, 111-112
	7. PRINT FAX	You can print incoming faxes that were stored in MSG CTR memory.	—	108-109
	8. PLAYING OGM	If you set PLAYING OGM to ON, Message Center OGM, or F/T OGM is replayed if you change the receiving mode to Message Center or F/T respectively. ON/OFF	ON	111
	9. TOLL SAVER	If you set TOLL SAVER to ON, you can check if a message was received by the Ring Delay. Toll Saver overrides the Ring Delay setting. ON/OFF	OFF	113
0. INTERRUPT	—	You can send a fax without canceling the Timer or Polled Waiting, even if there are documents in the feeder, by "interrupting" it.	—	48

**<2. PRINTER MENU FUNCTIONS>**

Level one function	Level two function	Explanation of Options	Factory setting	Page
1. PRINT OPTIONS	1. INTERNAL FONT	You can print resident fonts to check and confirm font types.	—	140
	2. CONFIGURATION	Printer settings and status are listed here.	—	141
2. RESET PRINTER	1. FACTORY SET	You can restore factory default settings and temporary settings for the printer back to factory default settings.	—	142
	2. HEX DUMP MODE	If you set HEX DUMP MODE, all the PC data is printed in hexadecimal.	—	143

---

### ***Using the Help Key***

---

Press this key to print a quick reference Help List. The Help List will tell you how to perform settings for a function, how to register information or, how to get basic information for sending or receiving faxes, copying and printing. When you don't have this Operations manual with you or when you want some information quickly, you can press **Help** to get a list of basic operating procedures.

You can request a printout whenever the MFC meets the following conditions:

- while the LCD displays the date and time.
- while the MFC is timer waiting.
- while the MFC is polled/polling waiting.
- while the MFC is at level one or two of the function menu.

**NOTE:** You cannot print the Help List while the MFC is printing data from the PC.



***How to Enter Text in Function Mode***

Dial pad keys have three or four letters printed above them. The following keys "0", "1", "#", and "\*" have no printed letters.




**By pressing the appropriate dial pad key the correct number of times, you can access the character you want.** When you are setting certain functions, such as the Station ID, you will have to enter text into your MFC.

Key	once	twice	three times	four times	five times
2	A	B	C	2	A
3	D	E	F	3	D
4	G	H	I	4	G
5	J	K	L	5	J
6	M	N	O	6	M
7	P	Q	R	S	7
8	T	U	V	8	T
9	W	X	Y	Z	9

Let's say that you want to enter the initials "BR". Follow the example on the next page.

**KEYS TO PRESS****THE DISPLAY WILL SHOW:**

1. Press **2** twice to enter the letter **B**.
2. Press **7** three times to enter the letter **R**.
3. Press **Set**.

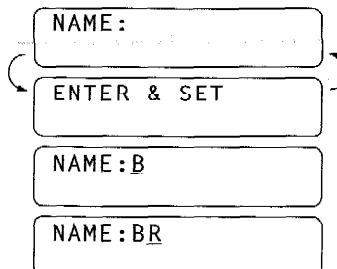**FOR YOUR INFORMATION**

1. If you want to enter a blank space, press ► (right arrow) twice.
2. If you entered a letter incorrectly and want to change it, you can use ◀ (left arrow) to move the cursor back. When you reach the letter, you can enter a new one in its place. You can only overwrite letters, not insert them, so you may have to go back and overwrite a lot of letters if you forget to enter a letter.
3. If you have to enter a character that is assigned to the same dial pad key as the previous character, press ► (right arrow) to move the cursor to the right.

***How to Enter Special Characters, Symbols and Punctuation Marks in Function Mode***

0 key ----- ÄËÖÜÀÇÈÉÓ  
 \* key ----- (space) !"#\$\$%&'()\*+,-./  
 # key ----- ;<=>?@[^\_

The "0" key contains all the accented characters. The "\*" and the "#" key are used for punctuation marks and symbols. Let's say that you want to enter the Symbol "&". Follow the example on the next page.

**KEYS TO PRESS**

1. Press \* to show a list of characters.
2. Press \*, \*, \*, \*, \*, \* (6 times).
3. Press ► (right arrow).

**THE DISPLAY WILL SHOW:**

NAME: JAMES \_  
MARK- \_!"#\$%&'()\*  
MARK- !"#\$%&'()\*  
NAME: JAMES &\_

***How to Set the Sleep Time***

The sleep mode reduces the power consumption when the MFC is idle. The time period before the machine drops into sleep mode is user selectable.

Using the dial pad, you can select the time period before the MFC drops into sleep mode from 00 to 99 minutes.

The sleep timer is automatically reset when a fax is received, the MFC starts to copy, or the MFC is receiving PC data. The factory setting is 0 minute.

Use the following sequence to set the sleep time.

**KEYS TO PRESS**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **5**.
5. Press **8**.

**THE DISPLAY WILL SHOW:**

01/01/1999 00:00  
ONLINE  
ENTER NO. & SET  
1. FAX  
2. PRINTER  
1. FAX  
5. USER OPTIONS  
8. SLEEP MODE  
SLEEP TIME: 00MIN

6. Enter sleep time (00 to 99) using dial pad.  
Example: **05**.

SLEEP TIME : 05MIN

7. Press **Set**.

8. SLEEP MODE

8. Press **Stop** to exit.

#### NOTICE

- Sleep Mode is activated when the heater stops. However, the cooling fan will continue to run until the MFC has cooled down. The actual time before the fan stops will vary depending upon operating conditions.
- It will take approximately 12 to 30 seconds for the MFC to warm up from the sleep mode before you can start printing or copying. The LCD will show WARMING UP during this time. When it is ready it will automatically start the last job you have entered.

**NOTE:** The cooling fan will continue to run until the temperature of the MFC reaches a certain level. Even after the heater stops, the MFC will have to warm up before copying and printing.

### 3. FUNCTION SETTINGS

This chapter is included in both the Setup Manual and this Operations Manual. If you read the Setup Manual first, you may have completed these function settings already. There are some settings, such as the date and time, you should set on your MFC before you begin using it. Once entered, these settings will remain in the MFC until you change them. You can begin customizing the settings by pressing **Function** on the control panel. This activates the function mode and On-Screen Programming prompts. You can complete a variety of settings in this mode.

#### Setting the Dialing Mode (Tone/Pulse)

Your MFC supports both tone (multi-frequency) and pulse (rotary) dialing. It is initially set to TONE, so you do not have to change the setting if you use that kind of line. If you are using a pulse dial line, you can change the setting to PULSE by following the steps below:

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	01/01/1999 00:00 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>6</b> .	1. FAX
5. Press <b>1</b> . After two seconds you will be prompted to select pulse or tone.	6. TEL OPTIONS
6. Press ◀ (left arrow) or ▶ (right arrow) to find the dialing mode that matches your telephone line. Example: PULSE.	1. TONE/PULSE
7. Press <b>Set</b> .	DIALING: TONE
8. Press <b>Stop</b> to return to the date and time.	SELECT ← → & SET
	DIALING: PULSE
	1. TONE/PULSE

## Setting the Date and Time

Your MFC shows the date and time on the display and prints it on every fax page you send. You can set the date and time in function mode.

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	01/01/1999 00:00 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>7</b> .	1. FAX
5. Press <b>1</b> .	7. SETUP SYSTEM
6. Enter the last two digits of the year. Example: <b>98</b> .	1. DATE/TIME ENTER YEAR: XX ENTER YEAR: 98
7. Enter two digits for the month. (JAN = 01, OCT = 10, etc.) Example: <b>09</b> .	ENTER MONTH: XX ENTER MONTH: 09
8. Enter two digits for the day. Example: <b>12</b> .	ENTER DAY: XX ENTER DAY: 12
9. Enter the time in 24-hour format. Example: <b>15:25</b> (3:25 P.M.).	ENTER TIME: XX:XX ENTER TIME: 15:25
10. Wait for two seconds.	1. DATE/TIME
11. Press <b>Stop</b> to exit and to view the new date and time.	09/12/1998 15:25 ONLINE

**Setting the Station ID**


The Station ID is for identification purposes. Here you can store your name, fax number, and telephone number. Your MFC prints this information on the electronic Cover Page and every fax page you send.

- The telephone number that you stored above is used only for the Call Back Message and the Cover Page features.
- If you do not enter a fax number, no additional information can be entered.
- When you want to enter a space, use ► (right arrow). You can back up to type over mistakes by using the ◀ (left arrow).
- If Station ID has been programmed, then after Step 5 the name will be displayed with the prompt "1" to change "2" to exit. Press "1" to change information. Press "2" to exit from the function.

**KEYS TO PRESS**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **7**.
5. Press **4**.  
You will be prompted to enter your fax number.
6. Enter your fax number (up to 20 digits).  
Example: **415554444**.
7. Press **Set**.  
You will be prompted to enter your telephone number.

**THE DISPLAY WILL SHOW:**

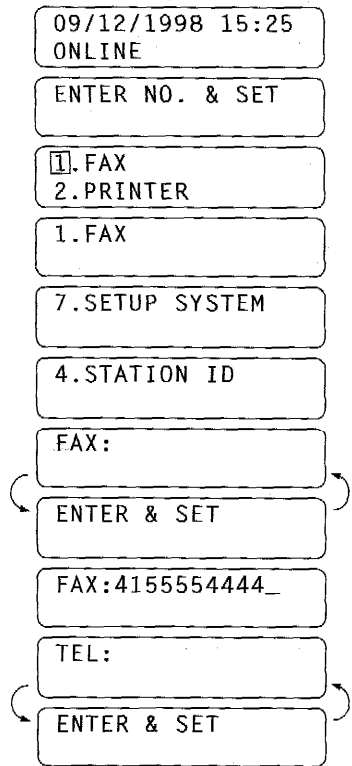

8. Enter your telephone number (up to 20 digits).

TEL: 4155554445\_

If your telephone number and fax number share the same line, enter the same number again.

Example: **4155554445**.

9. Press **Set**.

You will be prompted to enter your name or company's name.

NAME:

ENTFR & SFT

NAME: BROTHER

10. Enter your name using the dial pad (up to 20 characters).

Example: **BROTHER**.

By pressing the appropriate dial pad key the correct number of times, you can access the character you want. For example, press **2** twice to enter B.

Refer to the section "How to Enter Text in Function Mode" on pages 17-19.

11. Press **Set** to confirm the entry.

4. STATION ID

12. Press **Stop** to return to the date and time.

#### NOTICE

The Telephone Consumer Protection Act. of 1991 makes it unlawful for any person to use a computer or electronic device to send any message via a telephone fax machine unless such messages clearly contain in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machines or such business, other entity, or individual.

To program this information into your MFC, complete the steps on the previous page.



***Setting the Beeper Volume Level***

If the beeper setting is LOW or HIGH, it will “beep” every time you press a key, make an error, or at the end of sending or receiving a fax.

The initial setting on your MFC for the beeper is LOW. If you do not want the beeper on, select OFF, and if you want it loud, select HIGH.


KEYS TO PRESS	THE DISPLAY WILL SHOW
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>5</b> .	1. FAX
5. Press <b>2</b> .	5. USER OPTIONS
	2. BEEPER
	BEEPER: LOW
	SELECT ← → & SET
6. Press ◀ (left arrow) or ▶ (right arrow) until you get the setting you want. Example: OFF.	BEEPER: OFF
7. Press <b>Set</b> .	2. BEEPER
8. Press <b>Stop</b> to return to the date and time.	

## Storing the One Touch Dial Numbers

You can dial numbers automatically by storing telephone or fax numbers as One Touch dial numbers. You can also store names with the numbers so when you call, you can verify the destination by the name on the display. You can store a maximum of 24 numbers. To access numbers 13 to 24, hold down the **Shift** key. For example, One Touch location "13" is accessed by pressing **Shift** and the "01" One Touch key simultaneously. Here is how to store a telephone number as a One Touch dial number:


KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>4</b> .	1. FAX
5. Press <b>1</b> .	4. SET AUTO DIAL
6. Press the <b>One Touch</b> key where you want to store a number. Example: <b>One Touch 05</b> .	1. ONE-TOUCH DIAL SELECT ONE-TOUCH
<b>NOTE:</b> The One Touch keys are <u>not</u> the keys on the dial pad.	*05:
7. Enter a number (up to 20 digits). Example: <b>14155551212</b> .	ENTER & SET
8. Press <b>Set</b> . You then will be prompted to enter the name or company associated with this number.	*05:14155551212_
9. Enter the name using the dial pad (up to 15 characters). Example: <b>NJ OFFICE</b> . (See pages 17-19.)	NAME: ENTER & SET
	NAME: NJ OFFICE

10. Press **Set**.

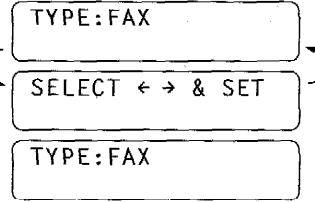

11. Select the type of number (FAX, TEL, F/T) by using ◀ (left arrow) or ▶ (right arrow) to display the type you want. (See For Your Information on page 31.) Example: FAX.

 12. Press **Set**.



13. Return to Step 6 to enter another number, or press **Stop** to return to the date and time.

**Helpful Hints** If you must wait for a dial tone to access an outside line, or at any point in the dialing sequence, insert a pause by pressing the **Redial/Pause** key. When you press **Redial/Pause**, a dash “-” will appear on the display. By storing the numbers with a pause, you can create a delay of 3.5 seconds.

**Storing the Speed Dial Numbers**

When you store a phone or fax number as a Speed Dial number, you must enter a **two-digit number**, from 01 to 00 (00=100) using the dial pad. For example, you cannot enter “5”. You must enter “05”. You can store as many as 100 numbers as Speed Dial numbers.

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>4</b> .	1. FAX
5. Press <b>2</b> .	4. SET AUTO DIAL
	2. SPEED-DIAL
	SPEED-DIAL? #_

6. Use the dial pad to enter a two-digit number.

Example: **05**.

7. Enter the number (up to 20 digits).

Example: **5555151**.

8. Press **Set**.

You will be prompted to enter the name or company associated with this number.

9. Use the dial pad to enter a name (up to 15 characters).

Example: **MANCHESTER**.

(See pages 17-19 for entering text.)

10. Press **Set**.

11. Select the type of number (FAX, TEL, F/T) by using ◀ (left arrow) or ▶ (right arrow) to display the type you want.

Example: TEL. (See page 31.)

12. Press **Set**.

13. You are ready to enter another Speed Dial number. Or press **Stop** to return to the date and time.

SPEED-DIAL? #05

#05:

ENTER & SET

#05:5555151\_

NAME:

ENTER & SET

NAME:MANCHESTER

TYPE:FAX

SELECT ← → & SET

TYPE:TEL

SPEED-DIAL? #\_

#### Helpful Hints


- Print the All Dial List to make sure you have stored the correct numbers. (See page 148.) This list will contain the type of number: FAX, TEL and F/T.
- Even if there is a loss of electrical power to your MFC, the telephone and fax numbers you have stored will not be lost.
- If your MFC is connected to a PBX and you must first access an outside line, you must insert an additional number followed by a pause before the fax or telephone number to access an outside line.

## FOR YOUR INFORMATION

***When You Wish to Change the Stored One Touch and Speed Dial Numbers***

When you try to set up a One Touch key or Speed Dial number that is already in use, you will be asked if you wish to change it or to exit so you can select a different One Touch or Speed Dial number. This display does not appear if the One Touch key or Speed Dial number you chose is not assigned.

1. Press **1** to assign a new number to the One Touch key or Speed Dial number, or press **2** to choose a different One Touch key or Speed Dial number.

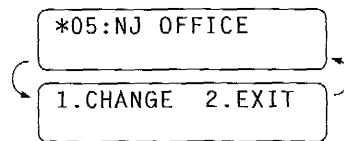

2. If you are replacing an existing number with a new one, the old number and name will appear in the display. Press **Clear** to erase the old number and name. Then, enter the new number and name and press **Set** to store the entry.

***Memory Storage/Temporary Battery Back Up***

Your MFC is equipped with an internal battery that will keep the date and time information and Out-of-Paper Reception for up to two hours after power has been cut off. After that time, the date and time will be lost and you will have to reenter the information. All other settings in the SET AUTO DIAL, USER OPTIONS and SETUP SYSTEM functions (see pages 11-13) are stored permanently until you change them and will be retained even in the event of a power failure. However, the faxes stored in the memory during Memory Transmission will be lost when the power is disconnected.

***Setting Up Groups for Broadcasting***

Groups allow you to send the same fax message to many fax numbers by pressing only one One Touch key. (This is called Broadcasting.) You must store each fax number first as a One Touch or Speed Dial number. Then you can combine the stored numbers into a Group.

You can have up to 6 smaller Groups (each group uses up a One Touch key) or you can assign up to 123 numbers if you want one large Group. You can use the same stored number in several groups. Groups can have a name up to 15 characters long.

**KEYS TO PRESS**

**THE DISPLAY WILL SHOW:**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **4**.
5. Press **3**.
6. Press the One Touch key where you wish to store the number.  
Example: select "One Touch **02**" as a group.
7. After two seconds, enter a number for the group, using the dial pad.  
Example: **1**.
8. Enter the One Touch or Speed Dial numbers in this group.  
Example: **#03, #05, \*02**.  
**NOTE:** Press the **Speed Dial** key and dial pad keys for Speed Dial numbers, and the One Touch keys for One Touch numbers.
9. Press **Set**.
10. Enter the group's name.  
Example: **BROTHER**.

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

4. SET AUTO DIAL

3. SETUP GROUPS

SELECT ONE-TOUCH

SETUP GROUP:GO

ENTER & SET

SETUP GROUP:G01

G01:

ENTER & SET

G01:#03#05\*02\_

NAME:

ENTER & SET

NAME: BROTHER

11. Press **Set**.

3. SETUP GROUPS

12. Press **Stop** to return to the date and time.

\*:One Touch  
#:Speed Dial

**Helpful Hints** See pages 46-47 for Broadcasting procedures. You can print a list of all One Touch numbers and Speed Dial numbers. One Touch and Speed Dial numbers that belong to a group(s) will have those groups listed in the Group column. (See page 148.)

#### FOR YOUR INFORMATION

##### *Types of Numbers*

When you store a number as a One Touch or as a Speed Dial number, you have a choice of choosing the type of number. There are three options:

1. FAX (A fax number).
2. TEL (A telephone number).
3. F/T (Both a fax number and a telephone number)

## 4. USING THE MFC AS A TELEPHONE

Your MFC can be used to make regular telephone calls. You can dial numbers manually, by pressing the dial pad keys, or by using One Touch or Speed Dialing.

### *Manual Dialing*

---

1. Pick up the handset, or press **Hook**.
2. When you hear a dial tone, you can begin dialing by pressing the dial pad keys.
3. If you used **Hook** to dial, pick up the handset when the call is answered.

### *One Touch Dialing*

---

1. Pick up the handset, or press **Hook**.
2. When you hear a dial tone, press the **One Touch** key.
3. If you used **Hook**, pick up the handset when the call is answered.

If you try to use a One Touch number that has not been stored on the key you pressed, you will hear a warning sound and the display will say, NOT REGISTERED. The display will return to normal after 2 seconds.

### *Speed Dialing*

---

1. Pick up the handset or press **Hook**.
2. When you hear a dial tone, press **Speed Dial** and then press the two-digit Speed Dial number.
3. If you used **Hook**, pick up the handset when the call is answered.

#### FOR YOUR INFORMATION

##### *Using Hold, Pause, # with the Telephone*

---

- Press **Redial/Pause** to insert a 3.5 second pause between numbers.
- Press **Hold** to put a call on hold. You can replace the handset without disconnecting the call. You must pick up the MFC's handset to release the call from **Hold**.
- Press **#** to switch the dialing type from "pulse" to "tone" temporarily. This key also is used for push-button services, such as those offered by banks, credit card companies, or paging services.



FOR YOUR INFORMATION

***On Hook Dialing***

When you make a call using **Hook**, you can listen to the other end through the one-way speaker of the MFC, but the other party cannot hear you unless you pick up the handset. Also, if you press **Hook** again before you pick up the handset, the call will be disconnected.

***Dialing Access Codes and Credit Card Numbers***

You can store very long dialing sequences by dividing them and setting them up as One Touch and Speed Dial numbers. Then while dialing, you can combine two or more One Touch and/or Speed Dial numbers and even include manual dialing using the dial pad. You can use these numbers in any combination. The combined number will be dialed, in the order you entered it, as soon as you press **Start**.

For example:

You store "555" on One Touch key **01** and "7000" on One Touch key **02**. If you press One Touch **01**, **02** and **Start**, you can dial "555-7000". To temporarily change a number, you can substitute part of the number with manual dialing using the dial pad. So, if you press One Touch **01** and press "7001" using the dial pad, you can dial "555-7001".

Using access codes is easy. Sometimes you may want to choose from the among several long distance carriers when you make a call; rates may vary depending upon the time and destination. To take advantage of low rates, you can store the access codes or long-distance carriers as One Touch and Speed Dial numbers.

**NOTE:** You can set up phone credit card numbers the same way. However, **when using combined dialing, do NOT send a cover page because your credit card number will be on it!**

---

### ***Searching the Telephone Index***

---

Once you have stored a name and number as a One Touch number or as a Speed Dial number, you can search for that name alphabetically using the Telephone Index. You can dial a number directly from the Telephone Index.

#### **KEYS TO PRESS**

1. Press **Tel-index**.
2. Use the dial pad to enter the first character of the stored name, and press ◀ (left arrow) or ▶ (right arrow) to find the name.
3. Pick up the handset, or press **Hook**.
4. Press **Start** to begin dialing.
  - Return the handset to its cradle or press **Hook** to cancel the call.

#### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

TEL. INDEX  
ONLINE


NJ OFFICE  
ONLINE

NJ OFFICE  
ONLINE

## 5. SENDING FAXES

### A) DOCUMENT BASICS

#### *The Size of Your Documents*

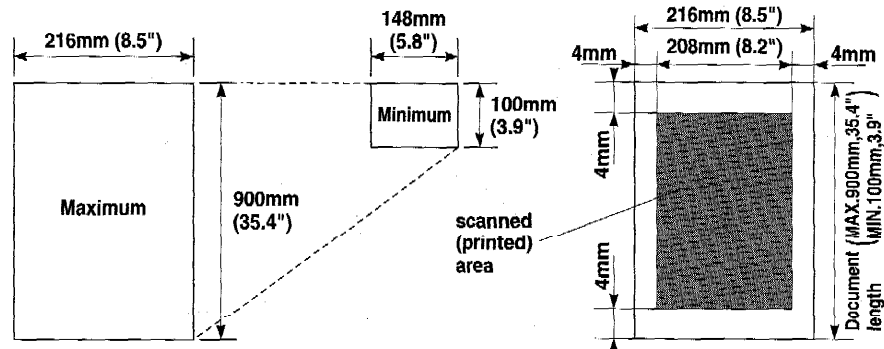


The size of the documents you want to send by fax should not be larger (or smaller) than your MFC can accommodate. The documents should each be between 5.8 and 8.5 inches (148 and 216 mm) wide and between 3.9 and 35.4 inches (100 and 900 mm) long.

The maximum width of the scanned area, that can be printed on the recording paper of the recipient's fax, is 8.2 inches (208 mm).

#### *How to Insert the Document*

 To send a fax, first insert the document you wish to send, face down, in the document feeder. The top edge of the document should go in first, or the fax will be received upside down.


To prevent the document from skewing as it is fed, adjust the paper guides to fit the width of the document.



## NOTICE

### *About the Documents You Send...*

Do not use documents that are curled, wrinkled, folded, ripped, or that contain staples, paper clips, paste, or tape. Also, do not use cardboard, newspaper, or fabric.

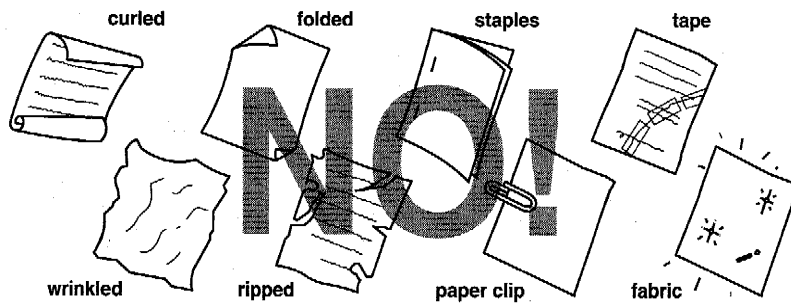

### *The Auto Document Feeder (ADF)*

The Auto Document Feeder (ADF) automatically feeds documents (**up to 30 pages**) into the MFC, one at a time. The thickness and weight of the documents should fall into the following categories:

**Thickness:** For one sheet:  $2.8 \times 10^{-3}$  to  $4.7 \times 10^{-3}$  inches (0.07 to 0.12 mm).  
For multiple sheets:  $2.8 \times 10^{-3}$  to  $3.9 \times 10^{-3}$  inches (0.07 to 0.10 mm).

**Weight:** For one sheet:  $0.07 \times 10^{-3}$  to  $0.121 \times 10^{-3}$  lbs/inch<sup>2</sup> (52 to 85 g/m<sup>2</sup>).  
For multiple sheets:  $0.07 \times 10^{-3}$  to  $0.114 \times 10^{-3}$  lbs/inch<sup>2</sup> (52 to 80 g/m<sup>2</sup>).

Before inserting documents into the document feeder, fan the sheets of paper to make sure the documents are not stuck together. Then tap the leading edge on a flat surface so all the pages are even when placed in the feeder. Make sure you always place the documents in face down.

**Getting Ready to Send a Fax****Setting the Resolution (Temporary Setting)**

You can choose a setting (STANDARD, FINE, SUPERFINE, or PHOTO) for the resolution any time before you press **Start** or **Copy**. You can choose a setting by pressing the **Resolution** key. (○ means light off. ● means light on.)

**STANDARD**      ○ Fine  
                          | Photo  
                          ○ S.Fine

The STANDARD resolution can be used for most typewritten text. When the STANDARD setting is on, both lights are off. Transmission speed is normal.

**FINE**            ● Fine  
                          | Photo  
                          ○ S.Fine

The FINE resolution is an ideal setting to use if you want to send documents that have small print. When the FINE setting is on, the FINE light will be lit. Transmission speed is slower than STANDARD.

**SUPERFINE**    ○ Fine  
                          | Photo  
                          ● S.Fine

The SUPERFINE resolution is a good setting to use for documents with very small print or artwork. When the SUPERFINE setting is on, the S. FINE light will be lit. Transmission speed is slower than FINE.

**PHOTO**           ● Fine  
                          | Photo  
                          ● S.Fine

The PHOTO resolution is ideal for sending documents that have varying shades of gray, such as photographs. The PHOTO setting is on when both lights are lit. Transmission speed is slower than FINE.


To set different resolutions for each page of a multipage document, refer to "Multiple Resolution Transmission" on pages 51-52.

### Setting the Contrast (Temporary Setting)

The MFC has automatic contrast control, but if you are sending or copying a document that is very light or very dark, you may want to set the contrast yourself.

Use SUPER LIGHT to send a very light document.

Use SUPER DARK to send a very dark document.

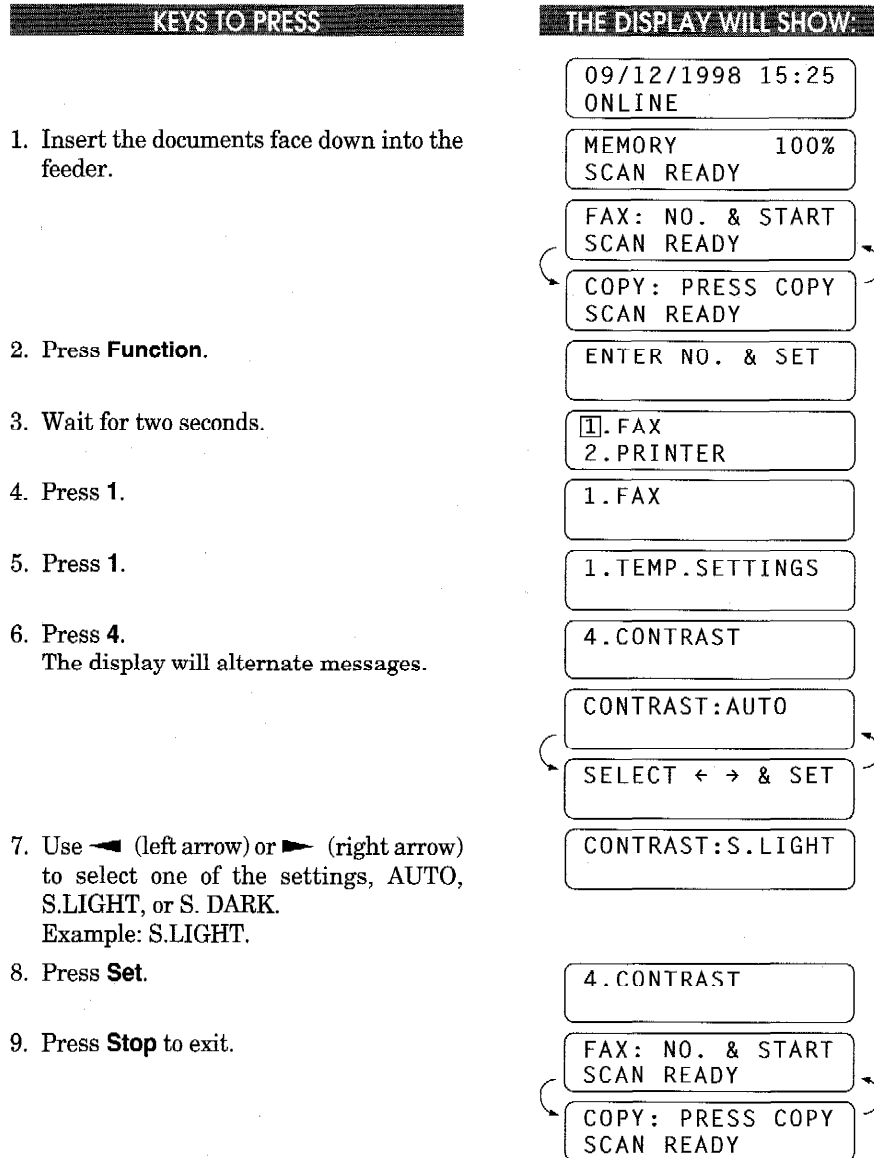

Then start the fax sending operation (see page 39) or copy (see page 152).

**B) BASIC FAX TRANSMISSIONS****FOR YOUR INFORMATION*****Sending a Fax***

There are four basic ways to send a fax:

**1) Manual transmission:**

You can talk or listen to the other party before you send a fax by picking up the handset and dialing the number. After the other party has finished talking and has pressed the **Start** button, you will be able to send your fax by pressing your **Start** key and placing the handset in its cradle. (If you call and all you hear is the chirping sound of a fax machine, you can go ahead and press your **Start** key, and then replace the handset.)

**2) Automatic transmission:**

You can send a fax without picking up the handset or without pressing **Hook** by dialing the fax number and then pressing **Start**.

**a. One Touch Dialing**

Press one of the One Touch keys. (The numbers must be stored beforehand. See pages 26-27.) Then press **Start**.

**b. Speed Dialing**

Press **Speed Dial**, then use the dial pad to enter a two-digit number.

For example, press **05** for 5. (The numbers must be stored beforehand. See page 27-28.) Then press **Start**.

**c. Telephone Index**

You can use **Tel-index** to make telephone or fax calls. (See page 34.)

**3) Delayed transmission:**

It is possible to send documents at a later time by using the **TIMER** function. (See page 44.)

**4) Real time transmission:**

You can send a document in real time without using memory.

***Talking to the Other Party When Sending a Fax***

When you are sending a fax manually and you hear the recipient's voice instead of fax tones, you can use the handset to have a conversation. If you want to then send a fax, ask the other party to press **Start** and when you hear fax tones you can press **Start** to begin sending your fax.

---

## *Sending a Fax Automatically*

---

### KEYS TO PRESS

1. Insert the documents face down into the feeder.
2. Enter a fax number.  
Example: One Touch dialing.
3. Press **Start**.  
The MFC starts scanning the document and the display indicates the job number and how much memory is available. Then the MFC will start dialing if it is not sending, receiving or printing the other documents.

### THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

MEMORY 100%  
SCAN READY

FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

NJ OFFICE  
ONLINE

MEMORY #02 100%  
ONLINE

DIALING #02  
ONLINE

SENDING #02 P.01  
ONLINE

---

## *Dual Access*

---

If the document feeder is empty, you can place a document in the feeder, set temporary settings (except for Timer and Polling), dial a number, and begin scanning a fax into memory, even when the MFC is receiving a fax or sending a fax from memory. The screen displays the new job number and how much memory is available.

**NOTE:** Your MFC can store 13 messages, including the document that is being sent. If the memory is full or you try to send the 14th message, the MFC will dial and send the fax in real time (that is, dial, connect, scan and send without using the memory). If the MFC is idle, it dials immediately. If the MFC is busy sending or receiving, the display shows FAX RESERVED #XX and prompts you to enter the next reserved fax. The MFC begins dialing as soon as the current job is finished.

Memory usage is flexible and your MFC allocates it in segments. While you are receiving, the memory available for sending will be reduced.



## FOR YOUR INFORMATION

***If you Get a MEMORY FULL Message***

If the memory becomes full when scanning page one, the display shows "PRESS STOP KEY", then press **Stop** to abort the job. If the memory becomes full on page 2 or more of a multi-page document, you will be prompted to press **Start** to send the portion already scanned, or **Stop** to abort the job.

***Sending a Fax in Real Time (Temporary Setting)***

You can send your documents in real time without using memory when you do not want to use memory or the MFC's memory is getting full. As soon as the phone line is free, the MFC starts dialing and sending the fax.

## KEYS TO PRESS

1. Insert the documents into the feeder.
2. Press **Function**.
3. Wait for two seconds.
4. Press **1**.
5. Press **1**.
6. Press **7**.
7. Press **Set**.
8. Press ◀ (left arrow) or ▶ (right arrow) to switch on.

## THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

MEMORY 100%  
SCAN READY

FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

1. TEMP SETTINGS

7. REAL TIME TX


REAL TIME TX: OFF

SELECT & SET

REAL TIME TX: ON

Sending FAX

9. Press **Set**.
10. Press **Stop** to exit.
11. Enter fax number and press **Start**. The MFC starts dialing.

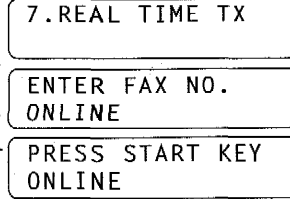


### ***Sending a Fax Manually***

Manual transmission is real time transmission and does not use memory.

#### **KEYS TO PRESS**

1. Insert the documents face down into the feeder.
2. Pick up the handset or press **Hook** and listen for the dial tone.
3. Enter the fax number.  
You can use manual dialing, One Touch dialing, Speed Dialing, or Tel-Index.
4. When you hear a fax tone, press **Start**.  
Your machine will begin sending the documents.
5. Return the handset to its cradle, if you did not use **Hook**.

#### **THE DISPLAY WILL SHOW:**

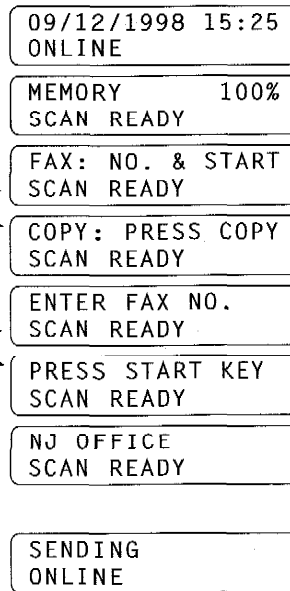

***Automatic and Manual Redialing***

If a number you have dialed is busy or your call did not go through for some other reason, you can redial that number. There are two ways to redial: "automatic" and "manual." Automatic redialing can be used only for faxes that were sent using automatic transmission—not for telephone calls. The MFC automatically will redial the number 3 times at 5 minute intervals before giving up. It will redial the last dialed number when you press **Redial/Pause** (manual redialing).


FOR YOUR INFORMATION

***Optional Settings When You Send a Fax Manually***

- Resolution (See pages 37, 51-52.)
- Contrast (See page 38.)
- Cover Page (See pages 53-58.)
- Overseas Mode (See pages 50-51.)
- Call Reservation (See pages 58-60.)

***Printing Page Headers***

Your MFC can print a page header on the top of every fax you send. It is printed on the receiving party's fax paper. It contains the date and time of transmission, your fax number and name (Station ID), and page number. Of course you must register your Station ID beforehand for that information to be available. (See pages 23-24.)

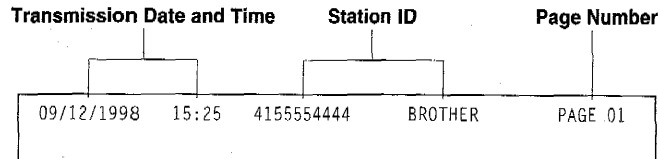

SENDING FAX

## C) ADVANCED FAX TRANSMISSIONS

### *Setting the Daily Timer (for Delayed Transmissions)*

The Daily Timer function lets you send a fax at a preset time every day. This is handy for sending delayed jobs that must go out at the same time daily. Once you enter the time, you don't have to enter it again. The setting will stay the same until you change it. So you can use it every day, or only on days when you need it.

#### KEYS TO PRESS

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **7**.
5. Press **2**.
6. Enter the time in 24-hour format using the dial pad.  
Example: **19:45** (7:45 P.M.).
7. Wait for two seconds, press **Stop** to exit.

#### THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

7. SETUP SYSTEM

2. DAILY TIMER

ENTER TIME: 00:00

ENTER TIME: 19:45

2. DAILY TIMER

**Delayed Transmission**

You can use the timer to send documents at a later time (up to 24 hours later). When the preset time is displayed, accept it or enter a new time if needed. Your MFC also will produce a report, the "Delayed Sending Report", after the fax is sent. You can set up to 13 different documents for delayed transmission, including one document for a delayed broadcast transmission. (If the MFC has jobs in memory, the number of documents you can set up is reduced.)

**KEYS TO PRESS**

1. Insert the documents into the feeder.
2. Press **Function**.
3. Wait for two seconds.
4. Press **1**.
5. Press **1**.
6. Press **1**.
7. Accept the displayed time or enter the time in 24-hour format using the dial pad.  
Example: **19:45** (7:45 P.M.).
8. Wait for two seconds.
9. Press **1** or **2** to make you selection. If you select 1.DOC, the MFC starts scanning the document at the time it is sent. If you select 2.MEMORY, the MFC starts scanning the document immediately, so you can retrieve your original now.

**THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

MEMORY 100%  
SCAN READY

FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

1. TEMP. SETTINGS

1. TIMER

SET TIME=00:00

SET TIME=19:45

1. DOC 2. MEMORY

1. TIMER

SENDING FAX

10. Press **Stop**.

ENTER FAX NO.  
ONLINE

11. Enter the fax number.

PRESS START KEY  
ONLINE

12. Press **Start**.

The MFC will wait until the specified time to call.

NJ OFFICE  
ONLINE

09/12/1998 15:25  
ONLINE

### ***Broadcasting***

Broadcasting is automatically sending the same fax message to multiple fax numbers. Using the **Broadcast** key, you can include up to 24 One Touch locations, up to 100 Speed Dial locations, and up to 50 manually dialed numbers (maximum of 174 locations if you did not use up any locations for Groups, access codes or credit card numbers). However, available memory will vary with the types of jobs in memory and number of locations used for broadcasting. If you broadcast to more than the maximum locations available, you will not be able to set up transmissions using dual access and the timer.

The easiest way to broadcast is to first combine frequently used One Touch and Speed Dial numbers as a Group, which uses up a One Touch key. (Remember, you can have up to six Groups and autodial numbers can be included in more than one Group.) Then by pressing **Broadcast** between each location, you can include One Touch, Speed Dial, Groups, and manual dialing (using the dial pad) in the same broadcast. Use the Telephone Index to help you choose the numbers easily.

After the Broadcast is completed, a Broadcast Report will be printed automatically to let you know the results.

#### FOR YOUR INFORMATION

##### ***Getting Familiar with the Broadcasting Function***

- \* To stop the broadcast in progress, press **Stop**. The LCD display asks if you want to cancel all locations or the location that is being sent.
- \* Enter the long dialing sequence numbers as you normally would, but keep in mind that each key counts as one location, so the number of locations you can call becomes limited.
- \* If the line is busy or for some other reason a connection could not be made while broadcasting, the MFC will redial the number automatically. (See page 43.)
- \* If the memory is full, press **Stop** to abort the job or press **Start** to send the portion that is in the memory (if more than one page has been scanned.) (See page 41.)

**KEYS TO PRESS**

1. Insert the documents into the feeder.
  
2. Enter a number using One Touch, Speed Dial, Group number, Tel-index or the dial pad.  
Example: Group number.
  
3. Press **Broadcast**.  
You will be prompted to enter the next number.
  
4. Enter the next number.  
Example: Speed Dial
  
5. Press **Broadcast**.
  
6. Enter the next fax number.  
Example: Manual dialing, using the dial pad.
  
7. Press **Start**.

Your MFC will read the documents into memory and then start sending faxes to all the numbers you entered.

**NOTE:** Previously entered jobs still in memory will be sent first.

**THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

MEMORY 100%  
SCAN READY

FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

BROTHER  
ONLINE

ENTER FAX NO.  
ONLINE

PRESS START KEY  
ONLINE

LONDON OFFICE  
ONLINE

ENTER FAX NO.  
ONLINE

PRESS START KEY  
ONLINE

123456789\_  
ONLINE

MEMORY #01 100%  
ONLINE

DIALING #01  
ONLINE

SENDING #01 P.02  
ONLINE

SENDING FAX

## ***Interrupting the Timer and Polled Job***

You can send a fax without canceling the timer (see pages 45-46) or Polled Waiting with documents in the feeder (see pages 94-95) by “interrupting” it. When you interrupt the Timer to send a “new” set of documents, the MFC will not automatically redial the number if it was busy. Also, you cannot use the function mode if you have interrupted the Timer or Polled Waiting. For example: TIMER WAITING with a document in the feeder.

### **KEYS TO PRESS**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **0**.
5. Wait for two seconds.
6. Remove documents from the MFC.
7. Place the “new” documents into the feeder.
8. Enter the new fax number for the documents you are sending now, then press **Start**.
9. After the transmission is finished, place the “old” documents back into the feeder.
10. Press **Function** and **1** and **0** to restore the timer.

### **THE DISPLAY WILL SHOW:**

TIMER WAITING  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

0. INTERRUPT

REMOVE DOCUMENT  
ONLINE

INSERT DOCUMENT  
ONLINE

FAX OR COPY  
ONLINE

FUNC 10 TO RESET  
ONLINE

DIALING  
ONLINE

SENDING P.01  
ONLINE

INSERT DOCUMENT  
ONLINE

FAX OR COPY  
ONLINE

FUNC 10 TO RESET  
ONLINE

0. INTERRUPT

TIMER WAITING  
ONLINE



### Checking Job Status

You can check which jobs are in the memory waiting to be sent by pressing **Function**, **1** and **2** when the MFC is idle. If you want to check for jobs while the MFC is sending or receiving a fax, press **Stop**, then use ◀ (left arrow) or ▶ (right arrow) to scroll through multiple jobs.

### Canceling a Job

- 1) To cancel a job while the document is being scanned into memory, press **Stop**. The job is canceled. The MFC ejects the document by pressing **Stop** again.
- 2) If the MFC is idle, you can cancel a job after the document is scanned into memory, by pressing **Function**, **1** and **2**. If your MFC has only that job, the screen displays **1. CLEAR 2. EXIT** with the job number. Press **1** to cancel the job or press **2** to continue the job.

If your MFC has more than one job in the memory, the screen displays the job numbers. Use ◀ (left arrow) or ▶ (right arrow) to select the job you want to remove. Press **Set**, then press **1**. The selected job is cancelled.

- 3) If your MFC is busy, press **Stop** to cancel a job. Use ◀ (left arrow) or ▶ (right arrow) to select the job you want to remove if there is more than one job in memory. Then press **Set** and press **1**. If the MFC has only one job, the screen displays **1. CLEAR 2. EXIT**. Press **1** to cancel the job or press **2** to continue the job.

**EXAMPLE:** You press **Function**, **1** and **2** to cancel a job while the MFC is idle.

Sending FAX

#### KEYS TO PRESS

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **2**.  
Any waiting jobs that have been set up will appear in the display.  
If no jobs are waiting to be processed, a **NO JOB WAITING** message will appear in the display.

#### THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

2. REMAINING JOBS

#03 ZONE 2

SELECT ← → & SET

5. Use ◀ (left arrow) or ▶ (right arrow) to select the job you wish to cancel.

#02 ABC COMPANY

6. Press **Set**.

#02 ABC COMPANY

1. CLEAR 2. EXIT

7. Press **1** to cancel the selected job, or **2** to exit without canceling.  
If **1** is selected, the job will be canceled and the next job will appear in the display.

#01 NJ OFFICE

SELECT ◀ ▶ & SET

8. To cancel the next job, press **1** again. To exit, press **2**.

2. REMAINING JOBS

9. Press **Stop** to exit.

#### D) FAX TRANSMISSION OPTIONS

##### Setting the Overseas Mode (Temporary Setting)

If you experience difficulty with sending faxes overseas, use the Overseas mode.

#### KEYS TO PRESS

1. Insert the documents into the feeder.

2. Press **Function**.

3. Wait for two seconds.

#### THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

MEMORY 100%  
SCAN READY


FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

ENTER NO. & SET

1. FAX  
2. PRINTER

4. Press **1**.
5. Press **1**.
6. Press **6**.
7. Press ◀ (left arrow) or ▶ (right arrow) to switch to ON.
8. Press **Set**.
9. Press **Stop** to exit.
10. Then start the fax sending operation. (See page 39.)  
After sending your fax, the overseas mode will switch itself OFF.

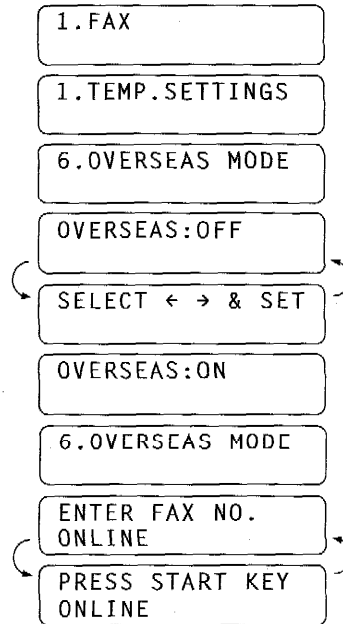

Sending FAX


### Setting Your MFC for Multiple Resolution Transmission (Temporary Setting)

This is a temporary setting for the current transmission job only. You can set the resolution of the documents you send by pressing **Resolution**. Once you set the resolution, all the pages will be sent at the same resolution. However, there may be times when you want to send some pages at one resolution, such as STANDARD, and other pages in another resolution, such as PHOTO. If you send all pages in Photo resolution, for instance, it would take a great deal of time. It is better to specify the resolution for each page to minimize transmission time. This is made possible by using the 1.TEMP. SETTINGS function.

#### KEYS TO PRESS

1. Insert the documents into the feeder.

#### THE DISPLAY WILL SHOW:

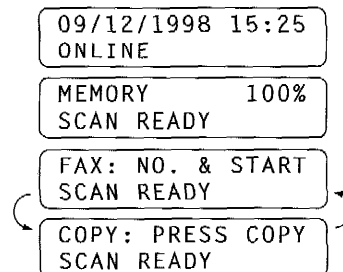

2. Press **Function**.

ENTER NO. & SET

3. Wait for two seconds.

1. FAX  
2. PRINTER

4. Press **1**.

1. FAX

5. Press **1**.

1. TEMP. SETTINGS

6. Press **5**.

5. RESOLUTION

7. Press ◀ (left arrow) or ▶ (right arrow) to find the resolution you want for the first page of your documents.  
Example: FINE.

PAGE 01: STANDARD

SELECT ← → & SET

PAGE 01: FINE

8. Press **Set**.  
Return to Step 7 to set the resolution for page 2 and the following pages.

PAGE 02: FINE

9. When you finish setting the resolution for all your pages, press **Stop**.

FAX: NO, & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

10. Enter the fax number.

11. Press **Start**.

The resolution will revert to **STANDARD** after the documents have been sent.

### Sending a Fax with an Electronic Cover Page Message

An automatic Cover Page will allow you to send details of who the fax is going to, who it is from and when it was sent. This is what the Cover Page looks like:

09/12/1998 15:25	
== COVER PAGE ==	
TO: NJ OFFICE	(1)
FAX: 14155551212	
FROM: BROTHER	(2)
FAX: 4155554444	
TEL: 4155554445	
03 PAGE[S] TO FOLLOW	(3)
COMMENT: PLEASE CALL	(4)

- (1) The "TO" information comes from the One Touch or the Speed Dial memory. If you are dialing manually or broadcasting, the name of the destination will be left blank.
- (2) The "FROM" information comes from the Station ID.
- (3) The number of pages you are sending. When Cover Page is sent each time by using the automatic settings (see pages 55-56), the number of pages will be left blank. If you have used the temporary Cover Page setting (see pages 57-58), the number of pages you entered will be listed.
- (4) Your comments. You may customize the comments (see page 54).

Send Fax

**FOR YOUR INFORMATION**

**Selecting a Comment for the Cover Page**

You can choose one comment from among six options. The first option is to send no comment at all. The next three are built-in comments, and the last two are ones you can enter yourself. (For more information see below "Customizing Your Cover Page Comment".)

1. COMMENT OFF
2. PLEASE CALL
3. URGENT
4. CONFIDENTIAL
5. (Your own customized comment up to 27 characters.)
6. (Your own customized comment up to 27 characters.)

---

## Customizing Your Cover Page Comment

---

You can customize the comment on your Cover Page as follows:

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>7</b> .	1. FAX
5. Press <b>6</b> .	7. SETUP SYSTEM
	6. SET COVERPAGE
	5.
6. Press ◀ (left arrow) or ▶ (right arrow) to select 5 or 6 where you wish to store a comment. Example: 5.	SELECT ← → & SET
	5.
7. Press <b>Set</b> .	5.
	ENTER & SET
8. Enter your customized comment using the dial pad (up to 27 characters). (See pages 17-19 for more details.) Example: <b>TOP SECRET</b> .	5. TOP SECRET
9. Press <b>Set</b> .	6. SET COVERPAGE
10. Press <b>Stop</b> to exit.	

### ***Printing a Sample Cover Page***

You can print a sample Cover Page to check the format.

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>3</b> .	1. FAX
5. Press <b>4</b> .	3. PRINT REPORTS
	4. COVERPAGE
	PRESS START KEY
6. Press <b>Start</b> .	PRINTING

### ***To Always Send a Cover Page***

If you often send an automatic Cover Page, you can set it to ON to avoid having to set up the details of the Cover Page each time. Here is how you can switch the setting for the automatic Cover Page to ON (or OFF):

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>5</b> .	1. FAX
	5. USER OPTIONS

5. Press **3**.

3.COVERPG ON/OFF

6. Press ◀ (left arrow) or ▶ (right arrow) to choose ON (or OFF).  
Example: ON.

COVERPAGE:OFF

SELECT ◀ ▶ & SET

7. Press **Set**.

COVERPAGE:ON

8. If you selected ON, you must select a comment, by pressing ◀ (left arrow) or ▶ (right arrow).  
Example: 2.PLEASE CALL. (See pages 53-54.)

1.COMMENT OFF

SELECT ◀ ▶ & SET

2.PLEASE CALL

9. Press **Set**.

3.COVERPG ON/OFF

10. Press **Stop** to exit.

#### FOR YOUR INFORMATION

##### *Sending an Automatic Cover Page*

If you have the Cover Page ON/OFF setting to ON, the total number of pages will not be printed on the Cover Page. Also, the comment you selected when you set it to ON will be printed on all the Cover Pages you send.

#### *Sending a Fax When the Cover Page Is ON*

##### KEYS TO PRESS

1. Insert the documents into the feeder.  
The display will say COVERPAGE ON for one second.

##### THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

COVERPAGE ON  
SCAN READY

MEMORY 100%  
SCAN READY

FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY



2. Enter the fax number.

NJ OFFICE  
ONLINE

3. Press **Start**.

Your MFC will begin transmitting the  
Cover Page and original document.

SEND COVERPAGE  
ONLINE

SENDING #01 P.01  
ONLINE

***Sending a Cover Page (Temporary Setting)***

**KEYS TO PRESS**

**THE DISPLAY WILL SHOW:**

1. Insert the documents into the feeder.

09/12/1998 15:25  
ONLINE

MEMORY 100%  
SCAN READY

FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

2. Press **Coverpage**.

1.COMMENT OFF  
ONLINE

SELECT ← → & SET  
ONLINE

3. Press ◀ (left arrow) or ▶ (right arrow)  
to select the comment you want.  
Example: 2.PLEASE CALL.

2.PLEASE CALL  
ONLINE

4. Press **Set**.

TOTAL PAGES? :00  
ONLINE

5. Enter the number of pages you are  
sending. (Enter 00 to leave the number of  
pages blank.)

TOTAL PAGES? :02  
ONLINE

6. Wait for two seconds.

ENTER FAX NO.  
ONLINE

PRESS START KEY  
ONLINE

7. Enter the fax number.

NJ OFFICE  
ONLINE

NEW SETTINGS

8. Press **Start**.

SEND COVERPAGE  
ONLINE

SENDING #01 P.01  
ONLINE

- Helpful Hints**
- Even if the Cover Page ON/OFF setting is ON, you can avoid sending an automatic Cover Page by pressing **Coverpage** once to turn off the Cover Page for that transmission.
  - If you want the total number of pages sent to be printed on the cover page, press **Coverpage** once to set the COVERPAGE ON/OFF option to OFF. Then press **Coverpage** once again and enter the number of pages. (See page 53.)

### ***Sending a Fax with Call Reservation (Talking to the receiving party after fax transmission)***

---

You can send a fax and then talk to the recipient using the Call Reservation feature. After your fax has been printed on the receiving end, the receiving fax machine will ring as if it were receiving a telephone call. If the recipient picks up the handset, your MFC will ring. Then you can pick up your handset and start a conversation. If you have both Call Reservation and Call Back Message set to ON and the recipient does not pick up the handset when it rings, your MFC will leave a fax message asking the recipient to call you.

#### FOR YOUR INFORMATION


##### ***Using the Call Reservation Function***

- There are some fax machines that will not respond to this function.
- When you use auto redialing, you cannot use the Call Reservation function, but if Call Back Message is ON, your MFC will leave a Call Back Message asking the other party call you.
- You cannot use Call Reservation with the Delayed Transmission or with the Polling function.
- **You must register your Station ID number to turn Call Back Message: ON. (See pages 23-24.)**

**KEYS TO PRESS**

1. Insert the documents into the feeder.
2. Press **Function**.
3. Wait for two seconds.
4. Press **1**.
5. Press **1**.
6. Press **3**.
7. Press ◀ (left arrow) or ▶ (right arrow) to select Call Reservation ON or OFF.  
Example: Call Reserve ON.
8. Press **Set**.
9. Press ◀ (left arrow) or ▶ (right arrow) to select Call Back Message ON or OFF.  
Example: Call Back Message ON.
10. Press **Set**.
11. Press **Stop**.

**THE DISPLAY WILL SHOW:**

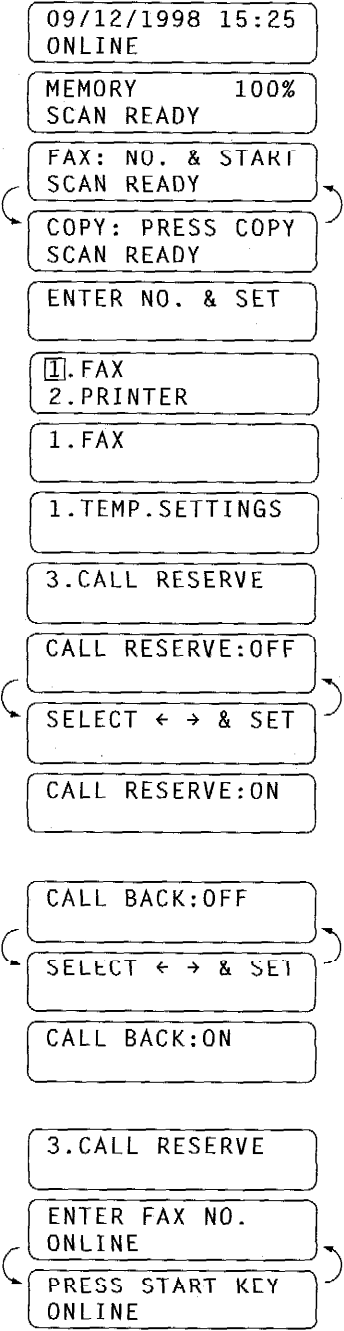

12. Enter the fax number.

NJ OFFICE  
ONLINE

13. Press **Start**.

DIALING #01  
ONLINE

14. The MFC will send the fax. If your MFC rings when all pages have been transmitted then pick up your handset to talk.

```
09/12/1998 15:25
=== CALL BACK MESSAGE ===
TO:      NJ OFFICE
FAX:    14155551212
FROM:    BROTHER
PLEASE CALL AT [TEL] 4155554445
           [FAX] 4155554444
```

### ***Printing the Call Back Message***

You can print a sample Call Back Message to check the format.

#### **KEYS TO PRESS**

1. Press **Function**.

2. Wait for two seconds.

3. Press **1**.

4. Press **3**.

5. Press **5**.

6. Press **Start**.

#### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

3. PRINT REPORTS

5. CALL BACK MSG

PRESS START KEY

PRINTING

**ECM (Error Correction Mode)**

The Error Correction Mode (ECM) is a way for the MFC to check the integrity of a fax transmission while it is in progress. ECM transmissions are possible only between machines that both have the ECM feature. If they do, you may send and receive fax messages that are continuously checked for their integrity.

Sufficient memory must be available in your MFC for this feature to work.

**Error Retransmission**

Error Retransmission is helpful when the receiving machine does not have ECM. Even though your MFC cannot check the integrity of the message, it will send the affected page(s) again after occurrences of accidental noise have caused an error.

**This feature is available only for memory transmission, including Broadcast (see pages 46-47).**

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>5</b> .	1. FAX
5. Press <b>4</b> .	5. USER OPTIONS
	4. ERROR RE-TX
	ERROR RE-TX: OFF
	SELECT ← → & SET
6. Press ◀ (left arrow) or ▶ (right arrow) to choose either ON (or OFF). Example: ON.	ERROR RE-TX: ON
7. Press <b>Set</b> .	4. ERROR RE-TX
8. Press <b>Stop</b> to exit.	

## 6. RECEIVING FAXES AND OTHER CALLS

### A) BASIC SETUP TO RECEIVE FAXES

#### Selecting an Answer Mode

There are four different answer modes for your MFC. You may choose the mode that best suits your needs by pressing the **Mode** button repeatedly until you have changed the Fax and F/T lights to the setting you want to use. For more detailed information about a particular mode, please refer to the page number in the right column.

**NOTE:** The lighted indicators mean  = not selected  = is selected and lit.

Mode	Light	How it works	When to use it	Page #
1. <b>Manual</b> (manual receive)	<input type="radio"/> Fax   Msg Ctr <input type="radio"/> F/T	You control the phone line and must answer every call yourself.	Use this mode when you are using a computer modem on the same line or if you receive very few fax messages. You can also use this mode with Distinctive Ringing.	63
2. <b>Fax</b> (automatic receive)	<input checked="" type="radio"/> Fax   Msg Ctr <input type="radio"/> F/T	The MFC automatically answers every call as a fax.	For dedicated fax lines. You cannot receive a voice call but you can call out.	63
3. <b>F/T</b> (Fax/Telephone)	<input type="radio"/> Fax   Msg Ctr <input checked="" type="radio"/> F/T	The MFC controls the line and automatically answers every call. If the call is a fax it will receive the fax. If the call is not a fax it will ring (double ring) for you to pick up the call.	<b>You cannot have an answering machine on the same line, even if it is on a separate jack on the same line. You cannot use the telephone company's Voice Mail in this mode.</b>	64
4. <b>MSG CTR</b> (Message Center)	<input checked="" type="radio"/> Fax   Msg Ctr <input checked="" type="radio"/> F/T	The MFC automatically answers every call. The messages are stored in order on a first come first served basis.	Use this mode to record both voice and fax messages in the MFC's memory.	98

**NOTE:** In F/T mode you must set the Ring Delay and F/T Ring Time. If you have extension phones on the line, set the Ring Delay to 4 rings.

**Manual Reception (Manual Mode)**

When you set the Answer Mode to manual, you must answer each incoming call yourself. Here is what you should do when using Manual Mode:

If You Get a...	Then You Should...
1. Regular phone call	Talk as you normally would.
2. Phone call and request to send a fax	Press <b>Start</b> when finished talking, and replace the handset. <b>NOTE:</b> Sender must also press <b>Start</b> .
3. Fax tone...	Press <b>Start</b> , and replace the handset.

**Automatic Fax Only Reception (Fax Mode)**

You can automatically receive all your faxes in Automatic Fax Reception mode (Fax light is on). Select this mode by pressing **Mode**.

**Setting the Ring Delay**

You can set the number of rings before the MFC will answer the line. You can set 00 to receive your incoming faxes without any rings.

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>6</b> .	1. FAX
5. Press <b>2</b> .	6. TEL OPTIONS
	2. RING DELAY
	RING DELAY:02
	SELECT ← → & SET

RECEIVE FAX

6. Press ◀ (left arrow) or ▶ (right arrow) repeatedly until you find the number of rings you want.  
Example: 00.

RING DELAY:00


7. Press **Set**.

2.RING DELAY

8. Press **Stop** to exit.

### The F/T Switch (Fax/Telephone Mode)

When you share one line for your telephone and fax application, in the F/T switch mode, the MFC can determine whether an incoming call is a fax or a telephone call. (See Chart below.)

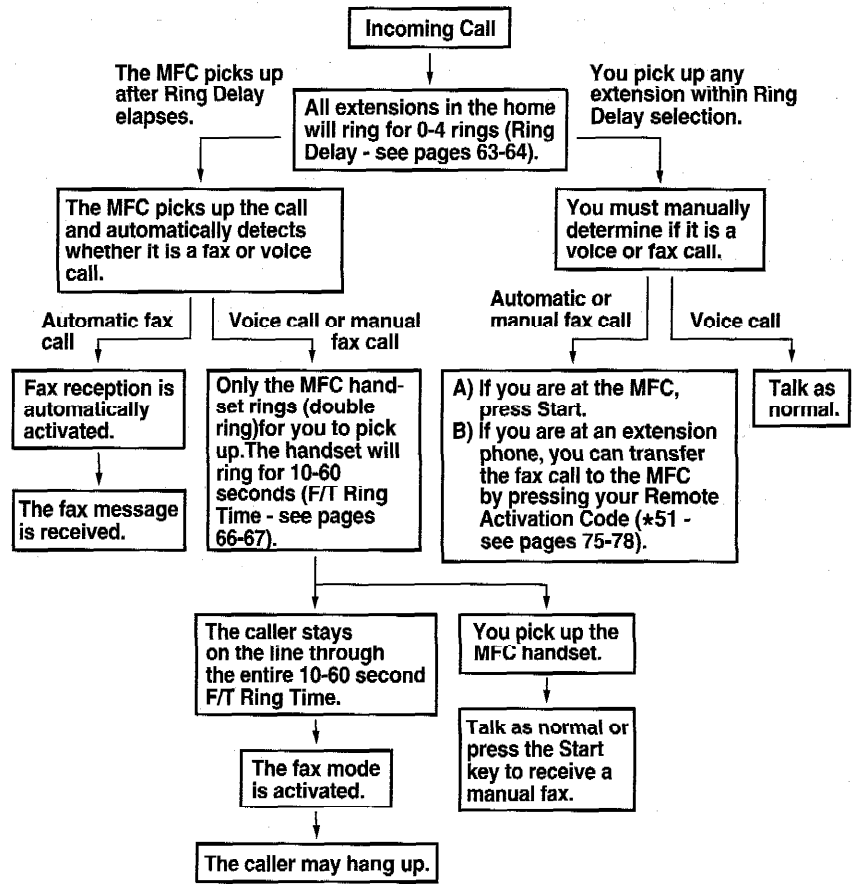

**NOTE:** The caller may hang up, but the F/T ringing will continue for 10-60 seconds.



### ***Recording an F/T Outgoing Message (OGM)***

Even though F/T mode does not allow callers to leave a voice message, you can store an outgoing message in your MFC so callers know what to do. For example:

“Hi, I can’t answer your call right now, so please call me again later. If you want to send a fax, please wait until you hear a fax tone and then press the Start key, or press (\*51) and press the Start key.”

**NOTE:** The caller cannot leave an incoming message in this mode.

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>8</b> .	1. FAX
5. Press <b>6</b> .	8. SETUP MSG CTR
6. Press ◀ (left arrow) or ▶ (right arrow) repeatedly until you get the F/T OGM.	6. OGM
7. Press <b>Set</b> .	MSG CTR OGM
8. Press <b>Record</b> .	SELECT ← → & SET
9. Pick up the handset.	F/T OGM
10. Record a message within 20 seconds.	REC/ERASE/PLAY?
	PICK UP HANDSET
	RECORD OGM: 00/20
	RECORD OGM: 15/20

Receive FAX

- Press **Stop**, and replace the handset.  
The recorded message will be played automatically.

RECORD OGM:20/20

PLAYING OGM

F/T OGM

SELECT ← → & SET

- Press **Stop** to exit.

**Helpful Hints** It is not necessary to have an outgoing message. The F/T mode will work fine without one. It is only to help the caller understand the status of your MFC.

### ***Setting the F/T Ring Time***

You can specify the maximum time you want the MFC to ring (double ring) to notify you after it has answered a telephone call. There are four predefined settings: 10, 20, 30, or 60 seconds. During this time, only the MFC will ring. No other phones on the same line will ring.

#### **KEYS TO PRESS**

- Press **Function**.
- Wait for two seconds.
- Press **1**.
- Press **6**.
- Press **4**.

#### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

6. TEL OPTIONS

4. F/T RING TIME

RING TIME:20 SEC

SELECT ← → & SET

**RECEIVING FAXES AND OTHER CALLS**

6. Press ◀ (left arrow) or ▶ (right arrow) repeatedly until you find the setting you want.  
Example: 10 sec.

RING TIME:10 SEC

7. Press **Set**.

4.F/T RING TIME

8. Press **Stop** to exit.

***Smoothing***

The smoothing feature enhances the appearance of incoming faxes by making the lines smooth and takes no additional time. This function does not apply to outgoing faxes, or to lists or reports you print. The initial setting is ON.

**KEYS TO PRESS**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **5**.
5. Press **1**.
6. Press ◀ (left arrow) or ▶ (right arrow) to choose ON (or OFF).  
Example: OFF.
7. Press **Set**.
8. Press **Stop** to exit.

**THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1.FAX  
2.PRINTER

1.FAX

5.USER OPTIONS

1.SMOOTHING

SMOOTHING:ON

SELECT ◀ → & SET

SMOOTHING:OFF

1.SMOOTHING

**Receive FAX**

## Setting the Size of the Paper

There are three different settings for the size of the (printing) paper. If you selected AUTO reduction, the MFC automatically will reduce and print the incoming faxes according to this setting of the size of the paper in the cassette. If you select a specific percentage, the papersize is not considered.

KEYS TO PRESS	THE DISPLAY WILL SHOW
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>5</b> .	1. FAX
5. Press <b>6</b> .	5. USER OPTIONS
	6. RCD PAPER
	RCD PAPER: LETTER
6. Press ◀ (left arrow) or ▶ (right arrow) to select either LETTER, LEGAL or A4. Example : LEGAL	SELECT ← → & SET
	RCD PAPER: LEGAL
7. Press <b>Set</b> .	CHANGE REDUCT ?
	1. YES 2. NO
8. Press <b>1</b> to go to the REDUCTION setting in <b>Function, 1, 5, 5.</b> (See pages 69-70.)	REDUCTION: AUTO
	SELECT ← → & SET
9. Press ◀ (left arrow) or ▶ (right arrow) to select either AUTO, 100%, 93%, 87%, or 75%. Example: AUTO	REDUCTION: AUTO
10. Press <b>Set</b> .	
11. Press <b>Stop</b> to exit.	6. RCD PAPER

**NOTICE**

Regardless of the actual size of the paper, the MFC will calculate the reduction ratio by this setting. So when you change the size of the paper in the cassette, you must also change this setting to get the correct reduction. Your MFC can be set to receive incoming fax documents on only letter, legal or A4 paper.

***Printing a Reduced Size Copy of the Incoming Document***

You can avoid separating data even if the document is longer than the paper by using this function to print a reduction of the document. There are two types of reduction: Auto Reduction and Fixed Reduction.

***Auto Reduction***

Regardless of the original size of the incoming document, it will be reduced so that it fits on one page of paper in your cassette. The MFC will automatically calculate the reduction ratio by taking into account the size of the incoming document and the size of the paper you selected in **Function, 1, 5, 6**. (See page 68.)

***Using Fixed Reduction Ratios***

You can choose to have incoming documents reduced at a fixed reduction ratio, regardless of the size of the paper. The reduction ratio can be selected from among four choices: 100%, 93%, 87%, or 75%.

**KEYS TO PRESS**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **5**.
5. Press **5**.

**THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

5. USER OPTIONS

5. REDUCTION

REDUCTION:AUTO

SELECT ← → & SET

Receive FAX

6. Press ◀ (left arrow) or ▶ (right arrow) to select the reduction ratio you want :

REDUCTION: 93%

- If you want Auto Reduction, choose "AUTO".
- Choose 93%, 87%, or 75% if you want Fixed Reduction.

Example: 93%

- Choose 100% if you want to record the same size.

7. Press **Set**.

5. REDUCTION

8. Press **Stop** to exit.

#### NOTICE

- You can use Auto Reduction to reduce incoming documents to fit on one page of paper, only as long as the original document is not longer than legal size. If the original is longer than legal size, the data will not be reduced (see For Your Information below) and will carry over to print on a second page.
- When you use Auto Reduction and you receive an incoming document that is smaller than your paper, no reduction will take place.
- When selecting Fixed Reduction, you must consider the size of the paper as registered in **Function, 1, 5, 6**. (See page 68.) If you selected letter size, you can choose a reduction of 93%, 87%, or 75%. If you selected A4 size, you can choose a reduction of only 93% or 87%. And if you selected legal size, you can choose only 93%.

#### FOR YOUR INFORMATION

##### *Selecting the Ratios of Fixed Reduction*

Other party sends you a document the size of...	Your receiving paper size is:	Recommended Reduction Ratio is:
Letter document (8.5"x11") (mostly Domestic communications)	Letter	93%
	A4, Legal	100%
A4 document (8.2"x11.6") (mostly International communications)	Letter	87%
	A4	93%
	Legal	100%
Legal documents (8.5"x14")	Letter	75%
	Legal	93%

## FOR YOUR INFORMATION

**Reception into Memory (Out of Paper Reception)**

If the multi-purpose sheet feeder is empty, the LCD will display the message CHECK PAPER. Add more paper.

Your MFC automatically will store incoming faxes in its memory if it runs out of paper. The contents of the memory will be printed automatically when you replace the paper. The memory for out of paper reception will be saved for up to 2 hours after power has been cut off.

**Setting the Print Density**

You can set print conditions with the following steps. Press ◀ (left arrow) to make the print lighter and ▶ (right arrow) to make the print darker. If the print is still too light or too dark, you can adjust it further by turning the Print Density Dial located in the right corner under the top cover. (Remove the drum unit to find the dial. See page 186 for more information.)

## KEYS TO PRESS

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **5**.
5. Press **9**.  
The display will alternate messages.
6. Use ◀ (left arrow) or ▶ (right arrow) to change the settings.
7. Press **Set**.
8. Press **Stop** to exit.

## THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

5. USER OPTIONS

9. PRINT DENSITY

-■■■■■■■■□□□□□□□+

SELECT ◀ → & SET

9. PRINT DENSITY

RECEIVE FAX

---

### ***Toner Save Function***

---

This function lets you extend the life of the toner by conserving its use. When the Toner Save is set to ON, the print appears somewhat lighter. This feature is also available when copying. The default setting is OFF.

<b>KEYS TO PRESS</b>	<b>THE DISPLAY WILL SHOW:</b>
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>5</b> .	1. FAX
5. Press <b>7</b> .	5. USER OPTIONS
	7. TONER SAVE
	TONER SAVE: OFF
6. Press ◀ (left arrow) or ▶ (right arrow) to select either ON (or OFF). Example: ON.	SELECT ← → & SET
7. Press <b>Set</b> .	TONER SAVE: ON
8. Press <b>Stop</b> to exit.	7. TONER SAVE

---

### ***Speaker Volume***

---

There are three settings available for the Speaker Volume, OFF, LOW, or HIGH. This setting controls the loudness of the MFC's one-way speaker, which is connected to the phone line. The initial setting is LOW.


<b>KEYS TO PRESS</b>	<b>THE DISPLAY WILL SHOW:</b>
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
	ENTER NO. & SET

---




**RECEIVING FAXES AND OTHER CALLS**

2. Wait for two seconds.
3. Press **1**.
4. Press **6**.
5. Press **3**.
6. Press ◀ (left arrow) or ▶ (right arrow) to choose a setting either OFF, LOW, or HIGH.  
Example: HIGH.
7. Press **Set**.
8. Press **Stop** to exit.

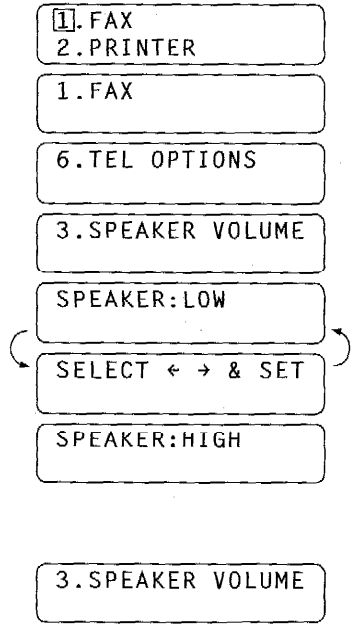


If you want to change the speaker volume using On Hook Dialing for the current call, use the control panel keys shown below:

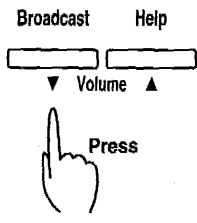


***Setting the Handset Volume***

You can adjust the handset volume any time you are talking on the telephone. The new setting will remain until you change it again. There are two handset volume levels. The default setting is the lowest volume.

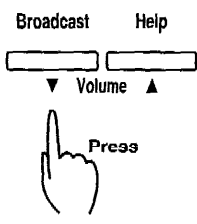

**Receive FAX**

 Press ▲ (Help key) or ▼ (Broadcast key) to adjust the volume level.



Each key press changes the volume to the next setting.

### ***Ring Volume***

---

You can set the ring volume to either OFF, LOW or HIGH. The initial setting is HIGH. Even if you select OFF, the ring volume will be LOW for F/T ringing, Call Reservation ringing and when the Distinctive Ringing mode is SET.

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>6</b> .	1. FAX
5. Press <b>5</b> .	6. TEL OPTIONS
6. Press ◀ (left arrow) or ▶ (right arrow) to choose either OFF, LOW, or HIGH. Example: LOW.	5. RING VOLUME
7. Press <b>Set</b> .	RING VOLUME:HIGH
8. Press <b>Stop</b> to exit.	SELECT ← → & SET
	RING VOLUME:LOW
	5. RING VOLUME

## B) REMOTE ACTIVATION

### What is Remote Activation?


If you answer a call that is a fax message, you can use the Remote Activation Code (\*51) to make your MFC take over the call. If your MFC answers a telephone call that is for you, you can use the Remote Deactivation Code (#51) to pick up the call at an extension phone. (You do not need a code to take over a call at the MFC.) You must use a touch tone phone.

#### FOR YOUR INFORMATION

##### *Connecting an External or Extension Telephone*

You may connect an external telephone to your MFC, as shown below. Use the EXT. jack on your MFC.

Alternatively, you may wish to use this EXT. jack to connect a telephone answering device (TAD). An extension phone is a telephone that is plugged into a separate wall jack on the same line.

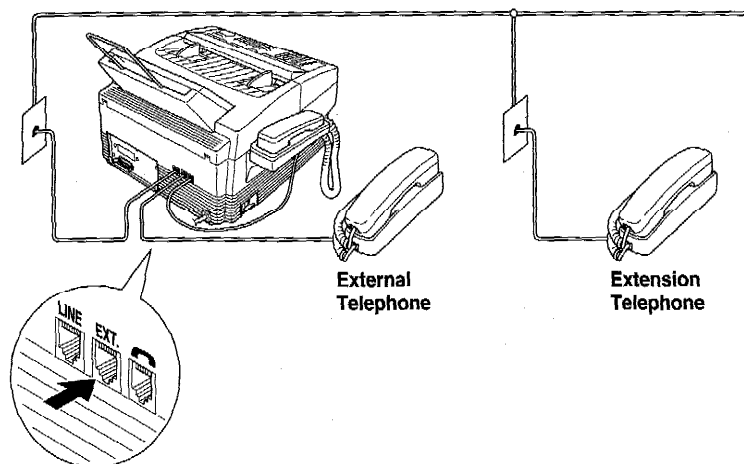

If the external telephone is in use, the warning message **EXT. TEL IN USE** will be displayed on the fax LCD. When the handset on the MFC is picked up, an alarm will sound. You can disconnect the external phone and switch to the MFC's handset by pressing **Hook**.

---

### *Using Remote Codes*

---

The Remote Activation Code (\*51) is used in F/T, and MSG CTR modes. The Deactivation Code (#51) is used only in F/T mode and MSG CTR mode.

### *Using the Activation Code*

---

When you are at the MFC, you will probably answer incoming calls before your MFC (or external TAD) is programmed to pick up. **If you answer a call and no one seems to be on the line, assume it is a fax message. Do not hang up.** You must activate your MFC to take over the call first. (If you are holding the MFC's handset, just press the Start key and hang up.) If you are on an extension/external phone, **press \*51 and wait for your MFC to respond before you hang up.** After 3 seconds you will hear receiving tones (chirps) through the handset of extension phone. Then hang up. You can repeat the code as many times as needed. Your MFC will take over the call and print the fax message. If your caller wants to talk before sending the fax, you can have a conversation first and then activate your MFC with the code.

The Remote Activation Code can also be used by your callers. When you are using your Message Center, your outgoing message (OGM) should end with the statement "to send a fax, press \*51". (See Chapter 8 "Message Center Mode Settings" for more information.)

### *Using the Deactivation Code*

---

When your MFC is in F/T mode, sometimes it will answer a call that is not fax calling tones (a telephone call or manual fax). It will respond with a **double ring** (short, short) to alert you to take over. Because it has already answered the call, only the MFC will ring, extension phones are no longer connected to the call. Pick up any phone on the line, except an external phone connected to the MFC.

To take over the call at the MFC:

Pick up the handset of the MFC and talk to the caller as usual. If no one is there or someone is trying to send you a manual fax, press the **Start** key and replace the handset. Your MFC will display RECEIVING and print the incoming fax message.

To take over the call at an extension phone:

Pick up the handset on another telephone and **press #51 quickly during the silence between the double ring pattern.** When the MFC hears the code it will stop ringing and let you speak with the caller. If no one is on the line or someone is trying to send you a manual fax, send the call back to the MFC (\*51).

### ***Making the Remote Codes Easier to Use***

You can change the codes at any time. It may be easier for you and your callers to press the same key three times (Example: \*\*\* and ###). Although you can change the codes to any numbers you want, try to avoid using digits for the Activation Code. The Remote Activation Code must not match any number you dial. If you try to dial a phone number that includes the Activation Code, your MFC will go into receiving mode.

If you accidentally pick up an extension phone when a fax message is being received, you may disrupt the transmission or render some portions unreadable.

### ***Changing and Registering Remote Codes***

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>7</b> .	1. FAX
5. Press <b>5</b> .	7. SETUP SYSTEM
6. Press ◀ (left arrow) or ▶ (right arrow) to choose ON (or OFF). Example: ON.	5. REMOTE CODE
7. Press <b>Set</b> .	REMOTE ACT.: ON
	SELECT ← → & SET
	REMOTE ACT.: ON

REGISTER FAX

8. Enter new remote code to activate. (Factory setting is \*51.) Then press **Set**.

ACT . CODE : \*51

9. Enter new remote code to deactivate. (Factory setting is #51.)

DEACT . CODE : #51

10. Press **Set**.

5 : REMOTE CODE

11. Press **Stop** to exit.

### C) CONNECTING AN EXTERNAL TELEPHONE ANSWERING DEVICE (TAD)

#### *How to Use an External TAD with the MFC*

---

When you have an **external** Telephone Answering Device on the fax phone line, the TAD will answer all the incoming calls. Your Brother MFC will listen in on the line for fax CNG tones. If it hears them, it will take over the call and receive the fax message. If it does not hear fax tones, it will let the TAD continue playing the outgoing message so the caller can leave a voice message.

The TAD must answer within 4 rings. The MFC cannot hear the CNG calling tones until the TAD answers the call. When the Ring Delay is set for 4 rings, only 8-10 seconds of CNG calling tones are left for the "handshake". So you must strictly follow the instructions for recording the OGM.


You must erase the incoming messages frequently on your TAD. When the TAD's memory is full it will not answer any incoming calls (fax or voice).

Put your MFC in Message Center mode and set Message Storage to VOICE: EXT mode. (See page 99.)

FOR YOUR INFORMATION

**Connecting an External TAD to the MFC**

You may connect an external TAD to your MFC, as shown below. Use the EXT. jack on your MFC.

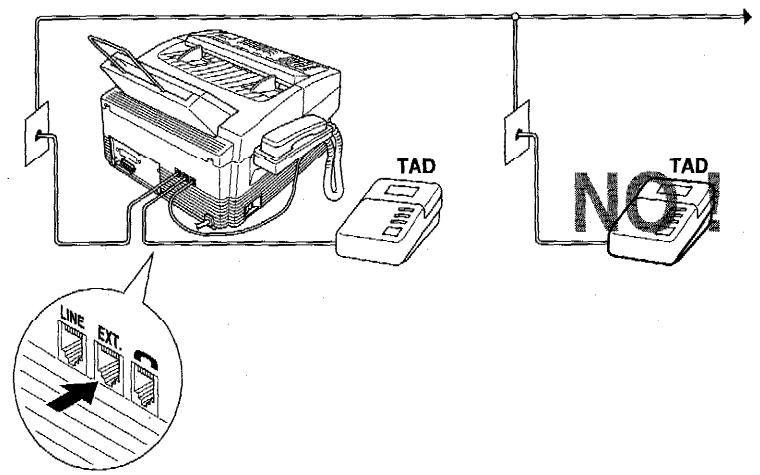


- Do not connect a TAD elsewhere on the same phone line. This will cause problems because your MFC and external TAD will both try to control the line.

Receive FAX

### Flowchart of External TAD Reception

Message Storage VOICE:EXT

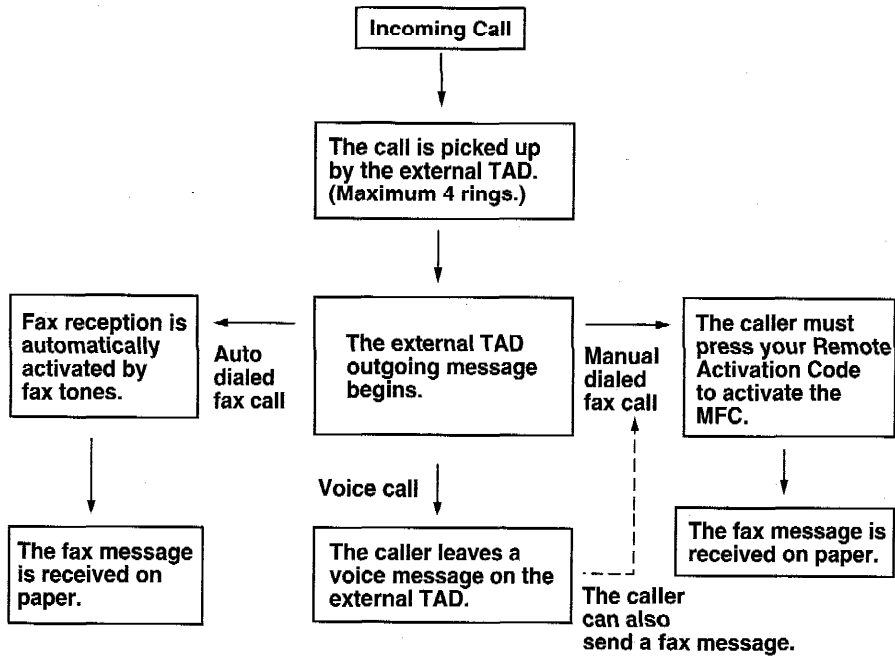

### External TAD Hookup

There is only one way you can hook up an external Telephone Answering Device (TAD) on the fax phone line. The TAD must be plugged into the back of the MFC in the jack labeled EXT. Your MFC cannot work properly if you plug the TAD into a wall jack. Follow these steps:

1. Plug the telephone line cord from the wall jack into the back of the MFC in the jack labeled LINE.
2. Plug the telephone line cord from your TAD into the back of the MFC in the jack labeled EXT. (Double check that the telephone line cord comes from the jack in the TAD for telephone line and not for telephone set.)
3. Put your MFC in Message Center mode by turning both the Fax and F/T lights on and set Message Storage to VOICE: EXT mode.
4. Set your TAD to 4 rings or less. (The MFC's Ring Delay setting does not apply).
5. Turn the TAD's Answer mode to ON.
6. Record the OGM (outgoing message) on your TAD as explained on the next page.



### ***Recording the TAD's Outgoing Message (OGM)***

---

The TAD's outgoing message is important because it must be set up to handle two kinds of fax receptions: automatic and manual. Timing is important.

1. Record 5 seconds of silence as the beginning of your message. (Your MFC will be able to hear the fax calling tones, of automatic fax transmissions, before they stop.)
2. Limit your speaking to 20 seconds.
3. End your 20 second message by giving your Remote Activation Code for people sending manual faxes:  
"After the beep, leave a message or send a fax by pressing \*51."

**NOTE:** Do not assume that most callers send faxes automatically. Many people do not realize they are not sending fax tones when they lift the handset or press the Hook key. Also, some machines may not send fax tones.

### ***Troubleshooting***

---

Sometimes other equipment on your phone line reserves a key that is in the Activation or Deactivation code. (Some answering machines reserve the "\*" key.) If the code you use to retrieve messages from your answering machine causes the line to be disconnected, try changing the Remote Codes. Change \*51 to ### and #51 to 999. The Remote Activation and Deactivation Codes may not work with some telephone systems or telephone sets.

## **D) DISTINCTIVE RINGING**

### ***Distinctive Ringing***

---

#### ***What Is Distinctive Ringing?***

---

Distinctive ringing is a service offered by the telephone carriers that allows you to have several different numbers on one phone line, so you can have a separate number for your MFC. Each number has its own distinctive ringing pattern. This way, when you get an incoming call, you can identify the number being called by its ring. Your local telephone company can provide more information about this service. The service is usually offered as a monthly charge to your normal telephone bill.

#### ***What Is the Advantage of Using the Distinctive Ringing Function?***

---

Using Distinctive Ringing is the most efficient way to receive both fax and telephone calls on the same line. It is much easier for your callers who dial manually. The MFC will answer with receiving tones so they will not have to press an activation code or wait 30 seconds to hear fax tones (F/T mode). And the people who call to talk on your main number, will not have to talk to your MFC. Basically, it gives you two independent numbers without the higher cost of a second line.

---

### ***Can My MFC Use Distinctive Ringing?***

---

Yes, it has a distinctive ringing function that allows you to register the distinctive ringing pattern of an additional phone number on the line. The number you register must be the number you want to use as your dedicated fax number. Once you register the ringing pattern, the MFC will be able to identify its own incoming calls and automatically receive faxes at that number. You can register only one ringing pattern. There are some ringing patterns that cannot be registered.

### ***Can I Change the Setting Later?***

---

Yes, you can change or cancel the distinctive ringing setting at any time. You can switch it OFF temporarily and then turn it back ON. When you move or get a new fax number, change the distinctive ringing mode to SET so you can register the new number.

### ***How Will the MFC Treat All Other Numbers?***

---

If you have registered the distinctive ringing number, the MFC will answer the registered number (with fax receiving tones) and receive faxes automatically. When a call comes in to your main number or to additional distinctive ringing numbers, all the phones will ring. You can set the MFC's Message Center or an external answering device (TAD) to answer calls on the other number(s). (See the chart on page 84.)

If you change the answer mode on the MFC to Fax or F/T, that setting will override the Distinctive Ringing setup. **In Fax or F/T modes, your MFC will answer all the phone numbers (including its own ring pattern).**

### ***The Message Center Answers the Other Phone Number(s) on the Line:***

---

If you change the answer mode on the MFC to MSG CTR (Message Center), it will allow the Distinctive Ringing function to work. The Message Center will answer only the main number or additional distinctive ringing numbers according to the way you have set Message Storage. (See page Message Center Mode Settings for details.)

**NOTE:** If you set the Message Storage to FAX: ON/VOICE: OFF, the Message Center will be set to answer the main number with fax receiving tones.

To have your Message Center's OGM answer your main number(s):

1. Register the distinctive ringing number. (See "Setting the Distinctive Ringing Function" on pages 85-87.)
2. Set the Message Center's Message Storage to either VOICE: ON/FAX: OFF or VOICE: ON/FAX: ON mode. (See pages 103-104.)
3. Keep the Message Center on (both Fax and F/T lights lit).
4. Turn Toll Saver OFF (see page 113) and set the Ring Delay to 4 rings (see pages 63-64).

***External Telephone Answering Device (TAD) Answers Other Number(s) on the Line:***

An external telephone answering device (TAD) can be set up to work with the Distinctive Ringing function. The external TAD must be set to its maximum number of rings (at least 4 ring patterns). Otherwise, it will answer the registered fax number before the MFC has time to recognize the ringing pattern. The external TAD's OGM (outgoing message) will answer your main number(s) if you do either #1 or #2 as follows:

1. Plug the external TAD into the EXT. jack of the MFC (you will not hear the first two rings on the MFC). Put your MFC in **Manual** mode (Fax and F/T lights off). Set the Message Center's Message Storage to either FAX: OFF/VOICE: EXT or FAX: ON/VOICE: EXT. Turn the MSG CTR on (Fax and F/T lights lit) or set the MFC to Manual Mode.
2. Plug the external TAD into another phone jack and put the MFC in Manual mode (Fax and F/T lights turned off).


***Retrieving Faxes from a Remote Site When Using Distinctive Ringing:***

When you use the Distinctive Ringing feature, faxes are printed on paper. If you want to be able to retrieve faxes from another location, you must set up the Message Center for FAX: ON. This allows fax messages to be stored in the Message Center's memory, so they can be retrieved. However, because the Message Center only answers the main number(s), you must make sure the faxing party sends faxes, that must be retrieved, to the main number.

***How Does the Distinctive Ringing Function Work?***

Your telephone number will have the standard ring pattern of long long, while the new number could have a ring pattern of short short, long short, etc. When Distinctive Ringing is ON, you will not hear the first two rings of all incoming calls on the MFC. Extension phones will ring as usual. If the MFC recognizes the ring pattern, all ringing will stop and the MFC will answer and automatically receive the fax message. Otherwise, you will hear the extension phones and the MFC continue to ring. The MFC always listens to at least two ring patterns before it answers, so do not pick up the phone during that time. You will quickly learn to recognize the ring pattern for faxes, so you will not be tempted to answer that number. Either you, your Message Center or a telephone answering device can answer the main number(s).

## Flowchart of an Incoming Call

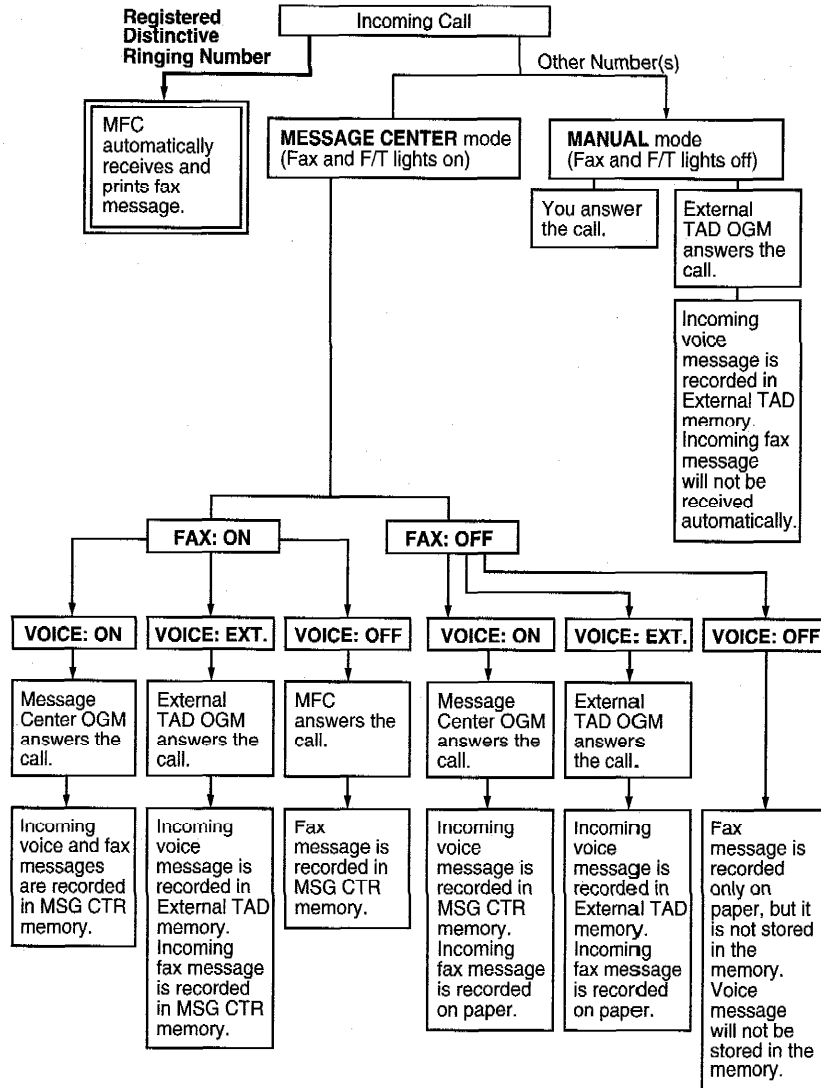

***Which Phone Number Should I Register?***

It is a good idea to keep your old number for its original purpose and to register the new number as your fax number. Remember to give the new fax number to your customers and colleagues.

***What Must I Do to Set Up Distinctive Ringing?***

To use the Distinctive Ringing feature you must:

1. Get the distinctive ringing service from your telephone carrier.
2. When your distinctive ringing number is available, register it in the function called "Setting the Distinctive Ringing Function".
3. Keep the MFC in Manual answer mode (both Fax and F/T lights turned off) if you want to answer the main number yourself. Keep the MFC in MSG CTR answer mode (both Fax and F/T lights lit) if you want the Message Center to answer the main number(s).

***Setting the Distinctive Ringing Function***

This function is a one-time procedure to register a distinctive ringing number with your MFC. Your MFC will answer the registered number automatically, simulating Fax mode on a dedicated fax line. You can register only **one** number. **Do not try to set up this function if you do not have the distinctive ringing service. It may cause your MFC to malfunction.**

This procedure is in two parts: First, you must put the MFC in SET mode; D/R SET MODE will be on the display screen. Second, you must wait for a friend to call the distinctive ringing number so you can register the ringing pattern. When a call comes in, do not pick up the handset until the MFC's display says PICK UP TO SET. Then pick up the handset. If the caller dialed your distinctive ringing number, press the Start key and check that the display says REGISTERED before you hang up. If the caller dialed the other number, press the Stop key and hang up to try again.

Receive FAX

**Before you begin this function:**

1. If your MFC is connected to a telephone answering device or to the telephone company's Voice Mail system, disconnect it before you begin this function.
2. Have a friend ready to call your distinctive ringing number.

**KEYS TO PRESS**

**THE DISPLAY WILL SHOW:**

1. Press **Function**.

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

2. Wait for two seconds.

1. FAX  
2. PRINTER

3. Press 1.

1. FAX

4. Press 6.

6. TEL OPTIONS

5. Press 6.

6. DISTINCTIVE

DISTINCTIVE: OFF

SELECT ← → & SET

6. Press ◀ (left arrow) or ▶ (right arrow) to find the SET mode.

DISTINCTIVE: SET

7. Press **Set**.

6. DISTINCTIVE

8. Press **Stop**.

D/R SET MODE  
ONLINE

**NOTE:** The display should say **D/R SET MODE**. Also, the answer mode lights will flash. You must now wait for someone to call the distinctive ringing fax number.

**TROUBLESHOOTING TIP**

If your MFC display says **D/R SET MODE** and you are not in the process of setting up a distinctive ringing number, press the **Stop** key to exit this function. The settings will remain unchanged.

9. When the phone rings, listen carefully to check that the ringing pattern is the one you want to register. If it is, wait until the display says **PICK UP TO SET**. Then pick up the fax handset.

PICK UP TO SET  
ONLINE

10. Press **Start** to set. Check that the display says **REGISTERED**. (If the other number was called, press **Stop** to cancel.)

START TO SET  
ONLINE

STOP TO CANCEL  
ONLINE

REGISTERED  
ONLINE

11. Press **Start** again to receive the incoming fax, or if the call is a voice call, talk into the handset.

TELEPHONE/FAX  
ONLINE

**After you complete this one-time setup:**

1. The Distinctive Ringing function automatically will be changed from SET to ON. Set the answer mode based upon your needs.
2. Be sure to have a friend call you on both numbers to test that everything is set up correctly.
3. If you do not complete this function by pressing **Start** key to register a number, your MFC will stay in D/R SET MODE. So, if you decide not to register a number, you must repeat Steps 1-8 and in Step 6 change the mode to OFF.

***How to Turn the Distinctive Ringing Function ON or OFF***

The distinctive ringing function is designed to accommodate the distinctive ringing service (a telephone service that provides you with multiple numbers, each with a distinctive ring pattern, on one line). You can change the distinctive ringing function setting to ON or OFF as needed after you have registered the distinctive ringing number in the function called Setting the Distinctive Ringing Function. To change the setting, repeat Steps 1-8 above; Step 6 is where you can select either ON or OFF.

**E) CALLER ID*****What is Caller ID?***

Caller ID is a telephone service that allows the subscriber to see a display of the caller's phone number (or name in certain states) as the telephone rings. It is a fast way to screen your calls. You can respond quickly to calls you missed, because Caller IDs are received and stored in your MFC's memory.

**NOTICE**

To get the Caller ID Service: apply for the Caller ID service at your local telephone company.

The type of service varies from state to state and is determined by your telephone company. Your particular service may display only the caller's phone number or the caller's number and/or name.

Receive FAX

***Advantages of Caller ID*****For Business**

All businesses profit from a quicker response to customer calls. Businesses that provide mail order services, money-lending services or provide confidential information, can protect themselves from false orders or acceptance of false identification.

**At Home**

Residential customers can protect themselves from unwanted calls.

---

## ***How Does Caller ID Work?***

---

### ***The Caller ID Appears on the Display When Your Telephone Rings***

---

As your telephone rings, the Display shows you the caller's phone number (or caller's name in certain states). You will know who is calling before you pick up the handset or before your MFC automatically receives the call. Once you pick up the handset, the caller's ID disappears. If both the caller's phone number and name are received, only the name will appear on the Display. You will see the first 16 characters of the number or name.

- Helpful Hints**
- If OUT OF AREA appears on the Display, it means that the call came from outside your caller ID service area.
  - If PRIVATE CALL appears on the Display, it means the caller intentionally blocked the transmission of his/her ID.
  - If no caller ID was transmitted to your MFC, CALL PICKUP will remain on the display.

**NOTE:** Please set the number of rings to more than 02 to use Caller ID. If you set the number of rings to 01, you cannot receive the Caller ID.

### ***The Caller ID is Stored in Your Machine's Memory***

---

The MFC can store a maximum of the last 30 incoming caller IDs in the memory, along with the time and date of reception. The 31st call will cause the oldest ID to be erased.

The Caller ID information stored in the memory can be scrolled through on the display.

And you can also print the Caller ID list and review calls you received by checking the Caller IDs in memory. This report will list the Date, Time, Phone Number (Caller ID), Name (in certain states), and type of call (Comment). (See pages 90-91.)

### ***Scanning through the Caller IDs Stored in the Memory***

---

You can display the caller IDs that are stored in the memory as follows. (You can skip to Step 6 below by pressing the **Shift** and **Tel-index** keys simultaneously.)

<b>KEYS TO PRESS</b>	<b>THE DISPLAY WILL SHOW:</b>
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
	1. FAX 2. PRINTER



**CALLER ID RECEIVING FAXES AND OTHER CALLS**

3. Press **1**.

1.FAX

4. Press **6**.

6.TEL OPTIONS

5. Press **7**.

7.CALLER ID

6. Press **Set**.

30)1455551212

The Caller ID of the last call will appear on the display.

- If no ID is stored, the beeper will sound and NO CALLER ID will appear on the display.

7. Press ◀ (left arrow) or ▶ (right arrow) key to scroll through the Caller IDs in the memory.

25)5555151

In this example, press the ◀ key 5 times.

- Pressing the ◀ key will cycle backward through the stored caller IDs from the latest to the oldest. If you press the ◀ key when the oldest ID appears, the latest one will appear. The ▶ key cycles forward.

- After 2 seconds, the date and time the caller ID was received will appear.

8. Press **Stop** to exit.

**FOR YOUR INFORMATION**

***Clearing a Caller ID Stored in Memory***

For effective use of the memory, it is recommended that you clear the Caller IDs stored in memory by pressing **Clear** when the display shows the number or name.

Receive FAX



### ***Printing the Caller ID List***

You can print a listing of the Caller IDs for the last 30 calls received. Both telephone and fax calls will be listed.

#### **KEYS TO PRESS**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **3**.
5. Press **9**.
6. Press **Set** or wait 2 seconds until you see the prompt at the right.
7. Press **Start**.

#### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

3. PRINT REPORTS

9. CALLER ID

PRESS START KEY

PRINTING

#### **▼ Sample of Caller ID List**

CALLER ID LIST					
					TIME : 09/04/1998 14:05
					NAME : BROTHER
					FAX : 908-469-4547
					TEL : 908-356-8880
	DATE	TIME	CALLER ID	NAME	COMMENT
01	09/04	13:45	5551212	KOUJI TAKEYAMA	TEL RX
02	09/04	13:45	5551212	KOUJI TAKEYAMA	TEL
03	09/04	13:45	5551111		TEL RX
04	09/04	13:45	5551010		RX
05	09/04	13:45	5552222		
06	09/04	13:45	5552323		
07	09/04	13:45	5550000	SMITH SHARON	TEL RX
08	09/04	13:45	5551212	KOUJI TAKEYAMA	TEL TX
09	09/04	13:45	5551234		RX
10	09/04	13:45	5551010	SMITH SHARON	TX
11	09/04	13:45	5550101	JONES JENNIFER	TEL RX

**NOTE:** "TX" means Transmit, "RX" means Receive.

**CONTENTS OF THE LIST:**

- DATE & TIME
- CALLER ID
- NAME (ONLY WHEN AVAILABLE)
- COMMENT

**COMMENTS WILL INCLUDE:**

- TX means your MFC sent a fax message when it was polled or called.
- RX means your MFC received a fax message (except Polling or Call Reservation).
- TEL means you answered a telephone call at your MFC, external TAD or external phone, or you receive an ICM in your Message Center memory.
- BLANK means the call was not answered or you answered on an extension phone.

RECEIVED FAX

## 7. POLLING


### FOR YOUR INFORMATION

#### ***What Is Polling?***

Polling is the process of **retrieving** faxes from another fax machine. You may use your MFC to "poll" other machines, or you may ask someone to poll your MFC. The party who polls pays for the cost of the call.

#### ***How Does It Work?***

First all parties set up their fax machines so that they can accommodate polling. Then one party leaves documents in the fax machine so that the other party can call and have the documents sent to them.

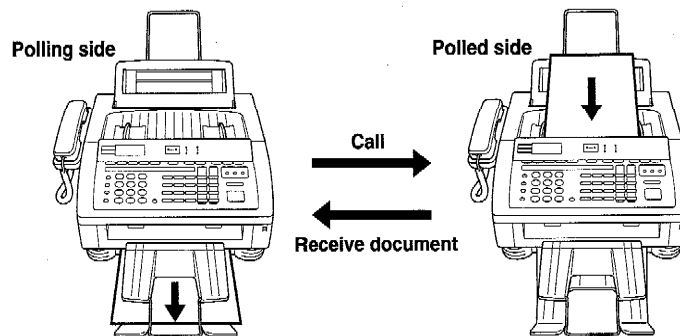

#### ***When to Use Polling***

Use polling to control the cost of who pays for sending a fax.

1. If **you** want to pay for the cost of the call: Send faxes to other parties as you normally would, and if another party has documents to send you, ask if you can poll for them.
2. If you want **others** to pay for the cost of the call: Ask them to poll your MFC for documents they want, and have them fax any documents that you want.

**NOTE:** There are some fax machines that will not respond to the polling function.

**Helpful Hints Using Polling Effectively (Examples)**

**Problem No. 1:** You want another party to send you a long fax, but they do not want to pay for the call.

**Solution:** Ask them to leave the document in their fax machine so you can poll for it.

**Problem No. 2:** Sales representatives have difficulty sending faxes to the head office's fax machine because it is busy much of the time.

**Solution:** Head office can poll the sales representatives' fax machines.

**Problem No. 3:** Because of the time or location, it is cheaper for someone to call you than it is for you to make the call.

**Solution:** Ask the other party to poll for the documents and offer to pay for the call at their lower rate.

**Polling Another Fax Machine (Calling) (Temporary Setting)**

Once you have set up polling, as described below, and the other party has set their fax machine to POLLED WAITING, you can receive their documents automatically.

**KEYS TO PRESS**

- Make sure there are no documents in your feeder.
- 1. Press **Function**.
- 2. Wait for two seconds.
- 3. Press **1**.
- 4. Press **1**.
- 5. Press **2**.
- 6. Wait for two seconds.
- 7. Press ◀ (left arrow) or ▶ (right arrow) to select **POLLING ON**.
- 8. Press **Set**.

**THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

1. TEMP. SETTINGS

2. POLLING

POLLING: OFF

SELECT ← → & SET

POLLING: ON

2. POLLING

**FAX Options**

9. Press **Stop**.

ENTER FAX NO.  
ONLINE

10. Enter the fax number.

Example: One Touch dialing.

PRESS START KEY  
ONLINE

11. Press **Start**.

NJ OFFICE  
ONLINE

DIALING #01  
ONLINE

RECEIVING P.01  
ONLINE

### ***Setting Up Polled Waiting (Being Called) (Temporary Setting)***

Polled Waiting is when you place a document in your MFC and set it to allow another fax machine to retrieve that document. Your MFC will print a Polled Report after the transmission.

#### **KEYS TO PRESS**

1. Insert the documents into the feeder.

2. Press **Function**.

3. Wait for two seconds.

4. Press **1**.

5. Press **1**.

6. Press **2**.

7. Wait for two seconds.

#### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

MEMORY 100%  
SCAN READY

FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

1. TEMP. SETTINGS

2. POLLING

POLLING: OFF

SELECT ← → & SET

8. Press ◀ (left arrow) or ▶ (right arrow) to select Polling ON.

POLLING:ON

9. Press **Set**.

1.DOC 2.MEMORY

10. Press **1** or **2** to make your selection. If you select 1.DOC, the MFC starts scanning the document at the time it is polled. In this case, if you want to send another document somewhere, you will have to interrupt by pressing **Function** and **1** and **0**. (See page 48.) If you select 2.MEMORY, your MFC starts scanning the document immediately so you can retrieve your original now.

2.POLLING

11. Press **Stop**.

PRESS START KEY  
ONLINE

12. Press **Start** and wait for the polling call to come in.

POLLING WAITING  
ONLINE

### ***Delayed Polling (Temporary Setting)***

You can set the time when you want polling to take place. After you select POLLING:ON, press **Set**, then press **1** and use the dial pad to enter the time when you want polling to take place.

#### **KEYS TO PRESS**

Make sure no documents are in the feeder.

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **1**.
5. Press **2**.

#### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1.FAX  
2.PRINTER


1.FAX

1.TEMP.SETTINGS

2.POLLING

**FAX Options**

6. Wait for two seconds.
7. Press ◀ (left arrow) or ▶ (right arrow) to select Polling ON.
8. Press **Set**.
9. Press **1**.
10. Enter the time.  
Example: **19:45** (7:45P.M.).
11. Wait for two seconds.
12. Press **Stop**.
13. Enter the fax number.  
Example: One Touch dialing.
14. Press **Start**.  
The MFC waits until the specified time to call.

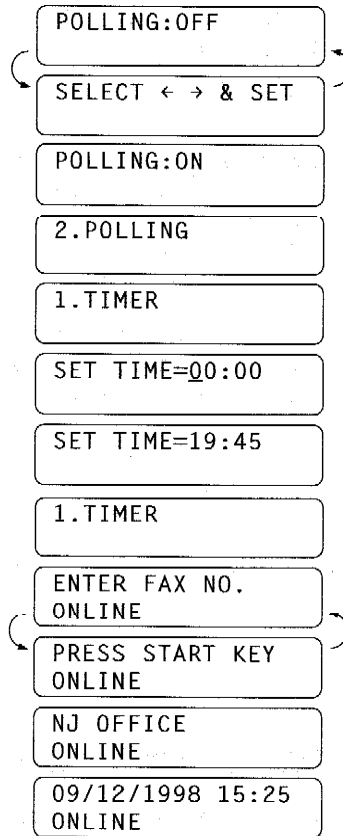

### ***Sequential Polling (Temporary Setting)***

This function is the reverse of Broadcasting, in which your MFC sends a document to several destinations. In a sequential polling operation, your MFC will request documents from several fax units in a single operation.

After all the polling operations are finished, a Sequential Polling Report will be printed automatically.



### KEYS TO PRESS

1. Make sure there are no documents in the feeder.
2. Press **Function**.
3. Wait for two seconds.
4. Press **1**.
5. Press **1**.
6. Press **2**.
7. Press ◀ (left arrow) or ▶ (right arrow) to select Polling ON.
8. Press **Set**.
9. Press **Stop**.
10. Specify the destination of fax machines, that you wish to poll by using One Touch, Speed Dial, Group keys, or the dial pad. You must press **Broadcast** between each location. (See pages 46-47). Example: Group key.
11. Press **Start**. Your MFC polls each number or group member in turn for a document.

### THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

1. TEMP. SETTINGS

2. POLLING

POLLING: OFF

SELECT ◀ → & SET

POLLING: ON

2. POLLING

ENTER FAX NO.  
ONLINE

PRESS START KEY  
ONLINE

BROTHER  
ONLINE

DIALING #01  
ONLINE

## 8. MESSAGE CENTER MODE SETTINGS

### A) GETTING STARTED


#### *What Is the Message Center Mode?*

The Message Center Mode allows you to store the incoming fax/voice messages into a flexible memory. Fax Retrieval, Paging and Fax Forwarding features are available in this mode.

The Message Center is a built-in fax and voice message answering device to more effectively manage your voice and fax messages, while you are out.

This flexible memory can be used for voice messages, fax messages or a combination that stores both types on a first come, first served basis. Any fax or voice message that is stored in the memory can be retrieved from a remote location.

Your Message Center has a total capacity of 24 minutes of voice messages or up to 80 pages of fax messages. The memory on your MFC can be expanded.

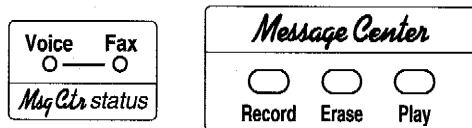

The Fax and F/T lights must be lit to turn on Message Center Mode.

**NOTE: The Message Center outgoing message (OGM) must be recorded before you can activate the Message Center mode.**

#### *What Do I Want the Message Center to Do?*

There are six ways to allocate the flexible Message Center memory, depending upon which best fits your needs.

You may have to use only one mode on a regular basis, but periodically change modes to meet high or low message days. The six modes are as follows:



The factory setting is FAX: OFF/VOICE: ON.

▼ Mode Settings at a Glance

MSG CTR MODE	WHAT IT DOES	WHEN TO USE IT
1) FAX : ON VOICE : ON	Both voice and fax messages will be stored on a "first come, first served" basis in the memory. Either Fax Forwarding or Paging and Remote Retrieval of voice and fax messages is available.	Use this mode when you wish to store both fax and voice messages in the memory. Erase your messages frequently to keep memory available for when you need it.
2) FAX : ON VOICE : EXT. (External Answering Machine is ON.)	Voice calls will be stored in your external answering machine, which must be plugged into the EXT. jack of the MFC. The external TAD will answer all your calls; retrieve voice messages from it as usual. Paging for voice messages is not available.	Use this mode when you need all your Message Center memory for fax messages or if you prefer the sound quality of a tape recorder for your voice messages.
3) FAX : ON VOICE : OFF	Voice calls will not be stored.	Use this mode when you do not have to receive voice messages.
4) FAX : OFF VOICE : ON	All available memory in the Message Center will be used to store voice messages. Faxes will print on paper. You can do Paging and Remote Retrieval of voice messages.	Use this mode if you wish to retrieve voice messages from a remote location, but can wait until you are at the MFC to get your fax messages.
5) FAX : OFF VOICE : EXT. (External Answering Machine is ON.)	Fax messages will be received only on paper, but will not be stored in the memory. Voice calls will not be stored unless an external TAD is plugged into the EXT. jack of your MFC.	Use this mode if you need more TAD memory than is available in the Message Center or if you prefer the sound quality of a tape recorder.
6) FAX : OFF VOICE : OFF	Fax messages will be received only on paper, but will not be stored in the memory. Voice calls will not be stored in the memory either.	Use this mode if you do not want to use the Message Center memory for receiving fax/voice messages.


Use 2) FAX: ON, VOICE: EXT. and 3) FAX: ON, VOICE: OFF mode when you want all available memory to be used to store fax messages (for Fax Forwarding or Paging and Remote Retrieval). Keep Backup Printing turned ON to get a printed copy. (See pages 107-108.)

## Flowchart of an Incoming Call

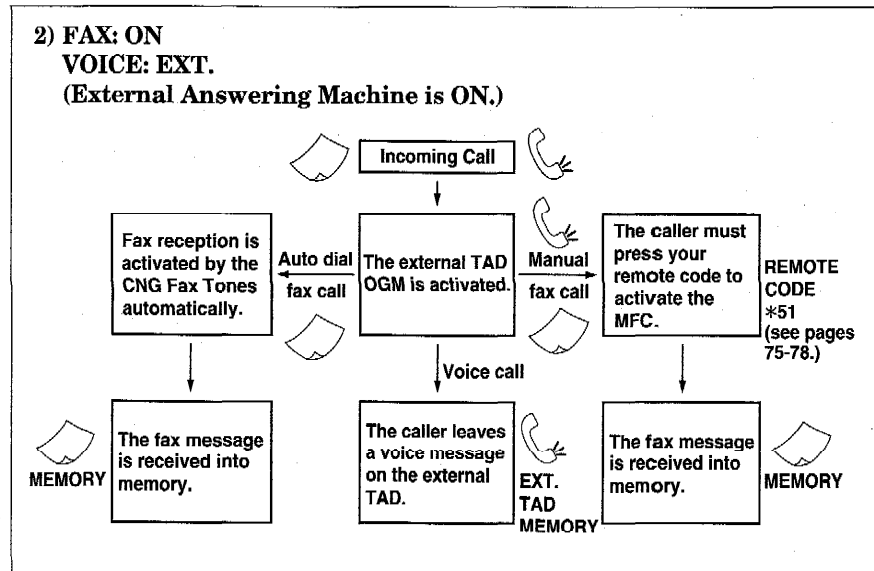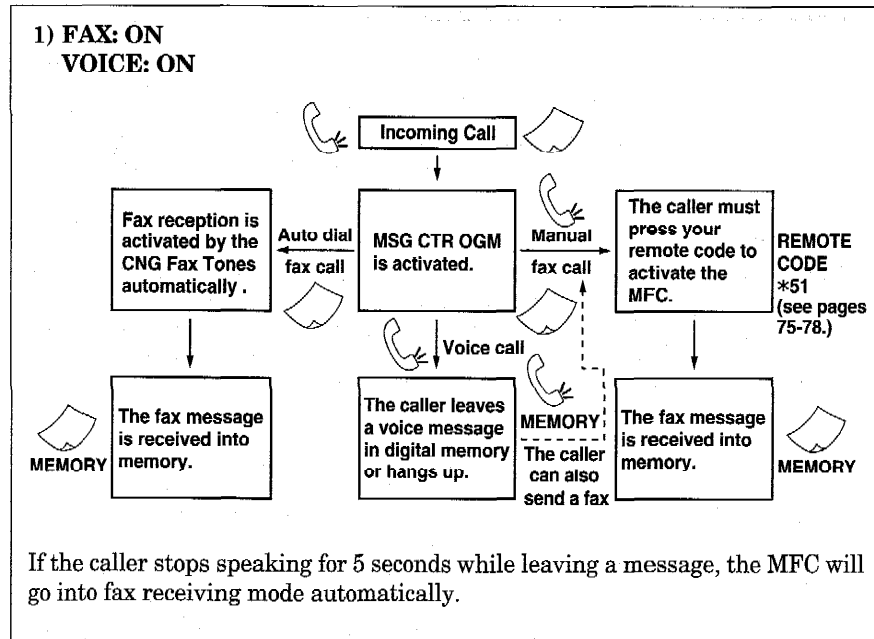


NOTE: OGM = outgoing message

**3) FAX: ON  
VOICE: OFF  
(Also, External Answering Machine is OFF.)**

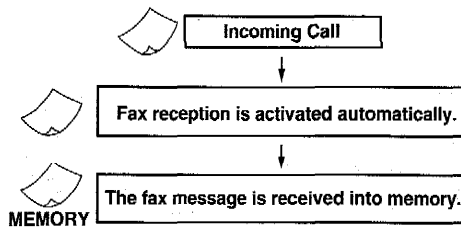

**4) FAX: OFF  
VOICE: ON**

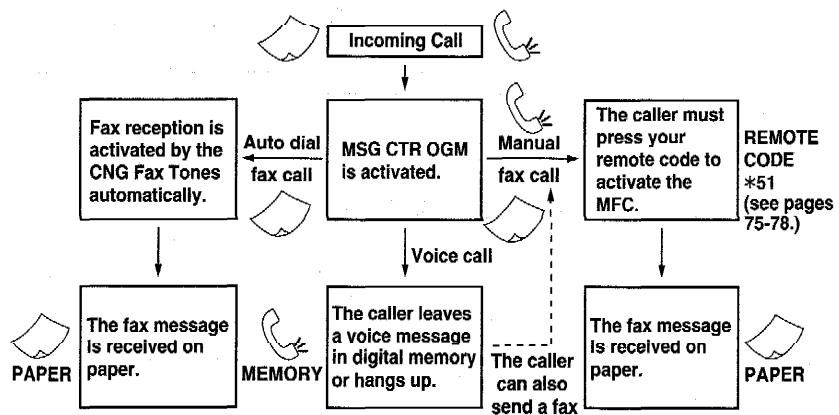


If the caller stops speaking for 5 seconds while leaving a message, the MFC will go into fax receiving mode automatically.


**NOTE:** OGM = outgoing message



**5) FAX: OFF  
VOICE: EXT.  
(External Answering Machine is ON.)**

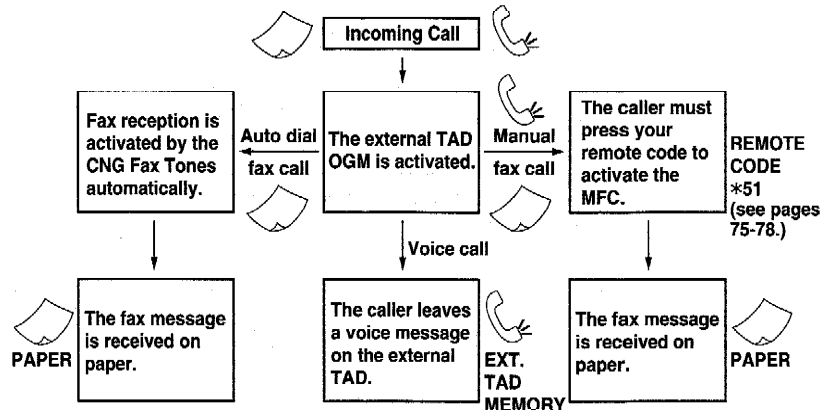

**6) FAX: OFF  
VOICE: OFF**

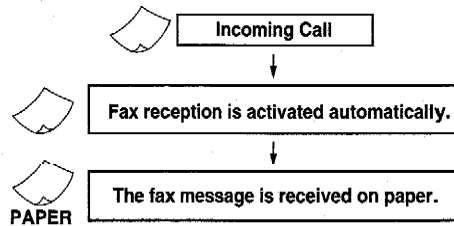

NOTE: OGM = outgoing message

## Turning on the Message Center with 3 Basic Steps

You can get started receiving messages by doing the following three steps.

1. Set the Message Storage.
2. Record the Outgoing Message (MSG CTR OGM).
3. Activate the Message Center mode, by pressing the **Mode** button until both Fax and F/T LEDs are lit.

## Setting the Message Storage

Setting the Message Storage is the first step in turning on the Message Center Mode. Before you set the Message Storage, make sure you carefully read "Mode Settings at a Glance" (see page 99). Once you decide the mode that best suits your needs, follow the steps below.

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>8</b> .	1. FAX
5. Press <b>1</b> .	8. SETUP MSG CTR
	1. MSG STORAGE
	FAX: OFF
	SELECT ← → & SET
6. Press ◀ (left arrow) or ▶ (right arrow) repeatedly to select ON (or OFF). Example: FAX: ON.	FAX: ON

7. Press **Set**.

VOICE:ON  
SELECT ← → & SET

8. Press ◀ (left arrow) or ▶ (right arrow) repeatedly to select ON, OFF or EXT.  
Example: VOICE: ON.

VOICE:ON

9. Press **Set**.

1.MSG STORAGE

10. Press **Stop** to exit.

### ***Recording the MSG CTR Outgoing Message (MSG CTR OGM)***

Recording your Message Center outgoing message (OGM) is the second step in turning on the Message Center Mode. After you have set the Message Storage (FAX: ON, VOICE: ON and FAX: OFF, VOICE: ON modes), record your Message Center OGM. The type of OGM you select depends upon the Answer Mode you have chosen. For the Message Center Mode, you must select MSG CTR OGM in Step 4 (not F/T OGM). **You will not be able to turn on the Message Center Mode (both Fax and F/T lights lit) until you have recorded an outgoing message for MSG CTR OGM.** For the best recording quality, hold the handset approximately 2 to 3 inches from your mouth (at a slight angle). This will avoid recording feedback.

It is important to tell your callers your three-digit remote activation code, because many callers do not realize that they are dialing manually when they press the Hook key or lift the handset. (If you have changed your remote code, use it instead of \*51.) Keep your outgoing message **under 20 seconds**. If you have more to say and need a short instruction, end with:

“After the beep, please leave a message or send a fax, by pressing \*51.”

—OR—

“Hi, this is \_\_\_. I can't take your call right now. So after the beep, please leave a message or send a fax. To send a fax, press \*51, wait for fax tones, then press Start.”

#### **KEYS TO PRESS**

1. Press **Function**.

2. Wait for two seconds.

3. Press **1**.

#### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE


ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX




4. Press **8**.
5. Press **6**.
6. Press ◀ (left arrow) or ▶ (right arrow) repeatedly until you see MSG CTR OGM.
7. Press **Set**.
8. Press **Record**.
9. Pick up the handset.
10. Record a message shorter than 20 seconds.
11. Replace the handset.  
The recorded message is played automatically.
12. Press **Stop** to exit.

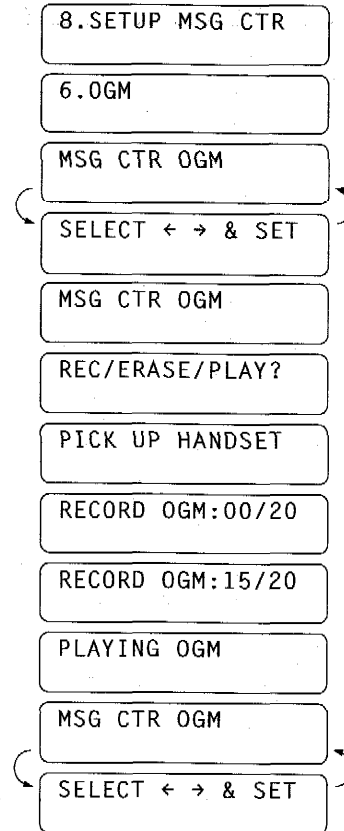

### Activating the Message Center Mode

Now that you have selected the type of message storage you need (see pages 103-104) and recorded your outgoing message (see pages 104-105), you are ready to turn your Message Center Mode on, when you leave your home or office.

 To activate Message Center .....




Press **Mode** on the control panel until both the "Fax" and "F/T" lights are on.


...Then you can easily identify the Message Center mode that is on by viewing the Message Center indicator lights.

## B) GETTING YOUR MESSAGES

### How Will I Know Messages Have Been Received?

Once you return home or to the office you can easily and quickly see if any voice or fax messages have been stored in the Message Center. There are two ways to determine if messages are stored.

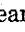- (1) If the VOICE and /or Fax indicator lights are flashing, there is a new message stored. (  means flashing.) Once a new voice message is played, the VOICE indicator light stops flashing and stays on. And once a new fax message is printed, the Fax indicator light will go off.

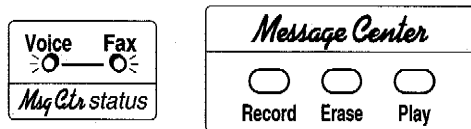

- (2) The LCD display will indicate the total number of incoming VOICE and/or FAX messages stored in Message Center memory. The number of VOICE includes the Memo messages.

VOICE:03 FAX:02  
ONLINE


(See page 107 for playing an incoming voice message.)

(See pages 108-109 for printing faxes.)

#### FOR YOUR INFORMATION

##### **What Happens When the Memory Is Full...**

If the memory becomes full when you have set your MFC to Message Center mode, the MFC will change to F/T mode automatically. (LED lights do not change.) In this mode, the MFC can accept incoming faxes automatically. Then, if your MFC should run out of paper, the answer mode will shift automatically to Manual mode. In Manual mode the call is not answered, so your caller will know to try again later.

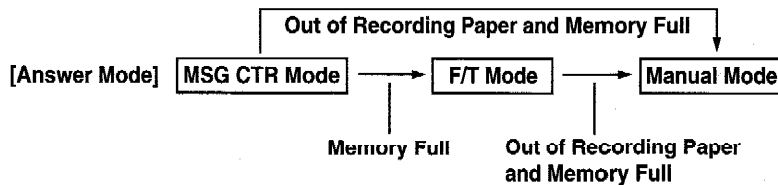

Print the Memory Status List (see page 151) and select the item to be cleared to regain available memory.

GETTING YOUR MESSAGES MESSAGE CENTER MODE SETTINGS

---

### ***Playing an Incoming Voice Message (ICM) and Recorded Memo (or Voice Alarm)***

---

#### **KEYS TO PRESS**

1. Press **Play**.  
(Press **Function** and then **Play** for Voice Alarm.)
  - All your incoming messages and recorded memo will be played in the order they were recorded.
  - During the first second that the message plays, the display will show the current message number/total number of messages.
  - For one second, the MFC will beep and the Caller ID will flash on the display if it was received.
  - The ICM will start playing and the date and time it was recorded will appear on the display.
  - You can use ◀ (left arrow) to play the message again. If you press the arrow during the beeping before the message, the previous message will be played.
  - You can use ▶ (right arrow) to skip to the next message.
2. Press **Stop** to exit.

#### **THE DISPLAY WILL SHOW:**

VOICE:03 FAX:02  
ONLINE

MESSAGE 01/03  
ONLINE

( 9815550101  
ONLINE )

14:00 09/12/1998  
ONLINE

**NOTE:** You can change the speaker volume using **Broadcast** and **Help**. (See page 73.)

### ***Backup Printing Option***

---

When you choose FAX: ON in the Message Center Mode, all incoming fax messages are stored in the available memory. The factory setting for the Backup Printing option is set to ON, so you will also get a copy printed on paper. If you change the Backup Printing option to OFF as follows, the faxes are stored without a backup copy:

#### **KEYS TO PRESS**

1. Press **Function**.

#### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

2. Wait for two seconds.
3. Press **1**.
4. Press **8**.
5. Press **2**.
6. Press ◀ (left arrow) or ▶ (right arrow) to access the OFF setting.  
Example: **OFF**.
7. Press **Set**.
8. Press **Stop** to exit.

1. FAX  
2. PRINTER

1. FAX

8. SETUP MSG CTR

2. BACKUP PRINT

BACKUP PRINT: ON

SELECT ← → & SET

BACKUP PRINT: OFF

2. BACKUP PRINT

### ***Printing a Fax Message***

You can print a fax message that is stored in the memory.  
Once you print a fax message, the Fax indicator light will go off.

#### **KEYS TO PRESS**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **8**.
5. Press **7**.

#### **THE DISPLAY WILL SHOW:**

VOICE: 03 FAX: 02  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

8. SETUP MSG CTR

7. PRINT FAX

PRESS START KEY

6. Press **Start**.

PRINTING

7.PRINT FAX

7. Press **Stop** to exit.

FOR YOUR INFORMATION

***Erasing and Printing FAX Messages***

1. It is not possible to erase a single fax message, you can erase only all or none of them. (See pages 110-111, "All in One Erasing".)
2. If you choose to erase all the fax messages, your MFC first will print any fax messages that have not been printed, before it erases them from the memory.

***Calling Your Message Center for Messages  
(See Remote Retrieval)***

If you have set your Message Center to store incoming fax messages (FAX: ON, VOICE: OFF/EXT. or FAX: ON, VOICE: ON modes), you have the ability to retrieve these fax messages from any remote group 3 facsimile machine.

Of course you can also remotely retrieve your voice messages from any touch tone phone.

(See pages 121-124 for more information.)

## C) ERASING YOUR MESSAGES

### *Erasing Incoming Voice Messages, Fax Messages and Recorded Memo (or Voice Alarm)*

There are two ways to erase voice messages and recorded Memo: One by One Erasing and All in One Erasing.

Fax messages cannot be erased one at a time.

#### *One by One Erasing*

##### KEYS TO PRESS

1. Press **Play** and begin to play.  
(Press **Function** and then **Play** for Voice Alarm.)
2. Press **Erase** before you hear the beep, which means the beginning of next message.
3. Press **1** to erase this message or **2** to exit the function.

##### THE DISPLAY WILL SHOW:

MESSAGE 01/03  
ONLINE

ERASE THIS MSG.?  
ONLINE

1. YES 2. NO  
ONLINE

#### *All in One Erasing*

You can erase all incoming Voice or Fax messages at once.

##### KEYS TO PRESS

1. Press **Erase** when the display asks you if you want to erase.
2. Press **◀** (left arrow) or **▶** (right arrow) to select whether you want to erase all voice messages (VOICE), all document messages (FAX), or all messages (MSG).  
Example: **ALL VOICE**.

##### THE DISPLAY WILL SHOW:


VOICE:03 FAX:02  
ONLINE

ERASE ALL VOICE?  
ONLINE

SELECT ← → & SET  
ONLINE

ERASE ALL VOICE?  
ONLINE

3. Press **Set**.

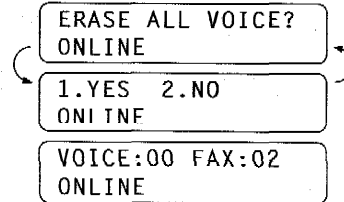

4. Press **1** to erase or **2** to cancel.

### D) CHANGING THE OUTGOING MESSAGE

#### *Playing Your Outgoing Message (OGM)*

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>8</b> .	1. FAX
5. Press <b>6</b> .	8. SETUP MSG CTR
	6. OGM
	MSG CTR OGM
6. Press <b>←</b> (left arrow) or <b>→</b> (right arrow) to select either MSG CTR OGM or F/T OGM. Example: <b>MSG CTR OGM</b> .	SELECT ← → & SET
	MSG CTR OGM
7. Press <b>Set</b> .	REC/ERASE/PLAY?
8. Press <b>Play</b> to start playing your outgoing message.	PLAYING OGM
9. Press <b>Stop</b> to exit.	

**NOTE:** You can change the speaker volume pressing **Broadcast** and **Help**. (See page 73.)

## ***Erasing Your Outgoing Message (OGM)***

<b>KEYS TO PRESS</b>	<b>THE DISPLAY WILL SHOW:</b>
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>8</b> .	1. FAX
5. Press <b>6</b> .	8. SETUP MSG CTR 6. OGM
6. Press ◀ (left arrow) or ▶ (right arrow) to select either MSG CTR OGM or F/T OGM. Example: <b>MSG CTR OGM</b> .	MSG CTR OGM SELECT ◀ → & SET
7. Press <b>Set</b> .	MSG CTR OGM REC/ERASE/PLAY?
8. Press <b>Erase</b> .	ERASE OGM?
9. Press <b>1</b> to erase OGM.	1. YES 2. NO
10. Press <b>Stop</b> to exit.	REC/ERASE/PLAY?

\* Record a new Outgoing Message. (See the section "Recording the MSG CTR Outgoing Message (MSG CTR OGM)" on pages 104-105).



## E) MORE FEATURES

### Setting the Toll Saver

Toll saver allows you to call your MFC and hang up without paying for the call if you have no messages. **The Message Center will answer after only 2 rings if you do have incoming messages, and after 4 rings if you do not have messages. So, if it rings three times when you call for messages, hang up.**

**The factory default setting for the Toll Saver feature is OFF and if it is ON, it overrides your current Ring Delay setting.**

If you want your Message Center to answer in the number of rings you set in the Ring Delay function, turn Toll Saver OFF.

#### KEYS TO PRESS

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **8**.
5. Press **9**.
6. Press ◀ (left arrow) or ▶ (right arrow) to select ON (or OFF).  
Example: **ON**.
7. Press **Set**.
8. Press **Stop** to exit.

#### THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

8. SETUP MSG CTR

9. TOLL SAVER

TOLL SAVER: OFF

SELECT ← → & SET

TOLL SAVER: ON

9. TOLL SAVER

## Setting the Maximum Time for Incoming Messages (ICM MAX. TIME)

Although the initial setting on your MFC for the maximum length of incoming voice messages is 30 seconds, you can adjust it. You have a choice of setting it from 20 seconds to 60 seconds, at 5 second intervals. This time is also used for and changes the maximum time of Incoming Voice Message, Memo, Voice Alarm and recorded Voice Information.

### KEYS TO PRESS

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **8**.
5. Press **5**.
6. Press **◀** (left arrow) or **▶** (right arrow) to select the maximum time for incoming messages, Memo and Voice Alarm recording.  
Example: **25 SEC**.
7. Press **Set**.
8. Press **Stop** to exit.

### THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

8. SETUP MSG CTR

5. ICM MAX. TIME

MESSAGE 30 SEC

SELECT ◀ ▶ & SET

MESSAGE 25 SEC

5. ICM MAX. TIME

### ***Playing OGM (Outgoing Message) ON/OFF Setting***

If you set Playing OGM to ON, the recorded Message Center or F/T outgoing message is replayed each time you change the receiving mode to MSG CTR or F/T.

The initial setting is ON. If you don't want to hear it play when you change settings, set your Playing OGM setting to OFF.

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>8</b> .	1. FAX
5. Press <b>8</b> .	8. SETUP MSG CTR
	8. PLAYING OGM
	PLAYING OGM: ON
6. Use ◀ (left arrow) or ▶ (right arrow) to select the Playing OGM Setting ON (or OFF). Example: OFF.	SELECT ← → & SET
7. Press <b>Set</b> .	PLAYING OGM: OFF
8. Press <b>Stop</b> to exit.	8. PLAYING OGM

### ***Recording a Conversation***

You can record a telephone conversation by simply pressing **Record** during the conversation. The conversation can be recorded for the length of time that is set in ICM MAX. TIME. A beep will sound every 15 seconds to notify the caller.

You can play or erase this recording the same way as in MEMO recording.

---

## ***Recording a Memo***

---

You can record a memo in your MFC for someone who also uses it in your home or office.

### **KEYS TO PRESS**

1. Press **Record**.
2. Pick up the handset and speak your memo (up to ICM MAX. TIME).
3. Press **Stop** or replace the handset.

### **THE DISPLAY WILL SHOW**

09/12/1998 15:25  
ONLINE

PICK UP HANDSET  
ONLINE

REC.MEMO:00/30  
ONLINE

REC.MEMO:20/30  
ONLINE

VOICE:01 FAX:00  
ONLINE

To play a Memo see the section "Playing an Incoming Voice Message (ICM) and Recorded Memo" (see page 107).

To erase a Memo see the section "Erasing Incoming Voice Messages, Fax Messages, and Recorded Memo" (see pages 110-111).


## F) PAGING/FAX FORWARDING

### What Is Paging/Fax Forwarding?

Message Center mode provides the additional option of either Paging or Fax Forwarding after voice and fax messages have been received into the memory.

How paging works (Paging ON)

How fax forwarding works (Fax Forward ON)

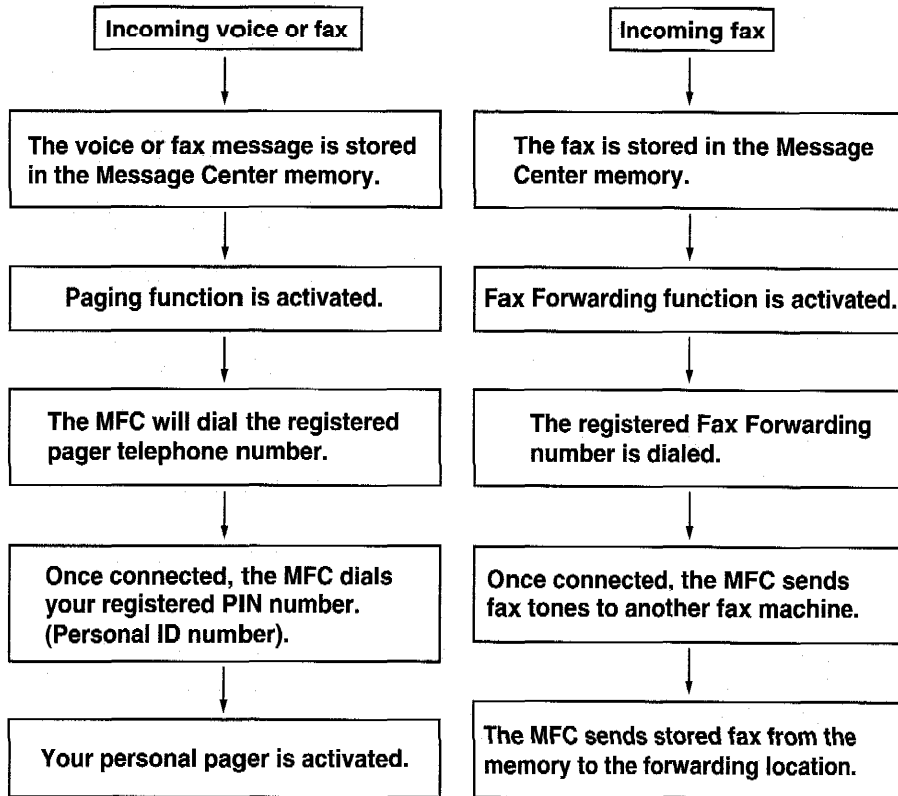

#### NOTICE

1. You can activate only Paging or Fax Forwarding; they are very similar features and cannot be used simultaneously.
2. The Paging feature can be used in the limited modes of the Message Center, since it will page based upon receipt of messages into the memory.
3. If Paging is ON, you will be paged every time a voice or fax message is received into memory.

## Setting Up Paging (Registering the Paging Number)

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>8</b> .	1. FAX
5. Press <b>3</b> .	8. SETUP MSG CTR
	3. FAX FWD/PAGING
	OFF
6. Press ◀ (left arrow) and ▶ (right arrow) to select <b>PAGING</b> .	SELECT ◀ ▶ & SET
7. Press <b>Set</b> .	PAGING
	PAG#:
	ENTER & SET
8. Enter a paging number up to 20 digits (this is the telephone number of your pager), followed by two # signs. Do not include the area code if it is the same for your MFC and pager. Example: <b>18002844329##</b> .	#:18002844329##_
9. Press <b>Set</b> .	PIN#:
	ENTER & SET

10. Enter a PIN (Personal Identification Number), #, press **Redial/Pause** key your MFC telephone number, and ##.  
Example: **12345#-19085551234##**.

5#-19085551234##

-If you do not use a PIN, you must enter the telephone number of your MFC. Press **Redial/Pause** key before entering your fax number and add ## at the end.  
Example: **-19085551234##**

11. Press **Set**.

3.FAX FWD/PAGING

12. Press **Stop** to exit.

- Paging number and PIN cannot be changed remotely.
- **Redial/Pause** appears as a hyphen on the display.

#### FOR YOUR INFORMATION

The PIN (Personal Identification Number) you enter depends upon the type of paging company you use. There are generally two types of paging companies...

- 1) Satellite Pagers: In this case we recommend you enter your actual satellite PIN# plus your return MFC telephone/fax number/or special alpha message.

<u>PIN#</u>	<u>Return#</u>	<u>PIN# Alpha Message</u>
For Example: 12345#19085551234## or 12345#329329329##		
		<u>FAXFAXFAX</u>

- 2) Radio Pagers: Most\* radio pagers do not require a PIN #, and in this case you should use the PIN # in the MFC only for the return number or special alpha message.

<u>Return#</u>	<u>Alpha Message</u>
For Example: 19085551234## or 329329329##	
	<u>FAXFAXFAX</u>

\* If your radio pager utilizes a PIN # then use the satellite sequence above.

The "##" symbols at the end of the special message (or return #) are used to signify the end the PIN #/Message.

FAX OPTIONS

### ***Setting Up Fax Forwarding (Registering the Fax Forwarding Number)***

<b>KEYS TO PRESS</b>	<b>THE DISPLAY WILL SHOW:</b>
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>8</b> .	1. FAX
5. Press <b>3</b> .	8. SETUP MSG CTR
	3. FAX FWD/PAGING
	OFF
6. Press ◀ (left arrow) and ▶ (right arrow) to select <b>FAX FORWARD</b> .	SELECT ◀ ▶ & SET
7. Press <b>Set</b> .	FAX FORWARD
	FWD#:
8. Enter a fax forwarding number up to 20 digits. Example: <b>18005551234</b> .	ENTER & SET
9. Press <b>Set</b> .	WD#:18005551234_
10. Press <b>Stop</b> to exit.	3. FAX FWD/PAGING

#### **FOR YOUR INFORMATION**

##### ***Memory Backup of Message Center Memory***

After you plug in the electrical cord and turn on the power switch, it will take a few days to charge the internal battery for memory backup of the Message Center memory. After the battery is fully charged, it will keep memory for several hours at full charge when a power interruption occurs.



***Changing the Fax Forwarding Number Remotely***

You can change the Fax Forwarding number remotely from any touch tone phone. See page 124 for more information.

**G) REMOTE RETRIEVAL**

***What Is Remote Control Access?***

When you leave your home or office and turn on your Message Center to receive voice and/or fax messages, you can call your MFC from any touch tone phone or remote group 3 fax machine and retrieve those messages. You can also program and control your Message Center with control codes when you call. (See the Remote Control Commands on page 123 for more information about the settings you can change remotely.)

***Setting the Remote Access Code***

Use the Remote Access Code from another location to retrieve voice and/or fax messages that are stored in your Message Center's memory. Change your Remote Access Code and use it as a "secret password" if you wish to safeguard your messages.

The factory default setting for the Remote Access Code is "159\*". You can change the first three digits of the Remote Access Code, but the last digit (an asterisk) cannot be changed. The first three digits must not be the same as your Remote Activation or Remote Deactivation Codes. (Example: If your Remote Access Code is 160\*, do not use 160 or 60\* for either the Activation or Deactivation Code.) When you use the Remote Access Code, you must press all four keys (three-digit number plus \*).

**KEYS TO PRESS**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **8**.
5. Press **4**.

**THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

8. SETUP MSG CTR

4. REMOTE ACCESS

Fax Options

6. Enter a three digit number **000** to **999**.  
The last digit, an asterisk, cannot be changed.  
Example: **160\***.

ACCESS CODE: 159\*

ACCESS CODE: 160\*

7. Wait for two seconds.
8. Press **Stop** to exit.

4. REMOTE ACCESS

### ***Using the Remote Access Code***

---

1. Pick up the handset of a remote touch tone phone or fax machine.
2. Dial your MFC's number.
3. When your MFC answers with a beep, immediately press your Remote Access Code (**159\***).

If your MFC is in Manual mode, you can access the Message Center by waiting for 20 rings and then pressing the code within 30 seconds.

4. The MFC will tell you the kind of message(s) it has received:

One long beep: Received FAX message(s).  
Two long beeps: Received VOICE message(s).  
Three long beeps: Received both FAX and VOICE messages.  
(No long beeps: No message(s) have been received.)

5. As soon as you hear two (2) short beeps, press a Control Command.

Each time your MFC completes an instruction, it gives two (2) short beeps telling you to enter the next command; if you wait longer than 30 seconds to enter the command, your MFC will disconnect the line. If you perform a wrong operation, you will hear three (3) short beeps.

6. When you are ready to exit remote control mode, press **90** to reset your MFC.

## Remote Control Commands

You can program and control your MFC with remote control commands.

Remote control commands		Detail Operation
91	Playing voice messages	After one long beep, the MFC plays ICM, Memo and Voice Alarm.
	1 ◀ (Skip back)	Press 1 while listening to an ICM, Memo or Voice Alarm message to play it again. If you press 1 before a message, you will hear the previous message.
	2 ▶ (Skip next)	While playing ICM, Memo and Voice Alarm, you can skip to next message.
	9 STOP Playing	Stop playing ICM, Memo and Voice Alarm.
92	Record Memo	After one long beep, you can record a memo. You can stop recording by pressing 9.
93	Erase all ICM & Memo	If you hear one long beep, the erase is accepted. If you hear three short beeps, you cannot erase because all voice messages have not been played, or there is no voice message to erase. *This code erases all recorded messages, not one by one.
94	Play and Record OGM in memory	
	1 Play	
	1 MSG CTR OGM	The MFC plays the selected OGM. You can stop playing OGMs by pressing 9.
	2 F/T OGM	
	2 Record	
	1 MSG CTR OGM	After one long beep, you can record the selected OGM. You will hear the OGM message played once. You can stop recording the message by pressing 9.
	2 F/T OGM	
95	Changing Fax Forwarding /Paging setting	If you hear one long beep, the change is accepted. If you hear three short beeps, you cannot change it because the conditions (ex. registering paging number) have not been completed. You can register your fax forwarding number by using 4. FAX FWD NO (see page 124). Once you have registered the number, the MFC will automatically change to "FAX FWD:ON" mode. Then retrieve a Memory Status List by entering 961 (see page 124). After you make sure that the Fax Forwarding number you registered is correct in the List, enter the confirmation command 955. Now the MFC will start Fax Forwarding.
	1 OFF	
	2 Fax Forwarding	
	3 Paging	
	4 FAX FWD NO	
	5 FWD NO. CONFIRM	
96	Retrieve FAX	
	1 Memory Status List	You must call from a remote fax machine to receive the Memory Status List or stored fax messages. (See page 124.)
	2 00 Retrieve all FAX	
	2 <MSG No.> 00 Retrieve by MSG number	
	3 Erase FAX in the memory	If you hear one long beep, you can erase the fax message from the memory.
97	Check the receiving status	You can check whether your MFC has received any FAX or VOICE messages. If yes, you will hear one long beep. If no, you will hear three short beeps.
	1 FAX	
	2 VOICE	
98	Change Answer Mode	If you hear one long beep, you can change the answer mode. If you hear three short beeps, you cannot change it. (Example: There is no MSG CTR OGM when you want to change to MSG CTR mode.)
	1 MSG CTR	
	2 F/T	
	3 FAX	
90	Exit	

---

### ***Retrieving the Memory Status List and Fax Messages Remotely***

---

From a remote fax machine, you can retrieve your Memory Status List to see if you have any stored fax messages in the memory. Then you can retrieve all or only specified fax messages that are on the list.

1. Pick up the handset of a remote fax machine.
2. Dial your MFC's number.
3. When your MFC answers with a beep, immediately press your Remote Access Code (**159\***).
4. As soon as you hear two (2) short beeps, press **961**.
5. When you hear your MFC through the handset responding with a fax tone, press **Start** and hold the handset if you also want to retrieve fax messages. (If you wish to retrieve only the Memory Status List, replace the handset.)
6. Your remote fax machine will print the Memory Status List. (See page 151.)
7. Look at the Memory Status List to see if there are any fax messages you want to retrieve.
8. Press **96 2** as soon as you hear two (2) short beeps.  
After **96 2**, enter the two-digit message numbers from the Memory Status List (ex. **01**) and end by pressing **00**.  
ex.) To receive NO.1 and NO.2 messages, press **96 2 01 02 00**.  
If you want to retrieve all messages, simply press **00**.  
ex.) To retrieve all fax messages, press **96 2 00**.
9. When you hear your MFC through the handset responding with a fax tone, press **Start**.
10. Replace the handset.
11. Your remote fax machine will print the fax messages.

---

### ***Changing the Fax Forwarding Number Remotely***

---

1. Pick up the handset of a remote fax machine.
2. Dial your MFC's number.
3. When your MFC answers with a beep, immediately press your Remote Access Code (**159\***).
4. As soon as you hear two (2) short beeps, press **954**.
5. Enter your new Fax Forwarding number using the dial pad keys (up to 20 digits). You cannot register \* and # as dial numbers. Use \* to create a pause between the dial numbers.
6. Press # after entering the new number.
7. As soon as you hear the next two (2) short beeps, press **961**.
8. When you hear your MFC through the handset responding with a fax tone, press **Start** and hold the handset.
9. Your remote fax machine will print the Memory Status List. Look at the list to make sure the new Fax Forwarding number you registered is correct.
10. If the new number is correct, wait for the next two (2) short beeps, and press **955**. (If the new number is not correct, press **954** and reenter the number beginning at Step 5.)
11. Press **90** to exit remote control.
12. Replace the handset. Your new Fax Forwarding number is activated.

## H) VOICE ALARM

### *Voice Alarm*

---

This function can help you manage your work schedule. With this function, you can record your schedule of events for the following week on your MFC and have your MFC alert you at scheduled time. The MFC will play a recorded voice message (which you store) to remind you of your appointment or schedule. For each appointment reminders, you record a voice message, and key in the date and time you wish the message to be played. When the set time comes you will hear the message played back on the MFC. It's a great tool for keeping important appointments.

### *Setting the Voice Alarm*

---

You can start setting your Voice Alarm by pressing **Function** and **Record**. You have to enter 3 pieces of information for setting the Voice Alarm : 1) day, 2) time, and 3) voice message. To record a voice message, use the handset. You can set up to one week's worth of Voice Alarm messages and you can record Voice Alarm Messages to help you manage your workload even when your memory is set for VOICE: OFF or VOICE: EXT. in Message Storage (see pages 99-102).

- If you press **Clear** while you are recording a voice message, the voice message being recorded will be canceled. Also, the entire entry including the date and time will be deleted.
- If you don't press **Record** within 2 seconds (i.e. while the LCD displays ENTER NO. & SET) after you press **Function**, you will not be able to enter the schedule.
- The number of entries in your schedule will not be counted in the total of incoming calls on your Message Center. Consequently, the LCD will return to the date and time after you enter the schedule.

## FOR YOUR INFORMATION

### ***Recording Voice Messages for the Voice Alarm***

- You can set the maximum recording length for a voice message, from 20-60 seconds. Use Function menu 8-5 (See page 114). This setting also changes incoming messages in Message Center and memos.
- You can enter up to 99 entries of voice messages, and a combined total of 99 entries of incoming messages and memos.

Examples of Voice Alarm messages:

“There’s a meeting in the conference room on Nov. 7 at 1:30 PM”

“Call Mr. Johnson at ABC Trading Co. on Nov. 8 at 2:00 PM”

“Dentist Appointment on Nov. 9 at 10:00 AM”

“Mr. Brown, could you please attend the sales meeting in the conference room on Nov. 10, at 4:00 PM?”

When you call your MFC from a remote location to hear your schedule of events, you will not be able to see the display for the dates and times in the Voice Alarm, so it is a good idea to mention the dates and times when you record the voice messages.

### KEYS TO PRESS

1. Press **Function**.
2. Press **Record** when the LCD shows:  
ENTER NO. & SET.
3. Wait for 2 seconds.
4. Press ◀ (left arrow) or ▶ (right arrow) to select a day.  
Example: If today is Wednesday, you can choose from: TODAY, TOMORROW, FRIDAY, SATURDAY, SUNDAY, MONDAY, TUESDAY.  
Example: SAT.
5. Press **Set**.  
The current time will be displayed.

### THE DISPLAY WILL SHOW

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

VOICE ALARM

SET DAY=TODAY

SELECT ◀ ▶ & SET

SET DAY=SAT

SET TIME=15:25

6. Enter the time in 24-hour format.  
Example: **20:00** (8:00 P.M.)

SET TIME=20:00

7. Wait for 2 seconds

PRESS RECORD KEY

8. Press **Record**.

PICK UP HANDSET

9. Pick up the handset and speak your Voice  
Message (up to ICM MAX. TIME).

REC.MSG.:01/30

REC.MSG.:18/30

10. Press **Stop** or replace the handset.

09/12/1998 15:26  
ONLINE

### ***How Will the Voice Alarm Perform When the Scheduled Time Arrives...***

If you have the Voice Alarm set at Monday, 15:26, the following will happen:

#### NOTICE

- If you want to stop the beeping or stop playing a Voice Alarm message, press **Stop**.
- The Voice Alarm message will not play when you are sending or receiving a fax, using the phone, receiving a fax into the memory or when one of the Message Center functions is operating. However, the voice message will be played once these activities are finished.
- The Voice Alarm message will automatically be cleared after it has been activated/played. If the machine discovers that you have a Voice Alarm message with a time earlier than the present because of change to the current date and time, it will immediately play the schedule once and then erase it.
- If you have two entries in your schedule with the same date and time, they will play one after the other.

#### KEYS TO PRESS

1. The scheduled time appears on the display, a beep follows and you will hear the voice message play once.
2. The playback of the voice message finishes.
3. If you want to hear the voice message again, press **1**, if not, press **2**.  
Example: Press **2** key.  
  
- If you don't press **1** or **2** after 10 seconds, the MFC will simply return to its normal idle position and display the date and time.

#### THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

MONDAY 15:26  
ONLINE

1.REPEAT 2.EXIT  
ONLINE

VOICE ALARM  
ONLINE

09/12/1998 15:26  
ONLINE

#### *Using the Voice Alarm: Playing Entries, Erasing Entries One by One, Erasing All at Once*

Once you press **Function**, be ready to press **Play**, or **Erase** immediately, depending upon whether you want to play an entry or erase everything. For instructions on how to play and how to erase, refer to the instructions in the incoming voice message (ICM), Memo section. (See pages 107, 110-111.) When you play an entry, the display will show you the date and time of your scheduled entries. You can delete entries one by one, the same way you would delete incoming messages or memos: press **Erase** while playing an entry.

#### NOTICE

- If you don't press **Play** or **Erase** within 2 seconds (i.e. while the LCD displays ENTER NO. & SET) after you press **Function**, you will not be able to play or delete entries.
- If you don't press **Function**, and just press **Play**, you will be able to hear only incoming messages and memos. You won't be able to hear the Voice Alarm messages.
- If you don't press **Function**, and just press **Erase**, you will be able to delete only incoming messages and memos. Voice Alarm messages will not be deleted.



---

### ***Remote Control of the Voice Alarm***

---

When you are on the road, you can call your MFC and listen to your Voice Alarm messages. (See page 123.) However, you cannot set the Voice Alarm by remote control. Note that you will be able to only hear the recorded Voice Alarm message. You will not be able to see the dates and times of the schedule on the display, so it's a good idea to record important dates and times as part of your Voice Alarm messages.

## 9. USING THE MFC AS A PRINTER

### Acceptable Paper

Your MFC can handle paper that has the following specifications.

But please note that you can receive fax messages on only Letter, Legal and A4 paper. And if you use Legal or A4 sheet, you have to change the Paper Size setting, which is FUNCTION 1-5-6. (See page 68.)

Paper Type	Paper Size
Cut sheet	A4, Letter, Legal, B5, A5, Executive, Custom size 2.75-8.5 x 5-14 inches (70-216 x 127-356 mm)
Envelopes	DL, C5, COM-10, Monarch, 9" x 12"
Post Card	2.75-8.5 x 5-11 inches (70-216 x 127-279 mm)
Organizer	Day-Timer® J, K, L, M 2.75-8.5 x 5-11 inches (70-216 x 127-279 mm)
Labels and Transparencies	2.75-8.5 x 5-14 inches (70-216 x 127-356 mm)

#### Paper Capacity in Feeder

##### Multi-purpose

Sheet Feeder: Up to 22 mm (0.87 inch) in height (up to the mark) Approx. 200 sheets of 75 g/m<sup>2</sup> (20 lb.) or 50 sheets of 158 g/m<sup>2</sup> (42 lb.) A4/Letter paper, or 10 envelopes

Output Tray: Approx. 100 sheets of 75 g/m<sup>2</sup> (20 lb.) A4/Letter paper

	Cut Sheet	Envelope
Basis Weight	16 to 42 lb. (60 to 158 g/m <sup>2</sup> )	20 to 24 lb. (75 to 90 g/m <sup>2</sup> ) single thickness
Caliper	0.08 to 0.2 mm (±0.03 to ±0.08 in.)	0.084 to 0.14 mm (0.0033 to 0.0058 in.) single thickness
Moisture Content	4% to 6% by weight	4% to 6% by weight
Smoothness	100 to 250 (Sheffield)	100 to 250 (Sheffield)

#### Recommended paper types:

Cut sheet: Xerox 4200

Label: Avery laser label or equivalent

Transparency: 3M CG3300 for laser printers or equivalent

**Helpful Hints**

It is recommended that you test paper, especially special sizes and types of paper, on the MFC before purchasing large quantities.

Avoid feeding labels with carrier sheets exposed, or your MFC will be damaged.

Avoid using coated paper, such as vinyl coated paper.

Avoid using preprinted or highly textured paper.

For optimum printing, use a recommended type of paper, especially plain paper and transparencies. For more information on paper specifications, consult with your nearest authorized sales representative or the place where you purchased your MFC.

Use label or transparencies that are designed for use in laser printers.

We recommend you use long-grained paper for the best print quality.

If you are using special paper, and the paper has problems feeding from the multi-purpose sheet feeder, try again using the manual feed slot.


You can use recycled paper in this MFC.



### FOR YOUR INFORMATION


Before using paper with holes such as organizer sheets, you must fan the stack well to avoid paper jams and misfeeds.

Before using any paper, make sure that it is not curled. If it is, straighten the paper as much as possible. Using curled paper will cause paper jams and misfeeds.

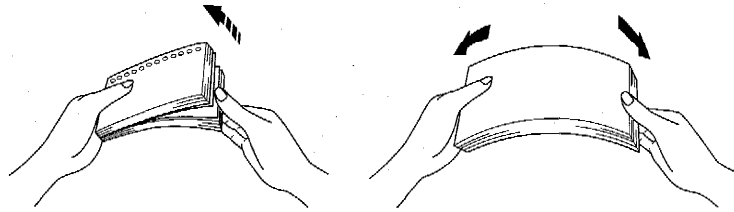


The following types of envelopes should not be used:

- Damaged, curled, wrinkled, or irregularly shaped envelopes
- Extremely shiny or highly textured envelopes
- Envelopes with clasps
- Envelopes with self-adhesive closures
- Envelopes of baggy construction
- Envelopes that are not sharply creased
- Embossed envelopes
- Envelopes already printed with a laser printer
- Envelopes preprinted on the inside
- Envelopes that cannot be arranged uniformly when placed in a pile

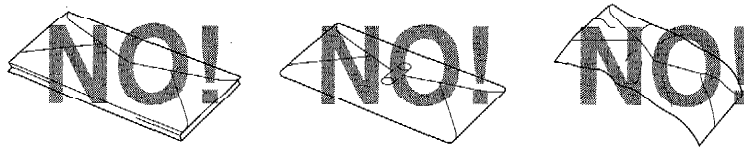


The printable area of your MFC begins at approximately 4mm (0.16 inch) from the edge of the paper.

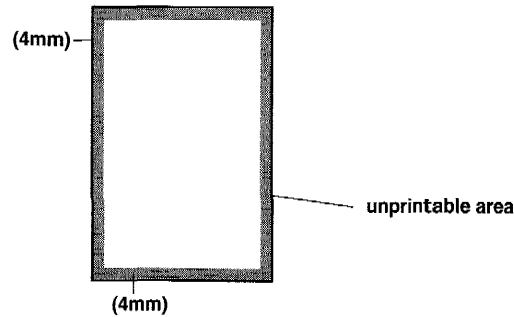

## Control Panel Keys

### Printer Status

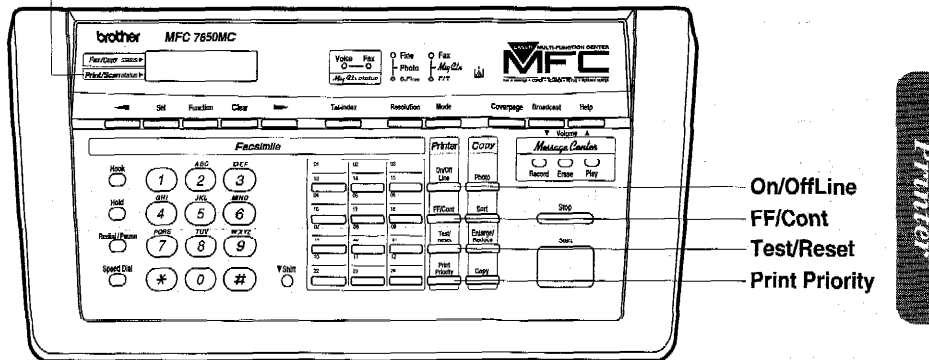

## Simultaneous Operation

Your MFC can print data from the PC simultaneously while either sending or receiving a fax message with the MFC or scanning into the PC. When your MFC is copying or receiving a fax on paper, it pauses the PC printing operation until it has finished.

**NOTE:** You can not print while PC Fax sending or receiving.

## On/OffLine Key

This key is used to turn the printer on-line (ready to receive PC data) and off-line (not ready to receive PC data). If you press this key during printing, the MFC immediately stops printing even if it has already started to print. It ejects the page, and then enters the offline status. Press the **On/OffLine** again and the printer will print the complete page again.

When the printer is in the online status and the LCD shows ONLINE, you cannot use **FF/Cont** and **Test/Reset** keys.

## FF/Cont Key

The upper switch on the control panel can work as the Form Feed (**FF**), Continue (**Cont**) key.

### Form Feed

When the LCD shows **REMAINED DATA**, press **On/OffLine** to turn the printer offline, then press **FF/Cont**. The MFC prints any data remaining in the printer memory.

**NOTE:** The MFC periodically will print any data remaining in the memory .

### **Clearing Errors**

If an error occurs, the MFC usually will automatically recover the recoverable errors, such as a memory full condition. If the error does not clear automatically, press **FF/Cont** to clear the error and continue the operation.

### ***Test/Reset Key***

---

#### **Test Sample Page**

This key is used to print a test sample page. If data remains in the printer memory, press **On/OffLine** to turn the printer offline and press **Test/Reset**. The MFC will print the remaining data first and then will print a test sample page. To print the printer status lists, see page 151. If the printer is online, the MFC cannot print a test sample page.

#### **Resetting the Printer**

When **Reset** is pressed together with **Shift**, it clears data from the memory. The printer is also reset and restored to the factory default settings. The **Reset** switch may be able to clear an error status and the Hex Dump mode. (See page 143.) Remember that the **Reset** switch clears data from the printer memory.

### ***Print Priority Key***

---

Your MFC has a Flexible memory, which is used for memory transmission, incoming faxes and printing. When **Print Priority** is first pressed, it puts the MFC exclusively in printer mode (LCD shows "PP"). This means that memory transmission using dual access is not available because all flexible memory is reserved for printing. At the same time, a Special area of memory is reserved for incoming faxes, so you will not lose them.

After PC data has been sent and the MFC has completed printing, press **Print Priority** again to exit print priority status and return to dual access mode.

## FOR YOUR INFORMATION

***Windows® Printing***

The dedicated printer driver and True Type™-compatible fonts for Microsoft® Windows® 95 and 3.1, 3.11 and Windows NT® Workstation Version 4.0 are available on the CD-ROM supplied with your MFC. You can easily install them into your Windows® system using our installer program. The driver supports our unique compression mode to enhance printing speed in Windows® applications, and allows you to set various printer settings including economy printing mode and custom paper size.

***Remote Printer Console Program for DOS***

The utility program, Remote Printer Console (RPC), is available on a CD-ROM supplied with your MFC. When you operate your computer in the DOS (Disk Operating System) environment, this program allows you to easily change the default settings of the printer such as fonts, page setup, emulations and so on.

The RPC program also provides a status monitor program, which is a Terminate-and-Stay Resident (TSR) program. It can monitor the printer status while running in the background and will report the current status or errors on your computer screen.

***Popular Printer Emulation Support***

This MFC supports the printer emulation mode, HP LaserJet IIP. When you use DOS application software or Windows® version 3.0 or earlier, you can use the emulation mode of HP LaserJet IIP to operate the printer. To set the printer emulation, use the Remote Printer Console Program.

***Bi-directional Parallel Interface***

The parallel interface of this MFC allows bi-directional communication with a computer. This interface allows the printer (MFC) to communicate back to the computer useful information such as the amount of memory installed, and other printer setup conditions.

***Enhanced Memory Management***

The MFC has its own Data Compression Technology, which automatically compress graphic data and download font data efficiently into the printer's (MFC's) memory. You can avoid memory errors and print most full page 600 dpi graphic and text data, including larger fonts, with the MFC's standard memory.

## ***Multi-purpose Sheet Feeder***

---

The MFC has a multi-purpose sheet feeder that can feed plain paper, envelopes and organizer paper.

When the MFC receives data, it begins the print process by loading paper from the multi-purpose sheet feeder.

### **KEYS TO PRESS**

1. Select and set the PC command and status.
2. Your PC will send a print command and data to the MFC.  
If the MFC is in sleep mode, it will wake up. (See pages 19-20.)
3. When the PC has sent the first page data, the MFC will start printing.
4. The MFC will start to print the next page automatically.  
Example: 2 pages of data.
5. When the MFC finishes printing all the data, it will return to online status.  
If data is still remaining in memory, press **On/OffLine** and then press **FF/Cont.**

### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

09/12/1998 15:25  
RECEIVING DATA

09/12/1998 15:25  
REMAINED DATA

09/12/1998 15:25  
REMAINED DATA

09/12/1998 15:25  
ONLINE

09/12/1998 15:25  
REMAINED DATA

**Helpful Hints** You may select the proper paper source, paper size, and orientation in your application software.

If your application software does not support your custom paper size, select the next larger paper size. Then adjust the print area by changing the right and left margins in your application software.


### **NOTICE**

When you use labels or transparencies for overhead projectors, be sure to use the manual feed slot. See the next section "Manual Feed Slot" for more information.



FOR YOUR INFORMATION

If you load envelopes into the feeder, make sure they are inserted in the direction shown below.

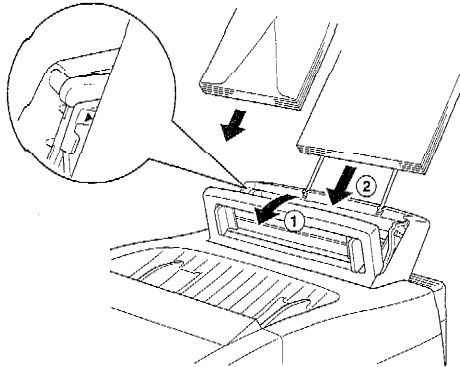


Printer

**Two-sided Printing (Manual Duplexing)**

The supplied printer driver for Windows® 3.1, 3.11 and Windows® 95 enables manual duplex printing. For more information about settings, see the Help screen text for the printer driver. The MFC will print all the even numbered pages on one side of the paper first, and then will print all the odd pages numbered on the reverse side of the paper. When you have finished printing on one side of the paper, the Windows® driver instructs you with a pop-up message on the computer to reinsert the paper. Follow the instructions on how to reinsert the paper.

Before reinserting the paper, straighten it well, or you may get a paper jam. Using very thin or very thick paper is not recommended. If you get a double feeding error, hold the paper except the front sheet while the paper is feeding.

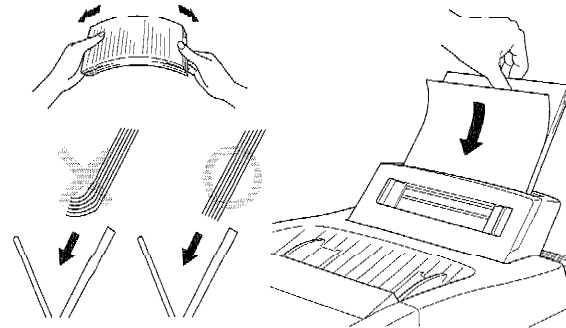

NOTICE

When you use the Manual Duplex function, it is possible that a paper jam may occur or the print quality might not be satisfactory.

---

## ***Manual Feed Slot***


---

The multi-purpose sheet feeder also has a manual feed slot. You can manually load paper, sheet by sheet into this slot. You do not have to remove paper from the multi-purpose sheet feeder. When you use labels or transparencies, be sure to use this slot. For information on paper specifications, see “Acceptable Paper” on page 130.

### ***When you load one sheet of paper manually:***

---

You do not have to choose manual feed in the Setup dialog box of your printer driver. Insert the sheet of paper in the direction for Portrait or Landscape, placing the side of the paper you wish to print on face down in the manual feed slot. Align the paper at the center of the manual feed slot, and be sure to insert it all the way. (1) Adjust the paper guide of the manual feed slot to the paper width you are using. (2)

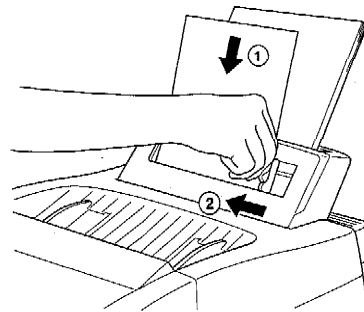

### ***When you load more than one sheet of paper manually:***

---

Open the Setup dialog box of the Windows® printer driver and select Manual Feed in the Paper Source section. Only for Windows® 3.1, 3.11 and Windows® 95 follow the above instructions to load the first page. The MFC will start printing automatically. After the first page is printed, the dialog box will appear and prompt you to load the next page. Load a sheet and select OK to resume printing. Repeat these steps until you have finished printing all the pages.

- Helpful Hints**
1. You may select manual paper feed, paper size, and orientation in your application software. If your application software does not allow these settings, you should set them using the RPC program supplied with your MFC.
  2. If you do not select manual paper feed and insert a page in the manual feed slot, the MFC will load the first page from the manual feed slot and subsequent pages from the multi-purpose sheet feeder.
  3. If your application software does not support your custom paper size, select the next larger paper size. Then adjust the print area by changing the right and left margins in your application software.
  4. When you want to stop or clear the manual feed, turn the MFC offline by pressing the **On/OffLine** key then, press **Shift** and **Test/Reset**, or you can also stop it with a PC command.
  5. When you use manual feed slot, it is best to first press **Print Priority**. This allows you to print PC data without interruption from incoming faxes. Incoming faxes will be stored in the MFC's memory. To continue printing PC data, press **FF/Cont** after each page has printed.
  6. If bi-directional communication is not operational between the MFC and the computer, such as when the MFC is shared on a network, the dialog box to load the next page will not appear. When your MFC is attached to a network, we do not recommend manual feeding.

FOR YOUR INFORMATION

***Paper Tray***

The MFC ejects paper with printed surfaces face down into the paper tray at the front of the MFC.

When you use transparencies, remove each sheet immediately after printing, to prevent a paper jam or curled sheets.

---

### ***Printing the Internal Font List***

---

The MFC prints a list of its internal or resident fonts.

Use this font list to see how each font looks before you select it.

<b>KEYS TO PRESS</b>	<b>THE DISPLAY WILL SHOW:</b>
	09/12/1998 15:25 ONLINE
1. Press <b>Function</b> .	ENTER NO. & SET
2. Wait for two seconds.	1. FAX 2. PRINTER
3. Press <b>2</b> .	2. PRINTER
4. Press <b>1</b> .	1. PRINT OPTIONS
5. Press <b>1</b> .	1. INTERNAL FONT
	PRESS START KEY
6. Press <b>Start</b> . The MFC will start printing.	PRINTING
7. The MFC has finished printing the list.	1. INTERNAL FONT
8. Press <b>Stop</b> to exit.	

### ***Printing the Print Configuration List***

The MFC prints a list of the current settings that configure or set up the printer.

<b>KEYS TO PRESS</b>	<b>THE DISPLAY WILL SHOW:</b>
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>2</b> .	1. FAX 2. PRINTER
4. Press <b>1</b> .	2. PRINTER
5. Press <b>2</b> .	1. PRINT OPTIONS
6. Press <b>Start</b> . The MFC will start printing.	2. CONFIGURATION
7. The MFC has finished printing the list.	PRESS START KEY
8. Press <b>Stop</b> to exit.	PRINTING
	2. CONFIGURATION

**Printer**

---

### ***Restoring to the Factory Default Settings***

---

You can restore the MFC's printer to the factory default settings. The permanent fonts will be restored, but macros will be cleared. You can change the user settings with the Remote Printer Console program. (See the Setup Manual pages 33-36.)

<b>KEYS TO PRESS</b>	<b>THE DISPLAY WILL SHOW:</b>
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>2</b> .	1. FAX 2. PRINTER
4. Press <b>2</b> .	2. PRINTER
5. Press <b>1</b> .	2. RESET PRINTER
6. Press <b>1</b> .	1. FACTORY SET
7. Press <b>Stop</b> to exit.	1. RESET 2. EXIT FACTORY SETTINGS 1. FACTORY SET

## Printing PC Data in Hexadecimal

The MFC can print data as hexadecimal values, so that you can check data errors and problems. If you set HEX DUMP MODE, all the PC data will be printed in hexadecimal and you reset it by pressing **On/OffLine** then **Shift** and **Test/Reset**.

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>2</b> .	1. FAX 2. PRINTER
4. Press <b>2</b> .	2. PRINTER
5. Press <b>2</b> .	2. RESET PRINTER
6. Press <b>1</b> .	2. HEX DUMP MODE
7. Press <b>Stop</b> to exit.	1. SET 2. EXIT
	2. HEX DUMP MODE
	09/12/1998 15:25 HEX DUMP MODE

Printer

## 10. PRINTING REPORTS AND LISTS

You can print the following lists and reports under function item 3. PRINT REPORTS.

Level one function	Level two function	Content	Page
<b>&lt;FAX AREA&gt; 3.PRINT REPORTS</b>	1. ACT. REPORT	The Activity Report lets you know whether transmissions and incoming faxes were received. TX means Transmit, RX means Receive.	146-147
	2. ALL DIAL	This is a list of the names and numbers that are stored in One Touch and Speed Dial memory, printed in One Touch and Speed Dial number order.	148
	3. TEL. INDEX	This is the same report as the All Dial list printed in alphabetical order.	—
	4. COVERPAGE	This sample coverpage allows you to see the Cover Page format.	55
	5. CALL BACK MSG	This sample Call Back message allows you to see the format.	60
	6. USER OPTIONS	The settings for FUNCTION MENU 5 to 8 (User Options, Tel Options, Setup System, and Setup MSG CTR) are listed.	—
	7. XMIT REPORT	You can choose whether the Transmission Verification Report will be printed after all faxes you send. ON/OFF	149-150
	8. MEMORY STATUS	Summary information and the amount of occupied memory for items stored in the memory will be listed.	151
	9. CALLER ID	You can review calls you received by checking this list.	90-91

**NOTE:** If the MFC's engine has entered the sleep mode (see pages 19-20) and the engine has started to cool down (the cooling fan may still be running), the MFC will have to warm up before printing the above lists and reports. The LCD will show WARMING UP.



## Other Reports

The following reports are printed automatically, for your information.  
Help List (By pressing **Help** on the control panel.) (See page 16.)  
Polled Report  
Delayed Sending Report  
Broadcast Report  
Sequential Polling Report  
Transmission Verification Report

## *How to Print Reports and Lists*

---

All the reports and lists may be printed as follows:

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Press <b>Function</b> .	09/12/1998 15:25 ONLINE
2. Wait for two seconds.	ENTER NO. & SET
3. Press <b>1</b> .	1. FAX 2. PRINTER
4. Press <b>3</b> .	1. FAX
5. Press the number of the level two function you wish to print. Example: 1.ACT.REPORT.	3.PRINT REPORTS
6. Press <b>Start</b> .	1.ACT.REPORT
	PRESS START KEY
	PRINTING

## ***Activity Report Interval***

An Activity Report can be printed at certain intervals that you specify. You can set the journal period to "OFF", "6 hours", "12 hours", "24 hours", "2 days", "4 days" or "7 days". The Activity Report will list all outgoing and incoming faxes (only the last 50) during that period. The factory default setting is OFF.

After the Activity Report has printed at the preset interval, the information will be deleted and cannot be recovered. However, at any time between these scheduled reports, you can manually print the Activity Report and the information will remain.

**NOTE:** If your Activity Report is not listing all your transactions, select a shorter interval period.

### **KEYS TO PRESS**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **7**.
5. Press **3**.
6. Press ◀ (left arrow) or ▶ (right arrow) to choose the setting.  
Example: 12 HOURS.  
If you select seven days, you will be prompted to choose the base day of the week.
7. Press **Set**.
8. Enter the time to print in 24-hour format using the dial pad keys.  
Example: **19:45** (7:45P.M.).

### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. FAX

7. SETUP SYSTEM

3. INTERVAL

ACT. RPT.: OFF

SELECT ← → & SET

EVERY 12 HOURS

START AT: 00:00

START AT: 19:45

9. Wait for two seconds.

3. INTERVAL

10. Press **Stop** to exit.

ACTIVITY REPORT							
						TIME : 09/12/1998 19:45	
						NAME : BROTHER	
						FAX : 4155554444	
						TEL : 4155554445	
NO.	DATE	TIME	FAX NO./NAME	DURATION	PAGE(S)	RESULT	COMMENT
#01	09/12	10:00	BROTHER BOSTON	04:23	20 CV CA	OK	TX
#02	09/12	10:10	NJ OFFICE	00	00	NG	TX
#03	09/12	14:53	BROTHER BOSTON	48	01 CV CA	OK	TX
BUSY: BUSY/NO RESPONSE							
NG : POOR LINE CONDITION							
CV : COVERPAGE							
CA : CALL BACK MSG							
PUL : PULLING							
RET : RETRIEVAL							

Reports

**NOTE:** "TX" means Transmit, "RX" means Receive.

## Printing the All Dial List

You can print a list of all stored One Touch numbers and Speed Dial numbers.

ALL DIAL LIST				
				TIME : 09/12/1998 15:25
				NAME : BROTHER
				FAX : 4155554444
				TEL : 4155554445
ONE-TOUCH DIAL				
NUMBER	FAX/TEL NUMBER		DESTINATION	GROUP
*01	61-2018285881	FAX	AUSTRIAN OFFICE	
*02	234-5678	TEL	ABC COMPANY	
*03	334-5566	FAX	HEAD OFFICE	
*04				
*05	14155551212	FAX	NJ OFFICE	
*24				

ALL DIAL LIST				
				TIME : 09/12/1998 15:25
				NAME : BROTHER
				FAX : 4155554444
				TEL : 4155554445
SPEED DIAL				
NUMBER	FAX/TEL NUMBER		DESTINATION	GROUP
#01	5892786	F/T	BROWNE M.	
#02	1234567		W. COMPANY	
#03	03-256-1121	FAX	TOKYO OFFICE	
#00	5555151	TEL	MANCHESTER	

## ***Transmission Verification (Xmit) Report***

The Transmission Verification Report can be used as proof that you sent a fax. It lists the name or fax number of the receiving party, the time and date of transmission, and whether the transmission was successful. The factory default setting is OFF.

**OFF:** The report will be printed automatically only if an error occurs during transmission. If the report says "Result: NG" then send all the pages again. If the report says "Result: Check readability of transmitted page(s) 02, 05" then send only pages 2 and 5 again.

**ON:** A report will be printed automatically. It is important to read the result of each report to check that the transmission was successful.

### **KEYS TO PRESS**

1. Press **Function**.
2. Wait for two seconds.
3. Press **1**.
4. Press **3**.
5. Press **7**.
6. Press ◀ (left arrow) or ▶ (right arrow) to choose the setting.  
Example: ON.
7. Press **Set**.
8. Press **Stop** to exit.

### **THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

ENTER NO. & SET

1. FAX  
2. PRINTER

1. TEMP. SETTINGS

3. PRINT REPORTS

7. XMIT REPORT

XMIT REPORT: OFF

SELECT ← → & SET

XMIT REPORT: ON

7. XMIT REPORT

Reports

TRANSMISSION VERIFICATION REPORT

TIME : 09/12/1998 15:25  
NAME : BROTHER  
FAX : 4155554444  
TEL : 4155554445

DATE, TIME	09/12 15:24
FAX NO./NAME	NJ OFFICE
DURATION	00:00:45
PAGE(S)	01
	COVERPAGE
RESULT	OK
MODE	STANDARD

## Memory Status List

The MEMORY STATUS LIST will show you summary information and the amount of occupied memory for items stored in the memory such as Delayed Transmissions and Polled Waiting. You will see the combined total of stored fax messages for retrieval. The available memory is expressed as percentage of remaining memory.

MEMORY STATUS LIST				
		TIME : 09/12/1998 15:25		
		NAME : BROTHER		
		FAX : 4155554444		
		TEL : 4155554445		
VOICE				
	<u>DATE</u>	<u>TIME</u>		
01 INCOMING MESSAGE	: 09/12/1998	10:15		
02 INCOMING MESSAGE	: 09/12/1998	14:20		
01 MEMO	: 09/12/1998	12:45		
02 MEMO	: 09/12/1998	13:15		
OUTGOING MESSAGE			10%	
VOICE ALARM				
12 SCHEDULES			10%	
STORED FAXES FOR RETRIEVAL				
	<u>DATE</u>	<u>TIME</u>	<u>RECEIVED FROM</u>	<u># OF PAGES</u>
MESSAGE 01	: 09/12/1998	12:00	0528242787	01
MESSAGE 02	: 09/12/1998	14:42	5892786	03
	(A)		(B)	10%
MEMORY USED FOR FAX FEATURES				
	<u>TIME</u>	<u>DESTINATION</u>	<u># OF PAGES</u>	
TIMER	#07) 23:45	(BROADCAST)	01	10%
REDIAL WAITING	#05)	BROTHER BOSTON	02	05%
PULLING WAITING			02	12%
FAX FORWARD NUMBER	:	18005551234		
MEMORY AVAILABLE				
FREE				43%

Your MFC has received 4 Voice messages.

You set 12 scheduled appointment reminders.

You received two FAX messages :  
 (A) When the fax came in  
 (B) Sending party's number

This shows that you have three items in the MFC's memory for timer, polling and redial transmissions.

This shows the Fax Forwarding number.

This shows the amount of available memory.

Reports

## 11. HOW TO USE THE COPY FUNCTION

Use the **Copy** key to make a single copy or multiple copies. When making copies, check that the text or image on the original document is not too close to the edge. Your MFC cannot read anything closer than 4 mm (1/8 inch) from the edge. Original documents should be straight and not wrinkled or they may jam. Also, do not pull on the paper while copying is in progress or you may distort the image and damage your MFC.

Make sure there is enough recording paper in the MFC. And when making multiple copies, do not let the paper tray become overstacked. Remove copies from the paper tray.


### *Making a Single Copy*

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Insert the documents face down into the feeder.	09/12/1998 15:25 ONLINE
2. Press <b>Copy</b> .	MEMORY 100% SCAN READY
	FAX: NO. & START SCAN READY
	COPY: PRESS COPY SCAN READY
3. Press <b>Copy</b> or just wait for 5 seconds.	NO.OF COPIES:01 ONLINE
	ENTER & COPY KEY ONLINE
	COPYING ONLINE
	COPYING P.01 ONLINE
	COPYING P.02 ONLINE




### ***Making Multiple Copies***

There are two ways to make multiple copies on your MFC. The first is the stacking method, this will make "n" copies of page one, "n" copies of page two, and so on. These will all be stacked on top of each other. The second method is the sorting or collating method. This is when the MFC scans the entire document and then makes 1 copy of page 1, 2, 3, 4 in order. Then makes a second copy of 1, 2, 3, 4 until a total of n copies has been made.

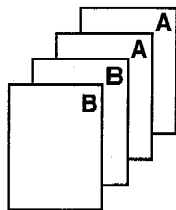

(Stacking)

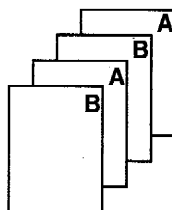

(Sorting)

### ***Stacking Multiple Copies***

#### KEYS TO PRESS

1. Insert the documents face down into the feeder.
2. Press **Copy**.
3. Enter two digits for the number of copies you want using the dial pad (Max. 99 copies).  
Example: **05**.
4. Press **Copy** or just wait 5 seconds.
5. The MFC will begin copying.

#### THE DISPLAY WILL SHOW:

09/12/1998 15:25  
ONLINE

MEMORY 100%  
SCAN READY

FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

NO.OF COPIES:01  
ONLINE

ENTER & COPY KEY  
ONLINE

NO.OF COPIES:05  
ONLINE

COPY STACK  
ONLINE

COPY STACK P.01  
ONLINE

COPY

FOR YOUR INFORMATION

**What to Do When You Get a MEMORY FULL Message while Making Copies**

When you are making copies, if the memory becomes full and the display shows PRESS STOP KEY, then press **Stop** to abort the job.

In this case, you can make only a single copy that is not reduced or enlarged.

**Sorting Multiple Copies**

KEYS TO PRESS	THE DISPLAY WILL SHOW:
1. Insert the documents.	09/12/1998 15:25 ONLINE
2. Press <b>Sort</b> .	MEMORY 100% SCAN READY
3. Enter two digits for the number of copies you want, using the dial pad (Max. 99 copies). Example: <b>05</b> .	FAX: NO. & START SCAN READY
4. Press <b>Copy</b> .	COPY: PRESS COPY SCAN READY
5. The MFC will begin copying.	SORT COPIES:01 ONLINE
	ENTER & COPY KEY ONLINE
	SORT COPIES:05 ONLINE
	COPY SORT ONLINE
	COPY SORT P.01 ONLINE

- NOTE:**
1. When making Multiple Copies, do not let the receiving tray overstacked. Remove copied paper from receiving tray frequently.
  2. When making Multiple Copies, make sure there is enough recording paper in the MFC.
  3. Original documents should be straight, non wrinkled, to be correctly fed. Otherwise the documents may occasionally jam.

FOR YOUR INFORMATION

**What to Do When You Get a MEMORY FULL Message while Sorting Multiple Copies**

When you are using the sorting method, if the memory becomes full when scanning page one and the display shows PRESS STOP KEY, then press **Stop** to abort the job.

If the memory becomes full on page 2 or more of a multiple page document, you will be prompted to press **Copy** to copy the portion already scanned, or to press **Stop** to abort the job.

**Reducing and Enlarging Copies**

Use this function to make reduced or enlarged copies of a document. Select Auto Reduction (AUTO) if you want to reduce the size of the original, regardless of its size, to the size of the paper. To enlarge or reduce a document, select one of the enlargement/reduction ratios: 200%, 150%, 125%, 120%, 93%, 87%, 75% or 50%. If you want to reproduce the same size, select 100%.

When enlarging, any portion that extends outside the edge of the printing paper will be cut off.

**KEYS TO PRESS**

1. Insert the documents face down into the feeder.
2. Press **Enlarge/Reduce**.
3. Press ◀ (left arrow) or ▶ (right arrow) to choose the setting.  
- If you want Auto Reduction, select AUTO or the reduction or enlargement ratio.  
Example: 93%

**THE DISPLAY WILL SHOW:**

09/12/1998 15:25  
ONLINE

MEMORY 100%  
SCAN READY

FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

ELG/RDC: AUTO  
ONLINE

SELECT ↔ & COPY  
ONLINE

ELG/RDC: 93%  
ONLINE

Copy

4. Press **Copy**.

NO.OF COPIES:01  
ONLINE

ENTER & COPY KEY  
ONLINE

5. Enter two digits for the number of copies you want, using the dial pad (Max. 99 copies).

Example: **05**.

NO.OF COPIES:05  
ONLINE

6. Press **Copy** or just wait for 5 seconds.

COPY STACK  
ONLINE

7. The MFC will begin copying.

COPY STACK P.01  
ONLINE

### ***Copying a Photograph***

You can copy a photograph by pressing **Photo**, without pressing **Resolution**.

#### **KEYS TO PRESS**

#### **THE DISPLAY WILL SHOW:**

1. Insert the documents.

09/12/1998 15:25  
ONLINE

MEMORY 100%  
SCAN READY

FAX: NO. & START  
SCAN READY

COPY: PRESS COPY  
SCAN READY

2. Press **Photo**.

NO.OF COPIES:01  
ONLINE

ENTER & COPY KEY  
ONLINE

3. Enter two digits for the number of copies you want, using the dial pad (Max.99 copies).

Example: **05**.


NO.OF COPIES:05  
ONLINE

4. Press **Copy** or just wait 5 seconds.

5. Press ◀ (left arrow) or ▶ (right arrow) to select a quality of HIGH or LOW.

6. Press **Copy** or **Set**.

7 The MFC will begin copying.

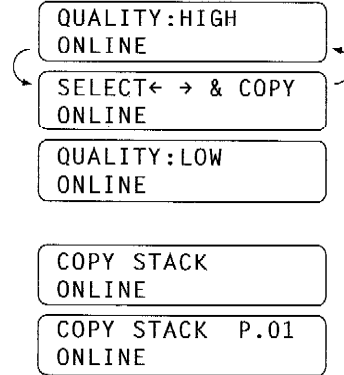


Copy

## 12. REPLACING TONER CARTRIDGE AND DRUM UNIT

### *Toner Empty Indicator*

When the toner cartridge is running low, the display will show CHANGE TONER and the Toner Empty LED on the control panel will flash on and off to indicate the toner is low.

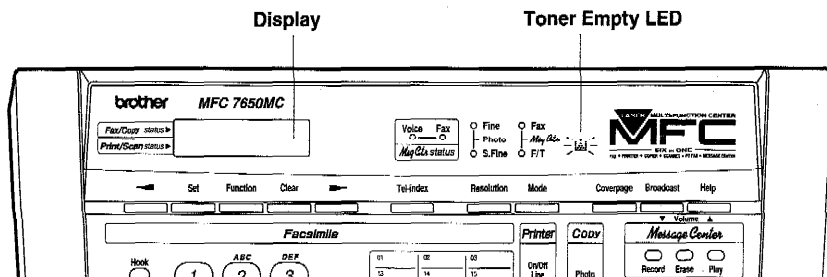


The Toner Empty LED will light and the display will show CHANGE TONER and TONER EMPTY alternately to indicate that the toner is empty. Once this indication appears, your MFC will not resume printing until you have installed a new toner cartridge.

### *Replacing the Toner Cartridge*

The MFC can print approximately 2,200 pages with one toner cartridge. When the toner cartridge is running low, the display shows CHANGE TONER. The MFC is supplied with a starter toner cartridge that must be replaced after 1,000 pages.

- NOTE:**
- Actual page count will vary depending on your average document type. (i.e.: standard letter, detailed graphics, etc.)
  - It is recommended that you always keep a new toner cartridge ready for use for when you see the toner low warning.
  - Discard the used toner cartridge according to local regulations. If you are not sure of them, consult with Brother Customer Service. Be sure to seal the toner cartridge tightly so toner powder does not spill out of the cartridge. When discarding used toner cartridges, keep them separate from domestic garbage.
  - It is recommended that you clean the MFC when you replace the toner cartridge.

Follow these steps to replace the toner cartridge:

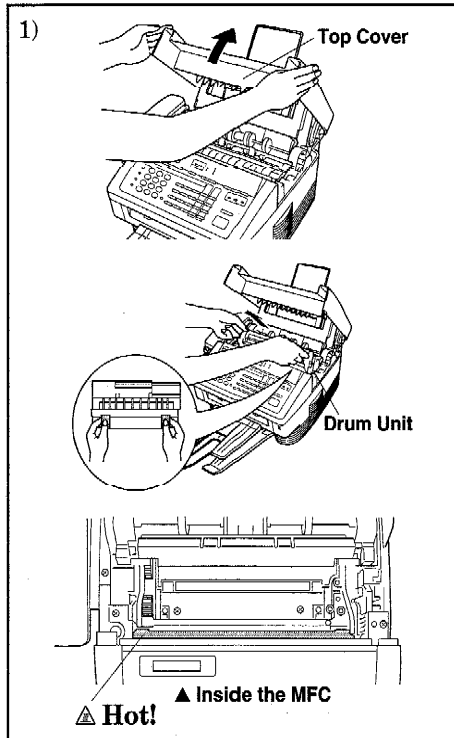


1) Open the top cover. To remove the drum unit, hold each side of the drum by its handles and gently lift the drum forward toward you.

**NOTE:** Make sure the top cover is completely open, by lifting it until the latch clicks into place.


We recommend you place the drum unit on a drop cloth or large piece of disposable paper to avoid spilling and scattering the toner.

**WARNING**

Just after you have used the MFC, some internal parts of the MFC will be extremely **HOT!** So, never touch the shaded parts shown in the left illustration.

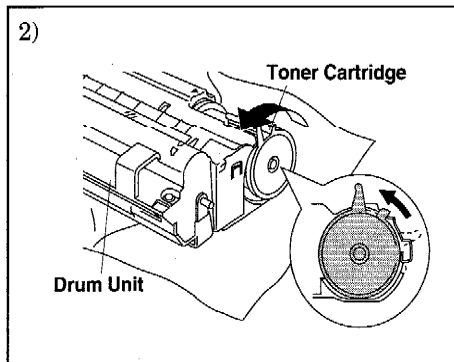


2) Gently turn the lever on the toner cartridge forward until it stops. The toner cartridge cannot be removed unless the shutter is completely closed, by turning the lever fully to the front.

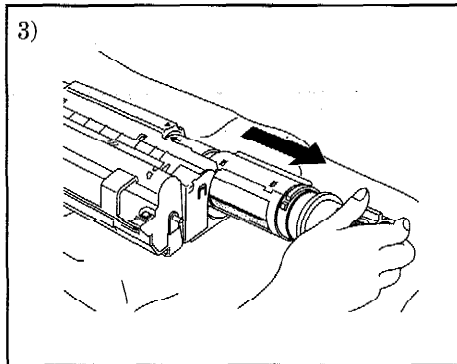

- 3) Remove the old toner cartridge from the drum unit by gently pulling it out.

**WARNING**


Handle the toner cartridge carefully. If toner scatters on your hands or clothes, immediately wipe it off or wash it with cold water.

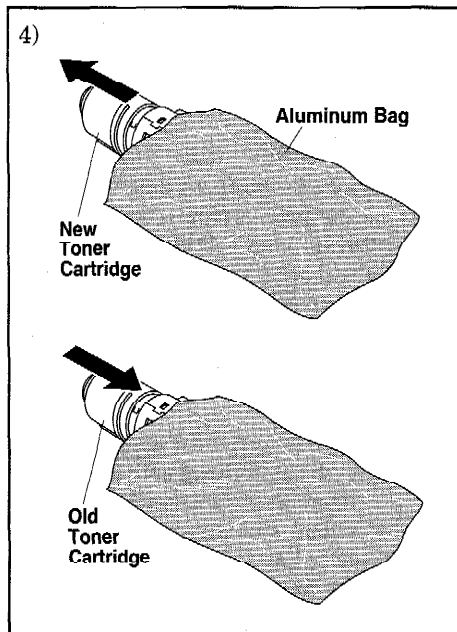

- 4) Unpack the new toner cartridge. Place the used toner cartridge into the aluminum bag and discard it according to local regulations.


**WARNING**

- Wait to unpack the toner cartridge until immediately before you install it into the MFC. If a toner cartridge is left unpacked for a long period of time, the toner life is shortened.
- **You can use only a genuine Brother toner cartridge (TN-5000PF series), which is specially formulated to ensure top print quality. Using another brand of toner cartridge may void your MFC's warranty.**

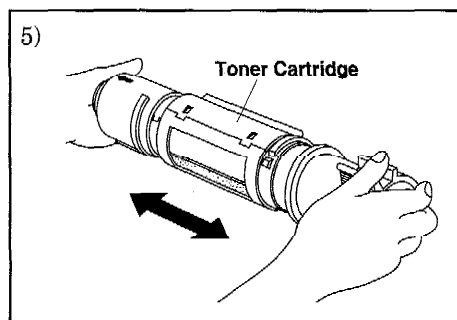


- 5) Gently rock the toner cartridge from side to side five or six times.




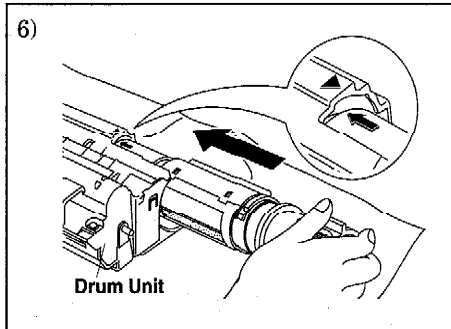

- 6) Slide the new toner cartridge into the opening on the right hand side of the drum unit. To ensure that the toner cartridge and the drum unit fit together correctly, make sure that the toner cartridge guide bar is exactly aligned with the guide slot in the drum unit.

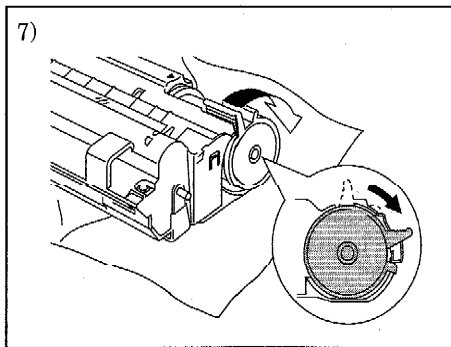

- 7) Gently turn the lever on the toner cartridge backward until it stops.

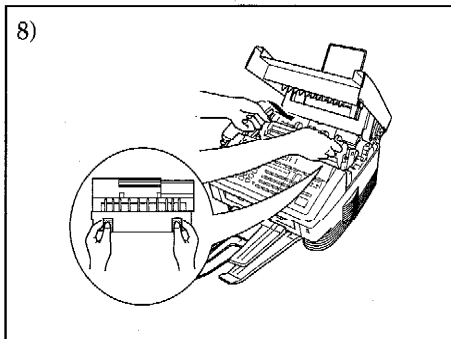

- 8) Reinstall the drum unit into the MFC and close the top cover.

## Replacing the Drum Unit

The MFC uses a drum unit to create the print images on paper. If the display shows CHANGE DRUM SOON, it indicates the drum unit is nearly at the end of its life. We recommend you prepare a new drum unit to replace the current one. Even if the display shows CHANGE DRUM SOON, you may be able to continue to print without replacing the drum unit for a while. If there is a noticeable deterioration in the output print quality even before CHANGE DRUM SOON is shown, then the drum unit should be replaced.

### WARNING


- When removing the drum unit, handle carefully because it contains toner.
- You should clean the MFC when you replace the drum unit. See pages 165-167.

**NOTE:** The drum unit is a consumable, and it is necessary to replace it periodically. The drum unit is rated at approximately 20,000 pages. There are many factors that determine the actual drum life, such as temperature, humidity, type of paper and toner that you use and the number of pages per print job, etc... The drum life is estimated at approximately 20,000 pages at 20 page per job and 8,000 pages at 1 page per job. The actual number of pages your drum will print may be significantly less than these estimates. Because we have no control over the many factors that determine the actual drum life, we cannot guarantee a minimum number of pages that will be printed by your drum.

For best performance, use only genuine Brother toner, and the product should be used only in a clean, dust-free environment with adequate ventilation.

Follow these steps to replace the drum unit:


1) Open the top cover.

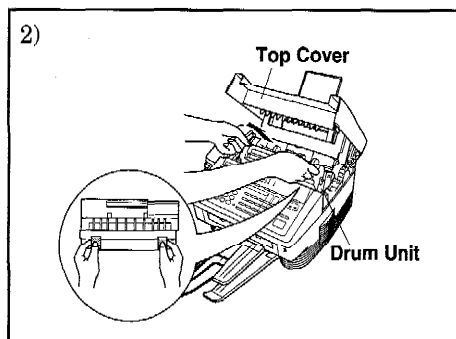

2) Remove the old drum unit. (See page 159.)

### WARNING


Just after you have used the MFC, some internal parts of the MFC are extremely **HOT!** So please be careful. (See page 166.)

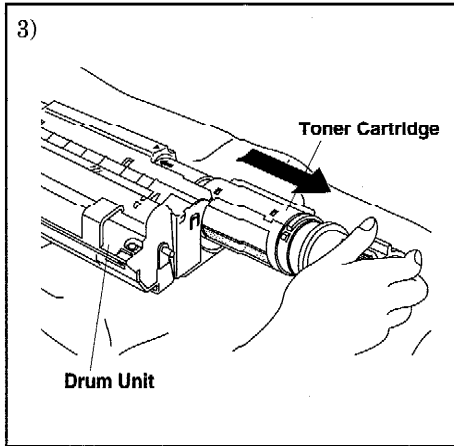


- 3) Remove the toner cartridge from the drum unit and keep it in a safe place. For more information, see "Replacing the Toner Cartridge" on pages 158-161.

**NOTE:** Discard the used drum unit according to local regulations. If you are not sure of them, consult with Brother Customer Service. Be sure to seal the drum unit tightly so toner powder does not spill out of the unit. When discarding used drum units, keep them separated from domestic garbage.

We recommend you place the drum unit on a drop cloth or large piece of disposable paper to avoid spilling and scattering the toner.

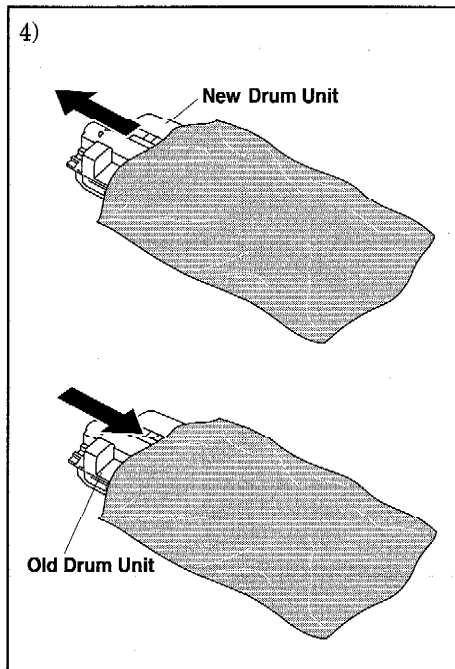

- 4) Wait to unpack the new drum unit until immediately before installing it. Place the old drum unit into the aluminum bag and discard it according to local regulations.

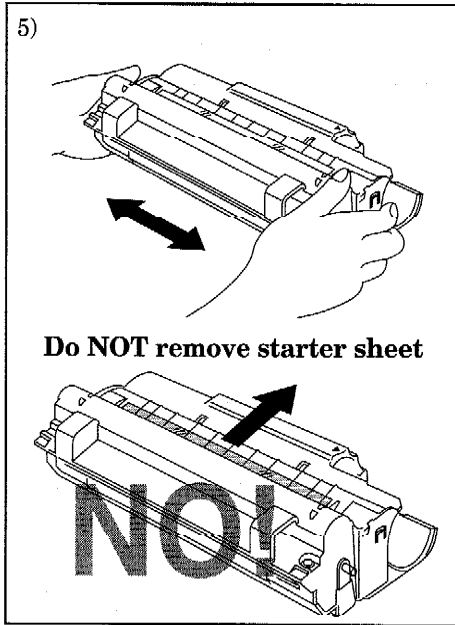


- 5) Gently rock the new drum unit side to side five or six times.


**WARNING**

- **Do not remove the starter sheet.**
- Wait to unpack the drum unit immediately before installing it into the MFC. If an unpacked drum unit is subjected to excessive direct sunlight or room light, the unit may be damaged.
- Handle the toner cartridge and the drum unit carefully because it contains toner. If toner scatters and your hands or clothes get dirty, immediately wipe or wash it off with cold water.

- 6) Reinstall the toner cartridge into the new drum unit. For more information, see "Replacing the Toner Cartridge" on pages 158-161.

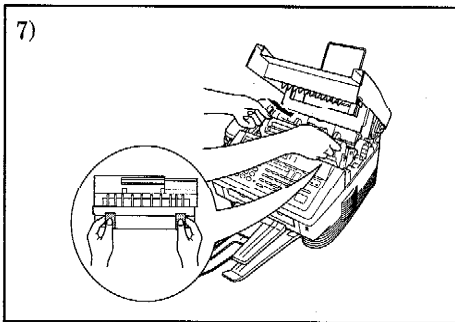

- 7) Holding the new drum unit by its handles, install it. Close the top cover.

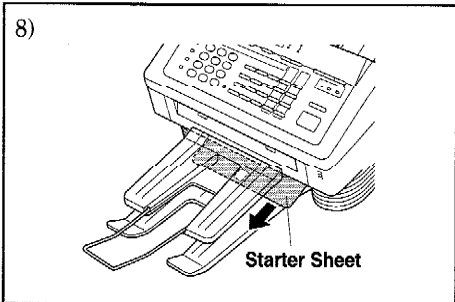

- 8) The MFC automatically will eject the starter sheet.


## 13. REGULAR MAINTENANCE

### *Regular Maintenance*

You can keep your MFC in optimum condition by cleaning it on a regular basis. It is a good idea to replace the toner cartridge and the drum unit during this routine. Avoid using thinners or other organic solvents to clean the MFC and do not use water.



Follow the steps below:

1. Unplug the telephone line and then the power cord.  
When you reconnect these lines later, make sure to connect the power cord first, then the telephone line.
2. Wipe dirt off the MFC using a slightly damp clean cloth.
3. Clean the white bar and the glass cover.  
Moisten a small piece of clean soft, lint-free cloth with isopropyl alcohol and carefully remove dirt from the glass cover and the white bar of the scanner.  
\* Do not use isopropyl alcohol to remove dirt from the control panel. It may cause a crack on the panel.
4. Wipe the gears and electric terminals with isopropyl alcohol on a cotton swab.  
Gently wipe the scanner window and the toner sensor with a clean soft dry cloth.

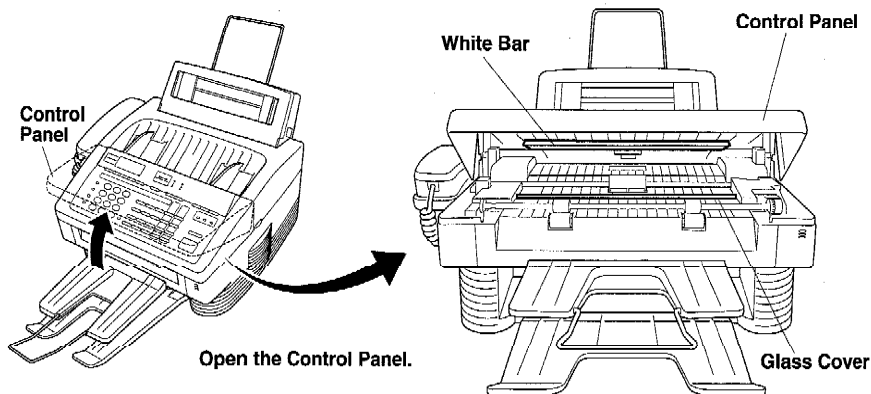

### WARNING

- Do not use isopropyl alcohol to clean the scanner window or the toner sensor.
- Do not touch the scanner window with your finger.
- Handle the drum unit carefully as it contains toner. If toner scatters and your hands or cloths get dirty, immediately wipe or wash it off with cold water .

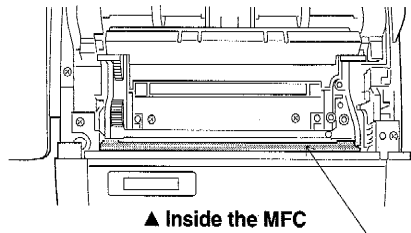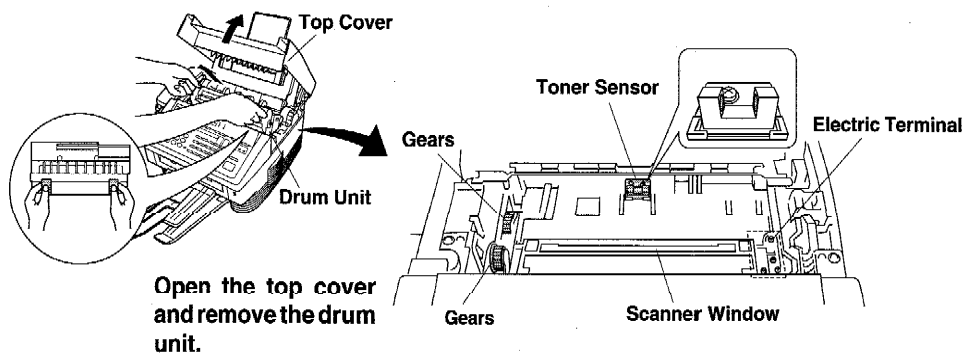

### WARNING

Just after you have used the MFC, some internal parts of the MFC are extremely **Hot!** When you open the top cover of the MFC, never touch the shaded parts shown in the diagram to the left.


Shaded parts are **HOT!**

### *Cleaning the Drum Unit*

**NOTE:** We recommend you place the drum unit on a drop cloth or large piece of disposable paper to avoid spilling and scattering the toner.

1. Turn the drum unit upside down carefully.

2. Clean the primary corona wire inside the drum unit by gently sliding the tab from right to left several times.

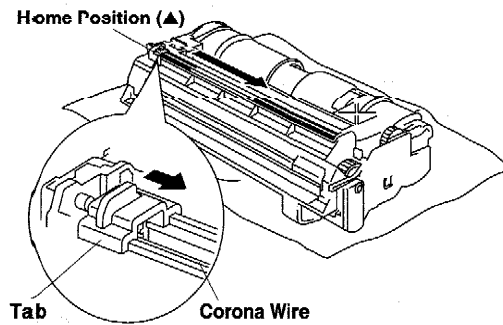

3. Return the tab to the home position (▲ mark position) before reinstalling the drum unit.

#### CAUTION

If you do not position the tab at the home position, printed pages may have vertical stripes.


4. Install the drum unit into the MFC.  
See the section "Replacing the Drum Unit" on pages 162-164.
5. Close the top cover.
6. Plug in the power cord and turn on the power switch.

### ***Packing and Shipping the MFC***


Whenever you transport the MFC, use the packing materials that came with your MFC. Also, follow the steps below to pack the MFC or it may be damaged, which will void the MFC's warranty.

1. Turn off the power switch and unplug the MFC from the AC outlet.
2. Open the top cover.
3. Remove the drum unit assembly. To remove the drum unit, please refer to the previous section (See pages 162-164.)


**NOTE:** Remove the drum unit and toner cartridge. Leave the toner cartridge installed in the drum unit.

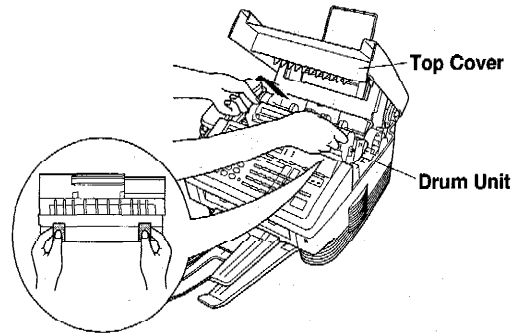

4. Place the drum unit and toner cartridge assembly into the plastic bag and seal the bag completely.

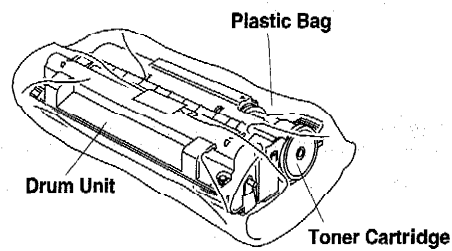


5. Close the top cover. Remove the wire extension, document tray, dust cover, paper tray and handset and pack them.
6. Wrap the MFC in the plastic bag and place it in the original carton box with the original packing material.

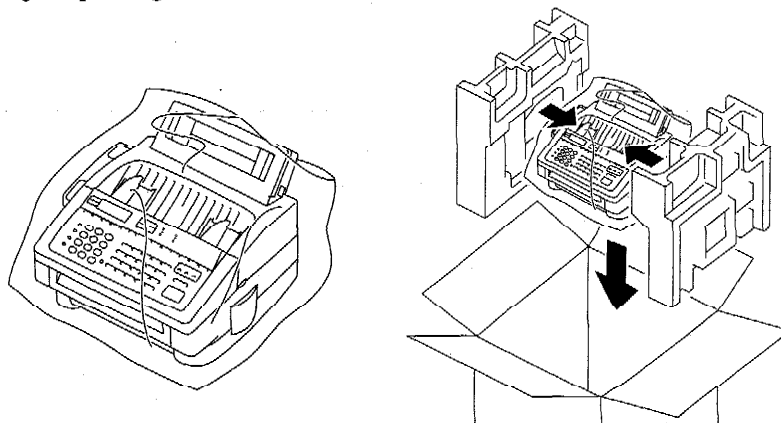



7. Place documents (manual and printed material) and the drum unit and toner cartridge assembly into the carton box as shown below.

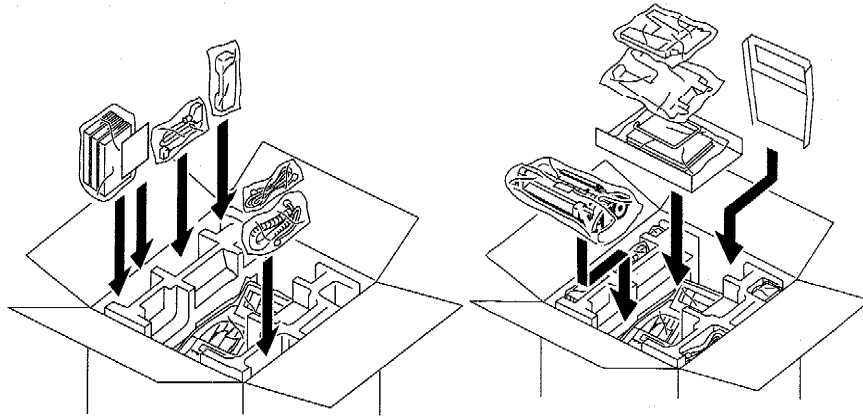

8. Close the carton box and tape it shut.

---

## ***Paper Jams***

---

Your MFC will sound an alarm if the document jams while going through the feeder or if the paper becomes stuck. The display will show DOCUMENT JAM or PRINTER JAM.

### ***Fixing a Document Jam***


---

1. Open the control panel.
2. Remove the jammed documents.
3. Close the control panel.
4. Press **Stop**.

### ***Fixing a Paper Jam***


---

Before you can clear a paper jam error, you must find out where the paper is stuck. Use the diagram below to help locate the position of the paper.

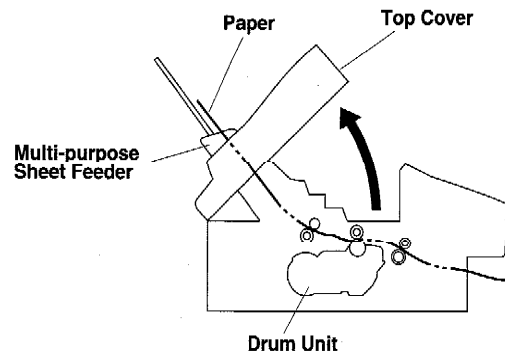


### WARNING

- Do not force the jammed paper from the paper tray because you may damage the MFC and cause toner to scatter on the next printed panels.
- After you have used the MFC, some internal parts of the MFC are extremely **HOT!** When you open the top cover of the MFC, never touch the shaded parts shown in the following diagram.

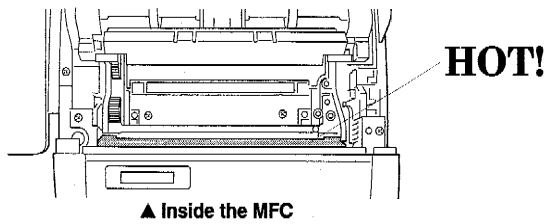

#### 1. Clearing a Paper Jam in the Multi-purpose Sheet Feeder.


If a paper is jammed inside the multi-purpose sheet feeder, open the multi-purpose sheet feeder to pull the jammed paper upward out of the feeder; then close the multi-purpose sheet feeder. Also, open the top cover and check that a torn piece of paper does not remain inside the MFC (see the next section.)

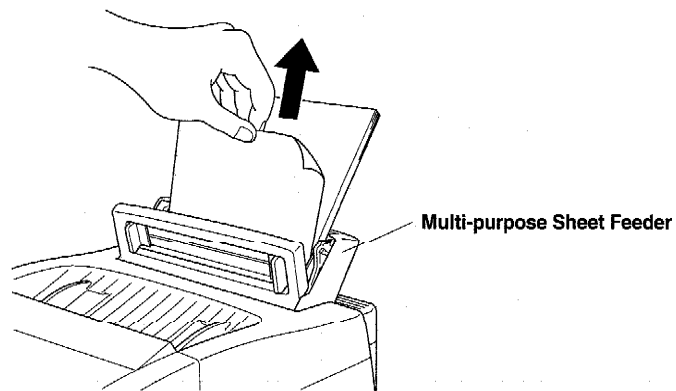

---


## 2. Clearing a Paper Jam near the Drum Unit.

If a paper is jammed near the drum unit, open the top cover, and remove the drum unit. Then, pull the jammed paper upward and out of the MFC. Reinstall the drum unit and close the top cover.

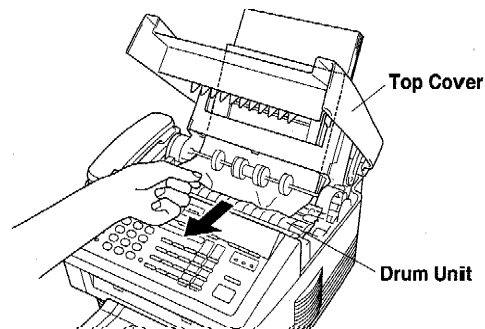

## 3. Clearing a Paper Jam in the Fuser Unit.

If a paper is jammed in the fuser unit, open the top cover and remove the drum unit. Then, pull the jammed paper out of the fuser. Reinstall the drum unit and close the top cover.

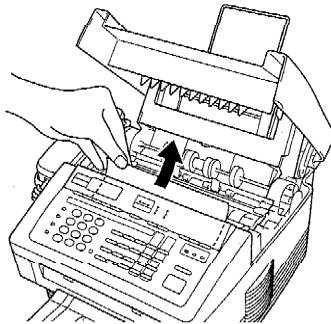


## 14. OPTIONAL ACCESSORIES

### *Connecting the Serial Interface Board (RS100M)*

To connect your MFC to a DOS computer or to an Apple Macintosh computer, you must first install the optional serial interface board (RS100M). When you have installed a serial interface board, you can share the MFC with two computers, using both the parallel and the serial interface ports. Automatic interface selection is a standard feature when using the serial interface board.


#### Installing the Serial Interface Board into Your MFC

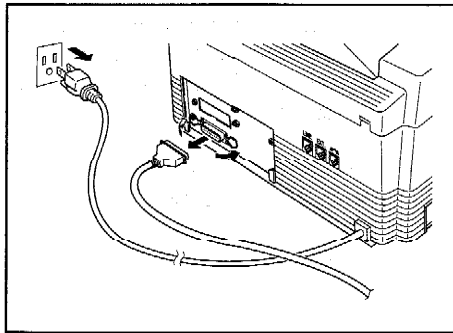

1. Unplug the power cord from the AC outlet and disconnect the parallel interface cable.

#### **WARNING**


Be sure to unplug the power cord before installing or removing the serial interface board.

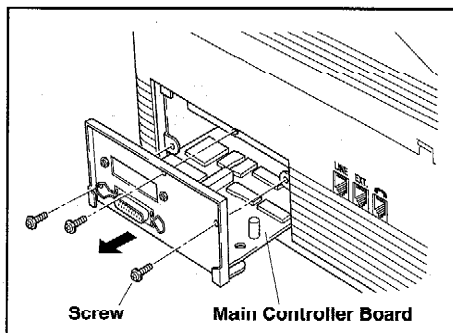


2. Unscrew the three screws securing the rear plate of the main controller board and pull out the main controller board.

#### **WARNING**

Do not touch the surface of the main controller board.

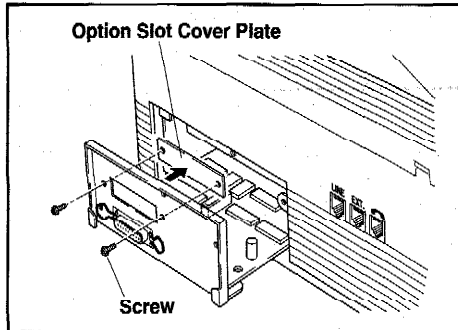


3. Unscrew the two screws and remove the option slot cover plate and keep it in a safe place.

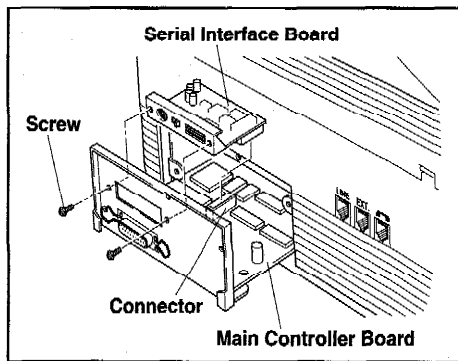

4. To install the serial interface board onto the main controller board, plug the serial interface board into the upper left connectors on the main controller board.
5. Secure the serial interface board with the two screws.

**WARNING**


- Hold the edge of the serial interface board. Do not touch the surface of the board.
- Make sure the serial interface board is securely seated on the main controller board.

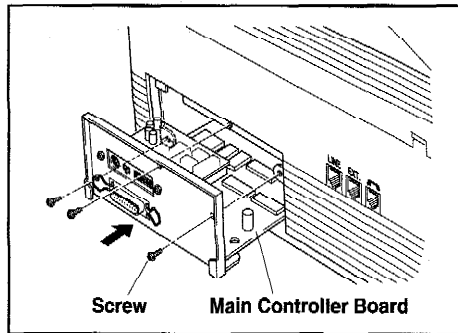

6. Reinstall the main controller board in the MFC by sliding it into the guide rails.
7. Secure the main controller board with the three screws.

## Selecting the RS-422A (Apple) or RS-232C (IBM) Serial Interface

1. Make sure the MFC is in the offline mode.
2. Select the serial interface port that matches your computer:
  - For Apple Macintosh computers, select the RS-422A (Apple) port by keeping the slide switch to the left (factory setting is RS-422A).
  - For IBM compatible computers with Windows® or PCs that operate with DOS, move the slide switch to the right (RS-232C).

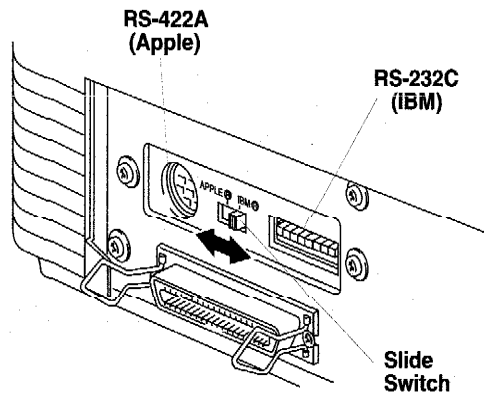

## Setting the Serial Interface Parameters

Set the parameters to match your computer as follows:

- Never change the RS-422A parameters for Apple Macintosh computers. The RS-422A parameters have been set correctly at the factory for Apple Macintosh computers, so you do not have to change the setting. You may skip this section. If you change parameters for the RS-232C serial interface and then switch back to RS-422A for Apple Macintosh computers, be sure to restore the parameters to the factory setting.
- Set the RS-232C parameters to match your IBM compatible computer. You can set serial settings in several different places, within your DOS application, within the Windows® Printer Icon (for Windows® application software only), or within your AUTOEXEC.BAT file using MODE commands. For information on setting serial interface parameters, see the user's guide for your computer or software.

If necessary, set the serial interface parameters as follows:

1. Make sure the printer is in offline.
2. To set the serial interface parameters of the dual in-line package (DIP) switch, move the selectors up (ON) or down (OFF).

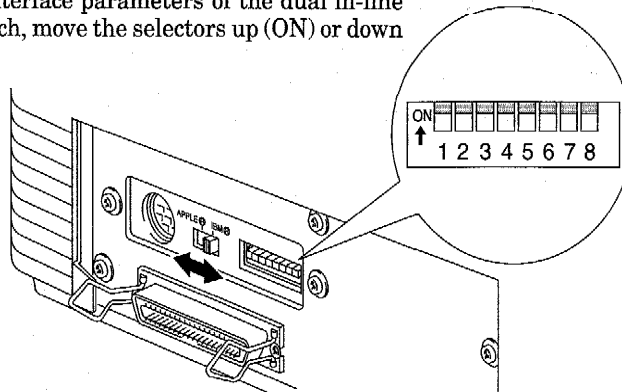


Table 1: Serial Interface Parameters Settings

Selector	Parameters	On (up)	Off (down)
1	Baud Rate	—	See Table 2. —
2	Baud Rate	—	See Table 2. —
3	Data Length	7 bits	<b>8 bits</b>
4	Stop Bit	2 bits	<b>1 bit</b>
5	Parity	—	See Table 3. —
6	Parity	—	See Table 3. —
7	Protocol	Xon/Xoff + DTR	<b>DTR only</b>
8	Robust Xon	On	<b>Off</b>

Table 2: Baud Rate Settings

Selector 1	Selector 2	For RS-422A	For RS-232C
Off	Off	<b>57600</b>	<b>9600</b>
On	Off	9600	4800
Off	On	1200	1200
On	On	19200	19200

Table 3: Parity Settings

Selector 1	Selector 2	Parity
On	On	Odd
On	Off	Even
Off	—	<b>None</b>

- The factory settings are indicated in bold print.
- If the robust Xon setting is turned on with selector 8, the printer sends Xon signals at one second intervals to the connected computer until it receives data. It is effective only if selector 7 is set to the On position for the Xon/Xoff plus DTR setting.



## Connecting the Serial Interface Cable

To connect your MFC to your computer, you must use a serial interface cable with an 8-pin, DIN-type connector.

See your dealer to purchase a serial interface cable:

- If you are a Macintosh user, you can easily find the necessary cable at a local computer store. Look for Apple serial cables labeled "Macintosh to ImageWriter™" or "Macintosh to Personal LaserWriter™ 300". Do not purchase a serial cable labeled "Straight-thru" or "Local-Talk."
- If you are a PC user, you must purchase a special serial cable from your dealer. If you have a 9-pin connector on your computer, look for a cable labeled "IBM AT to ImageWriter II". If you have a 25-pin connector, look for a cable labeled "DB25 to ImageWriter II." These cables most likely can be found in the Apple Macintosh section of your computer dealer's store. For more information about the interface specification, consult with your dealer.

**NOTE:** The MFC can be connected to a parallel and a serial interface cable at the same time. The auto interface selection function allows you to share the MFC with two computers. To do this, first connect the parallel interface cable and then connect the serial interface cable.

Connect the serial interface cable as follows:

1. Make sure the power switch is turned off.

### **WARNING**

Unplug the power cord before connecting or disconnecting the interface cables or you may damage the MFC.

2. Insert and secure the serial interface connector into the serial interface port of your MFC.
3. Insert and secure the serial interface connector into the serial interface port of your computer.
4. Turn on the power switch.

---

## ***Memory Board***

---

The memory board is installed on the main controller board inside the MFC. When you add the optional memory board, it increases the performance modes for both fax and printer operations.

### ***Optional Memory for the Printer & Fax Operations***

---

The MFC can recognize 1MB (ME1000) or 2MB (ME2000) of Optional Memory. Be careful to purchase the appropriate memory board for your needs.

#### **For the Printer**

Additional memory is useful and may be necessary if you want to download many different fonts or want to print a very complex document.


#### **For the Fax**

Additional memory is available and will expand the memory used for sending and receiving faxes.

<b>Model Name</b>	<b>Optional Memory</b>	<b>Total</b>
MFC 7650MC 0.8 MB (up to 80 Pages) (24 Minutes)	1 MB or 2 MB	1.8 MB (up to 180 Pages) (54 Minutes) or 2.8 MB (up to 280 Pages) (84 Minutes)

Using Brother #1 Chart with MMR coding and Standard Resolution.


### ***Installing the Optional Memory Board***

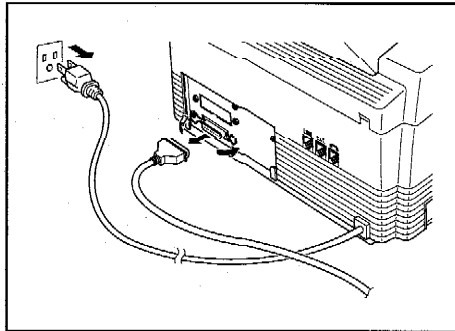

1. Unplug the power cord from the AC outlet and disconnect the interface cable.

**WARNING**


Unplug the power cord before installing (or removing) the memory board.

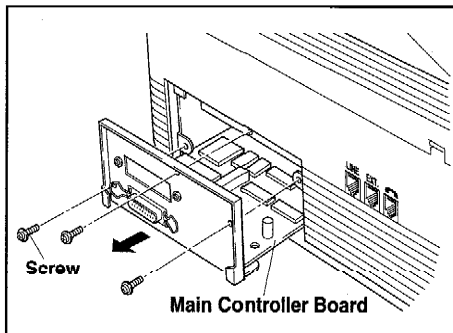

2. Unscrew the three screws securing the main controller board plate and pull out the board.

**WARNING**


Do not touch the surface of the main controller board.

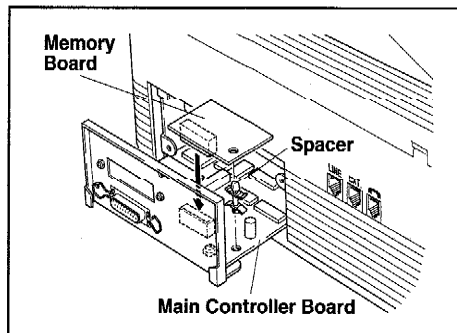

3. To install the memory board onto the main controller board, use the attached spacer and plug it into the lower right connectors of the main controller board.

**WARNING**

- Hold the edge of the memory board. Do not touch the surface of the board.
- Make sure the memory board is securely seated in the main controller board.

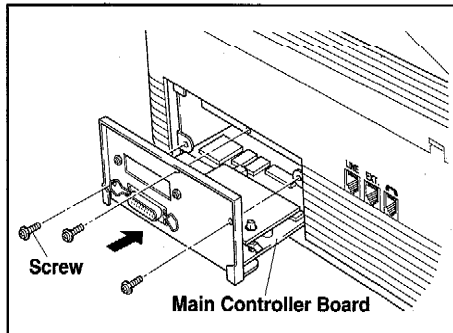

4. Reinstall the main controller board in the MFC by sliding it into guide rails.

5. Secure the main controller board with the three screws.

6. Reconnect the interface cable.

7. Plug the power cord into the AC outlet.

## 15. TROUBLESHOOTING

### ***Fax-Back System***

---

Brother Customer Service has installed an easy-to-use Fax-Back system, so you can get instant answers to common technical questions and product information for all Brother products. This system is available 24 hours a day, 7 days a week. You can use the system to send faxes to any fax machine, not just the one from which you are calling.

If you can't resolve difficulty with your MFC using this manual, call our Fax-Back System and follow voice prompts to receive faxed instructions about using the system, and an index of Fax-Back subjects.

**USA:** 1-800-521-2846

**From within Canada:** 1-800-681-9838

The Brother Fax-Back System number (USA only) is preprogrammed on One Touch key 01.

### ***Brother On the World Wide Web***

---

You can find more information about Brother products, from product specification sheets to Frequently Asked Questions (FAQs), on the World Wide Web. Visit us at

*<http://www.brother.com>*

### ***Brother Bulletin Board***

---

Brother's Bulletin Board Numbers are

**USA:** 1-714-859-2610

**From within Canada:** 1-514-685-2040

---

## Error Messages

---

Occasionally, you may have a problem with your MFC or telephone line. If this happens, your MFC usually identifies the problem and displays an error message. Refer to the following list when you see an error message on the display.


Error messages are listed below in alphabetical order.

<b>B</b> BUFFER ERROR	<p>This means an overflow of the input data buffer. Press <b>FF/Cont.</b> Data that overflowed the buffer will not be printed.</p> <p>Check the communication parameter settings such as handshake protocol on both your computer and MFC.</p> <p>If the error occurs again, the interface hardware may be damaged, so consult with your dealer.</p>
<b>C</b> CHANGE DRUM SOON	<p>You can clear a print quality problem by replacing the drum unit with a new one if the display shows CHANGE DRUM SOON. The drum unit is near or at the end of its life.</p>
CHANGE TONER	<p>If the display shows CHANGE TONER and at the same time the Toner Empty LED on the control panel flashes on and off, you can still print. But the toner is depleted and it is telling you that the toner will soon run out. Order a new toner cartridge now.</p>
CHANGE TONER TONER EMPTY	<p>The toner is used up and printing is not possible. Replace the toner cartridge with a new one. (See pages 158-161.)</p>
CHECK PAPER	<p>The MFC is out of paper or the paper is not properly loaded in the multi-purpose sheet feeder. Refill the paper or remove the paper and load it again.</p>
CHECK PAPER SIZE	<p>Your Paper Size setting may not be set correctly for the paper you are using (see page 68). When you see this error, the reduction ratio automatically will be changed to AUTO if you have used a fixed reduction ratio (see pages 69-70).</p>



COMM.ERROR	A poor quality phone line caused a communications error. Try the call again.
CONNECTION FAIL	You requested the polling function even though the machine you called does not have the polling feature.
COOLING DOWN PLEASE WAIT	When the temperature of the drum unit or toner cartridge becomes too hot, the MFC will pause its current print job and go into cooling down mode. During the cooling down mode you will hear the cooling fan running while the display on the MFC shows COOLING DOWN and PLEASE WAIT. You must wait and allow the MFC to resume printing when it is ready.
COVER OPEN	The top cover or multi-purpose sheet feeder cover was not completely closed. Please check each of them.
<b>D</b> DISCONNECTED	The telephone line was disconnected by the other party during the communication. Try calling the other party to see what happened.
DOCUMENT JAM	Your documents were not inserted properly, or the documents were not fed properly, or the documents were too long. Open the control panel and remove the documents. (See pages 170-172.) Then close the control panel, press <b>Stop</b> and insert the documents again, adjusting the guides on either side of the document, and try sending the fax again. Original documents should be straight, non-wrinkled, to be correctly fed. Otherwise, the documents may occasionally jam.
DOWNLOAD FULL	The download buffer is full. Press <b>FF/Cont.</b> Printing will resume (the downloading is cancelled).
<b>L</b> LINE ERROR	There is a communications error. If you are using a serial interface, check baud rate, parity, etc. If you are using a parallel interface, check the cable connections.

Maintenance

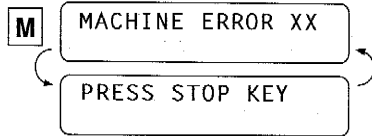

Turn off the power. Then contact the Customer Service number listed on page 211.

MEMORY FULL

- Press the **FF/Cont** switch to print the data remaining in the MFC.
- If you have installed the Windows® driver, try again after setting the True Type mode to “Print as Graphics” in the PRINT menu of your application software.
- Expand the printer memory with the optional memory board. (ME1000 or ME2000)
- Reduce the print resolution or reduce the complexity of your document.

**N** NO RESPONSE/BUSY

The number you called does not answer or is busy. Or, you may have reached a number that is not connected to a fax machine. Check the number and try again.

NOT REGISTERED

The One Touch key or Speed Dial number you pressed has no number assigned to it. You will have to program a phone number. (See pages 26-28.)

**P** PRINT OVERRUN

- Press the **FF/Cont** switch to print the data remaining in the printer memory.
- If you have installed the Windows® printer driver, try again after setting the TrueType mode to ‘Print as Graphics’ in the PRINT menu of your application software.
- If this does not clear the error, reduce the complexity of your document or reduce the print resolution.

PRINTER JAM

The recording paper is stuck in the printing area.  
Remove the jammed paper. (See pages 171-172.)

**S** SET CARTRIDGE

A toner cartridge is not installed. Reinstall the toner cartridge.



---

## ***If You Are Having Difficulty with Your MFC***

---

### **When the Receiving Party Says the Picture is Not Clear**

Sometimes the resolution mode you chose when you sent your fax may not have been appropriate. Send the fax again, but try using the FINE or SUPERFINE mode. Also, your MFC's scanner may be dirty, so try cleaning it. (See pages 165-166.)

### **When the Receiving Party Says Vertical Streaks Appear on the Faxes They Receive:**

Your MFC's scanner may be dirty or the receiving party's print head may be dirty. Clean your scanner, (see pages 165-166) and make a copy to check if the problem was caused by your machine.

### **Vertical Streaks Appear on the Faxes You Receive**

Sometimes you may see vertical streaks on the faxes you receive. Either your MFC's primary corona wire for printing may be dirty, or the sending party's fax scanner may be dirty. Clean your primary corona wire. (See page 167.) Make a copy to see if the vertical streaks are still there.

### **Vertical Streaks Appear in Copies**


Sometimes you may see vertical streaks on your copies.

Either the scanner or the primary corona wire for printing is dirty. Clean them both. (See pages 165-167.)

### **If the Printed Pages are Still Blurred at the Center or Either Edge as Below**

First, make sure that the printer is placed on a flat, horizontal surface.

If the problem still occurs, remove the drum unit with the toner cartridge installed. Hold the unit horizontally with both hands and tap it firmly against a flat surface 3 or 4 times. Reinstall the drum unit with the toner cartridge and try printing again. If the print quality is acceptable, you may continue using this drum unit. If the print quality is not acceptable replace the drum unit. If streaks still occur, please contact Brother Customer Service or your local Authorized Service Center for further assistance.

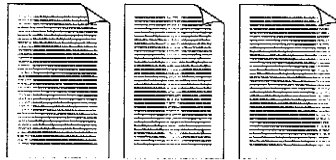

### **Horizontal Streaks**

You may get a fax with horizontal streaks or with missing lines. Usually this is caused by a poor telephone connection. Ask the other party to send the fax again.

### **Poor Printing Quality**

If the printing quality is not at an acceptable level, please replace your drum unit with a new one.

### **The Print is too Light or too Dark**


The print density dial is located in the corner under the top cover. (Remove the drum unit assembly.) You can use it to adjust print density by increasing or decreasing the Print Density function setting you chose.

The print may become darker or lighter as conditions change (such as changing the toner cartridge and drum unit or if the MFC has become overheated from heavy use).

Use a straight blade screwdriver to turn the print density dial clockwise for darker print and counterclockwise for lighter print. The dial has been set to the middle position.

Make five or six copies to bring the toner up to the level of the new setting.

If the print is still too light, check to see if the Toner Save feature is ON (see page 72).

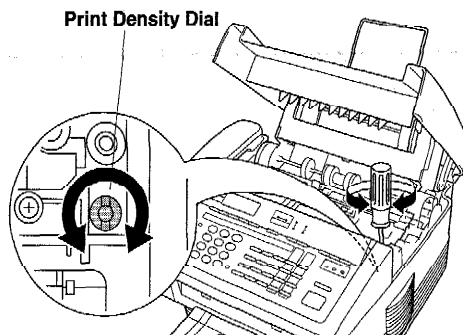

### **Received Faxes Appear as Split or Blank Pages:**

If the received data is divided and printed on 2 pages or if you get an additional blank page, your Paper Size setting may not be correct for the paper you are using (see page 68). If you are using the fixed reduction feature, check to see if the reduction ratio is suitable for the real recording paper (see pages 69-70).

### **When Dialing Doesn't Work...**

You may have the wrong dialing mode. Change the TONE/PULSE setting. (See page 21.) You should check all the telephone line connections (such as to the handset and to the wall jack). Check also that the power cord is connected and the power switch is turned on. (See page 9 of Setup Manual for Fax, Printer, Copier.) Check by pressing **Hook** to see if you hear a dial tone. Also try dialing by first pressing **Hook** or lifting the handset. Wait until you hear the fax tones and then press **Start**.

### **MFC Does Not Answer When Called:**

Make sure the MFC is in the correct receiving mode for your setup (either Fax, F/T or MSG CTR). Check for a dial tone. If possible, call your MFC to hear it answer. If there is still no answer, check the telephone line cord connection. Connect a standard telephone handset to the MFC telephone jack. If there is no ringing when you call your MFC, call your Telephone Company to check the line.

### **No Dial Tone on the Handset:**

Press **Hook**. If you don't hear a dial tone, check telephone line cord connections at MFC and wall jack. Check that the handset is connected to the MFC's handset jack. Test the wall jack with another single line telephone. If no dial tone on the wall outlet, call your Telephone Company.

### Double Ring in F/T Mode

The MFC knows the incoming call is not a fax so it is signaling you to answer the telephone call. Pick up the MFC's handset or answer from an extension phone and press your MFC's Remote Deactivation Code (default setting is #51).

### Problem using the HP Pavilion PC and the "HP DEMO" screen saver

If you select the "HP Demo" screen saver on your HP Pavilion PC after you have installed the Multi-Function Link Pro software, the System.ini file is overwritten and you can not use the Brother MFC to print, scan or for Remote Setup.

If you have used the IIP Demo screen saver already, you must edit the System.ini file as follows:

```
[boot]
;comm.driv=comm115.driv
comm.driv=brmfcomm.driv

[386Enh]
DEVICE=C:\WINDOWS\SYSTEM\Bi-Di.386
```

If you do not want to edit the System.ini file, please change the screen saver to another one and Re-install Multi-Function Link Pro again.

### Bi-Directional Parallel Ports (nibble and byte modes)

The MFC 7650MC supports both nibble (AT) and byte (Bi-directional) mode parallel ports. If your PC supports byte mode, scanning and fax reception will be at a faster speed. To verify or change the parallel port mode, please check your system BIOS in the CMOS Setup or *contact your computer manufacturer for assistance*.

**NOTE:** Some older PC models support only nibble mode. Generally, newer models support both nibble and byte modes.

### MFC Connect Failure or Bi-Directional Communication Error

Recently, some printers have included a function to show the printer status on the PC display. Such printers use the bi-directional communication parallel port between the printer and the PC. Our MFC 7650MC also has a bi-directional parallel port function. Since Windows® 3.xx does not support bi-directional communication on the parallel port, each peripheral vendor has developed and supplies their own bi-directional device driver, which will be installed into Windows® 3.xx. If you install two or more different bi-directional device drivers into Windows®, they might conflict with each other and cause some problems.

Please make sure you have installed the MFC 7650MC driver by executing SETUP.EXE from your CD-ROM drive, as instructed on the CD-ROM label. The bi-directional communication may be disable when the driver is installed from Add menu in "Printers" of Control Panel please restart Windows®.

Remove the conflicting situation caused by one of the following printer drivers. Review the following sections that apply to any additional printer drivers you may have installed into your Windows® software.

Brother HL-6/6V/10h/630series/660series/960/1260/WL-660  
HP LaserJet series II, IID, IIP, IIP+, III, IIID, IIP or IV Plus  
NEC SuperScript 610/660  
EPSON ActionLaser 1100/1400  
LexMark WinWriter 200

**Brother HL-6/6V/10h/630series/660series/960/1260/WL-660:**

The Resource Manager for MFC 7650MC may not work if the printer driver for the above models are installed after the installation of the MFC 7650MC printer driver.

In this case, please install the MFC 7650MC printer driver again or copy BI-DI.386 from the CD-ROM to the Windows/System directory. (NOTE: BI-DI.386 on X:\7650\16-BIT\MFLPRO\FULL\DISK 1 is not compressed.)

**HP LaserJet series II, IID, IIP, IIP+, III, IIID or IIP:**

If Microsoft Windows® Printing System for above models are used, you have to modify the "win.ini" file which is in the Windows directory to turn the printer's bi-directional function off.

We recommend you to have back-up before you modify the WIN.INI or SYSTEM.INI, just in case.

Open the file "win.ini" by using the "notepad" application. You can find the following statement in the [spooler] section.

```
[spooler]
QP.LPT1 = wpsljqp.dll
```

To disable this function, put a semicolon at the head of above sentence as follows;

```
[spooler]
;QP.LPT1 = wpsljqp.dll
```

Then, open the file "system.ini" by using the "notepad" application. You can find the following statement in the [386Enh] section.

```
[386Enh]
device=wpsljvpd.386
:
:
WPSLPT1=1
```

To disable this function, put a semicolon at the head of above sentences as follows;

```
;device=wpsljvpd.386
:
:
;WPSLPT1=1
```

You must restart Windows® to make these modification effective.

The modification disables the printer status reporting on your PC, however, you will be able to use the MFC 7650MC with no further problems.

**HP LaserJet 4 Plus:**

Please uninstall the Main Status windows by double clicking the Un-install Status windows in HP LaserJet group.

**NEC SuperScript 610/660:**

Please remove the NEC SuperScript driver by having NECDELETE.EXE run in the Disk 1 coming with NEC printers.

**EPSON ActionLaser 1100 / 1400:**

Please remove the EPSON Action Laser 1100/1400 driver by having EPDELETE.EXE file in Windows® Printer Driver for these models run.

**Lexmark WinWriter 200:**

You have to modify the "win.ini" and "system.ini" files, which are in the Windows® directory to turn the printer's bi-directional function off.

We recommend you to back-up WIN.INI and SYSTEM.INI before you modify them.

Open the file "win.ini" by using the "notepad" application. You can find the following statement in the [windows] section.

```
[windows]
run=C:/WINDOWS/SYSTEM/WPSIOMON
```

To disable this function, put a semicolon at the head of above sentence as follows;

```
[windows]
;run=C:/WINDOWS/SYSTEM/WPSIOMON
```

Also, You can find the following statement in the [spooler] section.

```
[spooler]
QP.LPT1=wpslbq.dll
```

To disable this function, put a semicolon at the head of above sentence as follows;

```
[spooler]
;QP.LPT1=wpslbq.dll
```

Then, Open the file "system.ini" by using the "notepad" application. You can find the following statement in the [386Enh] section.

```
[386Enh]
device=wpscomd.386
device=wpsljvpd.386
:
:
WPSLPT1=1
```

To disable the function, put a semicolon at the head of above sentences as follows;

```
[386Enh]
;device=wpscomd.386
;device=wpsljvpd.386
:
:
;WPSLPT1=1
```

You must restart Windows® to make these modification effective.

The modification disables the printer status reporting on your PC, however, you will be able to use the MFC 7650MC with no further problems.

**Graphics or text is missing when the document is printed**

This could be caused by your Display Driver software. Contact your reseller and inquire about the latest Display Driver software. Another solution is to change your Windows® Setup Display selection from the current selection to the standard VGA or SVGA selection; contact your reseller or Microsoft Support if you need help modifying your Windows® Display selection or installing new Display Driver software.

## ***Troubleshooting Tips***

---

If you think there is a problem with your MFC, make a copy first. If the copy looks good, the problem is probably not your MFC. Check the chart below and follow the troubleshooting tips.

### **Setting Up the MFC**

<b>Difficulty</b>	<b>Suggestions</b>
The MFC does not print.	<p>Check the following:</p> <ul style="list-style-type: none"><li>• The MFC is turned on.</li><li>• The toner cartridge and drum unit are installed properly.</li><li>• The interface cable is securely connected between the MFC and computer.</li><li>• Check to see if the LCD is showing an error message. (See pages 182-184.)</li></ul>

### **Windows® Setup Printing Difficulties**

<b>Difficulty</b>	<b>Suggestions</b>
I cannot print from my application software.	<ul style="list-style-type: none"><li>• Make sure the Windows® printer driver is installed and you selected it in your application software.</li><li>• If you use the optional serial interface, make sure the serial slide switch of the serial interface is in the correct position and the DIP switches interface settings are correctly set up.</li></ul>
Sometimes I get an error message, PRINT OVERRUN when printing certain documents from Windows®.	<ul style="list-style-type: none"><li>• If you are using the supplied Windows® driver, turn the error recovery operation <b>on</b> in the Setup dialog box and try again.</li><li>• Reduce the print resolution or reduce the complexity of your document and try again.</li><li>• Expand the printer memory by installing one of the optional memory boards.</li></ul>

## DOS Setup Printing Difficulties

Difficulty	Suggestions
I cannot print from my application software.	<ul style="list-style-type: none"> <li>• Check that the DOS application software interface settings match those of your printer: for example, if you are using a parallel printer cable, you would probably set your DOS software printer port to LPT1.</li> <li>• Check for an error message on the LCD.</li> <li>• If you are using the RS100M serial interface board, make sure the RS-232C serial interface is selected with the slide switch. Make sure the interface settings are correctly set up with the proper DIP switches. Make sure the serial parameters for baud rates, parity and stop bits match those in your application software and the MFC.</li> </ul>
The MFC prints, but it prints incorrect information. Sometimes it prints a couple of characters and then ejects the page, etc.	This is an indication that your application printer emulation setting and the MFC'S printer emulation do not match. Check your application software to make sure you selected the correct printer driver. The MFC emulates HP LaserJet IIP. Try setting the MFC to HP emulation in Remote Printer Console and then select the HP LaserJet IIP printer in your application software.
The MFC prints the first part of my document but does not print the last page. (The LCD shows REMAINED DATA.)	This is common problem with database software and spreadsheet software when they are not correctly set up. The data has been sent to the printer but the printer did not receive the Page Eject command. Press the FF/Cont Key to eject the page. Then ask your software supplier how to add a Page Eject (or Form Feed) command to the end of your print job.
How can I change the User settings or default settings on the MFC?	Use the Remote Printer Console (RPC) program.

## Optional Apple Macintosh Serial Interface Board (RS100M) Setup Printing Difficulties

Difficulty	Suggestions
I cannot print from my application software.	<ul style="list-style-type: none"> <li>• Make sure you installed the Macintosh printer driver in the System Folder and selected it with Chooser.</li> <li>• Check the PORT selection within the Chooser: it should match the port to which you physically attached the printer cable.</li> <li>• The serial slide switch on the optional interface board should be in the Apple (RS-422A) position.</li> <li>• Check the printer cable type: <b>you cannot use a LocalTalk or straight-through cable.</b> See Chapter 14 for details on different types of printer cables.</li> </ul>



## Paper Handling Difficulties

Difficulty	Suggestions
The MFC does not load paper. The LCD shows CHECK PAPER or PRINTER JAM.	<ul style="list-style-type: none"><li>• Check to see if the CHECK PAPER or PRINTER JAM message appears on the LCD. If so, the multi-purpose sheet feeder may be out of paper or not properly installed. If it is empty, load a new stack of paper into the feeder.</li><li>• If there is paper in the multi-purpose sheet feeder, make sure it is straight. If the paper is curled, you should straighten it. Sometimes it is helpful to remove the paper, turn the stack over and put it back into the paper tray.</li><li>• Reduce the amount of paper in the multi-purpose sheet feeder, then try again.</li></ul>
The MFC does not load paper from the manual feed stop.	Reinsert the paper firmly, one sheet at a time.
How can I load envelopes?	You can load envelopes from either the multi-purpose sheet feeder or the manual feed slot. Your application software must be set up to print the envelope size you are using. This is usually done in the Page Setup or Document Setup menu of your software. Refer to your application manual.
What paper can I use?	You can use plain paper, envelopes, transparencies, labels, and organizer paper. For information on loading paper. See "Acceptable Paper" on page 130.
How can I clear paper jams?	See "Paper Jams" on pages 170-172.


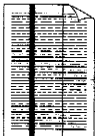

## General Printing Difficulties





Difficulty	Suggestions
<p>The MFC prints unexpectedly or it prints garbage.</p>	<ul style="list-style-type: none"> <li>• Turn the MFC off and on or reset it.</li> <li>• Make sure your application software is correctly set up to use the MFC by checking the printer settings in your application software.</li> <li>• Make sure that the correct interface type and settings are set up to match your computer. Be sure to use the RS-422A serial interface for Macintosh computers and the RS-232C serial interface for PCs. Refer to "Connecting the Serial Interface Board (RS100M)" on pages 173-175.</li> </ul>
<p>The MFC cannot print full pages of a document. An error message PRINT OVERRUN occurs.</p>	<p>The MFC received a very complex print job and could not process part of the page. This may be solved by the following ways.</p> <ul style="list-style-type: none"> <li>• If you are using Windows® 3.1, 3.11, Windows® 95 or Windows NT® Workstation Version 4.0 with the supplied printer driver, see the "Windows® Setup Printing Problems" section.</li> <li>• Try to reduce the complexity of your document or reduce the print resolution.</li> </ul>
<p>The MFC prints the first couple of pages correctly, then some pages have text missing.</p>	<p>This is a problem usually relating to serial interface settings. Your computer is not recognizing the printer's input buffer full signal. Causes could be the wrong type of serial cable (incorrectly wired or too long) or incorrect setting of your computer serial interface.</p>
<p>The MFC cannot print full pages of a document. A MEMORY FULL error message occurs.</p>	<ul style="list-style-type: none"> <li>• Expand the printer memory by installing one of the optional memory boards (ME1000 or ME2000).</li> <li>• Reduce the printer resolution.</li> <li>• Reduce the complexity of your document and try again.</li> <li>• Reduce the graphic quality or the number of font sizes within your application software.</li> </ul>
<p>My headers or footers appear when I view my document on the screen but do not show up when I print them.</p>	<p>Most laser printers have a restricted area that will not accept print. Usually these are the first two lines and last two lines, leaves 62 printable lines. Adjust the top and bottom margins in your document to allow for this.</p>



## Print Quality Difficulties

### NOTICE

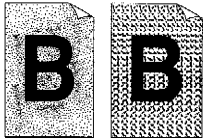If the display shows **CHANGE DRUM SOON**, you can clear a print quality problem by replacing the drum unit with a new one. The old drum unit is at the end of its life.

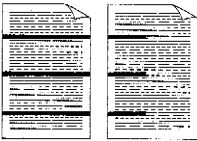Difficulty	Suggestions
Printouts are too dark or light.	Adjust the print conditions by setting the Print Density function, or turn the print density dial counterclockwise for lighter images and clockwise for darker images. It has been factory set to the middle position. See "The Print is too Light or too Dark" on page 186.
Printed pages contain white stripes.  <b>White Stripes or Faint Images</b>	You may fix this by wiping the scanner windows with a clean soft cloth. (See "Regular Maintenance" and "Cleaning the Drum Unit" on pages 165-167.)  If you still see white stripes or faint images and the display shows <b>CHANGE DRUM SOON</b> , replace the drum unit with a new one.
Printed pages are stained with toner or have vertical stripes.  <b>Dark Stripes or Toner Stains</b>	<ul style="list-style-type: none"> <li>• Clean the MFC's interior and the primary corona wire of the toner cartridge. See "Regular Maintenance" and "Cleaning the Drum Unit" on pages 166-167.</li> <li>• Make sure that the tab of the corona wire is at the home position.</li> </ul> If after cleaning, you still see dark stripes or toner stains and the display shows <b>CHANGE DRUM SOON</b> , replace the drum unit with a new one.
Printed pages have white spots in black text and graphics area.  <b>White Spots</b>	Make sure that you use paper that meets the specifications. Rough surface or thick media can cause the problem.  If you still see white spots and the display shows <b>CHANGE DRUM SOON</b> , replace the drum unit with a new one.

Difficulty	Suggestions
<p>Toner scatters and stains the printed page.</p>  <p><b>Scattering Toner</b></p>	<p>If toner scattered over the whole printing surface, adjust the print density dial inside the printer counterclockwise. See “The Print is too Light or too Dark” on page 186.</p> <p>Clean the MFC’s interior. See “Regular Maintenance” and “Cleaning the Drum Unit” on page 165-167.</p> <p>Make sure that you use paper that meets specifications. See page 130.</p> <p>If you still have scattered toner and the display shows CHANGE DRUM SOON, replace the drum unit with a new one.</p>
<p>The whole page is printed in black.</p>  <p><b>Black Page</b></p>	<p>Wipe the electric terminals referring to page 166. Also, do not use heat-sensitive paper as it will cause this problem.</p> <p>After cleaning, if the printed pages are still black and the display shows CHANGE DRUM SOON, replace the drum unit with a new one.</p>
<p>Nothing is printed on the page.</p>  <p><b>White page</b></p>	<ul style="list-style-type: none"> <li>• Make sure that the toner cartridge is not empty.</li> <li>• Wipe the electric terminals referring to “Regular Maintenance” and “Cleaning the Drum Unit” on pages 165-167.</li> <li>• Make sure that a torn piece of paper does not remain on the scanner window.</li> </ul>
<p>Printed pages are marked at regular intervals.</p>  <p><b>Example of Regular Marking</b></p>	<p>Markings may disappear by themselves. Try copying multiple pages to clear this problem. Markings may occur if the MFC has not been used for a long time.</p> <p>A possible cause is that the surface of the drum is scratched. You must then replace the drum unit with a new one.</p> <p>If the markings do not disappear, it may be that the drum was marked or damaged by excessive exposure to light. In this case, replace the drum unit with a new one.</p>

Difficulty	Suggestions
<p>Printed pages are blurred at the center or at either edge.</p>  <p><b>Blurred Page</b></p>	<p>Certain environmental conditions such as humidity, high temperatures, etc. may cause this condition to occur.</p> <ul style="list-style-type: none"> <li>• Make sure the MFC is placed on a flat, horizontal surface.</li> <li>• Remove the drum unit with the toner cartridge installed. Try rocking them from side to side.</li> <li>• You may clear a blurred page by wiping the scanner windows with a clean soft cloth. (See “Regular Maintenance” and “Cleaning the Drum Unit” on pages 165-167.)</li> </ul> <p>If a blurred page occurs after cleaning and the display shows CHANGE DRUM SOON, replace the drum unit with a new one.</p>
<p>Ghost images appear on printed pages.</p>  <p><b>Ghost Images</b></p>	<ul style="list-style-type: none"> <li>• Turn the print density dial counterclockwise for lighter images. See “The Print is too Light or too Dark” on page 186.</li> <li>• Make sure that you use paper that meets the specifications. Rough surface or thick media can cause a ghost image.</li> </ul>

**NOTE:** The drum unit is a consumable item, and it is necessary to replace it periodically.

## 16. SPECIFICATIONS

<b>Product Description</b>	Six performance modes are available for the Fax, the Printer, the Copier, the Scanner, the PC Fax and Message Center in this Multi-Function Center.
<b>Printer Specifications</b>	
<b>Emulation</b>	Brother Printing System for Windows®, emulation mode of HP LaserJet IIP (PCL level 4)
<b>Printer Driver</b>	Windows® 3.1, 3.11, Windows® 95, and Windows NT® Workstation Version 4.0 driver supporting Brother Native Compression mode and bi-directional capability Optional Macintosh driver available for System 6.0.7 or higher
<b>Interface</b>	Bi-directional parallel cable (IEEE-1284) RS-422A/RS-232C serial interface (RS100M) is available as an option.
<b>Memory</b>	1MB Expandable: 1MB or 2MB optional memory board.
<b>Printer Method</b>	Electrophotography by semiconductor laser beam scanning
<b>Resolution</b>	600 dots/inch
<b>Print Quality</b>	Normal printing mode Economy printing mode (saves up to 50% of the normal toner usage)
<b>Print Speed</b>	6 pages/minute (when loading letter size or A4 paper from the multi-purpose sheet feeder)
<b>Print Media</b>	Toner cartridge: Life Expectancy: 2,200 pages/new toner cartridge 1,000 pages/starter toner cartridge (USA, Canada and some other areas only) (when printing letter size or A4 paper at 5% print coverage) <b>NOTE:</b> Toner life expectancy will vary depending on the type of average print job.  Drum Unit: Life Expectancy: 20,000 pages at 20 pages per job 8,000 pages at 1 page per job <b>NOTE:</b> There are many factors that determine the actual drum life, such as temperature, humidity, type of paper and toner that you use, the number of pages per print job, etc.
<b>TrueType Fonts on disks</b>	TrueType-compatible soft-fonts for Windows® on the supplied CD-ROM

## Fax Specifications

<b>Compatibility</b>	ITU-TS Group 3
<b>Coding system</b>	MH/MR/MMR
<b>Modem speed</b>	14400/12000/9600/7200/4800/2400; Automatic Fallback
<b>Document input width</b>	148 mm to 216 mm (5.8 inches to 8.5 inches)
<b>Scanning/Printing width</b>	208 mm (8.2 inches)
<b>Paper size</b>	Letter/Legal/A4
<b>Multi-purpose sheet feeder</b>	200 sheets (20 lbs)
<b>Gray scale</b>	64 levels
<b>Polling types</b>	Standard, Delay, Sequential
<b>Contrast control</b>	Automatic/Super Light/Super Dark (manual setting)
<b>Resolution</b>	<ul style="list-style-type: none"><li>• Horizontal 8 dot/mm (203 dot/inch)</li><li>• Vertical Standard 3.85 line/mm (98 line/inch) Fine, Photo 7.7 line/mm (196 line/inch) Superfine 15.4 line/mm (392 line/inch)</li></ul>
<b>One Touch dial</b>	24 stations
<b>Speed Dial</b>	100 stations
<b>Automatic redial</b>	3 times at 5 minutes intervals
<b>Speaker type</b>	Monitor
<b>Auto answer</b>	0, 1, 2, 3 or 4 rings
<b>Communication source</b>	Public switched telephone network

## Electrical and Environment

<b>Temperature</b>	(Allowable) 50 - 90.5° F (10 - 32.5° C) (Storage) 38 - 104° F (3.3 - 40° C)
<b>Warm-up</b>	Max. 1 minute at 23° C (73.4° F)
<b>First Print</b>	20 seconds (when loading Letter size paper from the multi-purpose sheet feeder)
<b>Power Source</b>	120V AC 50/60Hz (U.S.A., Canadian Version Only)
<b>Power Consumption</b>	Operating (Copying): 160 W or less (25° C) Sleep Mode: 9 W or less Stand by: 30 W or less (25° C)
<b>Noise</b>	Operating: 50 dB A or less Stand-by: 39 dB A or less
<b>Humidity</b>	Operating: 35 to 80% (without condensation) Storage: 20 to 80% (without condensation)
<b>Dimensions</b>	383 x 452 x 251 (mm)/15.1 x 17.8 x 9.9 (inches)
<b>Weight</b>	8.5 kg/18.8 lbs

## PARALLEL INTERFACE SPECIFICATIONS

Interface Connector    Printer Side: Amphenol FCN-685J036-L/X or equivalent  
 A shielded cable should be used.

Pin Assignment

Pin No.	Signal	Direction	Pin No.	Signal	Direction
1	DATA STROBE	Input	19	0V(S.G.)	-
2	DATA 1	Input	20	0V(S.G.)	-
3	DTAT 2	Input	21	0V(S.G.)	-
4	DATA 3	Input	22	0V(S.G.)	-
5	DATA 4	Input	23	0V(S.G.)	-
6	DATA 5	Input	24	0V(S.G.)	-
7	DATA 6	Input	25	0V(S.G.)	-
8	DATA 7	Input	26	0V(S.G.)	-
9	DATA 8	Input	27	0V(S.G.)	-
10	ACKNLG	Output	28	0V(S.G.)	-
11	BUSY	Output	29	0V(S.G.)	-
12	PE	Output	30	0V(S.G.)	-
13	SLCT	Output	31	IMPUP PRIME	Input
14	AUTO FEED	Input	32	FAULT	Output
15	N.C.	-	33	N.C.	-
16	0V (S.G.)	-	34	N.C.	-
17	0V (S.G.)	-	35	N.C.	-
18	+5V	-	36	SLCT IN	Input

## RESIDENT FONTS

The following bitmapped fonts are resident in the MFC.

Brougham 10 (12 point)	upright/normal
	upright/bold
	italic/normal
	italic/bold
Brougham 12 (10 point)	upright/normal
	upright/bold
	italic/normal
	italic/bold
Letter Gothic 16.66 (8.5 point)	upright/normal
	upright/bold
	italic/normal
	italic/bold

(Portrait and Landscape are available for the above.)



**SYMBOL SETS/CHARACTER SETS**

---

**\*HP mode**

- ISO14 JIS ASCII
- ISO57 Chinese
- ISO11 Swedish
- HP Spanish
- ISO17 Spanish
- ISO10 Swedish
- ISO16 Portuguese
- ISO84 Portuguese
- ISO85 Spanish
- PC-8
- PC-8 D/N
- PC-8 Turkish
- PC-850
- PC-852
- PC-860
- PC-863
- PC-865
- Roman 8
- ISO Latin 1  
(ECMA-94)
- ISO60 Norwegian 1
- ISO61 Norwegian 2
- ISO4 UK
- ISO25 French
- ISO69 French
- HP German
- ISO21 German
- ISO15 Italian
- ISO6 ASCII
- Legal
- ISO2 IRV

**NOTE:** If you want to know which characters are in each symbol/character set, print the CHARASET.PRN file from "The Print Form" option in the Direct Access Menu of the Remote Printer Console Program.

□ HP LaserJet IIP

Roman 8										ISO Latin1																						
0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F	
	0	@	P	'	p					ä	Å	À	»				0	@	P	'	p					•	À	Ä	À	»		
	1	!	A	Q	a	q				å	ý	á	z	ã	b		1	!	A	Q	a	q				ı	±	Ä	Ñ	á	ñ	
	2	"	B	R	b	r				Ä	ÿ	ô	ø	ä	·		2	"	B	R	b	r				é	»	Ä	Ö	ä	ö	
	3	#	C	S	c	s				È	*	û	z	ð	µ		3	#	C	S	c	s				ë	»	Ä	Ö	ä	ö	
	4	\$	D	T	d	t				É	Ç	á	â	ô	¶		4	\$	D	T	d	t				ı	»	Ä	Ö	ä	ö	
	5	%	E	U	e	u				Ê	Ç	é	í	î	ï		5	%	E	U	e	u				ı	ı	ı	ı	ı	ı	ı
	6	&	F	V	f	v				Ë	Ñ	ó	ì	-			6	&	F	V	f	v				ı	ı	ı	ı	ı	ı	ı
	7	'	G	W	g	w				İ	ñ	ú	ı	ı	ı		7	'	G	W	g	w				ı	ı	ı	ı	ı	ı	ı
	8	(	H	X	h	x				ı	ı	ı	ı	ı	ı		8	(	H	X	h	x				ı	ı	ı	ı	ı	ı	ı
	9	)	I	Y	i	y				ı	ı	ı	ı	ı	ı		9	)	I	Y	i	y				ı	ı	ı	ı	ı	ı	ı
A	*	:	J	Z	j	z				ı	ı	ı	ı	ı	ı	A	*	:	J	Z	j	z				ı	ı	ı	ı	ı	ı	ı
B	+	;K	[	k	{					ı	ı	ı	ı	ı	ı	B	+	;K	[	k	{					ı	ı	ı	ı	ı	ı	ı
C	,	<	L	\		l				ı	ı	ı	ı	ı	ı	C	,	<	L	\		l				ı	ı	ı	ı	ı	ı	ı
D	-	=	M	]m						ı	ı	ı	ı	ı	ı	D	-	=	M	]m						ı	ı	ı	ı	ı	ı	ı
E	.	>	N	^n	-					ı	ı	ı	ı	ı	ı	E	.	>	N	^n	-					ı	ı	ı	ı	ı	ı	ı
F	/	?	O	_	o	¸				ı	ı	ı	ı	ı	ı	F	/	?	O	_	o	¸				ı	ı	ı	ı	ı	ı	ı

The following table shows characters available only in the corresponding character set. The numbers at the top of the table are code values with which characters are to be replaced in the Roman 8 character set. For other characters, see character set of Roman 8.

SYMBOL SET	23	24	40	5B	5C	5D	5E	60	7B	7C	7D	7E
ISO2 IRV	#	n	e	[	\	]	]	]	(		)	-
ISO4 UK	E	\$	e	[	\	]	]	]	(		)	-
ISO6 ASCII	#	\$	e	[	\	]	]	]	(		)	-
ISO10 Swedish	#	n	e	Ä	Ö	Å	Å	Å	ä	ö	å	-
ISO11 Swedish	#	n	e	Ä	Ö	Å	Ü	é	ä	ö	å	ü
ISO14 JIS ASCII	#	\$	e	[	v	]	]	]	(		)	-
ISO15 Italian	E	\$	S	*	ç	é	é	ü	ä	ö	è	ı
ISO16 Portuguese	#	\$	S	ã	ç	õ	õ	õ	ã	ç	õ	ı
ISO17 Spanish	E	\$	S	ı	Ñ	ı	ı	ı	ı	ı	ı	ı
ISO21 German	#	\$	S	ä	ö	ü	ü	ü	ä	ö	ü	ı
ISO25 French	E	\$	ä	*	ç	ç	ç	ç	é	ü	è	-
ISO57 Chinese	#	v	e	[	\	]	]	]	(		)	-
ISO60 Norwegian1	#	\$	e	ø	ø	Å	Å	Å	ø	ø	Å	ı
ISO61 Norwegian2	E	\$	e	ø	ø	Å	Å	Å	ø	ø	Å	ı
ISO69 French	E	\$	à	*	ç	ç	ç	ç	ı	ı	ı	ı
ISO84 Portuguese	#	\$	ã	ç	õ	õ	õ	õ	ã	ç	õ	ı
ISO85 Spanish	#	\$	ı	ı	ı	ı	ı	ı	ı	ı	ı	ı
HP German	E	\$	S	ä	ö	ü	ü	ü	ä	ö	ü	ı
HP Spanish	#	\$	e	ı	ı	ı	ı	ı	ı	ı	ı	ı

## 17. IMPORTANT INFORMATION

### *Standard Telephone and FCC Notices (Applies only to 120V model)*

These notices are in effect on models sold and used in the USA.

#### **When programming emergency numbers and/or making test calls to emergency numbers:**

- Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
- Perform such activities in the off-peak hours, such as early morning or late evening.

This equipment complies with Part 68 of FCC Rules. On the rear panel of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company.

You may safely connect this equipment to the telephone line by means of a standard modular jack, USOC RJ11C.

An FCC compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone line or premises wiring using a compatible modular jack which is Part 68 compliant.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have those devices ring when your telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five (5). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your MFC 7650MC damages the telephone line, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advanced notice is not practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes to its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If you experience trouble with this MFC 7650MC, please contact a Brother Authorized Service Center for information on obtaining service or repair. The telephone company may ask that you disconnect this equipment from the line until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

If you are not able to solve a problem with your MFC, contact Brother Customer Service at

<b>USA:</b>	1-800-284-4329 (voice) 1-908-271-1937 (fax)
<b>From within Canada:</b>	1-800-853-6660 (voice) 1-514-685-4898 (fax)
<b>From within Montreal:</b>	1-514-685-6464 (voice)

### **Warning**

For protection against the risk of electrical shock, always disconnect all cables from the wall outlet before servicing, modifying or installing the equipment.

This equipment may not be used on coin service lines provided by the telephone company or connected to party lines.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the fax equipment and the receiver.
- Connect the fax equipment on a separate circuit.
- Consult with the dealer or an experienced radio/TV technician for help.

### **Laser Safety (For 110-120 V Model Only)**

This equipment is certified as a Class I laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the equipment does not produce hazardous laser radiation.

Since radiation emitted inside the equipment is completely confined within protective housings and external covers, the laser beam cannot escape from the MFC during any phase of user operation.

### **FDA Regulations**

U.S. Food and Drug Administration (FDA) has implemented regulations for laser products manufactured on and after August 2, 1976. Compliance is mandatory for products marketed in the United States. One of the following labels on the back of the printer indicates compliance with the FDA regulations and must be attached to laser products marketed in the United States.

#### **MANUFACTURED :**

BROTHER INDUSTRIES, LTD. 15-1 Naeshiro-cho Mizuho-ku Nagoya, 467 Japan This product complies with FDA radiation performance standards, 21 CFR Subchapter J.
--

#### **Caution**


Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous invisible radiation exposure.

INTERNATIONAL ENERGY STAR CERTIFICATION

### International Energy Star Compliance Statement

The purpose of the International Energy Star Program is to promote the development and popularization of energy-efficient office equipments, which includes computers, monitors, printers, facsimile receivers and copy machines world-wide.

As an International Energy Star partner, Brother Industries, Ltd. has decided that this product meets the guideline of the program.

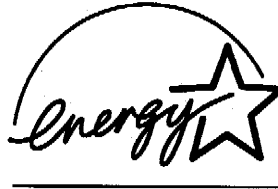

**Brother cannot accept any financial or other responsibilities that may be the result of your use of this information, including direct, special or consequential damages. There are no warranties extended or granted by this document.**

The serial number may be found on the label affixed to the back of the unit. For your convenience, note the number below and retain this Operations Manual to serve as a permanent record of your purchase, in the event of a theft or fire, or for future reference.

MFC 7650MC SERIAL NO. \_\_\_\_\_

NAME OF DEALER \_\_\_\_\_

DATE OF PURCHASE \_\_\_\_\_

### ***Important Safety Instructions***

1. Read all of these instructions
2. Save them for later reference.
3. Follow all warnings and instructions marked on the product.
4. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
5. Do not use this product near water.
6. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
7. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heater. This product should not be placed in a built-in installation unless proper ventilation is provided.

Maintenance

- 
8. This product should be operated from the type of power source indicated on the label. If you are not sure of the type of power available, consult with your dealer or local power company.
  9. This product is equipped with a 3-wire grounding type plug, a plug having a third (grounding) pin. This plug will fit only into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
  10. Do not allow anything to rest on the power cord. Do not locate this product where people can walk on the cord.
  11. If an extension cord is used (see Setup Manual) with this product, make sure that the total ampere ratings on the products plugged into the extension cord do not exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes (USA only).
  12. Never push objects of any kind into this product through cabinet slots since they may touch dangerous voltage points or short out parts resulting in a risk of fire or electric shock. Never spill liquid of any kind on the product.
  13. Do not attempt to service this product yourself because opening or removing covers may expose you to dangerous voltage points and/or other risks and may void your warranty. Refer all servicing to an Authorized Service Personnel. A list of Brother Authorized Service Centers has been included for your convenience, or you may contact the following Brother Customer Service Numbers for your nearest Brother Authorized Service Center:

<b>USA:</b>	1-800-284-4329 (voice)
	1-908-271-1937 (fax)
	1-800-521-2846 (Fax-Back System)
<b>From within Canada:</b>	1-800-853-6660 (voice)
	1-514-685-4898 (fax)
	1-800-681-9838 (Fax-Back System)
<b>From within Montreal:</b>	1-514-685-6464 (voice)
  14. Unplug this product from the wall outlet and refer servicing to Brother Authorized Service Personnel under the following conditions:
    - A. When the power cord or plug is damaged or frayed.
    - B. If liquid has been spilled into the product.
    - C. If the product has been exposed to rain or water.
    - D. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
    - E. If the product has been dropped or the cabinet has been damaged.
    - F. If the product exhibits a distinct change in performance, indicating a need for service.
  15. To protect your product against power surges, we recommend the use of a power protection device (Surge Protector).

**Important - About the Interface Cable**

This MFC has been certified to comply with FCC standards, which are applied to the USA only. A shielded interface cable should be used according to FCC 15.27 (C). In addition, a grounded plug should be plugged into a grounded AC outlet after checking the rating of the local power supply for the printer to operate properly and safely.

**CAUTION**

Changes or modifications not expressly approved by Brother Industries, Ltd. may void the user's authority to operate the equipment.

**ATTENTION**

The product that you purchased contains a rechargeable internal battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details of recycling options in your area and proper disposal. If you have a problem, contact Brother service personnel at;

<b>USA:</b>	<b>1-800-284-4329 (voice)</b> <b>1-908-271-1937 (fax)</b>
<b>BBS:</b>	<b>1-714-859-2610</b>
<b>Internet:</b>	<b><a href="http://www.brother.com">http://www.brother.com</a></b>
<b>From within Canada:</b>	<b>1-800-853-6660 (voice)</b>

## INDEX

### A

Access Codes (Dialing) ..... 33  
Accessory Orders ..... 212  
Activity Report ..... 144, 146-147  
ADF ..... 36  
All Dial List ..... 144, 148  
Answer Mode ..... 6, 62  
Automatic Transmission ..... 39,40

### B

Backup Printing ..... 107-108  
Battery ..... 29  
(See Memory Storage)  
Beeper ..... 25  
Broadcast ..... 6, 46-47  
Brother Bulletin Board ..... 181  
Brother Customer Service  
..... 181, 211  
Brother Fax-Back System ..... 181  
Brother On the World Wide  
Web ..... 181

### C

Call Back Message .... 58-60, 144  
Call Reservation ..... 58-60  
Canceling ..... 49-50  
Character Set ..... 201  
Cleaning ..... 165-167  
Connecting ..... 75, 79  
(See 9-14 of Setup Manual)  
Contrast ..... 38  
Control Panel Keys ..... 1-7  
Copy ..... 3, 152-157  
Cover Open ..... 183  
Cover Page ..... 53-58, 144

Credit Card Numbers ..... 33  
Customer Service ..... 211

### D

D/R SET MODE ..... 85-87  
Daily Timer ..... 44  
Date and Time ..... 22  
Delayed Polling ..... 95-96  
Delayed Transmission ..... 45-46  
Difficulties ..... 185, 191-197  
DIP Switch ..... 176  
Distinctive Ringing ..... 81-87  
Document ..... 35-36  
Drum Unit ..... 162-164  
Dual Access ..... 40-41  
Duplex ..... 137

### E

ECM ..... 61  
Emulation ..... 135  
Enlarging Copies ..... 155-156  
Envelopes ..... 130, 132  
Environment ..... 199  
Erasing ..... 110-112, 128  
Error Message/Codes .... 182-184  
Error Retransmission ..... 61  
Extension Telephone ..... 75  
External Telephone ..... 75

### F

F/T Mode ..... 62, 64-67  
F/T Ring Time ..... 66-67  
Factory Reset ..... 142  
FAQs (Frequently Asked  
Questions) ..... 181



Fax Forwarding ..... 117, 120-121  
 Fax Mode ..... 62, 63  
 FCC Notices ..... 203-205  
 FF/Cont Key ..... 133  
 Fine ..... 37  
 Font ..... 200  
 Font List Print ..... 140  
 Function ..... 5, 8-15

**G**

Groups for Broadcasting .... 29-31

**H**

Handset Volume ..... 73-74  
 Help ..... 6, 8, 16  
 Hex Dump Mode ..... 143  
 Hold ..... 2, 32  
 Hook ..... 2, 32, 33, 34

**I**

ICM (Incoming Message)  
 ..... 107, 110, 114  
 Interrupting ..... 48

**J**

Jam ..... 170-172

**L**

Label ..... 130  
 Line Error ..... 183  
 Loading Paper ..... 137-139  
 (See 4-6 of Setup Manual)

**M**

Manual Dial ..... 32  
 Manual Duplex ..... 137  
 Manual Feed ..... 138-139

Manual Mode ..... 62, 63  
 Maximum Time ..... 114, 116, 127  
 Memo ..... 116  
 Memory ..... 29, 40, 71, 120  
 Memory Board ..... 178-180  
 MEMORY FULL ..... 154, 155, 184  
 Memory Status List.. 124, 144, 151  
 Memory Transmission ..... 45-47  
 Message Center Mode .... 62, 105  
 Message Storage ..... 103-104  
 Mode ..... 6, 62  
 MSG CTR OGM

..... 100, 101, 103, 104-105  
 Multi-purpose Sheet Feeder  
 ..... 136-137  
 Multiple Copies ..... 153-155  
 Multiple Resolution Transmission  
 ..... 51-52

**O**

OffLine ..... 133  
 On Hook Dial ..... 33  
 On-screen Programming ..... 8-9  
 One Touch Dial  
 ..... 3, 11, 26-27, 29, 32, 39  
 OnLine ..... 133  
 Organizer Sheet ..... 130  
 Overseas Mode ..... 50-51

**P**

Packing List  
 (See 2 of Setup Manual)  
 Paging ..... 117-119  
 Paper ..... 130-132  
 Paper Jam ..... 170-172  
 Paper Specifications ..... 130

Parallel Interface ..... 200  
 Pause ..... 2, 27, 32  
 PBXs ..... 28  
 (See 14 of Setup Manual)  
 Photo ..... 37, 156-157  
 Playing ..... 107, 111, 115, 128  
 Polling ..... 92-97  
 Power ..... 199  
 (See 8-9 of Setup Manual)  
 Print Configuration ..... 141  
 Print Overrun ..... 184  
 Print Quality ..... 185  
 Printable Area ..... 132

**R**

Real Time Transmission ..... 41-42  
 Recording  
 ..... 104-105, 116, 126-127  
 Redial ..... 2, 43  
 Reduction ..... 69-71, 155  
 Remote Access/Retrieval  
 ..... 121-124  
 Remote Activation ..... 75-78  
 Remote Code ..... 75-78  
 Remote Control Commands . 123  
 Remote Deactivation ..... 75-78  
 Remote Printer Console  
 Program ..... 135  
 Reports ..... 144-151  
 Reset ..... 134  
 Resident Font ..... 200  
 Resolution ..... 6, 10, 37, 51-52  
 Ring Delay ..... 63-64  
 Ring Time ..... 66-67  
 Ring Volume ..... 74  
 RS-232C ..... 175-176

RS-422A ..... 175-176

**S**

Safety Instructions ..... 205-206  
 Sequential Polling ..... 96-97  
 Setting Up  
 (See 3-14 of Setup Manual)  
 Shift ..... 3, 26, 139, 143  
 Simultaneous ..... 133  
 Sleep Mode ..... 19-20  
 Smoothing ..... 67  
 Speaker Volume ..... 72-73  
 Specifications ..... 198-202  
 Speed Dial ..... 11, 27-29, 32, 39  
 Standard Mode ..... 37, 51  
 Station ID ..... 23-24  
 Super Dark Mode ..... 38  
 Super Light Mode ..... 38  
 Superfine Mode ..... 37, 51  
 Symbol Set ..... 201

**T**

TAD Hookup ..... 78  
 TAD Mode ..... 78-81  
 Telephone Index ..... 34  
 Toll Saver ..... 113  
 Tone/Pulse ..... 21  
 Toner Cartridge ..... 158-161  
 Toner Empty ..... 158, 182  
 Toner Save ..... 72  
 Transmission Verification  
 Report ..... 144, 149-150  
 Transparency ..... 130  
 Troubleshooting ..... 181-197

**V**

Voice Alarm ..... 125-129

**FOR CUSTOMER SERVICE**

**USA:** 1-800-284-4329 (voice)  
1-908-271-1937 (fax)

**From within Canada:** 1-800-853-6660 (voice)  
1-514-685-4898 (fax)

**From within Montreal:** 1-514-685-6464 (voice)

## ORDERING ACCESSORIES AND SUPPLIES

For the best quality results use only genuine Brother accessories, available at most brother retailers. If you cannot find the accessory you need and you have a Visa, Master Card, Discover, or American Express credit card, you can order accessories directly from Brother

**USA:** 1-888-879-3232 (voice)  
1-800-947-1445 (fax)

**From within Canada:** 1-800-668-2768 (voice)

Description	Item
Laser Fax Toner	TN5000PF
Laser Fax	DR200
1 MB Expandable Memory Board	ME1000
2 MB Expandable Memory Board	ME2000
Telephone Line Cord	UG1570001
Telephone Handset	UF6400003
Handset Curled Cord	UF7204009
Dust Cover	UL6955001
Wire Extension	UF7201001
IEEE-1284 Bi-directional Cable	UG4166001
Paper Tray	UF7209001
Document Tray with Wire Extension	UF7206001
Drum Unit	DR200
Toner Assembly	TN500PF
Remote Control Access Card	UF9218001
Quick Reference Card	UF7846001
Setup Manual	UF7839001
MFC-7650MC Software on Floppy Disks (MFL Pro and PaperPort only)	(Tell the Brother Representative the version of Windows® that you are using and your MFC model number.)



# brother®

Brother International Corporation  
200 Cottontail Lane,  
Somerset, NJ 08875-6714, U.S.A.

Brother International Corporation (Canada) Ltd.  
1 rue Hôtel de Ville,  
Dollard-des-Ormeaux, QC, CANADA H9B 3H6

These machines are made for use in the USA or CANADA only. We can not recommend using them overseas because it may violate the Telecommunications Regulations of that country and the power requirements of your fax machine may not be compatible with the power available in foreign countries. **Using USA or CANADA models overseas is at your own risk and will void your warranty.**

Manufactured by Brother Industries Ltd. whose quality system is registered by BSI and JQA.

BSI Certificate of registration No. FM27391  
JQA Certificate of registration No. JQA-0340

UF7836001  
Printed in Japan