



service personnel. Servicing is required when the apparatus has been damaged in any way...

Important battery precautions Any battery may present a risk of fire, explosion, or chemical burn if abused...

Ecology Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

Headset safety To use a headset safely, please keep the following in mind: Do not play your headset at a high volume...

FCC Information Note: This equipment has been tested and found to comply with the limits for a Class B digital device...

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the equipment.

Service information This product should be serviced only by those specially trained in appropriate servicing techniques.

Before you begin

Unpacking your player You should have the following: One voice recorder, One user manual, One quick start guide...

General controls

Player controls Turn off the player first before recharging batteries. If power interruption exceeds 20 seconds, date and time have to be set again.

Display

1. Folder (A/B/C/D) 2. REC 3. File selected in progress 4. Total number of files in a folder

Display messages

12 HOUR 12 hour time display mode 24 HOUR 24 hour time display mode OFF Off (Automatic Voice Recording)

Setting day and time

With day and time set, you can always read on the display the recording date and time of your recorded messages.

Basic operations

Selecting folders and files To select folders: Press and hold info menu for about 2 seconds and then release the button.

Player menu

To access the player menu: Press and hold info menu for about 2 seconds and then release the button.

Recording

Setting recording mode Manual Recording 1. While playback is stopped, select a destination folder (A/B/C/D) (refer to "Basic operations").

Setting recording quality

During recording, the recording indicator stays on. When in AVR standby mode or when recording is paused, the recording indicator flashes.

Setting recording condition

To select between two recording conditions (default is DICT): Definition: CONF (Conference) - in a more open area and recording source is far from the player.

Erasing files and bookmarks

Erasing mode To erase files or bookmarks, select a folder and press x once. Press info menu to select one of the erasing options.

Editing

CAUTION The edit function does not operate when battery power is too low. Make sure the LOCK ALL files is not selected.

Bookmark

To create bookmarks: Once x is pressed (refer to step 4 in the section "Editing mode"), the bookmark icon flashes and a newly created bookmark number shows on the display.

Append

To insert an appendix at the end of the current file: Once O is pressed (refer to step 4 in the section "Editing mode"), the REC icon shows and recording of appendix is started.

Advanced operations

Play one/all To play a specific file or all files in a folder: Press and hold info menu for about 2 seconds and then release the button.

Advanced operations

Tones To activate or deactivate the beep sound when any key is pressed (except during playback and recording): Press and hold info menu for about 2 seconds and then release the button.

Connecting to computer

Computer system requirements PC with Windows® 7, Windows® XP (Service Pack 1 or higher) or Windows® 2000 (Service Pack 3 or higher).

Using Digital Voice Manager

The RCA Digital Voice Manager can perform playback, organize your bookmarks of the recorded files and create self-executable file voice from the recorded files.

Creating and playing self-executable file

You can play the created file independently without the Digital Voice Management software. Highlight a recorded file, click Save.

Creating wave file

Self-executable file may be blocked by some e-mail filters. When recordings are made in LP or SP Quality, you may select to create wave file if you want to send your recorded messages by e-mail.

Using Digital Voice Manager

Transfer files with Digital Voice Manager Your player is associated with a drive letter. You can drag the voice files you want to transfer to your player to the A/B/C/D folder in the drive.

Disconnecting from computer

After you have copied files to or from the player, you can disconnect the player from the computer. Click the icon from the System Tray and select Unplug or Eject hardware.

Troubleshooting tips

Player doesn't turn on Check that batteries are properly inserted and not exhausted. Make sure battery compartment door is properly closed.

Cannot erase recorded file(s)

Make sure you follow each step under section "Erasing files and bookmarks" carefully. Cannot stop recording when AVR ON If AVR ON sensitivity is set to HIGH, recording may not be stopped in noisy environment.

Cannot keep the saved setting

If the batteries are removed, saved settings may be removed. Cannot open recorded files in the computer You must use the provided DVM software to open the files.

Warranty information

12 Month Limited Warranty Applies to RCA Voice Recorders AUDIOVOX ACCESSORIES CORP (the Company) warrants to the original retail purchaser of this product.

Representative authorized to assume for the Company any liability that has been expressed herein in connection with the sale of this product.

Audiovox Electronics Corp. Attn: Service Department. 1500 Marcus Blvd. Hauppauge N.Y. 11788 1-800-645-4994

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee in order to provide the highest quality product possible.







