



ClearSounds®  
Hear how good life can be

# **CL1100**

## **Amplified Telephone**



**Installation Guide  
& User Manual**

**Congratulations on your purchase of the CL1100 Phone from ClearSounds Communications™. Please read this User Manual carefully in order to get the very best results from your telephone. Keep the manual near the telephone for easy reference.**

Please visit our web site at [www.clearsounds.com](http://www.clearsounds.com) to:

Register your product

Download additional manuals and trouble shooting tips

## **Conditions for Use**

# **IMPORTANT SAFETY INSTRUCTIONS**

Read and understand the Installation Guide & User Manual. When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to person, including the following.

**WARNING:** The CL1100 Phone is capable of amplifying sounds to a loud volume. It is important to instruct all potential users of its proper operation. It is advised to adjust the volume control to its minimum level (Low) when not in use and alert other users that hearing damage can potentially result from misuse.

**WARNING:** To avoid the possibility of electrical shock, do not use this product near water (For example, near a bathtub, wash basin, kitchen sink or laundry tub, in a wet basement or near a swimming pool) while in the bathtub or shower or when you are wet. If the phone becomes submerged in water, do not attempt to retrieve it until after you have unplugged the line cord from the modular wall jack. Do not plug the phone back in until it has dried completely.

**WARNING:** Avoid using the telephone during electrical storms. There may be a remote risk of electric shock from lightning. If the electrical storm is present in your immediate area, possibility of electrical shock exists.

**WARNING:** Do not use the phone if you suspect a gas leak in the area. The phone's electrical contacts could create a spark, which could ignite any heavy concentration of leaking gas.

**WARNING:** Do not use liquid cleaners or aerosol cleaners on the telephone. Use a damp cloth for cleaning.

## **PLEASE SAVE THESE INSTRUCTIONS**

# Table of Contents

Introduction	Page 2
Condition For Use	Page 2
Table of Contents	Page 3
Features & Functions	Pages 4 - 5
Installation Steps	Pages 6 - 9
Components (Parts check list)	Page 6
Installing the optional batteries	Page 6
Setting the dialing mode	Page 7
Phone mounting – desk & wall use	Pages 7 - 8
Programming memory dial buttons	Page 8
Programming ringer – volume & style	Page 9
CL1100 Phone Operation	Pages 10 - 13
Making & receiving a call	Pages 10 - 11
Using the amplification function	Page 11
Volume, tone & amplification	
Volume reset override	Page 11
Outgoing speech volume	Page 12
Dialing stored numbers	Page 12
Last number redial	Page 13
Flash button	Page 13
Mute button	Page 13
Troubleshooting Guide	Page 14
Maintenance and Care	Page 15
Specifications	Page 15
FCC Regulatory Compliance	Pages 16 - 17
Warranty and Service	Page 18

# Features & Functions

1. M1 – M12 One-Touch  
Memory Dial Buttons

2. Visual Ring Indicator

3. Erasable  
Phonebook Card

4. Tone Control

5. Volume Control

6. Amplify Button  
(ON/OFF)

7. Program (save)  
Button

8. Flash Button

9. Mute Button

10. Redial Button

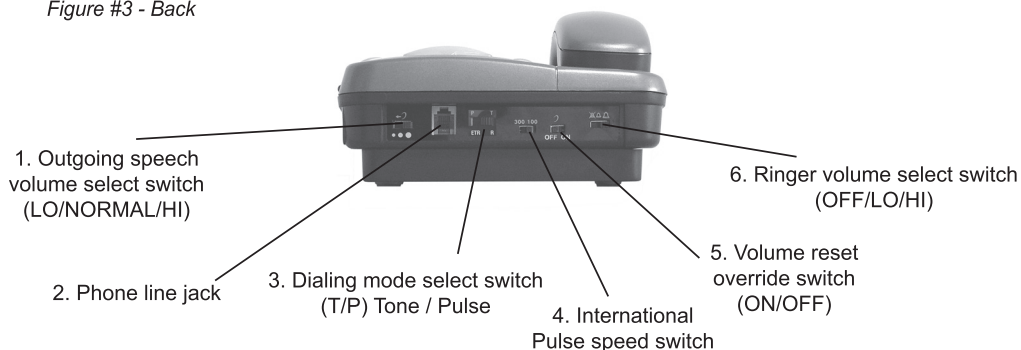 


Figure #2

- |   |                            |
|---|----------------------------|
| 1. M1–M12 One-Touch Memory Dial Buttons | 6. Amplify Button (ON/OFF) |
| 2. Visual Ring Indicator                | 7. Program (save) Button   |
| 3. Phonebook Insert Card                | 8. Flash Button            |
| 4. Tone Control                         | 9. Mute Button             |
| 5. Volume Control                       | 10. Redial Button          |

# Features & Functions

Figure #3 - Back




1. Outgoing speech volume select switch (LO/NORMAL/HI)
2. Phone line jack
3. Dialing mode select switch (T/P) Tone / Pulse
4. International speed switch
5. Volume reset override switch (ON/OFF)
6. Ringer volume select switch (OFF/LO/HI)

Figure #4 - Right Side



1. Volume control (Incoming)
2. Tone control (Incoming)

 Figure #5 - Bottom

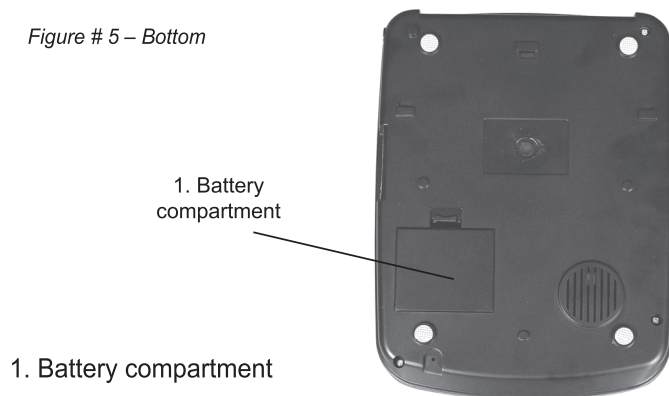

1. Battery compartment

# Installation Steps

Installation of your ClearSounds™ CL1100 Phone is easy. There are some basic steps you need to take when you set-up your CL1100 for the first time.

Check Parts list.

- Install (4) AAA Alkaline batteries (not included). Batteries are required if you wish to increase the ringer level an additional 10 dB.
- Set the dialing mode.
- Choose desktop or wall mount.
- Program your memory dial buttons.
- Set ringer.
- Set your volume and tone.

## PARTS CHECK LIST

Check to make sure your package includes the items described below. You should have a TELEPHONE BASE, TELEPHONE HANDSET, 6ft LONG TELEPHONE LINE CORD, 8 inch SHORT TELPHONE LINE CORD, HANDSET CURLY CORD, WALL PLATE ADAPTER, AND OWNERS MANUAL

## INSTALLING THE OPTIONAL BATTERIES

(required if you wish to increase the ringer level up to 85 dB)

1. Open the battery compartment door located on the bottom of your phone by pulling back the latch.
2. Insert correctly (4) AAA alkaline batteries (not included) in the battery compartment (See diagram #1). Be sure to observe battery polarity as imprinted on the base of the compartment.
3. Snap the battery compartment door back in place.
4. The batteries will last approximately 1 year before needing replacement.
5. **Note:** The telephone ringer will operate with or without batteries.
6. **Note:** When replacing batteries, you will need to remove the Wall Plate adapter if in use. Slide the phone upward to remove & disconnect the phone from your existing wall jack. Slowly slide the Wall Plate adapter down until it unsnaps from the phone. Follow the directions above.

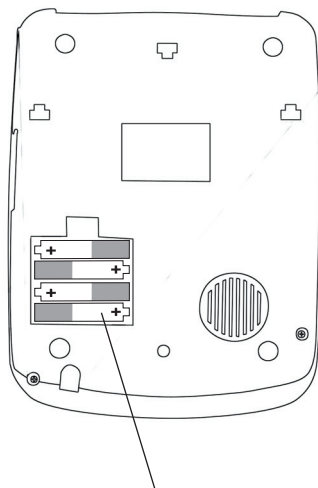 


DIAGRAM #1- Installing the batteries

## SETTING THE DIALING MODE


Set the dial mode switch located on back of the phone to “T” if you have Touch Tone service or “P” for Pulse dialing if you have rotary dialing service. The default is set to “T” dialing switch mode. Please check with your local telephone company if uncertain of the type of service. (See *diagram #2*)



*DIAGRAM #2 – Dialing mode switch*

## INTERNATIONAL PULSE SPEED SWITCH

Set the International speed switch located on back of the phone to “300 mS”. The default is set to 300mS (See *diagram #3*). The 100 mS is used in the UK.

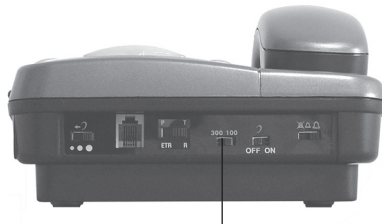 

*DIAGRAM #3 – International speed switch*

## PHONE MOUNTING INSTALLATIONS

Make sure you have a modular wall jack near the place you have chosen to install the telephone. If you have an older phone jack, you will need to buy a modular jack adapter.

### Desk / Table Use

1. Connect one end of the 6ft telephone cord to the line jack on the back of your CL1100 Phone and connect the other end to a modular phone jack (RJ11C).
2. Connect the handset coil cord (curly cord) to the handset and to the telephone.
3. Lift the handset and listen for a dial tone. If you hear a dial tone, you phone is ready to use. If there is no dial tone, check all your cords to make sure they are plugged in securely.

## Wall Mount Use

1. Slide the handset hanger tab out and reverse its position (rotate it 180 degrees). Slide it back into place so that the hook points up (*See diagram #4*). This will keep the handset from falling out of the cradle when it is mounted on the wall.
2. Insert the Wall Plate adapter (*See diagram #5*). It snaps into place. The cords phone line should run underneath the wall-mounting bracket.
3. With the Wall Plate adapter installed, plug the 8in short phone cord into the telephone jack on the CL1100 and then into the jack on the wall.
4. Holding the phone slightly above the mounting screws on the wall jack, push the phone against the mounting screws so they are hooked into upper and lower key-hole slots on the back of the phone. Slowly slide the phone down until it snaps into place (*See diagram #6*).
5. Connect the handset coil cord (curly cord) to the handset and to the telephone.
6. Lift the handset and listen for a dial tone. If you hear a dial tone, your phone is ready to use. If there is no dial tone, check all your cords to make sure they are plugged in securely.

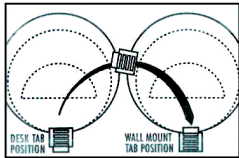 


DIAGRAM #4 – Reversing the hook

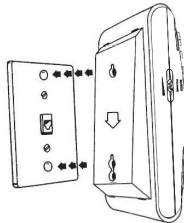 


DIAGRAM #6 – Wall installation

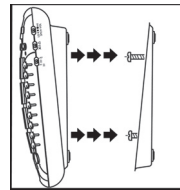 


DIAGRAM #5 –Wall plate installation

## **PROGRAMMING MEMORY DIAL BUTTONS**

Your CL1100 Phone holds 12 programmed Memory Dial Buttons.

To program your one-touch memory dial buttons please follow instructions below:

1. Lift the handset.
2. Press the PROG button (*See diagram #7*).
3. Press one of the 12 Memory Dial buttons (M1 - M12) located on top of the phone (*See diagram #8*). Each button can be programmed (or reprogrammed using the same procedure) for a phone number up to 21 digits long.
4. Using the keypad, dial the number you would like to save, including 1 and the area code (if applicable). (*See diagram #9*).
5. Press the PROG button again (*See diagram #7*).
6. To register your stored phone numbers, use the erasable phonebook card located on the top of your phone. **IMPORTANT:** The phonebook card is non-removable. Simply use a clean pencil eraser to make changes.



**Note:** Numbers will be lost after a few hours if you disconnect your phone. Entering a new number in the same location will automatically erase the previous number.



DIAGRAM #7- Program button



DIAGRAM #9 – Telephone keypad

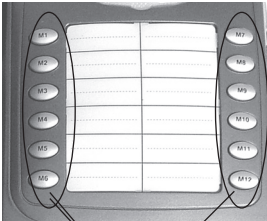 


DIAGRAM #8 – Memory buttons

**Note:** You may store in multiple pauses during programming by pressing the “**REDAIL**” button. Each pause is 2 seconds when inserted within the first digits and when inserted after the 5 digits. When the number is dilled, the phone will halt at the inserted pause(s) until you press “**REDIAL**” button to continue.

## PROGRAMMING THE RINGER

### Ringer Volume:

You can adjust the ringer volume of your CL1100 as high as 75 dB. The ringer volume adjustment is located on the backside of the telephone. The settings are HI, LO, OFF (See diagram 10). Batteries are required if you wish to increase the ringer level an additional 10 dB of gain, see page #6.



DIAGRAM #10 – Ringer volume switch

### Ringer Style:

Your CL1100 Phone’s default setting for the ringer is set at 6. If you don’t like the ringer style, you can choose a new one by changing the settings as follows:

	Low	Mid	High
Melody 1	1	2	3
Melody 2	5	5	6 by default
Melody 3	7	8	9

CHART # 1

1. Lift the handset
2. Press PROG button (*see diagram #7*)
3. Press the “#” button
4. Press any of the dial keys 1 - 9 (*see diagram #8*)
5. The new ringer setting will be activated with the next incoming call.

Your CL1100 is also equipped with a visual ringer, which flashes when the phone rings.

**NOTE:** You may temporarily turn OFF the audible ringer by selecting the “0” key in the instructions above. An incoming call will now be indicated only by the red flashing indicator light located on the top of the phone. The audible ringer will be automatically reset to the previous setting (1 to 9) when the handset is lifted from the base unit.

If at any time you have questions about your telephone please contact our ClearSounds™ Customer Service Department at: **1-800-965-9043**.

## CL1100 Phone Operation

### MAKING AND RECEIVING A CALL

#### Making A Call

1. To make a call, lift the handset, listen for a dial tone and adjust your Volume & Tone Settings. (*See pages 10 - 11 for details on the amplification functions*)
2. To dial a number you can:
  - a. Dial a number from the keypad
  - OR-
  - b. Press one of the memory dial buttons (*See pages 8 - 9 for instructions on programming Memory Dial Buttons*)
3. On completion of the call, carefully replace the handset in the cradle.

#### Receiving/Answering A Call

When an incoming call is received the phone will ring and the (red) Visual Ring Indicator will flash.

1. While the phone is ringing, simply lift the handset and speak.
2. Adjust your Volume and Tone Settings if needed (*See pages 10 - 11 for assistance*)
3. On completion of the call, carefully replace the handset in the cradle.

# USING THE AMPLIFICATION FUNCTION

Your CL1100 Phone is equipped with a specialized amplification function designed to fit your needs. You can adjust the volume and tone (sound frequency range) of the incoming voice by simply adjusting the controls located on the right side of the phone (See *diagram #11*) and using the **AMPLIFY** button (See *diagram #12*). When the **AMPLIFY** button is pressed, you will see the red light on the **AMPLIFY** button light up. Adjust the **VOLUME** and **tone** to fit the levels to your own hearing requirements.

The CL1100 Phone has an **AMPLIFY** button that controls the loudness & tone of the receiver. Press the **AMPLIFY** button to turn the extra amplification **ON** or **OFF**. With the **AMPLIFY** feature **OFF** , the phone volume control provides up to 15 dB of gain. Once the **AMPLIFY** button is pressed, an extra level of amplification is added providing 15 to 30 dB of gain and tone control. Adjust the volume by moving the slide control. Slide the Volume control **UP** to lower the level and slide the Volume control **DOWN** to increase the level.

In addition to amplification, your CL1100 Phone offers the ability to adjust the **Sound Frequency Range** you are amplifying. **Sound Frequency Range** is also called Tone control. This allows you to adjust the sound to fit your specific hearing needs. Slide the Tone control **UP**, to boost the lower frequency range and slide the Tone control **DOWN** to boost the high frequency range. This allows individuals with both high frequency and low frequency hearing loss to use the CL1100 Phone. Please note: the Tone Control will only operate once the **AMPLIFY** button is turned **ON**.



Diagram #11– Volume & Tone controls



Diagram #12 – Amplify button

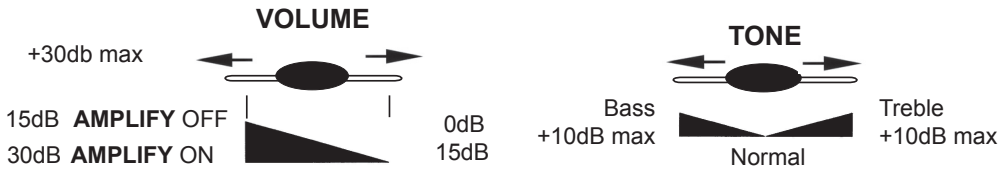 


Chart #2 – ClearSounds Amplification & Tone Control Chart

## Volume Reset Override

In standard mode, the phone will reset to normal sound levels when you hang up. This allows people who do not require the level of amplification offered on the phone to use it. If you would like to override the reset, simply turn the **AUTO AMPLIFY** switch on the back of the phone to “**ON**” (See diagram #13).

**IMPORTANT:** When the **AUTO AMPLIFY** switch is in the “**ON**” position, you do not need to press the **AMPLIFY** button. Your amplification setting will remain as set.



DIAGRAM #13 - Volume override switch

## Using Your CL1100 Phone with Hearing Aids

Your CL1100 Phone can be used with hearing aids equipped with a telecoil (T-coil). Adjust your hearing aid “T-switch” to the “T” position. Make sure to hold the handset close to your hearing aid.

## Outgoing Speech Volume

You can adjust the sending volume (outgoing volume up to 12 dB) by using the Speech Volume Control located on the back of the CL1100 phone. If your voice is faint or weak, adjust the volume to “HI”. You can also decrease the volume as well. There are three levels available “LO, NORMAL & HI” (See diagram #14).



DIAGRAM #14 – Outgoing speech volume switch

## Dialing Stored Numbers

1. Lift the handset and listen for the dial tone.
2. Press the appropriate location button M1 – M12 and the number stored in this location will be dialed automatically (See diagram #15).

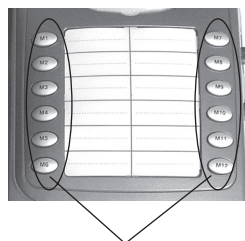 


DIAGRAM #15 – Memory Dial button

## Last Number Redial

The redial button is used to quickly redial the last number you dialed.

1. Lift the handset and listen for the dial tone.
2. Press the “**REDIAL**” button (See diagram #16). The phone will redial up to 31 digits automatically.



DIAGRAM #16 – Redial button

## Flash Button

The FLASH button is used to disconnect a call and re-establish dial tone or to switch over to another caller if you use custom calling services such as Call Waiting or Three Way Calling. Please contact your local telephone company for information on these services.

1. During a call press the “**FLASH**” (See diagram #17 button to access the flash feature) .



DIAGRAM #17 – Flash button

**Note:** If you do not have any special telephone service , such as Call Waiting. Pressing the “**FLASH**” button during a call may disconnect your current conversation.

## Mute Button

The MUTE button allows the user to conduct a private conversation that you do not want the person on the other end to hear.

1. Press and hold the “**MUTE**” button (See diagram #18). You will still be able to hear the caller but they cannot hear you during the mute operation.
2. To resume normal conversation, release the “**MUTE**” button.



DIAGRAM #18 – Mute button

# Troubleshooting Guide

## **No dial tone**

1. Check that all phone cord connections (including the curly cord) are securely plugged into the telephone & wall jack.
2. Check that the phone is in the correct dialing mode, Tone (touch) or pulse (rotary).
3. Plug another phone into the wall jack to make sure your phone service is functioning properly.

## **Call will not dial or dials very slowly**

1. Check that the phone is in the correct dialing mode: Touch-Tone / Pulse Setting (See *diagrams #2+#3*)

## **No audible ringer**

1. Make sure the ringer is not set to "OFF" position (See *diagram #10*).
2. Check the volume level of the ringer.
3. Lift handset to reset the ring tone temporary "OFF" feature (see *page #10*).
4. You may have too many extensions on your line. Try unplugging a few devices.

## **No amplification**

1. Check to see if the AMPLIFY Button is "ON" (See *diagram #12*). The red light should be lit.

## **Noise, Static, Interference while using the handset**

1. A filter may be required for homes with a DSL line or near Radio towers.

## **No numbers dialed when memory button is pressed**

1. No number stored in that memory button.
2. Make sure the phone number was programmed and saved in the memory (See *page #13*).
3. Make sure the programming is done in the correct dial mode (touch-tone or pulse dialing).
4. If your phone has been disconnected for a few hours the numbers stored will be lost.

# Maintenance and Care

The CL1100 phone has been designed to give you years of dependable service. To ensure the utmost in performance, follow these guidelines in caring for your phone:

1. Avoid dropping or knocking the unit.
2. Dust the unit regularly. Unplug your phone and wipe with a soft slightly damp cloth to remove any dirt from it. To avoid damage, NEVER use an abrasive or strong solvent to clean any part of the phone.
3. Keep the phone out of direct sunlight.
4. Avoid placing the phone in extremely humid conditions.
5. Avoid electric shock by keeping the phone away from water (i.e. bathroom, kitchen sink, etc.)

## Specifications

### **Maximum Gain:**

30 dB in Wide band (300 to 3400Hz)

+/- 10 extra dB max Low Frequency (Bass 300 Hz)

+/- 10 extra dB High Frequency (Treble 3400Hz)

### **Dimensions:**

Size: 8.5" X 6.5" X 2"

Weight: 1.50 lbs with batteries

### **Power Requirements:**

Batteries: (4) AAA Alkaline batteries (not included)

# FCC Registration Notice

THE INFORMATION INFORMING THE USER OF HIS/HER AND THE TELEPHONE COMPANY'S RIGHT AND OBLIGATION IS OUTLINED BELOW.

- a) This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. ON the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
- b) All applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e. RJ11C) in the package with each piece of approved terminal equipment.
- c) A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirement adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
- d) The REN is used to determine the number of devices that may be connected to the telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.00). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. [For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by 17 are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.]
- e) If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your rights to file a complaint with the FCC if you believe it is necessary.
- f) The telephone company may make changes in its facilities, equipment, operation or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
- g) Should you experience trouble with the equipment, please contact: ClearSounds Communications Attn: Repair Center, 8160 S Madison St, Burr Ridge, IL 60527, 800-965-9043 V/TTY, 888-654-9219 FAX, e-mail: [repairs@clearsounds.com](mailto:repairs@clearsounds.com) for repair or warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
- h) Please follow instructions for repairing if any (e.g. battery replacement section);



otherwise do not alter or repair any part of device except as specified.

- i) Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation for information.
- j) **NOTICE:** If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of the CL1100 does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
- k) This equipment is hearing aid compatible.

***WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.***

***NOTE:*** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These Limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio TV technician for help.**

*This product meets the applicable Industry Canada technical specifications.*

*The Ringer Equivalence Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirements that the sum of the Ringer Equivalence Number of all the devices does not exceed five.*

Should you experience trouble with this equipment, please contact: **The Canadian Service Center** is Hall Telecommunications, 5477 R.R. #5, Hwy #6 North Guelph, Ontario, Canada N1H 6J2. Tel no: 519-822-5420 Fax No: 519-822-5462 Contact person: Mr. Don Beam. **The US Service Center** is ClearSounds Communications 8160 S Madison St - Burr Ridge, IL 60527 USA Tel No: 800-965-9043 V or 800-814-5359 TTY Fax No: 888-654-9219 e-mail: info@clearsounds.com Contact Name: Customer Service for repair or warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

## Warranty & Service

ClearSounds Communications™ warrants the CL1100 Phone against any defect in materials or workmanship for the period of one year from the date of purchase. Should you experience a problem, contact our customer service department or visit our website at [www.clearsounds.com](http://www.clearsounds.com).

Be sure to save your sales receipt as proof of purchase date should you need warranty service.

Within a period of one year from purchase date, ClearSounds Communications™ will repair or replace (our discretion) your CL1100 Phone at no cost, if a defect in materials or workmanship is found. If we elect to replace your phone, we may replace it with a new or reconditioned product of the same or similar design. Repair or replacement will be warranted for a period of 90 days or the original time on the original warranty, whichever is longer.

The warranty **does not** cover accidents, negligence or breakage to any parts. This includes shipping damage, failure to follow instructions, misuse, fire, floods, use of incompatible accessories, Acts of God or failure in your phone service carrier's line service. The product must not be tampered with or taken apart by anyone who is not an authorized ClearSounds Communications™ representative. Tampering with the phone will void any written or implied warranties.

ClearSounds Communications™ shall not be responsible for loss of time, inconvenience, loss of use of your CL1100 phone, property damage caused by your CL1100 Phone or any other incidental or consequential damages.



Warranty service is available only with proof of purchase.  
**ClearSounds®**  
Hear how good life can be

**IMPORTANT: YOUR RECEIPT IS PART OF YOUR WARRANTY AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.**

Shipping cost must be prepaid and the product must be packaged appropriately for shipping.

ClearSounds Communications