

DIGITAL HOME CINEMA SYSTEM HT-DB120

THIS APPLIANCE IS MANUFACTURED BY:



Instruction Manual















CLASS 1 LASER PRODUCT KLASSE 1 LASER PRODUKT LUOKAN 1 LASER LAITE KLASS 1 LASER APPARAT PRODUCTO LASER CLASE 1

KLASS 1 LASER APPARAT PRODUCTO LASER CLASE 1



CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.



This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.



This symbol alerts you to important operating and maintenance instructions accompanying the unit.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Wiring the Main Power Supply Plug(UK Only)

IMPORTANT NOTICE

The main lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and if it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover removed. If the cover is detachable and a replacement is required, it must be of the same colour as the fuse fitted in the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a main socket as there is a risk of shock hazard from the bared flexible cord.

Never attempt to insert bare wires directly into a main socket. A plug and fuse must be used at all times.

IMPORTANT

The wires in the main lead are coloured in accordance with the following code:-


BLUE = NEUTRAL BROWN = LIVE


As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:-

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK. The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.


WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL \implies , OR COLOURED GREEN OR GREEN AND YELLOW.



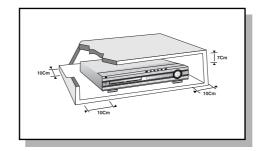

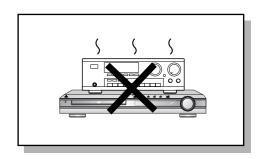


Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc tray is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

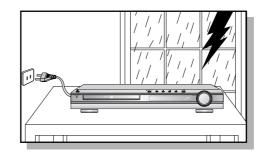


During thunderstorms, disconnect AC main plug from the wall outlet.

Voltage peaks due to lightning could damage the unit.

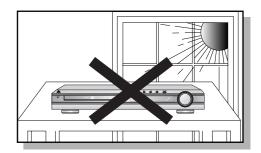

Do not expose the unit to direct sunlight or other heat sources

This could lead to overheating and malfunction of the unit.

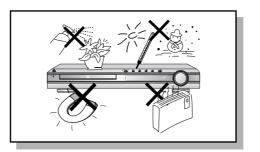


Protect the player from moisture(i.e. vases) , and excess heat(e.g.fire-place) or equipment creating strong magnetic or electric fields (i.e.speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use.

Use of this product is for personal use only.

Condensation may occur if your player or disc have been stored in cold temperatures.

If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

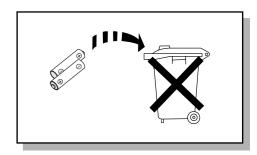

The battery used with this product contain chemicals that are harmful to the environment.

Do not dispose of batteries in the general household trash.





Multi-Disc Playback & AM/FM Tuner

The HT-DB120 combines the convenience of multi-disc playback capability, including DVD, CD, MP3-CD, CD-R, CD-RW, and DVD-RW, with a sophisticated AM/FM tuner, all in a single player.

Dolby Pro Logic II

Dolby Pro Logic II is a new form of multi-channel audio signal decoding technology that improves upon existing Dolby Pro Logic.

DTS (Digital Theater Systems)

DTS is an audio compression format developed by Digital Theater Systems Inc. It delivers full-frequency 5.1 channel sound.

TV Screen Saver Function

The HT-DB120 automatically brightens and darkens the brightness of the TV screen after 2 minutes in the stop or pause mode. The HT-DB120 automatically switches itself into the power saving mode after 20 minutes in the screen saver mode.

Power Saving Function

The HT-DB120 automatically shuts itself off after 20 minutes in the stop or pause mode.

Customized TV Screen Display

The HT-DB120 allows you to select your favorite image during JPEG, DVD playback and set it as your background wallpaper.

Selecting the Video Format

Turn off the main unit and then press NTSC/PAL.

- By default, the video format is set to "PAL".
- Each time the button is pressed, the video format switches between "NTSC" and "PAL".
- Each country has a different video format standard.
- For normal playback, the video format of the disc must be the same as the video format of your TV.

	PREPARATION	
	Safety Warnings	
	Precautions	
	Features	
	Notes on Discs	
	Description	/
0	CONNECTIONS	
ř	Connecting the Speakers	1
	Connecting the FM and AM(MW) Antennas	
	Connecting the Video to TV	
	Connecting External Components	
0	OPERATION	
_	Disc Playback	1
	Displaying Disc Information	
	Fast/Slow Playback	
	Skipping Scenes/Songs	
	Repeat Playback	
	A-B Repeat Playback	22
	Angle Function	
	Zoom Function	24
	Selecting Audio/Subtitle Language	
	Moving Directly to a Scene/Song	
	JPEG File Playback	
	Using Disc Menu	
	Using the Title Menu	30
0	SETUP	
	Setting the Language	3 ⁻
	Setting TV Screen type	
	Setting Parental Controls (Rating Level)	
	Setting the Password	
	Setting the Wallpaper	
	Setting the Speaker Mode	
	Setting the Test Tone	
	Setting the Delay Time	
	Setting the Audio Quality	
	Setting the DRC (Dynamic Range Compression)	
	Dolby Pro Logic II Mode	
	Dolby Pro Logic II Effect	
	PADIO ODERATION	
	PADIO OPERATION Listening to Radio	E-
	Presetting Stations.	
	1 rootuing ottaions	
0	MISCELLANEOUS	
	Convenient Functions	
	Before Calling for Service	
	Cautions on Handling and Storing Discs	
	Specifications Notes on Terminology	
	Notes of Terminology	5





DVD (Digital Versatile Disc) offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie theater or concert hall.





DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is given on the rear panel of the player. (Your DVD player will only play DVDs that are labeled with identical region codes.)

Playable Discs

Disc Type	Mark (Logo)	Recorded Signals	Disc Size	Max. Playing Time
-1.1-	DVD	A P \(\frac{1}{2} \)	12cm	Approx. 240 min. (single-sided) Approx. 480 min. (double-sided)
DVD	VIDEO	Audio + Video	8cm	Approx. 80 min. (single-sided) Approx. 160 min. (double-sided)
ALIDIO CD	AUDIO-CD COMPACT DIGITAL AUDIO	Audio	12cm	74 min.
AODIO-OD			8cm	20 min.



Do not use the following types of disc!

- LD, CD-G, CD-I, CD-ROM and DVD-ROM cannot be played on this player.
 If such discs are played, a "WRONG DISC FORMAT" message appears on the TV screen.
- DVD discs purchased abroad may not play on this player.
 If such discs are played, a "WRONG REGION CODE" message appears on the TV screen.

Copy Protection

- Many DVD discs are encoded with copy protection. Because of this, you should only connect
 your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain
 U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights
 owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and
 is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision
 Corporation. Reverse engineering or disassembly is prohibited.

Disc Recording Format

CD-R Discs

- Depending on the disc recording device (CD-Recorder or PC) and the condition of the disc, some CD-R discs may not be playable.
- Use a 650MB/74 minute CD-R. Avoid CD-R media, as they may not be playable.
- If possible, do not use CD-RW (Rewritable) media, as they may not be playable.
- Only the CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- If the name of a file is in Korean, the name will be displayed on the TV screen in Korean and * will be shown in the display of the main unit.
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the ".mp3" and ".MP3" extensions can be played.
- Only a consecutively written Multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- If more than 500 tracks are recorded on a single CD, a maximum of 500 tracks can be played.
- If more than 300 folders are recorded on a single CD, a maximum of 300 folders can be played.

What is MP3?


MP3 is short for MPEG-1 Audio Layer 3 and MPEG is an acronym for Moving Pictures Experts Group. MP3 is a file format with compression ratio of 1:12 (128 Kbps*) That is, you can use MP3 format to record about 12 times the usual amount of data on a regular CD.


CD-R JPEG Discs


- Only files with the ".jpeg" and ".JPEG" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.

Description


-Front Panel-

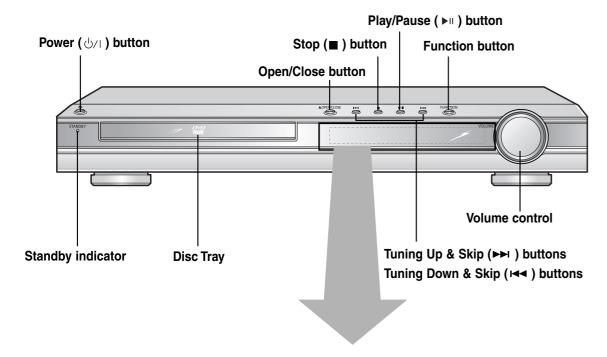

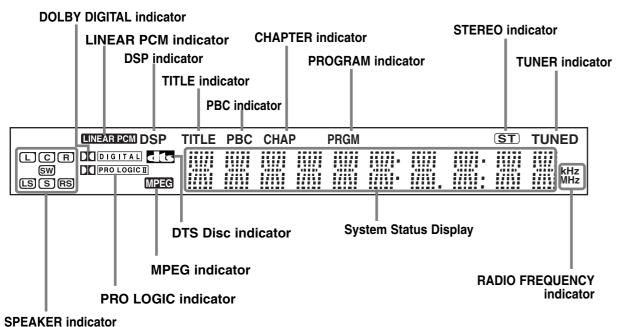

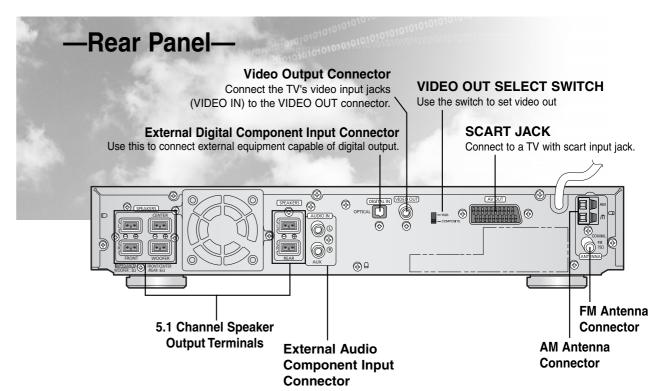


Accessories

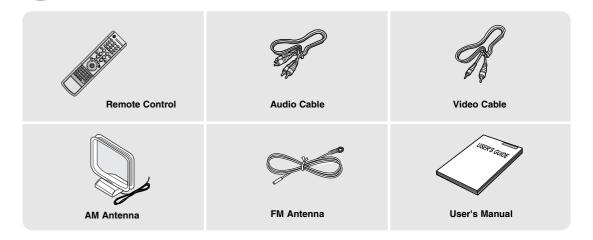



—Remote Control—

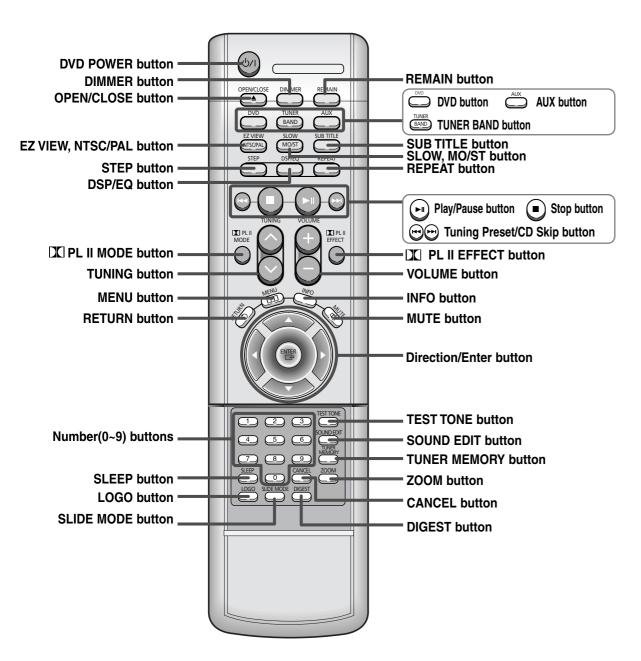


Insert Remote Batteries


Remove the battery cover on the back of the remote by pressing down and sliding the cover in the direction of the arrow.



  2 Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and -).







Replace the battery


Caution

Follow these precautions to avoid leaking or cracking cells:


- Place batteries in the remote control so they match the polarity:(+) to (+)and (-)to (-).
- Use the correct type of batteries.Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

Range of Operation of the Remote Control

The remote control can be used up to approximately 23 feet/7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

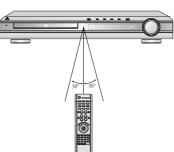


To open the remote control cover, push the top of the cover, then slide downward.

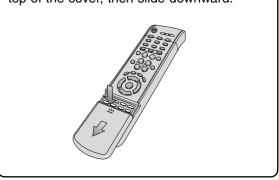



Connecting the Speakers

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

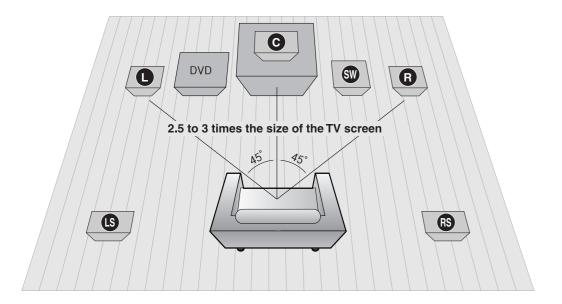

Position of the DVD Player

• Place it on a stand or cabinet shelf, or under the TV stand.



- Place these speakers in front of your listening position, facing inwards (about 45°) toward you.
- Place the speakers so that their tweeters will be at the same height as your ear.
- Align the front face of the front speakers with the front face of the center speaker or place them slightly in front of the center speakers.

Center Speaker C

- It is best to install it at the same height as the front
- You can also install it directly over or under the TV.

Selecting the Listening Position

 
The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV. Example: For 32" TVs 2~2.4m (6~8feet) For 55" TVs 3.5~4m (11~13feet)

Rear Speakers (S) RS




- Place these speakers behind your listening position.
- If there isn't enough room, place these speakers to face each other.
- Place them about 60 to 90cm (2 to 3feet) above your ear, facing slightly downward.
 - * Unlike the front and center speakers, the rear speakers are used to handle mainly sound effects and sound will not come from them all the time.

Subwoofer SW



• Usually, it is placed by a corner near the front speakers.

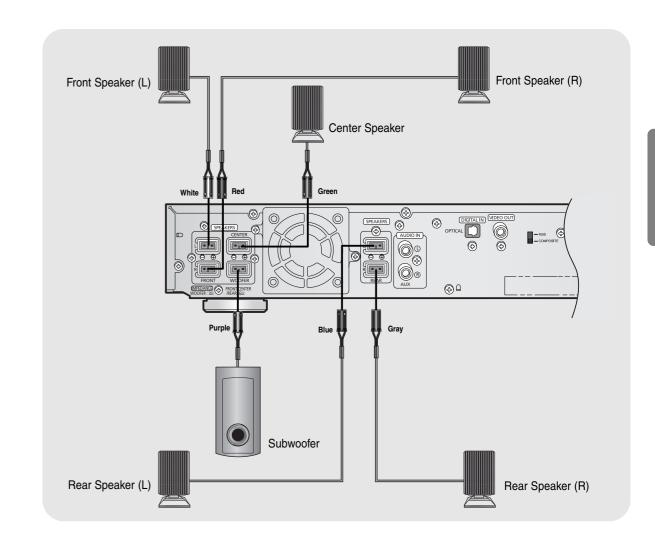


Back of the Speakers

1 Press down the terminal 2 Insert the wire into the tab on the back of the speaker.



 - terminal and release the terminal tab.
- Insert the black wire into the black (-) terminal and the gray wire into the gray (+) terminal.
- Make sure the polarities (+ and -) are correctly.




Back of the Main Unit

- **3** Connect the connecting jacks to the back of the DVD player.
 - Make sure the colors of the speaker terminals match the colors of the connecting jacks.
 - Make sure the polarities (+ and -) are correctly.



Connecting the FM and AM(MW) Antennas

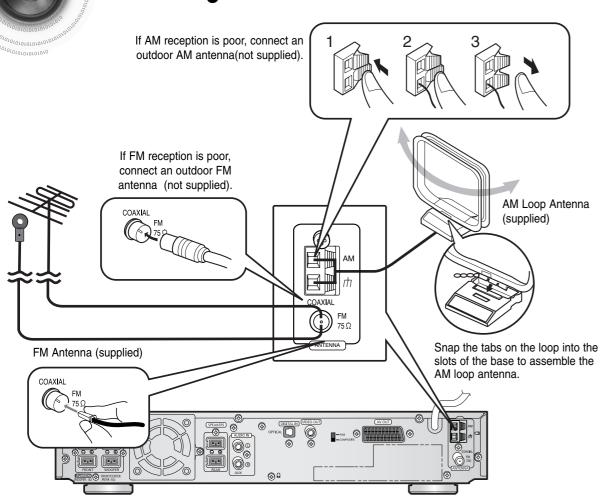

FM antenna connection

- 1. Connect the FM antenna supplied to the FM 75 Ω COAXIAL terminal as a temporary measure.
- Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.
- If reception is poor, connect an outdoor antenna. Before attaching a 75Ω coaxial cable (with a standard type connector), disconnect the supplied FM antenna.

AM(MW) antenna connection

- 1. Connect the AM loop antenna supplied to the AM and # terminals.
- If reception is poor, connect an outdoor single vinyl-covered wire to the AM terminal. (Keep the AM loop antenna connected).

Cooling Fan

The cooling fan dissipates the heat generated inside the unit so that the unit can be operated normally. The cooling fan is activated automatically to supply cool air to the unit.




Please observe the following cautions for your safety.

- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit could rise and may damage it.
- Do not obstruct the cooling fan or ventilation holes. (If the cooling fan or ventilation holes are covered with a newspaper or cloth, heat may build up inside the unit and fire may result.)



Connecting the Video to TV

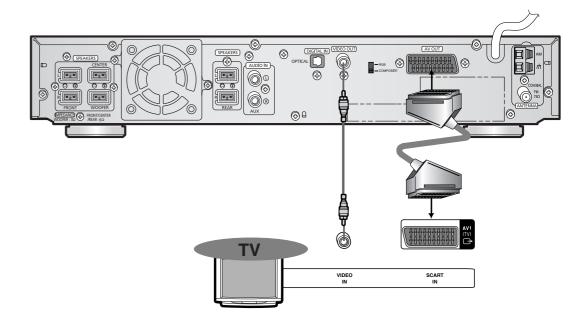

Composite Video (Good Quality)

Connect the supplied video cable from the VIDEO OUT jack on the back panel of the system to the VIDEO IN jack on your television.

Scart (Best Quality)

If you television is equipped with an SCART input, connect an Scart Jack (not supplied) from the AV OUT jack on the back panel of the system to the SCART IN jack on your television.

For using the SCART cable

- If Scart is equipped for your TV, set RGB-COMPOSITE selector of the center unit to RGB. You can get a better picture quality by using Scart setting.
- If Scart (RGB Input) is not equipped for your TV, set RGB-COMPOSITE selector to COMPOSITE.






• On the rear panel SCART cable is indicated as "AV OUT."

Connecting External Components

Connecting an External Digital Component


Example: Digital signal components such as a DVD or CD Recorder.

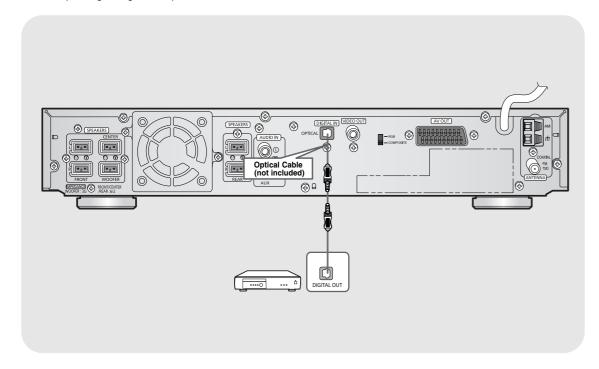

- 1 Connect the Digital Input (OPTICAL) to the Digital Output on the external digital component.
- **2** Press **AUX** on the remote control to select 'DIGITAL IN'.
 - Each time the button is pressed, the selection changes as follows: DIGITAL IN → AUX.
 - You can also use the FUNCTION button on the main unit.
 The mode switches as follows: DVD/CD → DIGITAL IN → AUX → FM → AM(MW) → LW(UK Only).

Connecting an External Analog Component

Example: Analog signal components such as a VCR, Camcorder, and TV.

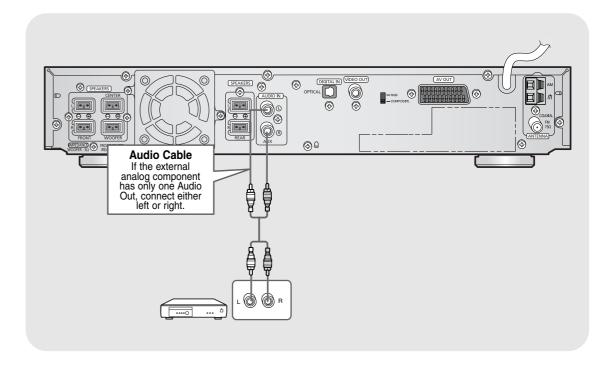

- Connect Audio In on the DVD player to Audio Out on the external analog component.
 - Be sure to match connector colors.
- **2** Press **AUX** on the remote control to select AUX.
 - ullet Each time the button is pressed, the selection changes as follows: DIGITAL IN ullet AUX.
 - You can also use the FUNCTION button on the main unit.
 The mode switches as follows: DVD/CD → DIGITAL IN → AUX → FM → AM(MW) → LW(UK Only).



Disc Playback

Press OPEN/CLOSE button to open the disc tray.

Press **OPEN/CLOSE** button to close the disc tray.



Playback starts automatically.



- Playback starts automatically.
- If the TV is on, a list of MP3s on the CD will appear on the TV screen.



Load a disc.

· Place a disc gently into the tray with the disc's label facing up.

To stop playback, press STOP during playback.

- If pressed once, "PRESS PLAY" is displayed and the stop position will be stored in memory. If PLAY/PAUSE (►II) button or ENTER button is pressed, playback resumes from the stop position. (This function works only with DVDs.)
- If pressed twice, "STOP" is displayed, and if PLAY/PAUSE (►II) button is pressed, playback starts from the beginning.

To temporarily pause playback, press PLAY/PAUSE during playback.

 To resume playback, press PLAY/PAUSE button again.


- · Depending on the content of the disc, the initial screen may appear different.
- Depending on the recording mode, some MP3-CDs cannot be played.
- Table of contents of a MP3-CD varies depending on the MP3 track format recorded on the disc.

Checking the Remaining Time

Press the REMAIN button.


For checking the total and remaining time of a title or chapter being played.

Each time the REMAIN button is pressed

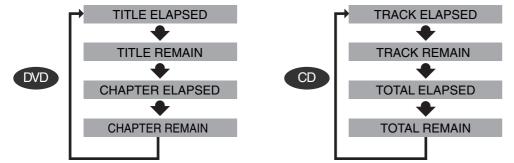

Press **INFO** button.

• Each time the button is pressed, the display changes as follows:

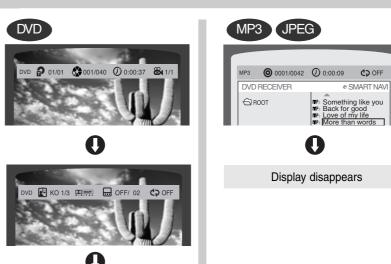

You can view playback information on the disc on the TV screen.

• Depending on the disc, the disc information display may appear different.

Display disappears

· Depending on the disc, you can also select DTS, DOLBY DIGITAL, or PRO LOGIC.

What is a Title?

A movie contained in a DVD disc.

Displaying Disc Information

What is a Chapter?


Each title on a DVD disc is divided into several smaller sections called "chapters".

appears on the TV screen!

If this symbol appears on the TV screen while buttons are being operated, that operation is not possible with the disc currently being played.

What is a Track (File)?

A section of video or a music file recorded on a CD, or MP3-CD.

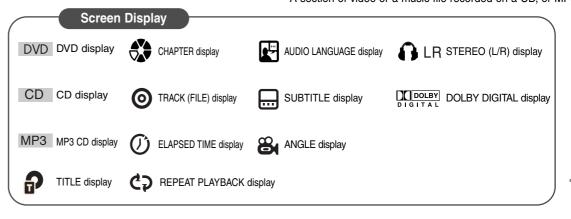


and of the state o

Fast/Slow Playback

Fast Playback DVD CD MP3

Press and hold I◄◀ ▶►I.


• Each time the button is held down during playback, the playback speed changes as follows:

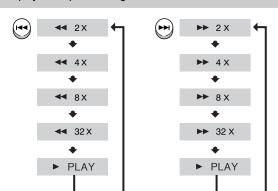


Slow Playback

Press SLOW button.

• Each time the button is pressed during playback, the playback speed changes as follows:

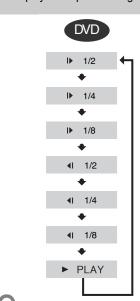

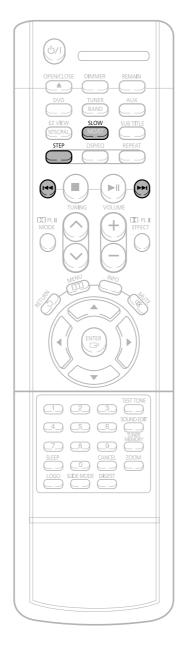







Briefly press I◀◀ ▶►I .

 - Each time the button is pressed briefly during playback, the previous or next chapter, track, or directory (file) will be played.
- But, you cannot skip chapters consecutively.

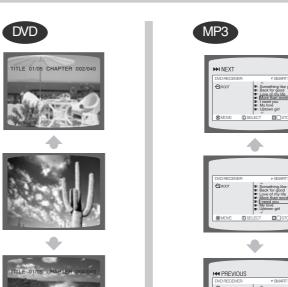



Press STEP button.

 The picture moves forward one frame each time the button is pressed during playback.



- During fast playback of a CD or MP3-CD, sound is heard only at 2x speed, and not at 4x, 8x, and 32x speeds.
- No sound is heard during slow playback and step motion playback.





Repeat Playback

Repeat playback allows you to repeatedly play a chapter, title, track (song), or directory (MP3 file).









Press **REPEAT** button.


• Each time the button is pressed during playback, the repeat playback mode changes as follows:

REPEAT : RANDOM

REPEAT: TRACK

REPEAT : DIR

REPEAT : OFF

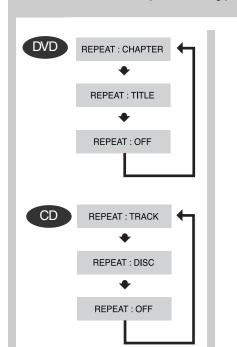

Repeat Playback Options

Repeatedly plays the selected chapter.

Repeatedly plays the selected title.

RANDOM

Plays tracks in random order.

(A track that has already been played may be played again.)

TRACK

Repeatedly plays the selected track.

Repeatedly plays all tracks in the selected


DISC

Repeatedly plays the entire disc.

Cancels Repeat Playback.


To Select a Repeat Playback Mode in the Disc Information Screen

- Press **INFO** button twice.
- Press Cursor ▶ button to move to REPEAT PLAYBACK display.
- Press Cursor ▼ button to select the desired Repeat Playback mode.
- Press **ENTER** button.
- * For MP3 and JPEG discs, you cannot select Repeat Play from the information display screen.

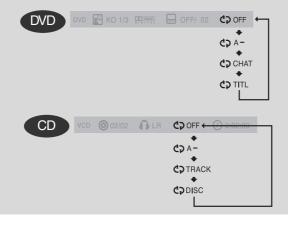



A-B Repeat Playback

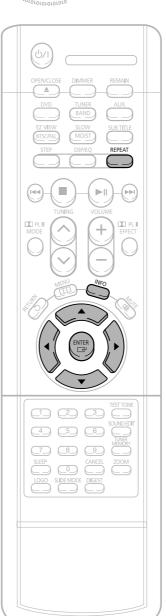



Press INFO button twice.

• For a CD, press INFO button

DVD KO 1/3 COMMUNICATION OFF/ 02 CO OFF

Press Cursor ▶ button to move to REPEAT PLAYBACK display.

Press Cursor ▲ . ▼ buttons to select 'A-' and then press **ENTER** button at the beginning of the desired segment.

• When ENTER button is pressed, the selected position will be stored in memory.



Press **ENTER** button at the end of the desired segment.

• The specified segment will be played repeatedly.



To return to normal playback, press Cursor ▲ ,▼ buttons to select CO OFF.

Note

• The A-B Repeat function will not work on an MP3 or JPEG disc.



Angle Function

This function allows you to view the same scene in different angles.







Press Cursor ► button to move to ANGLE display.



Press Cursor ▲ ,▼ buttons or numeric buttons to select the desired angle.

• Each time the button is pressed, the angle changes as follows:












 The Angle function works only with discs on which multiple angles have been recorded.

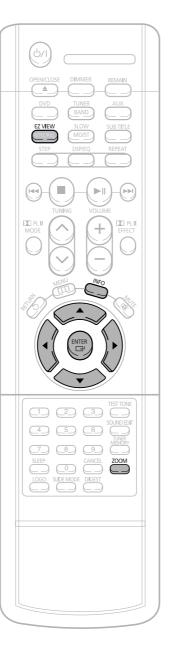



Zoom (Screen Enlarge) Function

This function allows you to enlarge a particular area of the displayed image.



Press **ZOOM** button.



 
Press Cursor ▲,▼,

◀,▶ buttons to
move to the area
you want to enlarge.



Press ENTER button.

• Each time the button is pressed, the zoom level changes as follows:



Aspect Ratio



Press **EZ VIEW** button.

- Each time the button is pressed, the zoom function will switch between On and Off.
- When a movie is played in Widescreen format, black bars at the top and bottom of the TV screen can be removed by pressing the EZ VIEW button.



Note

- This function will not work if the DVD is recorded with multi-camera angle format.
- Black bars may not disappear because some DVD discs have a built-in horizontal to vertical ratio.

Selecting Audio/Subtitle Language

Moving Directly to a Scene/Song



Audio Language Selection Function







Press Cursor ▲ ,▼ buttons or numeric buttons to select the desired audio language.

• Depending on the number of languages on a DVD disc, a different audio language (KOREAN, ENGLISH, JAPANESE, etc.) is selected each time the button is pressed.

DVD KO 1/3	☐ OFF/ 02	CD OFF
◆ EN 2/3		
₽ JA 3/3		

Subtitle Language Selection Function

Press **INFO** button twice.




Press Cursor ▶ button to move to SUBTITLE display.



button or numeric buttons to select the desired subtitle.



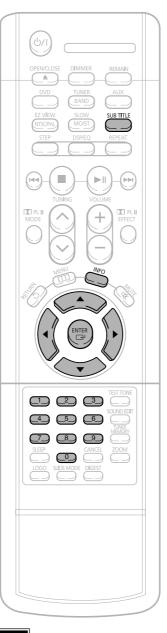

- You can use the SUBTITLE button on the remote control to select a subtitle language.
- Depending on the disc, the Subtitle and Audio Language functions may







Moving to a Title/Track

Press Cursor ▲ .▼ buttons or numeric buttons to select the desired title/track and then press **ENTER** button.



Moving to a Chapter

Press Cursor **◄.**▶ buttons to move to Chapter display.



Moving to a Chapter

Press Cursor . . buttons or numeric buttons to select the desired chapter and then press **ENTER** button.



Moving to a Specific Time

Press Cursor ◀, ▶ buttons to move to time display.



Moving to a Specific Time

Press the numeric buttons to select the desired time and then press **ENTER** button.





Press the **numeric** buttons.

- The selected file will be played.
- An MP3 or JPEG disc cannot be moved from the disc information screen.
- When playing an MP3 or JPG disc, you cannot use ▲ ,▼ to move a folder. To move a folder, press ■ (Stop) and then press \blacktriangle , \blacktriangledown .



Note

- You can press I◄◀►►I on the remote control to move directly to the desired title, chapter, or track.
- Depending on the disc, you may not be able to move to the selected title or time.





Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then played back with this DVD player.


Slide Mode

Place the JPEG disc on the disc tray.

Press the OPEN/CLOSE button.

Press SLIDE MODE button.

- · Playback starts automatically.
- Each time the button is pressed, the image makes the transition as follows:

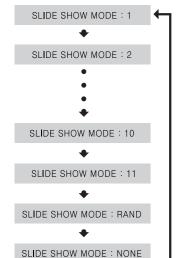

From top to bottom


From bottom to top

Rectangular shape in the center

Vertical curtain shape

Each time a new image is displayed, slide modes (1~11) will be randomly and automatically be applied.

Cancels the slide mode.

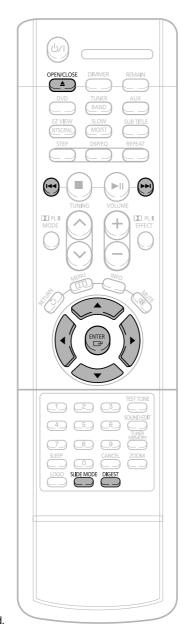

Press I◄◀ ▶►I to skip to the next slide.

• Each time the button is pressed, the slide moves backward or forward.

► Digest Function

You can view 9 JPEG images on the TV screen.

Press **DIGEST** button during playback.

• JPEG files will be shown in 9 windows.



- Press Cursor ▲, ▼, ◀, ▶ buttons to select the desired image and then press **ENTER** button.
- The selected image is played for 5 seconds before moving to the next image.






To view the previous or next image with 9 windows, press ► .

Rotate/Flip Function



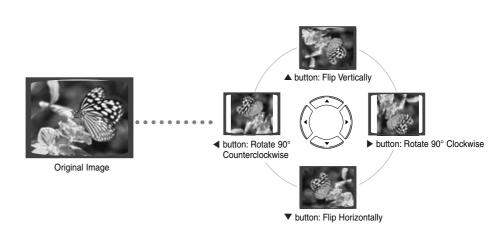



Using Disc Menu

You can use the menus for the audio language, subtitle language, profile, etc. DVD menu contents differ from disc to disc.



Using the Title Menu

For DVDs containing multiple titles, you can view the title of each movie. Depending on the disc, this function may either not work at all or may work differently.



Press **MENU** button.



Press Cursor A, buttons to move to 'DISC MENU' and then press **ENTER** button.

• When you select the disc menu that is not supported by the disc, the "This menu is not



supported" message appears on the screen.




Press Cursor ▲,▼ ◀, ▶ buttons to select the desired item.



Press **ENTER** button.



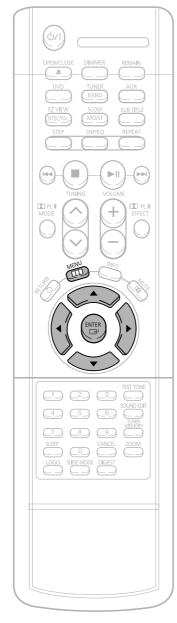

Press **MENU** button.



Press Cursor ▲ ,▼ button to move to 'Title Menu'.




Press **ENTER** button.

• The title menu appears.



Press MENU button to exit the setup screen.

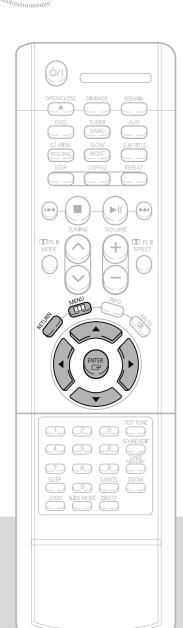

Press **MENU** button.

Press Cursor ▼
button to move to
'Setup' and then
press ENTER button.



Press ENTER button.



Press Cursor ▲,▼
button to select the
desired item and then
press ENTER button.



Press Cursor ▲,▼
button to select the
desired language and then
press ENTER button.

• Once the setup is complete, if the language was set to English, OSD will be displayed in English.



Press **RETURN** button to return to the previous level.

Press MENU button to exit the setup screen.



Selecting the OSD Language



Selecting the Audio Language (recorded on the disc)




Selecting the Subtitle Language (recorded on the disc)




Selecting the Menu Language (recorded on the disc)

* If the language you selected is not recorded on the disc, menu language will not change even if you set it to your desired language.

Setting TV Screen type

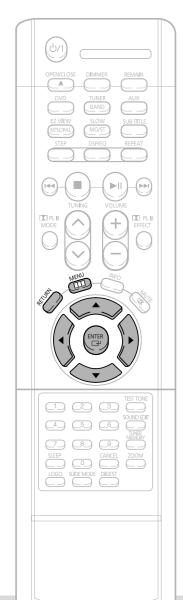


Press **MENU** button.

 





 Press Cursor ▼
button to move to 'TV
DISPLAY' and then
press ENTER button.





• Once the setup is complete, you will be taken to the previous screen.



Adjusting the TV Aspect Ratio (Screen Size)

The horizontal to vertical screen size ratio of conventional TVs is 4:3, while that of widescreen and high definition TVs is 16:9. This ratio is called the aspect ratio. When playing DVDs recorded in different screen size, you should adjust the aspect ratio to fit your TV or monitor.

* For a standard TV, select either "4:3LB" or "4:3PS" option according to personal preference. Select "16:9" if you have a widescreen TV.



- : Select this to view a 16:9 picture in the full-screen mode on your widescreen TV.
- You can enjoy the widescreen aspect.



4:3LB (4:3 Letterbox)

- : Select this to play a 16:9 picture in the letter box mode on a conventional TV.
- Black bars will appear at the top and bottom of the screen



4:3PS (4:3 Pan&Scan)

- : Select this to play a 16:9 picture in the pan & scan mode on a conventional TV.
- You can see the central portion of the screen only (with the sides of the 16:9 picture cut off).



Note


- If a DVD is in the 4:3 ratio, you cannot view it in widescreen.
- Since DVD discs are recorded in various image formats, they will look different depending on the software, the type of TV, and the TV aspect ratio setting.

Press RETURN button to return to the previous level.

Press MENU button to exit the setup screen.

Setting Parental Controls (Rating Level)

Use this to restrict playback of adult or violent DVDs you do not want children to view.

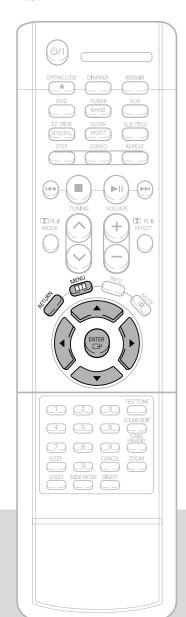

Press **MENU** button.

Press Cursor ▼
button to move to
'Setup' and then
press ENTER button.



Press Cursor ▼
button to move to
'PARENTAL' and then
press ENTER button.



Press Cursor ▲, ▼ button to select the desired rating level and then press ENTER button.

- If you have selected Level 6, you cannot view DVDs with Level 7 or higher.
- The higher the level, the closer the content is to violent or adult material.



5 Enter the password and then press ENTER button.

- The password is set to "7890" by default.
 Once the setup is complete, you will be
- Once the setup is complete, you will be taken to the previous screen.



Note •


• This function works only if a DVD disc contains the rating level information.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Setting the Password

You can set the password for the Parental (rating level) setting.

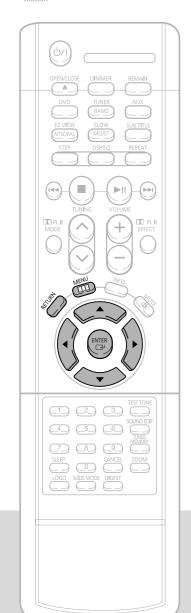

- Press **MENU** button.
- Press Cursor ▼
 button to move to
 'Setup' and then
 press ENTER button.



Press Cursor ▼ button to move to 'PASSWORD' and then press ENTER button.



Press ENTER button.



- 5 Enter the password and then press ENTER button.
- Enter the old password, a new password, and confirm new password.
- The setting is complete.



- Press RETURN button to return to the previous level.
- Press **MENU** button to exit the setup screen.





While watching a DVD or JPEG CD, you can set the image you like as a wallpaper.

Setting the Wallpaper

During playback, press PLAY/PAUSE button when the image you like comes up.



Press **LOGO** button.

• "LOGO COPY DATA" will be displayed on the TV screen.




The power will turn off and then back on and the disc tray will open automatically.

• The selected wallpaper will be displayed.

Press **OPEN**/ **CLOSE** to close the disc tray.

• You can repeat Steps 1 and 2 to set up to 3 wallpapers.

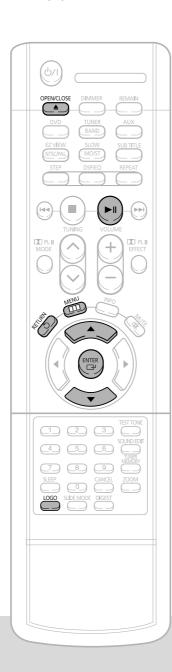

To Change the Wallpaper

Press **MENU** button.



Press Cursor ▼ button to move to 'Setup' and then press **ENTER** button.



Press Cursor ▼ button to move to 'LOGO' and then press **ENTER** button.



Press ▼ to select the desired 'USER', and then press ENTER.



Press **MENU** button to exit the setup screen.

Press **RETURN** button to return to the previous level.

Press MENU button to exit the setup screen.



Select this to set the Samsung Logo image as your wallpaper.



Select this to set the desired image as your wallpaper.

and a state of the state of the

Setting the Speaker Mode

Press **MENU** button.



In the Speaker Setup, press the ENTER button again.



Press Cursor ▼
button to move to
'Audio' and then
press ENTER button.



Press Cursor ▲, ▼,

◀,▶ buttons to move
to the desired
speaker and then
press ENTER button.

 For C, LS, and RS, each time the button is pressed, the mode switches alternately as follows: SMALL → NONE.
 For L and R, the mode is set to SMALL.



SMALL: Select this when using the speakers.

NONE: Select this when no speakers are installed.

Note

 With DCIPL (Dolby Pro Logic II), the delay time may be different for each mode.

TEST TONE

- With AC-3 and DTS, the delay time is set between 00 and 15mSEC.
- Depending on PRO LOGIC and STEREO, the speaker mode may vary.



Setting the Test Tone

Press **MENU** button.

Press Cursor ▼ button to move to 'Audio' and then press ENTER button.





ENTER button.
 The test tone will be sent to L → C → R → RS → LS → SW in that order.

to move to 'TEST

Press Cursor ▼ button

TONE' and then press

If the button is pressed again at this time, the test tone will stop.





- Press **RETURN** button to return to the previous level.
- Press **MENU** button to exit the setup screen.

When manually testing using the **TEST TONE** button


L: Front Speaker (L) C: Center Speaker R: Front Speaker (R) LS: Rear Speaker (L)

C: Center Speaker SW: Subwoofer LS: Rear Speaker (L) RS: Rear Speaker (R)


Press **TEST TONE** button.

- Test tone will be produced as follows: When playing a DVD or CD, this will work only in Stop mode.
- Use this function to check that each speaker is correctly connected and that there is no problem.

To end the test tone, press **TEST TONE** button.

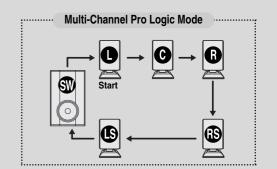

Setting the Delay Time

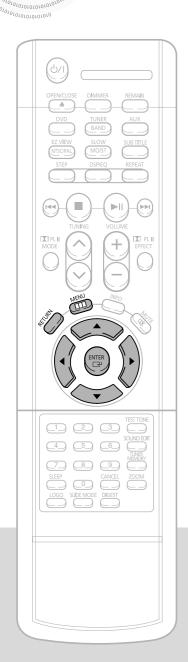

Press **MENU** button.

Press Cursor ▼ button to move to 'Audio' and then press ENTER button.



Press Cursor ▼ button to move to 'DELAY TIME' and then press **ENTER** button.



Press Cursor ▲, ▼, ◆ , ▶ buttons to move to the desired speaker and then press **ENTER** button.



Press Cursor ◀, ▶ to set the Delay time.

 You can set the delay time for C between 00 and 05mSEC and for LS and RS between 00 and 15mSEC.



Setting up the Speaker Delay Time

When 5.1CH Surround Sound is played, you can enjoy the best sound if the distance between you and each speaker is the same. Since the sounds arrive at the listening position at different times depending on the placement of speakers, you can adjust this difference by adding a delay effect to the sound of the Center Speaker and Surround Speakers.


Setting CENTER SPEAKER

If the distance of Dc is equal to or longer than the distance of Df in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.

Distance between Df and Dc	Delay Time
50	1.3 ms
100	2.6 ms
150	3.9 ms
200	5.3 ms


• Setting REAR (SURROUND) SPEAKERS If the distance of Df is equal to the distance of Ds in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.

Distance between Ds and Dc	Delay Time
200	5.3 ms
400	10.6 ms
600	15.9 ms

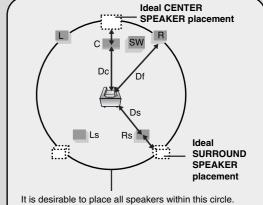

- Df: The distance from FRONT SPEAKER
- Dc: The distance from CENTER SPEAKER Ds: The distance from SURROUND SPEAKER

Setting the Audio Quality Setting the balance and level for each speaker.

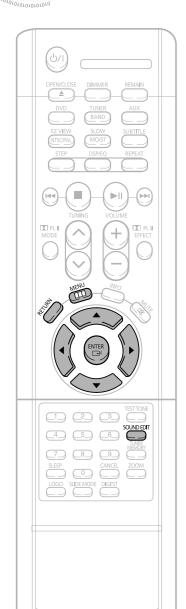



Press **MENU** button.

Press Cursor ▼
button to move to
'Audio' and then press
ENTER button.



Press Cursor ▼ button to move to 'SOUND EDIT' and then press ENTER button.



Press Cursor ▲, ▼,

◀, ▶ buttons to select
the desired item and then
press ENTER button.



Method 2 When manually adjusting with the SOUND EDIT button

Adjusting Front Speaker Balance

Press SOUND
EDIT button and then press Cursor



Adjusting Rear Speaker Balance

Press SOUND
EDIT button and then press Cursor



Adjusting Center Speaker Level

Press SOUND EDIT button and then press Cursor



Adjusting Rear Speaker Level

Press SOUND
EDIT button and then press Cursor



Adjusting Subwoofer Speaker Level

Press SOUND
EDIT button and then press Cursor



Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Note

Adjusting Front/Rear Speaker Balance

 
- You can select between 00 and -06 and OFF.
- The volume decreases as you move closer to -6.

Adjusting Center/Rear/Subwoofer Speaker Level

- The volume level can be adjusted in steps from +6dB to -6dB.
- The sound gets louder as you move closer to +6dB and smaller as you get closer to -6dB.

Setting the DRC (Dynamic Range Compression)

You can use this function to enjoy Dolby Digital sound when watching movies at low volume at night.



Press **MENU** button.



Press Cursor ▼ button to move to 'DRC' and then press **ENTER** button.



Press Cursor ▼ button to move to 'Audio' and then press ENTER button.



Press Cursor ▲, ▼ to adjust the 'DRC'.

 The longer the Cursor ▲ button is held down, the greater the effect, and the longer Cursor ▼ button is held down, the

• Once the setup is complete, you will be taken to the previous




Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.




Sound Field (DSP)/EQ Function

DSP(Digital Signal Processor) DSP modes have been designed to simulate different acoustic environments. EQ: You can select from ROCK, POP, or CLASSIC, depending on the genre of music.

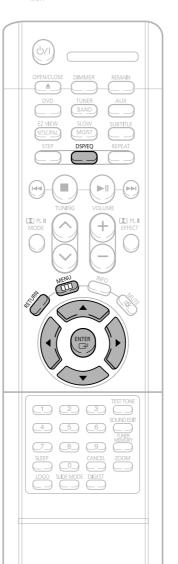

Press **DSP/EQ** button.

- "DSP" appears on the display panel.
- Each time the button is pressed, the selection changes as follows:

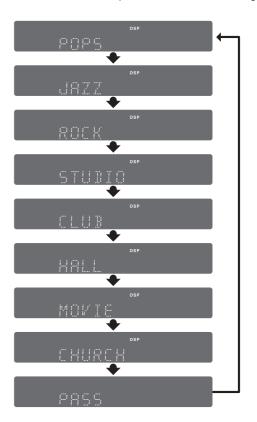

Note

POP, JAZZ, ROCK: Depending on the genre of music, you can select from POP, JAZZ, and ROCK.

STUDIO: Provides a sense of presence as if in a studio.

CLUB: Simulates the sound of a dance club with a throbbing bass beat.

HALL: Provides a clear vocal as if listening in a concert hall.

MOVIE: Provides the feeling of a movie theater. **CHURCH:** Gives the feel of being in a grand church.

PASS: Select this for normal listening.

Press DCI PL II MODE button. • Each time the button is pressed, the mode changes as follows. **CINEMA** **STERES** **STER

SLEEP CANCEL ZOOM

Note

 When selecting Pro Logic II mode, connect your external device to the AUDIO INPUT jacks (L and R) on the player. If you connect to only one of the inputs (L or R), you cannot listen to 5.1 channel surround sound.

PRO LOGIC II

- MUSIC: When listening to music, you can experience sound effects as if you are listening to the actual performance.
- CINEMA: Adds realism to the movie soundtrack.
- PRO LOGIC: You will experience a realistic multi-channel effect, as if using five speakers, while using just the front left and right speakers.
- MATRIX: You will hear 5.1 channel surround sound.

STEREO: Select this to listen to sounds from the front left and right speakers and the subwoofer only.



Press DI PL II MODE button to select 'MUSIC' mode.



Press DCI PL II EFFECT button and then press Cursor ◀ , ▶ buttons to select the mode.

• You can select either 0 or 1.



Press □ PL II EFFECT button and then press Cursor ◀, ▶ buttons to select the mode.

• You can select between 0 and 7.



Press □ PL II EFFECT button and then press Cursor ◀ , ▶ buttons to select the mode.

• You can select between 0 and 6.



Note

• When playing a DVD disc encoded with two or more channels, multi-channel mode will be selected automatically and \(\mathbb{X}\)PL II (Dolby Pro Logic II) button does not work.

- PANORAMA: This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging.
- **CENTER WIDTH:** Sound is output to the center speaker only. The front left and right speakers produce phantom sound.
- DIMENSION: Incrementally adjusts the sound field (DSP) from the front or rear.



Listening to Radio

You can listen to the chosen band (FM, MW, LW(UK Only) broadcast stations) by using either the automatic or manual tuning operation.

Remote Control Unit

Press TUNER/ BAND button.

 The selection toggles back and forth between "FM → MW → LW(UK Only)" each time the TUNER(BAND) button is pressed.

Tune in to the desired station.

Automatic Tuning 1 When I◄◄ ►► is pressed, a preset broadcast station is

Press and hold to automatically search for active broadcasting stations.

Briefly press to increase or decrease the frequency incrementally.

Main Unit

Press the **Function** button to select the desired band (FM, MW, LW(UK Only)).


Select a broadcast station.

Automatic Tuning 1 Press the STOP (■)

PRESET and then press |◀◀ ▶▶| button to select the preset station.

Automatic Tuning 2 Press the STOP (■) button to select "MANUAL" and then press and hold I button to automatically search the band.

Manual Tuning Press STOP (■) to select MANUAL and then briefly press | to tune in to a lower or higher frequency.

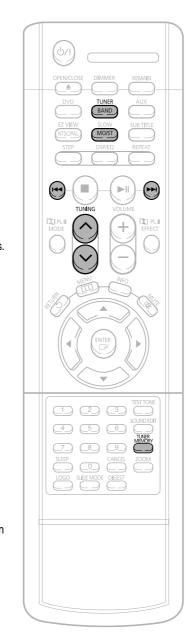



Presetting Stations

You can store up to:

- ♦ 15 FM stations
- 8 MW stations
- ♦ 7 LW stations(UK Only)
- FM Frequency Modulation
- AM(MW) ····· Medium Wave
- ·····Long Wave

Example: Presetting FM 89.1 in the memory

Press the TUNER(BAND) button and select the FM band.

 Each time the button is pressed, the band switches between "FM \rightarrow MW \rightarrow LW(UK Only)".

Press 🛇 🗡 to

• Refer to Step 2 on page 51 to automatically or manually tune in to a station.

MHz

Press the **TUNER MEMORY** button.

"PRGM" flashes in the display.



Press I◀◀ ▶▶I to select preset number.

 You can select between 1 and 15.



Press the **TUNER MEMORY** button.

• Press the TUNER MEMORY button before 'PRGM' disappears from the display.

· 'PRGM' disappears from the display and the station is stored in memory.

89.10.


To preset another station, repeat steps 2 to 5.

Press MO/ST button to listen in Mono/Stereo. (This applies only when listening to an FM station.)

- Each time the button is pressed, the sound switches between "STEREO" and "MONO".
- In a poor reception area, select MONO for a clear, interference-free broadcast.

To tune in to a preset station, press ► on the remote control to select a channel.

Convenient Functions

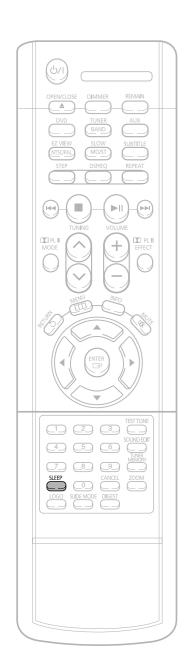

Sleep Timer Function

You can set the time that the DVD player will shut itself off.

Press **SLEEP** button.


 "SLEEP" will be displayed. Each time the button is pressed the preset time changes as follows: 10 → 20 → 30 → 60 → 90 → 120 → 150 → OFF.



To confirm the sleep timer setting, press **SLEEP** button.

- ${}^{\bullet}\text{The remaining time before the DVD player will shut itself off is displayed.}$
- Pressing the button again changes the sleep time from what you have set earlier.

To cancel the sleep timer, press **SLEEP** button until OFF appears on the display.

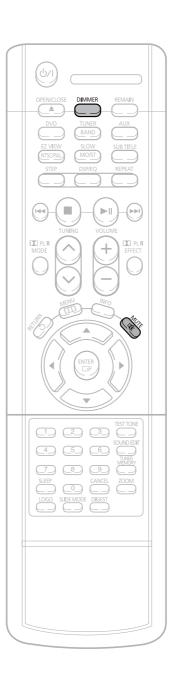

- Adjusting Display Brightness

You can adjust the brightness of the display on the main unit so it won't interfere with your movie viewing.

Press **DIMMER** button.

• Each time the button is press, the brightness changes as follows: SLIGHTLY DARK → DARK → BRIGHT.

Mute Function

This is useful when answering a doorbell or telephone call.

Press **MUTE** button.

- 'MUTE' flash in the display.
- To switch the sound back on (at the same volume as before), press MUTE again or the VOLUME buttons.



Before Calling for Service

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Center.

Symptom	Check/Remedy
Disc tray does not open.	Is the power cord plugged securely into the outlet? Turn off the power and then turn it back on.
Playback does not start.	 Check the region number of the DVD. DVD discs purchased from abroad may not be playable. CD-ROMs and DVD-ROMs cannot be played on this DVD player. Make sure that the rating level is correct.
Playback does not start immediately when the Play/Pause button is pressed.	 Are you using a deformed disc or a disc with scratches on the surface? Wipe the disc clean.
Sound is not produced.	 No sound is heard during fast playback, slow playback, and step motion playback. Are the speakers connected properly? Is the speaker setup correctly customized? Is the disc severely damaged?
Sound can be heard only from a few speakers and not all six.	 When listening to a CD or radio, sound is output to the front speakers (L/R) only. Select "PRO LOGIC II" by pressing TIPL II (Dolby Pro Logic II) on the remote control to use all six speakers. Make sure that the DVD disc is 5.1-CH compatible. If you set C, SL, and SR to NONE in the speaker mode in the audio setup of the setup screen, no sound is heard from the center speaker and the front left and right speakers. Set C, SL, and SR to SMALL.
Picture does not appear, sound is not produced, or the disc tray opens 2 to 5 seconds later.	Was the DVD player suddenly moved from a cold place to a warm one? When condensation forms inside the player, remove the disc and let the player stand for 1 or 2 hours with the power on. (You can use the player again after condensation disappears.)
Dolby Digital 5.1 CH Surround Sound is not produced.	 Is there "Dolby Digital 5.1 CH" mark on the disc? Dolby Digital 5.1 CH Surround Sound is produced only if the disc is recorded with 5.1 channel sound. Is the audio language correctly set to DOLBY DIGITAL 5.1-CH in the information display?

Symptom	Check/Remedy
 Disc is rotating but no picture is produced. Picture quality is poor and picture is shaking. 	 Is the TV power on? Are the video cables connected properly? Is the disc dirty or damaged? A poorly manufactured disc may not be playable.
The remote control does not work.	Is the remote control being operated within its operation range of angle and distance? Are the batteries exhausted?
Audio language and subtitles do not work.	Audio language and subtitles will not work for DVDs not containing them. And depending on the disc, they may work differently.
Menu screen does not appear even when the menu function is selected.	Are you using a disc that does not contain menus?
Aspect ratio cannot be changed.	You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function.
Can't receive radio broadcast.	Is the antenna connected properly? If the antenna's input signal is weak, install an external FM antenna in an area with good reception.
The main unit is not working. (Example: The power goes out or strange noise is heard.) The DVD player is not working normally.	Turn off the power and hold the button on the main unit for longer than 5 seconds. Using the RESET function will erase all stored settings. Do not use this unless necessary.
The password for rating level has been forgotten.	 While "NO DISC" message appears on the display of main unit, hold the main unit's button for longer than 5 seconds. "INITIAL" appears on the display and all settings will return to the default values. Press the POWER button. Using the RESET function will erase all stored settings. Do not use this unless necessary.

Cautions on Handling and Storing Discs

Small scratches on the disc may reduce sound and picture quality or cause breaks in playback. Be especially careful not to scratch discs when handling them.





Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface.

 
Do not stick paper or tape on the disc.

Disc Storage

Do not keep in direct sunlight



Keep in a cool ventilated area



Keep in a clean Protection jacket. Store vertically.



Caution

- Do not allow the discs to become contaminated with dirt.
- Do not load cracked discs or discs that are scratched.

Handling and Storing Discs



When you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

• When cleaning, wipe gently from the inside to the outside of the disc.


Note

 Condensation may form if warm air comes into contact with cold parts inside the player. When condensation forms inside the player, the player may not operate correctly. If this occurs, remove the disc and let the player stand for 1 or 2 hours with the power on.



G	Power Consumption	110W		
G E N	Weight	6.3Kg		
E	Dimensions (W x H x D)	360 x 65 x 408 mm		
R A	Operating Temperature Range	+5°C~+35°C		
L	Operating Humidity Range	10%~75%		
	Usable Sensitivity	10dB		
F Ü M E	S/N Ratio	60dB		
R	Distortion	0.5%		
AM U	Usable Sensitivity	54dB		
AM UN ER	S/N Ratio	40dB		
ìíÀ	Distortion	2%		
v O	Composite Video	1.0Vp-p(75Ω load)		
		Compositive Video : 1.0Vp-p(75Ω load)		
I D E O	Scart Jack	Luminance signal : 1.0Vp-p(75Ω load)		
ОТ		Color Signal : 0.286Vp-p(75Ω load)		
_	Front speaker output	40W(6Ω)/CH		
A M	Center speaker output	40W(6Ω)		
P	Rear speaker output	40W(6Ω)/CH		
L	Subwoofer speaker output	50W(3Ω)		
Ė	Frequency range	20Hz~20KHz		
Ī	S/N Ratio	75dB		
E R	Channel separation	50dB		
	Input sensitivity	(AUX)500mV		
	Speaker system	5.1ch speake	r system	
		Front/Center/Rear speaker	Subwoofer speaker	
S	Impedance	6Ω x 5	3Ω	
P E	Frequency range	150Hz~20KHz	30Hz~150Hz	
Α	Output sound pressure level	82dB/W/M	85dB/W/M	
K E	Rated input	40W	50W	
R	Maximum input	80W	100W	
	Dimensions (W x H x D)	77 x 132 x 87 mm	180 x 320 x 410 mm	
	Weights	0.3 Kg	6.1 Kg	

Notes on Terminology

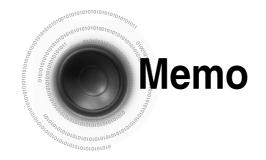

ANGLE	Recorded onto some DVD discs are scenes which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left, from the right, etc.). With such discs, the Angle button can be used to change the angle of view for specific scenes.
CHAPTER NUMBER	These numbers are recorded on DVD discs. A Title is subdivided into many sections, each of which is numbered, and specific parts of the video can be searched quickly using these numbers.
DVD	A high-density optical disc on which high-quality pictures and sound have been recorded by means of digital signals. Incorporating a new video compression technology (MPEG-2) and high-density recording technology, a DVD disc comprises two 0.6 mm thick discs bonded together.
РСМ	An acronym for Pulse Code Modulation - another name for digital audio.
REGION NUMBER	Both the DVD player and DVD discs are encoded with a region number. If the region number on the DVD disc does not correspond to the region number of the DVD player, the player cannot play the disc.
SUBTITLES	Translated appearing at the bottom of the screen. A DVD disc can contain up to 32 subtitle languages.
TITLE NUMBER	These numbers are recorded on DVD discs. When a disc contains two or more movies, these movies are numbered as Title 1, Title 2, etc.
TRACK NUMBER	These numbers are assigned to the tracks which are recorded on video and audio CDs. They enable specific tracks to be located quickly.
DIGITAL	You can enjoy 5.1 (or 6) channels of high fidelity digital sound from various digital input sources such as DVD, CD etc. DTS provides a realistic, clear surround sound that has not previously been available from conventional surround sound.
DIGITAL	5.1 (or 6) Channel Digital Surround sound reproduced from DVDs and LDs recorded as a digital signals (with TOWN) disc marking). With better sound quality, dynamic range, and directionality than traditional Dolby surround technology, you can enjoy dynamic, realistic sound.
DOLBY DIGITAL PROLOGICII	A 4 channel analog sound reproduced from a program source such as a videotape or LD with the mark. You can enjoy a more realistic, robust sound unavailable from regular stereo sources.