Clarion


FM201

User Guide and Product Data Sheet

The Clarion FM201 is a two-channel stereo FM modulator with selectable FM frequencies, variable gain, and a remote on/off switch. It allows the addition of auxiliary audio sources to any FM radio (even those lacking auxiliary inputs). It can be used with DVD players, videocassette players, MP3 players, and more.

To use the FM201:

- 1) Turn the On/Off switch to the On position (This is the position with the "I" icon).
- 2) Turn on the radio and select the FM band. Tune in either 88.7 or 89.1 (your installer can advise you which frequency setting is being used in your installation). Once you determine the correct frequency, it is a good idea to store the frequency using one of your radio's preset keys.
- 3) Turn on the auxiliary audio source (VCR, DVD, MP3 player, etc.) and begin playback. The sound from the source unit should now be audible over your speakers.
- 4) To return to standard radio use, turn the On/Off switch to the Off position (this is the position with the "O" icon).

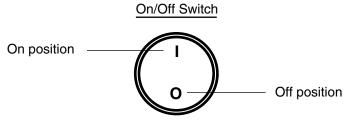

Specifications:

Operating Voltage: 14.4V DC Nom. (Oper ating Range 10.8 to 15.6V DC)

Max. Current Consumption: 200mA
Operating Frequencies: 88.7, 89.1 FM
Fuse rating (in Fuse/Filter box): 2A AGC

Parts List:

- (1) FM Modulator Main Unit with integrated harness.
- (1) On/Off Switch with integrated harness.

10-FM201-00 (Rev. A)

2001 Clarion Co.,Ltd

Clarion


FM201

User Guide and Product Data Sheet

The Clarion FM201 is a two-channel stereo FM modulator with selectable FM frequencies, variable gain, and a remote on/off switch. It allows the addition of auxiliary audio sources to any FM radio (even those lacking auxiliary inputs). It can be used with DVD players, videocassette players, MP3 players, and more.

To use the FM201:

- 1) Turn the On/Off switch to the On position (This is the position with the "I" icon).
- 2) Turn on the radio and select the FM band. Tune in either 88.7 or 89.1 (your installer can advise you which frequency setting is being used in your installation). Once you determine the correct frequency, it is a good idea to store the frequency using one of your radio's preset keys.
- 3) Turn on the auxiliary audio source (VCR, DVD, MP3 player, etc.) and begin playback. The sound from the source unit should now be audible over your speakers.
- 4) To return to standard radio use, turn the On/Off switch to the Off position (this is the position with the "O" icon).

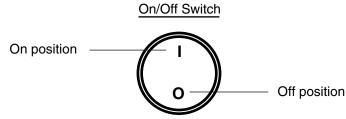

Specifications:

Operating Voltage: 14.4V DC Nom. (Oper ating Range 10.8 to 15.6V DC)

Max. Current Consumption: 200mA
Operating Frequencies: 88.7, 89.1 FM
Fuse rating (in Fuse/Filter box): 2A AGC

Parts List:

- (1) FM Modulator Main Unit with integrated harness.
- (1) On/Off Switch with integrated harness.

Clarion

FM201

Installation Instructions

Installation

Find a suitable location for the On / Off switch

Be sure that it is within easy reach of the dr iver
and can be oper ated safely from the seated position.

NO TE: The On/Off switch requires a flat surface at least 3/4" in diameter f or mounting, with 1" rear clear ance. The switch is provided with 36" of wire tak e this into account when selecting a location, or y ou will have to extend the switch wires.

- 2. Connect the RCA inputs to the audio source .
- Connect the male antenna connector to the car r adio's FM antenna input, and the f emale connector to the car antenna.


NO TE: Some vehicles may require antenna adapters (sold separ ately).

- 4. Connect the Blac k wire to chassis ground.
- 5. Connect the Red wire to accessor y +12V.

NO TE: Connecting to accessory +12V will ensure that the FM modulator tur ns off when the ignition is turned off . Connecting this wire to +12V Constant may cause batter y drain issues, and is **not** recommended.

10-FM201-00 (Rev. A)

2001 Clarion Co., Ltd.

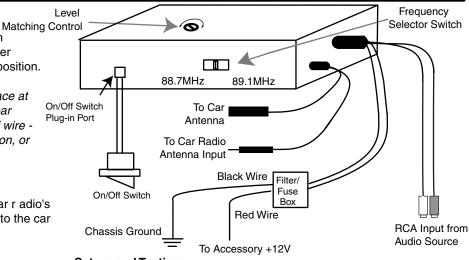

Set-up and Testing

- 1. Set the Frequency Select switch to either 88.7 or 89.1. If a local radio station uses the first frequency selected, use the other frequency.
- 2. Switch the On / Off s witch to On (the "I" position).
- 3. Turn on the car radio and tune to the frequency selected in Step 1.
- 4. Turn on the audio source connected to the FM Modulator. This audio source should no w be heard over the vehicle speakers.
- 5. Set the level matching control so that the volume level over the speak ers is the same as when listening to radio stations. If loud passages sound distor ted, lower the Level Matching Control setting.

Clarion

FM201 Installation Instructions

Installation

Find a suitable location for the On / Off switch
 Be sure that it is within easy reach of the dr iver and can be oper ated safely from the seated position.


NO TE: The On/Off switch requires a flat surface at least 3/4" in diameter f or mounting, with 1" rear clear ance. The switch is provided with 36" of wire tak e this into account when selecting a location, or y ou will have to extend the switch wires.

- 2. Connect the RCA inputs to the audio source .
- Connect the male antenna connector to the car r adio's FM antenna input, and the f emale connector to the car antenna.

NO TE: Some vehicles may require antenna adapters (sold separ ately).

- 4. Connect the Blac k wire to chassis ground.
- 5. Connect the Red wire to accessor y +12V.

NO TE: Connecting to accessory +12V will ensure that the FM modulator tur ns off when the ignition is turned off . Connecting this wire to +12V Constant may cause batter y drain issues, and is **not** recommended.

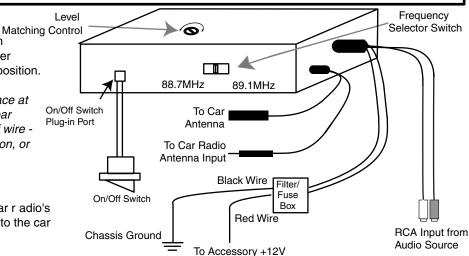

Set-up and Testing

- 1. Set the Frequency Select switch to either 88.7 or 89.1. If a local radio station uses the first frequency selected, use the other frequency .
- 2. Switch the On / Off s witch to On (the "I" position).
- 3. Turn on the car radio and tune to the frequency selected in Step 1.
- 4. Turn on the audio source connected to the FM Modulator. This audio source should no w be heard over the vehicle speakers.
- 5. Set the level matching control so that the volume level over the speak ers is the same as when listening to radio stations. If loud passages sound distor ted, lower the Level Matching Control setting.