

OWNER'S MANUAL AND OPERATING INSTRUCTIONS



FEATURES

1. TONE/PULSE DIALING
2. MUTE FUNCTION
3. FLASH FUNCTION
4. LAST NUMBER REDIAL
5. RECEIVER VOLUME CONTROL (HI/LO)
6. RINGER VOLUME CONTROL (HI/LO)

CAUTION

This product is an electrical device and can be hazardous if immersed in water. To avoid the possibility shock, do not use it while in the bathtub or shower or when you are wet. If you accidentally drop it into water, first unplug its cord (or cords) from the modular jack, and then remove the equipment from the water.

INSTALLATION

- Open the battery compartment cover, install 1 PC AAA battery (Not Included)
- Plug one end of coiled cord to the jack of handset and the other end to the jack of the base.
- Plug one end of flat cord to line jack in the base and the other end to the wall jack.

OPERATION INSTRUCTION

TONE/PULSE SELECTOR

Select the type of dialing that you desire or that your telephone system requires. 'T' for tone dialing mode and 'P' for pulse dialing dialing.

TONE The unit will operate using tone dialing.

PULSE The unit will dial using rotary dial type pulse

TONE KEY

During pulse dialing mode, the "P-T" key provides automatic switching function from pulse mode to tone mode by pressing the "P-T" key, the tone information can be stored into memory for redial functions

RECEIVER SWITCH (HI/LO)

- Slide the [RECEIVER] switch to '🔊' position for the high handset volume and 🗣️ position for the low handset volume

RINGER SWITCH (HI/LO)

- Slide the [RINGER] switch to 'HI' position for high ringer volume.
- Slide the [RINGER] switch to the 'LO' position for low ringer volume.

MAKING CALLS AS NORMAL TELEPHONE

- Pick up the handset to listen for a dial tone.
- Dial your call.

RECEIVING CALLS AS A NORMAL TELEPHONE

When the phone rings:

- Lift the handset and speak into the mouth piece of the handset
- Hang up the handset to release the telephone line when conversation is completed.

LAST NUMBER REDIAL

- Lift the handset to get the dial tone
- The last number you called can be redialed automatically by using [REDIAL]. This is useful especially if line is busy.

FLASH FUNCTION

When in an office equipped with PABX, your unit makes it easy to transfer calls

- Ask calling party to wait.
- Press and release FLASH button.
- Dial the number to which your call is intended.
- When the party answers, announce the call and hang up.

If you receive a busy or no answer:

- Press and release FLASH button to re-connect to the calling party.

MUTE FUNCTION

Holding down the 'MUTE' button prevents the other party from hearing your conversation with other people on your side of the call until the button is released

CLOCK SETTING

- Press [SET] twice to enter clock setting.
- Press [ADJUST] to set the month
- Press [SET] to confirm
- Repeat second and third step to set date, hour, minute respectively

CLOCK DISPLAY

- Press [ADJUST] once to display month and date
- Press [ADJUST] twice to display second
- Press [ADJUST] three times to return normal and it will show hour and minute

SAFETY INSTRUCTIONS

- This unit is an electrical device and can be hazardous if immersed in water. If you accidentally drop it into water, first unplug it from the wall jack, and then remove it from the water.

-
- Please keep the telephone dry and do not use it in moist places. (i.e., near a bathtub, washbowl, kitchen sink, laundry tub or swimming pool). Do not use it in rain.
- Unplug the device from the wall jack before cleaning with a damp cloth. Please do not use liquid or aerosol cleaners.
- Handle the phone carefully. Do not drop it.
- Do not use or put the unit in extreme temperatures.
- Keep the phone away from dust and dirt.
- Use the correct power batteries as indicated in the manual. Do not put batteries in a fire for such action can lead to an explosion.
- Do not modify or tamper with the telephone's internal components. Improper adjustment can cause damage and can be dangerous.

SAVE THESE INSTRUCTIONS