

‘Low Noise’ Salon professional 2000w hairdryer
Model **21007** with adjustable concentrator nozzle

Model **20009** in chrome styling case



Max Hill
**morphy
richards®**

Instructions



Thank you for buying your new Morphy Richards, Mark Hill 2000w hairdryer. Please read these instructions carefully before use and keep in a safe place for future reference.

Key Features



Includes

- 3 metre salon length cable for flexibility and ease of use
- Rubberised grip to make styling more comfortable
- 6 velcro rollers adds volume and bounce

Model 2009 only

Includes : 21007 hairdryer, carrying case and accessories.

Styling Tips

Having shampooed your hair, ensure that it is rinsed properly as shampoo that is left in the hair will leave it looking dull.

To maximise shine, rinse your hair in cool water thoroughly.

Comb your hair through with a wide tooth comb to remove tangles before styling.

Cool shot & boost button

Set your style in place with a flow of cool air or style it quickly with a boost of heat.

Styling

Using the concentrator nozzle

Unclip the nozzle for normal use.

The concentrator nozzle may also be adjusted to allow more control over styling.

If you are blow drying curly hair into a straight style, you need to concentrate the air down into the shaft of the hair. Close the unique adjustable nozzle up into the narrowest position.

If you want to add more volume and movement throughout the hair, open the nozzle to its widest position.

Removable air inlet grille

The air inlet ensures that clean air is used to dry your hair. To remove the air filter, ensure that the hairdryer is unplugged from the mains supply. Hold the hairdryer body firmly then pull the air filter off. The air filter will detach from the hairdryer. Take out the filter to clean away hair and lint using a vacuum cleaner or wash the filter in warm soapy water should it become really dirty. Be sure to let the filter dry properly before refitting to the hairdryer. To refit push the filter until it fits into position.

Important Safeguards

When using your hair appliance, basic safety precautions should always be followed.

- 1 Read all instructions carefully.
- 2 Use the appliance for its intended use only.
- 3 To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
- 4 It is recommended that this appliance should not be used by children.
- 5 Be sure that your household voltage corresponds to the voltage marked on the hairdryer.
- 6 Always unplug your appliance when it is not in use.
- 7 Do not leave the hairdryer switched on whilst unattended.
- 8 Do not take this product into a bathroom or use near a water basin.
- 9 In the event of cable damage do not attempt to replace the mains cable, return to morphy richards.
- 10 After use do not store until the product has cooled down.
- 11 Do not place on surfaces, that are likely to be damaged by heat.
- 12 Ensure the filter is cleaned regularly.

Wiring

This product is fitted with a 13A (BS1363) plug. A 13 amp fuse (BS1362) must be used.

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

**IMPORTANT : THE PLUG
REMOVED FROM THE MAINS LEAD, IF
SEVERED, MUST BE DESTROYED AS A
PLUG WITH BARED FLEXIBLE CORD IS
HAZARDOUS IF ENGAGED INTO A LIVE
SOCKET OUTLET.**

Mains Lead

As a safety precaution and to prolong the life of your appliance, do not wrap the mains lead around the appliance as this will cause damage.

Two Year Guarantee

It is in your interest to retain the retailers receipt as proof of purchase. Please quote the model number if the product develops a fault. This number can be found on the handle of the product.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If a fault develops after 28 days and within 24 months of original purchase, you should contact the helpline number quoting the model number of the product, or write to the address below. You will be asked to return the product (in secure packaging) to the address below along with a copy of proof of purchase.

The After Sales Division
Morphy Richards Ltd
Mexborough
South Yorkshire
England
S64 8AJ

Helpline (8:30-5:00 Mon-Thur/ 8:30-4:00 Fri) **UK 0870 060 2614**
Republic of Ireland 1800 409119
Replacement parts 0870 167 6645

Morphy Richards Website www.morphyrichards.co.uk



Morphy Richards products are intended for household use only. Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

446/8005/02 Rev 2

Imported by : Morphy Richards Ltd, Talbot Road, Mexborough, S64 8AJ