# IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE TAKEN, INCLUDING THE FOLLOWING:

# READ ALL INSTRUCTIONS BEFORE USING APPLIANCE. KEEP AWAY FROM WATER

DANGER —TO REDUCE THE RISK OF ELECTRIC SHOCK: ALWAYS UNPLUG THIS APPLIANCE FROM THE ELECTRICAL OUTLET BEFORE CLEANING.

# WARNING—TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1. Unplug from outlet before putting on or taking off parts.
- 2. This mirror should not be used by or near children or individuals with certain disabilities.
- Use this mirror only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 4. Never operate this mirror if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the mirror to a service center for examination and repair.
- 5. Keep the cord away from heated surfaces.
- 6. Never drop or insert an object into any opening.
- 7. Do not use outdoors.
- 8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

- 9. To disconnect, be sure mirror is in the off position, then remove plug from outlet.
- 10. Do not leave appliance unattended when it is plugged in.
- 11. Be sure mirror is not in a position where it can reflect sunlight; reflected sunlight can cause fire.
- 12. Do not use on a soft surface such as a bed, where openings may be blocked.
- 13. Touch knob on mirror base until light shuts off. Allow unit to cool and unplug cord before replacing light bulbs.
- 14. Do not place or store appliance where it can fall or be pulled into a tub or sink.
- 15. If an appliance falls into water, unplug it immediately. Do not reach into the water.
- 16. To protect against electrical hazards, do not use while bathing or in the shower.
- 17. Never use while sleeping.
- 18. Do not use a bulb greater than 13 watts.

Use on any 120 volt 60 hertz AC electric outlet (ordinary house current). Do not use it on any other electrical outlet.

### FOR HOUSEHOLD USE ONLY

# SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

To reduce the risk of electric shock, this mirror has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

#### CAUTION: BE SURE DIRECT SUNLIGHT DOES NOT STRIKE MIRROR WHEN LEFT UNATTENDED; REFLECTED SUNLIGHT CAN CAUSE FIRE.

- Your lighted makeup mirror will rotate 350° so that you can use either the normal, flat mirror or the 8x magnifying mirror located on the opposite side.
- 2. Plug into any standard 120 volt wall outlet. The mirror light is activated by touch. Touch the base to turn light on or off.
- 3. After use, always touch the knob on the base to turn the mirror to the OFF position and unplug.
- 4. The beauty and design of this mirror complement any decor. Therefore, you may wish to leave the mirror displayed. However, if you choose to store the mirror, see section about storage for detailed information.

## **Special Feature**

This lighted makeup mirror uses a fluorescent bulb. The bulb lasts up to 10,000 hours and does not require replacement. In the unlikely event that the bulb does need replacement, follow the instructions below.

#### REPLACING FLUORESCENT TUBE LAMP

 
CAUTION: Turn off power and unplug mirror. Allow to cool at least three minutes before replacing fluorescent tube lamp. Replace tube lamp only with tube lamp of same wattage rating. Remove tube lamp with care to avoid breakage.

#### REPLACING FLUORESCENT TUBE LAMP

- 1. This mirror uses a 13W maximum 120V type plug-in fluorescent tube lamp.
- 2. Remove screws from left and right sides of mirror. (See Fig. 1.)



- 3. Carefully lift off the removable housing from the half that is affixed to the stand.
- 4. A cable tie is used to protect the fluorescent tube lamp during transportation. To replace the fluorescent tube lamp, you must first cut the cable tie. While holding the socket, pull the fluorescent tube lamp out of the socket with care to avoid breakage. (See Fig. 2.) Align the metal pins on the fluorescent tube lamp with the holes in the socket and push gently to secure. (See Fig. 3.) After the fluorescent tube lamp is replaced, there is no need to replace the cable tie.





- 5. Carefully replace the removable half after locating and aligning the screw holes to the fixed half.
- 6. Insert screws into screw holes and tighten.

## **Storage**

Disconnect from electrical outlet. BE SURE DIRECT SUNLIGHT DOES NOT STRIKE MIRROR WHEN LEFT UNATTENDED. Allow to cool to room temperature before storing. Place in cool, dry area out of reach of children, where mirror will not be damaged.

Handle cord carefully to extend life of mirror; do not jerk or strain at plug connections, or wrap cord around mirror for storage. This could cause damage to the cord or a short circuit. To store mirror, coil cord loosely.

#### Maintenance

Your lighted mirror is designed for household use and is virtually maintenance-free. No lubrication is needed.

If cleaning becomes necessary, disconnect the appliance from the power source, allow to cool and wipe exterior with a damp cloth. Clean mirror surfaces with a glass cleaner. Do not light until you are certain mirror is completely dry. If any abnormal condition occurs, unplug the lighted mirror, allow it to cool, and return it to an authorized service center for repair.

Handle cord carefully to prolong its life; do not jerk or strain at plug connections, or wrap cord around mirror for storage. This could cause damage to the cord or a short circuit. To store mirror, coil cord loosely.

WARNING:
IF YOU THINK THE
POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.

#### **KEEP AWAY FROM WATER**



Everybody knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

#### LIMITED ONE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

©2007 Conair Corporation

#### **Service Center**

Conair Corporation Service Department 7475 N. Glen Harbor Blvd. Glendale, AZ 85307

Model BE84



For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

07NP201