

ALUMA-CLASSICTM FENCE W1716 & W1720



INSTRUCTION MANUAL

Phone: 1-360-734-3482 · On-Line Technical Support: tech-support@shopfox.biz

COPYRIGHT © APRIL, 2004 BY WOODSTOCK INTERNATIONAL, INC. REVISED JANUARY, 2008 (BL)

WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT

THE WRITTEN APPROVAL OF WOODSTOCK INTERNATIONAL, INC.

Printed in Taiwan



Contents

INTRODUCTION	2
About-Your-New-Aluma-Classic™-Fence	2
Woodstock-Service-and-Support	2
Unpacking	3
Get-To-Know-Your-Fence	3
Location-of-Controls	3
ASSEMBLY	4
Inventory	4
W1716-Installation	5
W1720-Installation	6
Installing-Metal-Extension-Wings	8
ADJUSTMENTS	9
Fence-to-Blade	9
Scale-Installation-And-Adjustment	10
PARTS	11

USE THE QUICK GUIDE PAGE LABELS TO SEARCH OUT INFORMATION FAST!





INTRODUCTION

About Your New Aluma-Classic™ Fence

Your new **SHOP FOX**® Model W1716/W1720 Aluma-Classic^m Fence is specially designed to provide many years of trouble-free service. Close attention to engineering detail, ruggedly built parts, and a rigid quality control program assure safe and reliable operation.

The Aluma-Classic™ Fence features an extruded aluminum and steel construction, utilizing a sturdy T-shape design that fits most table saws easily. The Model W1716/W1720 also features a single cam locking lever, magnified cursor lens and standard 57" rails. The Model W1720 is exactly the same as the Model W1716 except it features 79" extruded aluminum rails for wide panel cutting up to 50" right of the blade.

For more features and details, refer to the **Specifications** sub-section in this manual.

Woodstock International, Inc. is committed to customer satisfaction in providing this manual. It is our intent to include all the information necessary for safety, ease of assembly, practical use and durability of this product.

If you need the latest edition of this manual, you can download it from http://www.shopfox.biz. If you still have questions after reading the latest manual, or if you have comments please contact us at:

Woodstock International, Inc. Attn: Technical Support Department P.O. Box 2309 Bellingham, WA 98227

Woodstock Service and Support

We stand behind our machines! In the event that a defect is found, parts are missing or questions arise about your machine, please contact Woodstock International Service and Support at 1-360-734-3482 or send e-mail to: tech-support@shopfox.biz. Our knowledgeable staff will help you troubleshoot problems, order parts or arrange warranty returns.



Get To Know Your Fence

For proper operation it is important to know your machine and its components. Please take the time to learn the features shown in Figure 1 & 1a below.

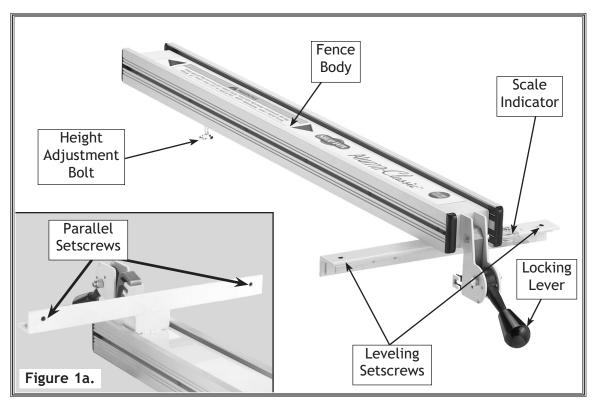


Figure 1. Fence features.

Unpacking

The SHOP FOX® W1716/W1720 has been carefully packaged for safe transporting. If you notice the fence has been damaged, please contact Woodstock International Service and Support at 1-360-734-3482 or send e-mail to: tech-support@shopfox.biz

Fence Controls

Take the time to familiarize yourself with the features of your new SHOP FOX® Model W1716/W1720 Aluma-Classic™ Fence. They will be frequently mentioned throughout the instructions in this manual. Figure 1 points out the key features and their locations.



ASSEMBLY

Inventory

The following is a description of the main components shipped with the SHOP FOX® Model W1716/W1720 Aluma-Classic™ Fence. You should lay the components out to easily identify them. The inventory for the Models W1721 and W1722 are also listed below.


If any parts are missing, find the part number in the back of this manual and contact Woodstock International, Inc. at 360-734-3482 or at: tech-support@shopfox.biz

Model W1716:

 Aluma-Classic™ Fence 	1
 Fence Handle Knob 	1
 Fence Scale Assembly 	1
• 57" Front Rail	1
• 57" Front Rail Bracket	1
• 48" Rear Rail	1
• 30" Scale	1
W1716 Hardware Bag	1


Model W1720:

A. C T. E	
 Aluma-Classic™ Fence 	1
• 79" Fence Rails	2
Rail End Caps	4
• Phillips Head Tap Screw #8 x ³ / ₈ "	4
• Legs	2
• 50" Scale	1
 Sheet Metal Wings 	3
W1720 Hardware Bag	1

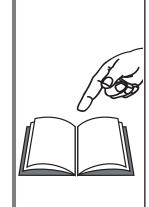

AWARNING

 READ and understand this entire instruction manual before performing any operations with your machine. Serious personal injury may occur if safety and operational information is not understood and followed.



before you do any assembly or adjustment tasks! Otherwise, serious personal injury to you or others may occur!



W1716 Installation

The SHOP FOX® W1716 Aluma-Classic™ Fence comes in a box with its own hardware bag.

W1716 Hardware Bag Contents:	Qty
 Cap Screws ⁵/₁₆"-18 x 1" 	4
 Flat Washers ⁵/₁₆" 	8
 Flat Washers ¹/₄" 	6
 Hex Nuts ⁵/₁₆"-18 	8
 Hex Bolts ¹/₄"-20 x ³/₄" 	6
 Flat Head Screws ⁵/₁₆"-18 x 1" 	4
 Hex Key 6mm 	1
Hex Key 4mm	1

To install the fence rail to the table saw, do these steps:

- Install the rear rail bracket (long angle iron) to the back side of the table (Figure 2), with the four 5/16" cap screws. The holes in the extension wings are not threaded and require 5/16" nuts and washers to secure them.
- 2. Install the front fence rail bracket.
 - If your table saw has cast iron extension tables, install the front rail bracket to the main table with two 5/16"-18 x 1" flat head screws, washers and hex nuts, as shown in Figure 3.
 - If your table saw has sheet metal extension tables, install the front bracket to the main table with two 5/16"-18 x 1" flat head screws, washers and hex nuts. Also, secure the front rail bracket to each extension table (Figure 3) with a 5/16"-18 x 1" flat head screw, washer and hex nut.

If the extension tables do not have mounting holes, or if the holes in the front fence rail bracket and extension tables do not align, drill ⁵/₁₆" holes into the extension tables.

3. Align the front rail (rectangular tubing) threaded holes over the front rail bracket holes and secure it in place with the provided six ¹/₄"-20 x ³/₄" hex bolts and flat washers, as shown in **Figure 4**.

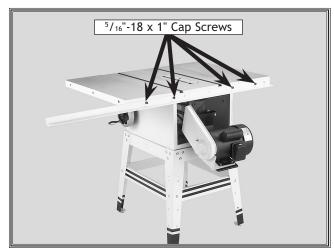


Figure 2. Rear fence rail bracket.

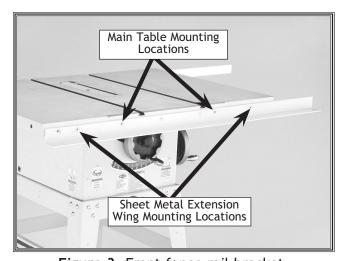


Figure 3. Front fence rail bracket.



Figure 4. Installing fence tubing.



To install the rip fence to the table saw, do these steps:

- 1. Thread the handle knob onto the fence locking handle.
- 2. Make sure the handle is in the unlocked "UP" position before placing the fence on the rails.
- 3. Check to see that the fence clears the table surface throughout its range of travel, and increase or decrease the height between the fence and table by adjusting the bolt shown in **Figure 5**.
- 4. Install the clear scale indicator to the right of the fence with the #10-24 x ³/₈" Phillips head screws and #10 washers (Figure 6).

W1720 Installation

The **SHOP FOX**® W1720 Aluma-Classic[™] Fence with 79" rails mounts to most table saws. **Figure 7** shows the inventory for the W1720 (Fence not shown).

W1720 Hardware Bag Contents:	Qty
 Flat Washer ¹/₄" 	8
 T-Bolt M6-1 x 30 	8
Hex Nut M6-1	8
 Flat Washer ⁵/₁₆" 	10
 T-Bolt ⁵/₁₆"-18 x ³/₄" 	10
 Hex Nut ⁵/₁₆"-18 	10

To install the W1720 fence rails to the table saw, do these steps:

- 1. Remove the fence, the standard rails, and the blade guard that came with the table saw, if they are installed.
- 2. In the front and back edge of the table, insert eight M6-1.0 x 30 T-bolts (four on each side) through the larger threaded holes, and install the flat washers and nuts on each bolt. See **Figure 8**.

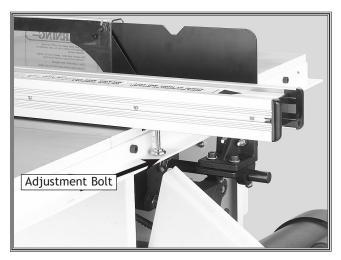


Figure 5. Adjustment bolt.

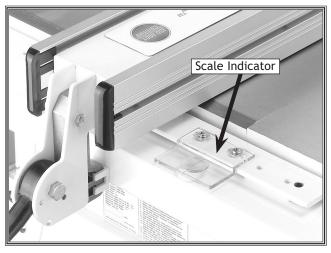


Figure 6. Scale indicator.



Figure 7. Extension rail inventory.



- 3. Insert two 5/16"-18 x 3/4" T-bolts in the right table wing, and two into the edge of the left table wing, and install the flat washers and nuts on each bolt. See Figure 8.
- 4. Tighten all nuts until there is a gap of approximately $\frac{3}{16}$ " to $\frac{1}{4}$ " between the T-bolt and the table and wing edges.
- **5.** Slide the extension rail over the T-bolts as shown in **Figure 1** until the rail is flush with the end edge of the left table wing.
- 6. Tighten all hex nuts.
- 7. On each leg flange fasten two 5/16"-18 x 3/4" T-bolts, flat washers, and the nuts; then slide the legs onto the rails as shown in Figure 9.
- Tighten the hex nuts to secure the legs to the rails, and secure the rail end caps with the Phillips head screws.
- 9. Insert two ⁵/₁₆"-18 x ³/₄" T-bolts into the start switch mounting slot (see **Figure 8**), and position the start switch mounting bracket to the underside of the rail, and secure it with the washers and nuts.
- **10.** Install fence, and adjust rails to fine-tune the mounting alignment of the rails and legs.

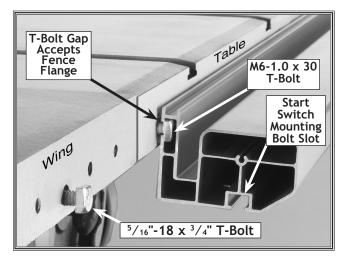


Figure 8. Front rail being slid onto T-bolts.



Figure 9. Sliding rail leg into table.



Installing Metal Extension Wings

The **SHOP FOX**® Heavy-Duty Metal Extension Wings (**Figure 10**) can be installed on the Model W1720 79" rails.

Hardware Bag Contents:	Qty
 Flat Washer ⁵/₁₆" 	12
 T-Bolt ⁵/₁₆" -18 x 1" 	12
 Hex Nut ⁵/₁₆"-18 	12

To install the W1720 extension wings, do these steps:

- Loosely install the T-bolts, washers and hex nuts into the short sides of the extension wings.
- 2. Insert the T-bolt heads into the rail T-slots as shown in Figure 11.
- 3. Slide the tables into place as shown in Figure 12. Note—The tables slide into place easily if you lift up while you slide them into place.
- 4. Place a straightedge across the top of the wings, and tighten the nuts behind the edge of the extension wings to secure the wings in place.

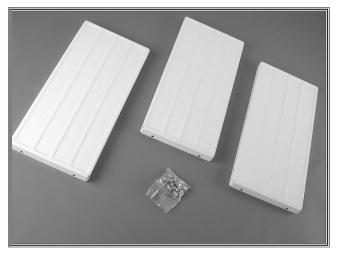


Figure 10. Extension wing box inventory.



Figure 11. T-bolt and rail T-slot.

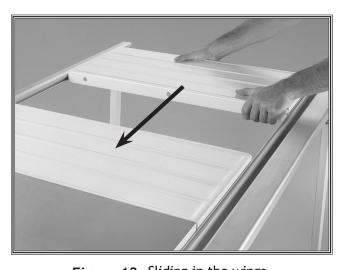


Figure 12. Sliding in the wings.



ADJUSTMENTS

The SHOP FOX® W1716/W1720 Aluma-Classic™ Fence requires little adjustment since most of the features are built in at the factory. The primary adjustment is to position the fence so it is parallel to the saw blade.

Fence Parallelism

If your table saw has been properly adjusted, the saw blade should be parallel to the miter slot. Refer to your table saw manual for the proper procedure to check and adjust the saw blade to the miter slot correctly.

To adjust the SHOP FOX® Aluma-Classic™ Fence parallel with the miter slot, do these steps:

UNPLUG THE TABLE SAW!

- 2. Align the edge of the fence with the edge of the miter slot.
- 3. Lock the fence and check the alignment between the left edge and the miter slot.
- **4.** Adjust the setscrews shown in **Figure 13** to adjust the angle of the fence. Note— *The left setscrew will move the fence left and the right setscrew will move the fence right.*
- 5. Adjust the fence until the back end falls 1/64" away from the miter slot so the workpiece clears the opposite end of the saw blade without binding. This is called "lead" (pronounced *leed*).

WARNING

KICK-BACK! DO NOT cut on the left side of the blade if the fence lead is adjusted for cutting on the right side of the blade. Readjust the lead when changing the side of the blade you are cutting on.





Figure 13. Fence adjustment setscrews.

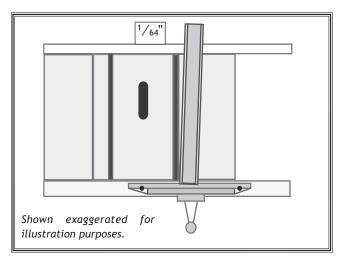


Figure 14. Lead adjustment.



Scale Installation & Adjustment

The self-adhesive scale provides fast and accurate fence positioning. It is best to install the scale after all other adjustments in this section have been made. **Figure 15** shows the scale properly installed on the front rail.

To install the scale indicator, do these steps:


- 1. UNPLUG THE TABLE SAW!
- 2. Raise the blade to its maximum height.
- **3.** Position the fence against the right side of the blade.
- **4.** Carefully place the scale along the front rail about 1/2" away from the edge and underneath the scale indicator. Note—Do not stretch the tape! This will cause inaccurate cuts.
- 5. Position the "0" mark on the scale under the cursor hairline and secure the scale to the rail.
- **6.** Adjust the cursor left or right so the hairline is directly over the "0" mark on the scale.
- **7.** Make a test cut then measure the thickness of your test board.
- 8. Fine tune the hairline indicator to correspond with the actual test board thickness. This method accounts for any vibration or wobble that may be present in the spinning blade.



Figure 15. Scale installed on front rail.



W1716 SHOP FOX® Aluma-Classic™ Fence

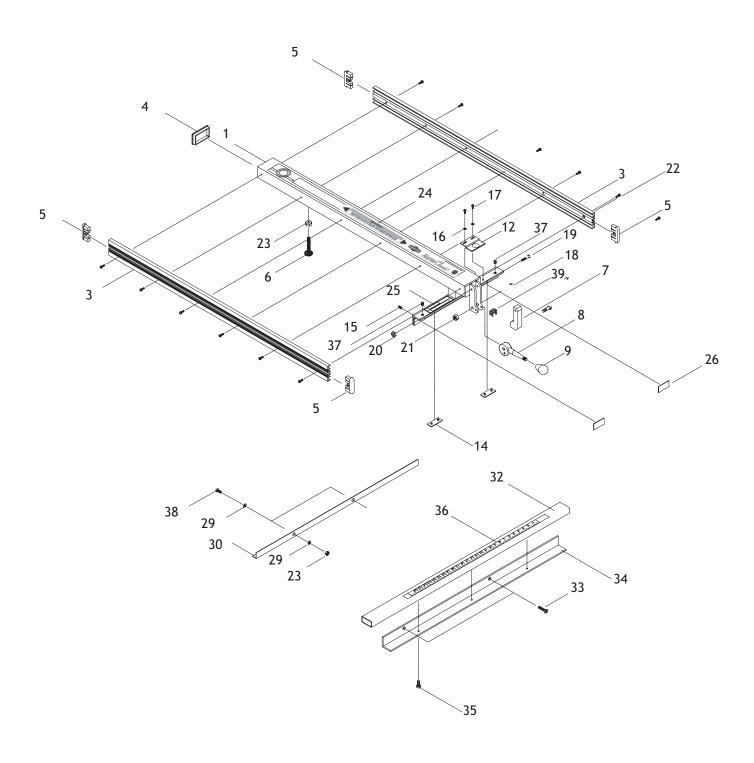




W1716 SHOP FOX® Aluma-Classic™ Fence

REF	PART #	DESCRIPTION
1	X1716001	FENCE BODY ASSEMBLY
3	X1716003	FENCE SIDEBOARD
4	X1716004	FENCE PLUG
5	X1716005	FENCE SIDEBOARD CAP
6	X1716006	ADJUSTMENT BOLT 5/16"-18
7	X1716007	CLAMP
8	X1716008	HANDLE
9	X1716009	FEMALE KNOB
12	X1716012	CLEAR INDICATOR
14	X1716014	SLIDER 19 X 50 X 2T
15	XPSS05	SETSCREW 5/16"-18 X 1/4"
16	XPW03	FLAT WASHER #10
17	XPS06	PHLP HD SCR 10-24 X 3/8"
18	XPB25	HEX BOLT 3/8"-16 X 13/4"
19	PB88	HEX BOLT 1/4"-20 X 13/4"
20	XPLN02	LOCK NUT 1/4"-20
21	XPLN01	LOCK NUT 3/8"-16
22	XPS24	PHLP HD SCR 8-32 X 3/8"
23	XPN02	HEX NUT 5/16"-18
24	X1716024	ALUMA-CLASSIC™LABEL
25	X1716025	WARNING LABEL (SHORT)
26	X1716026	SLIDER 19 X 50 X 1.2T
29	XPW07	FLAT WASHER 5/16"
30	X1716030	REAR RAIL
32	X1716032	FRONT RAIL
33	XPFH25	FLAT HD SCR 5/16"-18 X 1
34	X1716033	FRONT RAIL BRACKET
35	XPB05	HEX BOLT 1/4"-20 X 3/4"
36	X1716036	SCALE 30"
37	XPSS05	SETSCREW ⁵ / ₁₆ "-18 X ¹ / ₄ "
38	XPSB03	CAP SCREW 5/16"-18 X 1
39	X1716039	CLAMP PLUG



W1720 SHOP FOX® Aluma-Classic™ Fence

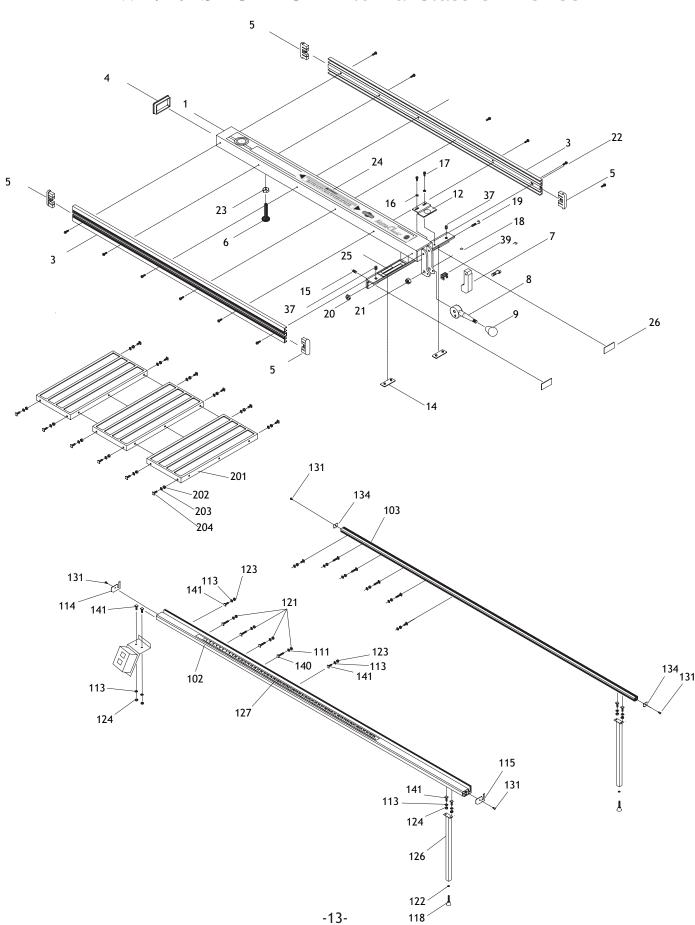



W1720 SHOP FOX® Aluma-Classic™ Fence

REF	PART #	DESCRIPTION
1	X1716001	FENCE BODY ASSEMBLY
3	X1716003	FENCE SIDEBOARD
4	X1716004	FENCE PLUG
5	X1716005	FENCE SIDEBOARD CAP
6	X1716006	ADJUSTMENT BOLT 5/16"-18
7	X1716007	CLAMP
8	X1716008	HANDLE
9	X1716009	FEMALE KNOB
12	X1716012	CLEAR INDICATOR
14	X1716014	SLIDER 19 X 50 X 2T
15	XPSS05	SETSCREW ⁵ / ₁₆ "-18 X ¹ / ₄ "
16	XPW03	FLAT WASHER #10
17	XPS06	PHLP HD SCR 10-24 X 3/8"
18	XPB25	HEX BOLT ³ / ₈ "-16 X 1 ³ / ₄ "
19	XPB119	HEX BOLT 1/4"-20 X 13/4"
20	XPLN02	LOCK NUT 1/4"-20
21	XPLN01	LOCK NUT 3/8"-16
22	XPS24	PHLP HD SCR 8-32 X 3/8"
24	X1716024	ALUMA-CLASSIC™LABEL
25	X1716025	WARNING LABEL (SHORT)
26	X1716026	SLIDER 19 X 50 X 1.2T
37	XPSS05	SETSCREW 5/16"-18 X 1/4"

REF	PART #	DESCRIPTION	
39	X1716039	CLAMP PLUG	
102	X1721002	ALUMINUM FRONT RAIL	
103	X1721003	ALUMINUM REAR RAIL	
111	XPW03M	FLAT WASHER 6MM	
113	XPW07	FLAT WASHER 5/16"	
114	X1721014	FRONT RAIL CAP (L)	
115	X1721015	FRONT RAIL CAP (R)	
118	X1721018	RUBBER FOOT BOLT	
121	XPN01M	HEX NUT M6-1	
122	XPN08	HEX NUT 3/8"-16	
123	XPN02	HEX NUT ⁵ / ₁₆ "-18	
124	XPN02	HEX NUT 5/16"-18	
126	X1721026	LEG (LONG)	
127	X1721027	LENGTH SCALE 50"	
131	XPHTEK7	SELF TAP SCREW #8 X 3/8"	
134	X1721034	REAR RAIL CAP	
140	X1721040	SQUARE BOLT M6-1 X 30	
141	X1721041	SQUARE BOLT 5/16"-18 X 3/4"	
201	X1722001	METAL WING	
202	XPN02	HEX NUT 5/16"-18	
203	XPW07	FLAT WASHER 5/16"	
204	X1721041	SQUARE BOLT 5/16"-18 X 3/4"	

CUT ALONG DOTTED LINE

WARRANTY CARD

itv	et				Zip
	e Number				
IOD	EL #		Seria	l #	
he fo	ollowing information is given on a v	oluntary basis and is strictly confic	lential.		
	Where did you purchase your SHOP	PFOX® machine?	9. 10.	How many SHOP FOX® machines What stationary woodworking tool	•
	How did you first learn about us?			Air Compressor Band Saw	Panel Saw Planer
	Advertisement	Friend		Drill Press	Power Feeder
	Mail order Catalog	Local Store		Drum Sander	Radial Arm Saw
	World Wide Web Site			Dust Collector	Shaper
	world wide web site			Horizontal Boring Machine	Spindle Sander
	0.1			Jointer	Table Saw
	Other				Vacuum Veneer Press
				Lathe	
	Which of the following magazines d	o you subscribe to.		Mortiser	Wide Belt Sander
				Other	
	American Woodworker	Today's Homeowner			
	Cabinetmaker	WOOD	11.	Which benchtop tools do you own	Check all that apply.
	Family Handyman	Wooden Boat			
	Fine Homebuilding	Woodshop News		1" x 42" Belt Sander	6" - 8" Grinder
	Fine Woodworking	Woodsmith		5" - 8" Drill Press	Mini Lathe
	Home Handyman	Woodwork		8" Table Saw	10" - 12" Thickness Plan
	Journal of Light Construction	Woodworker		8" - 10" Bandsaw	Scroll Saw
				Disc/Belt Sander	Spindle/Belt Sander
	Old House Journal	Woodworker's Journal		Mini Jointer	
	Popular Mechanics	Workbench		Other	
	Popular Science	American How-To			
	Popular Woodworking Other		12.	Which portable/hand held powe apply.	r tools do you own? Check a
	Which of the following woodworking	g/remodeling shows do you watch?		Belt Sander	Orbital Sander
				Biscuit Joiner	Palm Sander
				Circular Saw	Portable Planer
	Backyard America	The New Yankee Workshop		Detail Sander	Saber Saw
	Home Time	This Old House		Drill/Driver	Reciprocating Saw
	The American Woodworker	Woodwright's Shop		Miter Saw	Router
	Other			Other	
	What is your annual household inco	me?	13.	What machines/supplies would yo	u like to see?
			15.	What machines/ supplies would yo	u tire to see:
	\$20,000-\$29,999	\$60,000-\$69,999			
	\$30,000-\$39,999	\$70,000-\$79,999			
	\$40,000-\$49,999	\$80,000-\$89,999			
	\$50,000-\$59,999	\$90,000 +			
	What is your age group?		14.	What new accessories would you l	ike Woodstock International to
	·) · · · · · · · · · · · · · · · · · ·				
	20-29	50-59			
	30-39	60-69	15.	Do you think your purchase repres	ents good value?
	40-49	70 +			
		rker?		Yes	No
	How long have you been a weed-	DEL:	47	Would you recommend SHOP FO	è products to a friend?
	How long have you been a woodwor		16.		
	How long have you been a woodword0 - 2 Years	8 - 20 Years	16.		
			16.	Yes	No
	0 - 2 Years	8 - 20 Years 20+ Years			
	0 - 2 Years 2 - 8 Years How would you rank your woodwork	8 - 20 Years 20+ Years king skills?	17.	Yes Comments:	
	0 - 2 Years 2 - 8 Years	8 - 20 Years 20+ Years			

		Place Stamp Here
SHOP FOX		
WOODSTOCK INTERNATIONAL, INC. P.O. BOX 2309 BELLINGHAM, WA 98227-2309		
	الماملسالسلماسال	ııl

FOLD ALONG DOTTED LINE _____

FOLD ALONG DOTTED LINE