



USB 2.0 4 PORT HUB RHUB200

User Manual




Features

- Fully compliant with USB2.0 and USB 1.1
- Specification Support transfer rate of 480Mb/s、 12Mb/s、 1.5Mb/s
- Compliant with EHCI/UHCI/OHCI
- Fully Plug & Play and Hot Swapping support
- Bus Powered, work without any external power
- 5 LED indicators to indicate POWER ON, USB port 1, connected, USB port 2 connected, USB port 3 connected, USB port 4 connected
- Easy to take and super mini
- Lower power consumption
- EI Shining Light

Content

1. USB 2.0 HUB
2. User Manual
3. AC Adapter (Optinal)

Intruccion of appearance

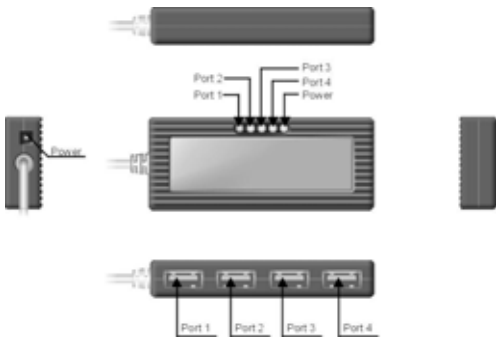

Specification:

Speed	480/12/1.5 Mbps	Power Mode	Bus/Self
Compliant	USB Spec. 2.0 / 1.1	Cable Length(M)	60cm
Connector Downstream	USB Type A Female X 4	Dimension (L x W x H)	85x35x14
LEDs	5		

Op. temperature: 0 to 70

Weight: 55g

System Requirement


- Pentium II 300MHZ(or higher) including USB 1.1 or USB 2.0 Port
- Windows 98Se/Windows 2000/Windows Me/Windows XP/
- Mac OS X
- Above CD ROM 24x

Attention


1. Please don't sun the USB 2.0 HUB. Please don't keep the USB 2.0 HUB neighboring the electronics which is running with high current
2. Please don't disassemble and repair the USB 2.0 HUB. Keep contacting the retailer in case of assistance is needed

Hardware Connection Guide

1. Please plug USB cable connector A to USB port on Laptop/PC first

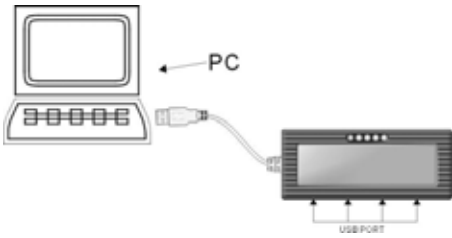

2. The USB 2.0 HUB will work well after you followed above connection guide(Please use AC Power(5V/2A) for extra power supply, if you are running USB devices which are high power consumption devices)

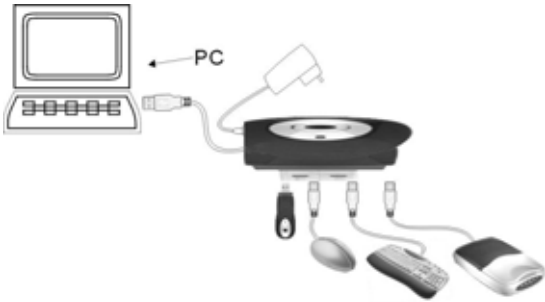

Thank you for purchasing a quality Rosewill Product.

Please register your product at : www.rosewill.com for complete warranty information and future support for your product.