

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING THIS MIRROR

DANGER— TO REDUCE THE RISK OF ELECTRIC SHOCK: ALWAYS UNPLUG THIS MIRROR FROM THE ELECTRICAL OUTLET BEFORE CLEANING.

WARNING— TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

1. Unplug from outlet before putting on or taking off parts.
2. This mirror should not be used by or near children or individuals with certain disabilities.
3. Use this mirror only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this mirror if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the mirror to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert an object into any opening.

7. Do not use outdoors.
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
9. To disconnect, turn all controls to the off position, then remove plug from outlet.
10. Be sure mirror is not in a position where it can reflect sunlight; reflected sunlight can cause fire.
11. Do not use on a soft surface such as a bed, where openings may be blocked.
12. Touch mirror base until light shuts off, allow unit to cool and unplug cord before replacing light bulbs.
13. Do not place or store mirror where it can fall or be pulled into a tub or sink.
14. If mirror falls into water, unplug it immediately. Do not reach into the water.
15. Never use while sleeping.
16. Do not use bulb greater than 30 watts. Use in any 120 volt, 60 hertz AC electric outlet (ordinary house current). Do not use it in any other electrical outlet.
17. To protect against electrical hazards, do not use while bathing or in the shower.
18. Unplug the mirror from outlet before cleaning. Do not leave mirror unattended when it is plugged in.

FOR HOUSEHOLD USE ONLY

SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

Wall Mount Mirror

1. Remove mounting bracket from base or mirror. Leave long screws in bracket.
2. Using $\frac{3}{8}$ " drill size, drill two holes in wall the same distance apart as two opposite slots in bracket. Screw into wall stud if possible. If drilling into stud, use $\frac{1}{8}$ " drill size. Otherwise insert two wall anchors in holes.

CAUTION: Do not drill into electrical wiring through wall. Check with electrician if necessary.

3. Screw bracket onto wall, into the anchors.
4. Attach mirror to bracket by placing long screws through the two holes in mirror's base. Secure with knurled nuts. Cord should be facing floor.

OPERATING INSTRUCTIONS

To reduce the risk of electric shock, this furnishing has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

1. Your lighted makeup mirror features a 1x and 5x magnification for the 8" mirror head.
2. Your lighted makeup mirror will adjust to many different angles. Simply tilt the neck or head backward or forward to adjust to the desired angle. Your mirror will also swivel so that you can use either the normal, flat mirror or the magnifying mirror located on the opposite side.
3. Plug into any standard wall outlet (120 Volt AC). Turn the rotary switch clockwise to the On position.
4. After use, turn switch clockwise again to the Off position.

TO REPLACE BULB

CAUTION: TURN OFF POWER AND UNPLUG. ALLOW TO COOL AT LEAST 3 MINUTES BEFORE REPLACING BULB.

NOTE: Do not use a bulb greater than 30 watts. Contact a Conair service center at 1-800-3 CONAIR for replacement bulb information (ask for replacement bulb RP34). Bulbs are \$1.50 each including shipping and handling.

1. Unscrew screws from opposite sides of the mirror housing near the rotating hinges (Fig. 1).
2. Carefully lift off the top half of the housing from the bottom half that is affixed to the arm.
3. Unscrew the old bulb and replace with the new bulb (Fig. 2).
4. Carefully replace the top housing half after locating and aligning the screw holes to the bottom half. If the holes don't line up, turn top half of mirror 180°.
5. Insert two screws back into screw holes and tighten with screw driver. Do not over-tighten.

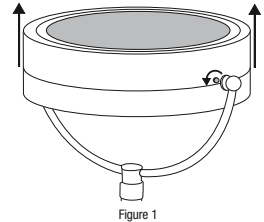 


Figure 1

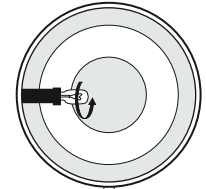 


Figure 2

MAINTENANCE

Your lighted mirror is designed for household use and is virtually maintenance-free. No lubrication is needed.

If cleaning becomes necessary, disconnect the appliance from the power source, allow to cool, and wipe exterior with a damp cloth. Clean mirror surfaces with a glass cleaner. To protect against electrical hazards, do not light until you are certain mirror is completely dry.

If any abnormal condition occurs, unplug the lighted mirror, allow it to cool, and return it to an authorized service center for repair.

 
Handle cord carefully for to prolong its life; do not jerk or strain at plug connections, or wrap cord around mirror for storage. This could cause damage to the cord and the mirror could short circuit. To store mirror, coil cord loosely.

STORAGE

Disconnect from electrical outlet. BE SURE DIRECT SUNLIGHT DOES NOT STRIKE MAGNIFYING SIDE OF MIRROR WHEN LEFT UNATTENDED; REFLECTED SUNLIGHT CAN CAUSE FIRE. Allow to cool to room temperature before storing. Place in cool, dry area out of reach of children, where it will not be damaged.

**WARNING:
IF YOU THINK THE
POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

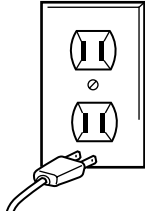

Everybody knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

Public Service AD from Association of Home Appliance
Manufacturers and Underwriters Laboratories, Inc.

LIMITED ONE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

©2005 Conair Corporation

Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

06PM8037

Illuminated Touch Control Mirror



Use and Care Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®
Model BE87CR

IB-7295