
 
## AWARNING: To reduce the risk of serious injury, read these warnings before using the scholer.

- L. Read and follow all instructions.
- It is the owner's responsibility at to ensure that all users of the according are adequately informed of all warnings and instructions.
- 3. Inspect the scooter and tighten or replace any loose or missing parts before each use. In addition, make sure that the handles and the stem are securely locked in position, the wheels rotate freely, and the wheel bolts are secure.
- A responsible adult must always supervise children and young riders.
- 5. Always wear protective equipment, including a helmet, knee pads, wrist guards, elbow pads, and closed-tied shoes, when using the scooter.
- Never ride on streets, roadways, or driveways that enter vehicle traffic routes.
- Never ride at night or when visibillity is poor.
- Never fide on wet or uneven curtaces.
- Never low a rider with a bicycle, motorcycle, or vehicle.
- Locate the warning decal on the underside of the scooter and read the warnings before using the scooter.
- Save this User's Manual for future reference.

# vector

### **User's Manual**

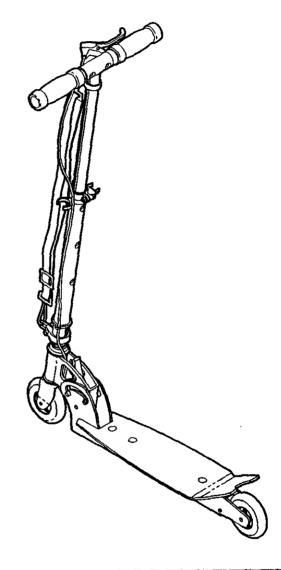




#### Setup

- 1. Firmly press the thumb tab and pivot the upright up until it locks in a nearly vertical position.
- 2. Insert the handles into the stem until the lock pins are visible in the holes in the stem.
- 3. Open the quick-release lever. Depress the lock pin on the stem and slide the stem up until the lock pin is visible in one of the three holes in the upright. When the stem is at the desired height, close the quick-release lever so that it is snug against the upright. If the quick-release is not snug, see ADJUSTING THE QUICK-RELEASE on the back of this user's manual.


Before using the scooter, make sure that the scooter is set up as described and that all parts are securely tightened.

The decal shown at the right has been placed on the scooter. If the decal is missing, or if it is not legible, please call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time, to order a free replacement decal. Apply the replacement decal to the location shown.

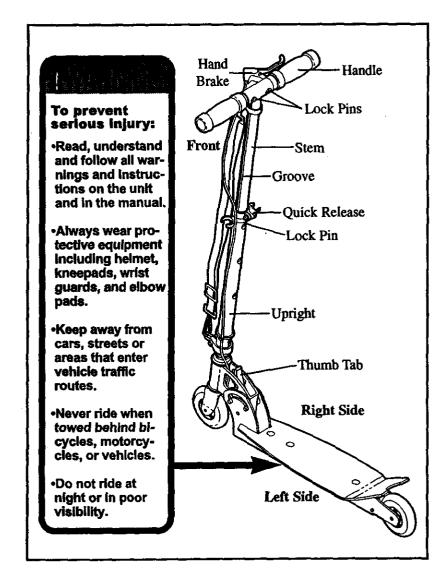

#### **Storage**


- Open the quick-release lever. Depress the lock pin on the stem and slide the stem down into the upright. Close the quickrelease lever.
- 2. Depress the lock pins and remove the handles from the stem. Press the handles into the storage clip on the upright.
- 3. Pull the thumb tab and pivot the upright down until it locks in the horizontal position.

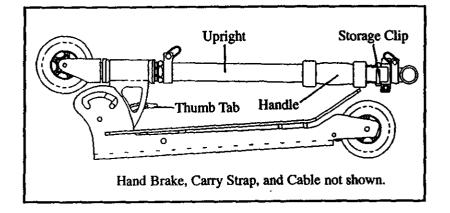

#### No. Qty. Description

- 1 1 Deck
- 2 1 Head Tube
- 3 1 Fork
- 4 1 Upright
- 5 1 Stem
- 6 2 Handle
- 7 2 Foam Pad
- 8 2 Handle Cap
- 9 3 Lock Pin
- 10 1 Handle Cord
- 11 1 Ouick Release
- 12 1 Upright Clamp w/Ring
- 13 1 Bearing Nut
- 14 1 Bearing Cap
- 15 2 Bearing
- 16 2 Bearing Race
- 17 2 Bushing
- 18 1 Pivot Union Bolt Set
- 19 1 Front Union Bolt Set
- 20 2 Rear Union Bolt Set
- 21 2 Wheel
- 22 2 Rear Wheel Spacer
- 23 1 Brake Spring
- 24 1 Brake
- 25 1 Head Tube Spring
- 26 1 Storage Clip
- 27 2 Front Wheel Spacer
- 28 1 Lock Pin
- 29 1 Deck Mount
- 30 1 Deck Cushion
- 31 1 Frame
- 32 4 Deck Screw
- 33 1 Cable Clip
- 34 2 Tek Screw
- 35 2 Brake Spacer
- 36 1 Mount Union Bolt Set
- 37 1 Hand Brake
- 38 1 Brake Bracket
- 39 1 Cable Bracket
- 40 1 Brake Cable
- 41 2 Flange Nut
- 42 1 Strap Clamp w/Ring
- \* 1 Carry Strap
- 1 User's Manual

Note: Specifications are subject to change without notice.

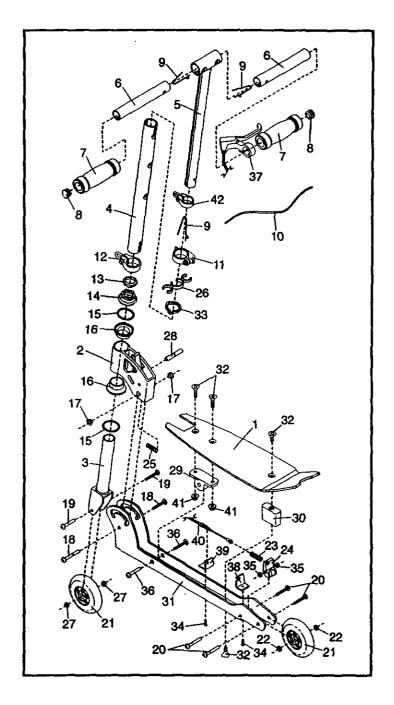

#### **Ordering Replacement Parts**

To order replacement parts, call toll-free 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). When ordering parts, please mention the model number (831.488540) and the number and description of the parts needed.

<sup>\*</sup>The user's manual and carry strap are not shown

If the quick-release doesn't hold the stem snug in place, you will need to adjust it.

Open the quick-release lever. Turn the adjustment nut clockwise one half turn while keeping the lever from turning. Close the lever. Repeat this procedure until the stem is held snug in place.

If the quick-release is too snug to close, you will need to adjust it.

While the quick-release lever is open, turn the adjustment nut counterclockwise one quarter turn while keeping the lever from turning. Close the lever. Repeat this procedure until the stem is held snug in place and the quick-release is closed.

