



13 x 11 Outsider™ Tent

Instructions apply to Part Number 9261A131

When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, do not position the door of tent into the wind.
- See owners manual for more tips.

Main Tent Poles

POLE ASSEMBLY PARTS

Part No. 9261-831


Part No. 9261-832

Rainfly Pole

Rainfly Part No. 9261-833


1 Layout & Positioning of Tent, Pole Assembly

- Layout and position tent with door facing desired direction. (illus. 1)
- Unzip door.
- Stake down tent corners, and tent sides using the rings at the end of the stake loops and the side stake loops. (illus 2) Keep the floor taut.
- Assemble frame poles by interlocking shock-corded poles. This will make two long poles.
- Insert the poles diagonally into pole sleeves. The center of the poles should cross forming an "X" in the middle of tent. (illus. 1)
- Fasten frame tie on top of tent over both poles. (illus. 1), (illus. 3)

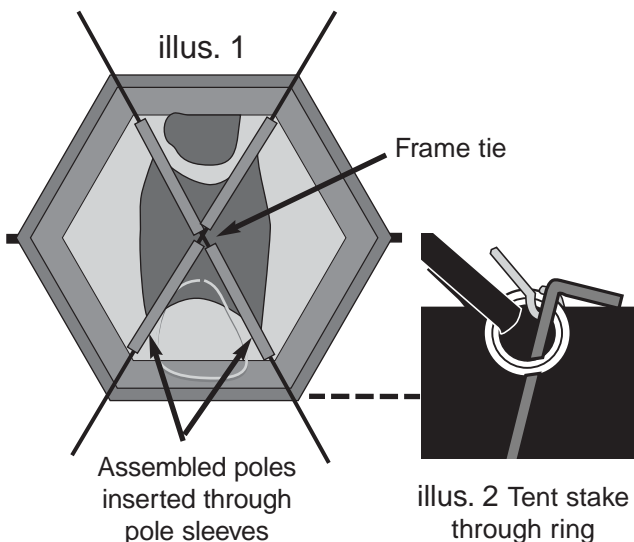


2 Connect Frame to Tent

- Insert one end of main tent pole onto pin, of pin & ring system, at tent corner. (illus. 4)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole.
- Repeat for second pole.

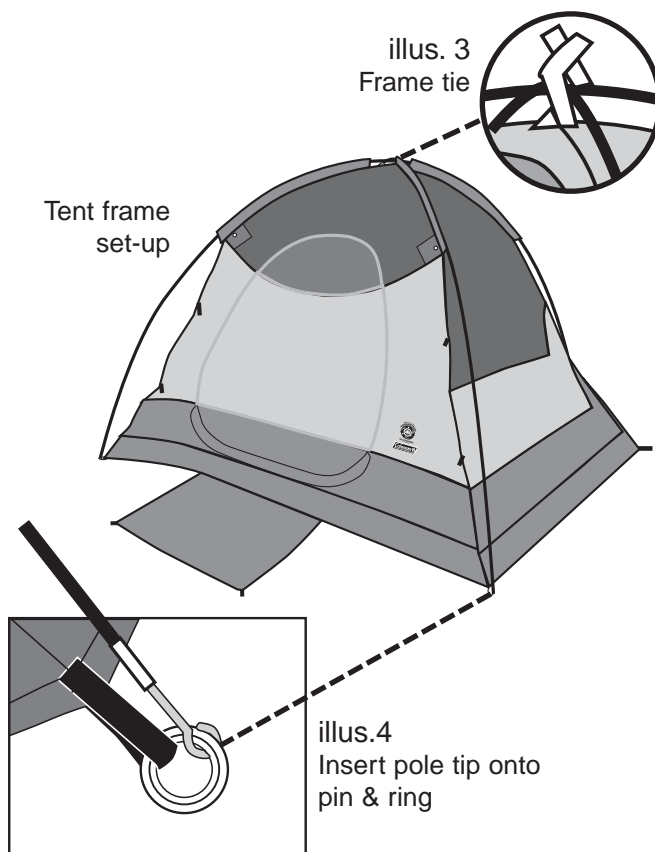


3 Attach Tent to Frame Using Frame Clips

- Attach frame clips along the edges of tent to frame poles. (illus. 5), (illus. 6)
- Make any adjustments to the tent corner stakes that are needed.
- Stake out door mat

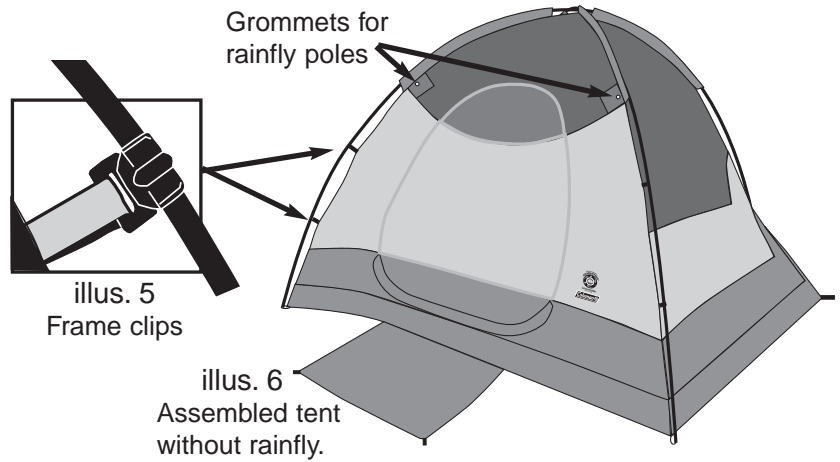

4 Attach Rainfly

- Assemble rainfly poles by interlocking shock-corded pole.
- Insert rainfly pole through pole sleeves located at the front and rear edges on the underside of rainfly. (illus. 7 & 8)
- Drape rainfly over tent frame, pole side down. Rainfly poles should be out over front door and rear window.
- Connect the four elastic loops with "S" hooks, (found at the rainfly corners) to the four rings located at the end of the stake loops at the corners of the tent.
- Insert rainfly pole into grommets on tent body. (illus. 6 & 8)
- Secure rainfly with attachments located on underside of fly.
- Connect the rainfly side to the side of the tent. (illus. 8)
- Stake out tent with 2 side and 4 corner guylines. (illus. 9)

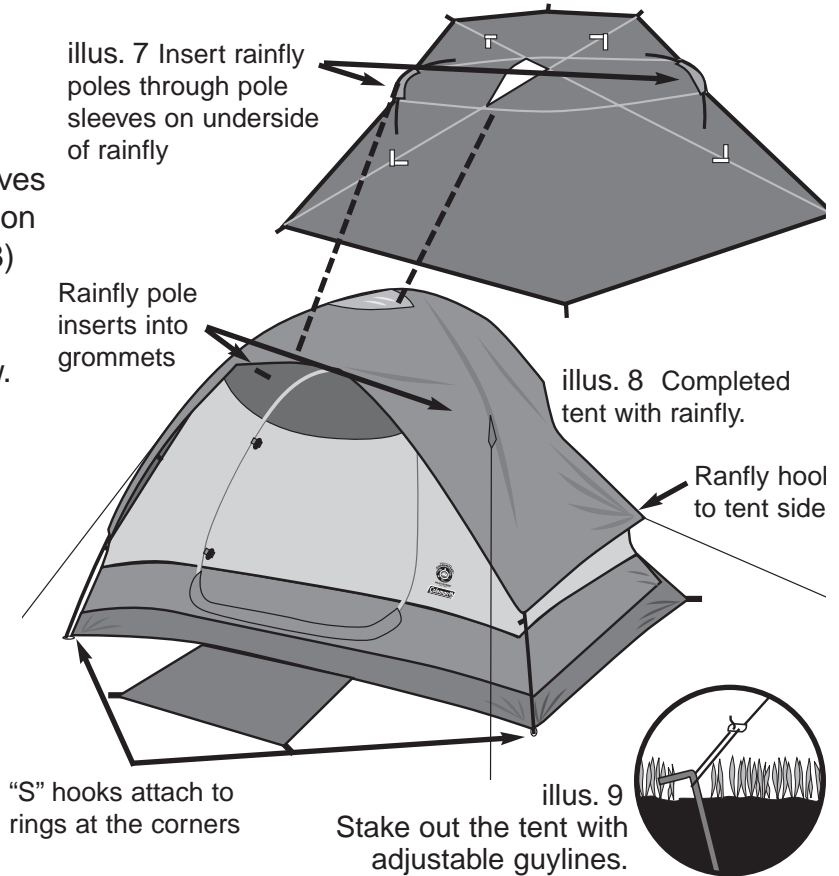

Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESCOPED TOGETHER DURING STORAGE.
- Seam sealer has not been provided with your tent. We recommend seam sealing your tent prior to camping. Seam sealer may be purchased through your local retailer or at your local sporting goods store.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.
- See owners manual for more tips.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.
3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com