


Front Panel Usage

Front panel description

The front panel:

- Displays the printer's operating status (**Printing**, **Ready to Print**, etc.).
- Alerts you to load paper, replace consumables, and clear jams.
- Enables you to access tools and information pages to help troubleshoot problems.
- Enables you to change printer settings and network settings; driver settings override the printer's front panel settings.
- Enables you to print Secure Print, Proof Print, and Saved Print jobs that you have stored on the printer's optional hard disk. For more information, see the printer driver help or the *Driver Features* section of the *Features Guide* on the **Interactive Documentation CD-ROM**.

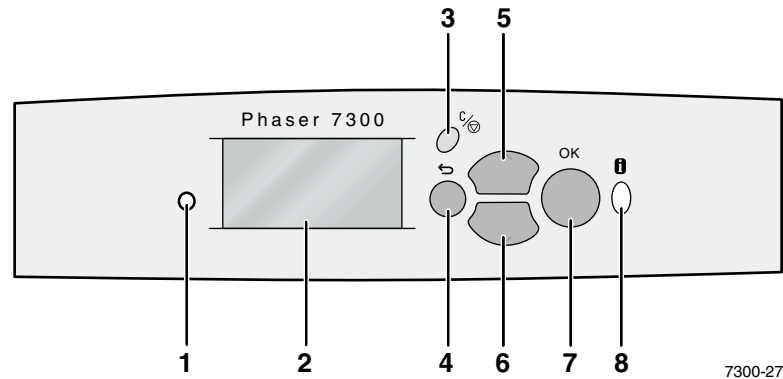

7300-27

1	Status indicator light Blinks = Printer is busy. Green = OK Yellow = Warning, continues to function. Red = Problem, stops printing.	5	Up Arrow key
2	Graphic front panel display	6	Down Arrow key
3	Cancel key	7	OK key
4	Back key	8	Information key - provides additional details.

Menu Map

For a complete list of printable pages, print the Menu Map:

1. Select **Menus** on the front panel and press the **OK** key.
2. Select **Print Menu Map** and press the **OK** key.


Accessing printable pages

Access these pages from the **Printable Pages Menu**:

1. At the front panel, scroll to the **Printable Pages Menu** using the **Down Arrow** or **Up Arrow** key and press the **OK** key.
2. Scroll to the desired printable page (such as **Paper Tips**) using the **Down Arrow** or **Up Arrow** key and press the **OK** key.

Error Messages

When there is a problem with the printer, the front panel display (1) shows the error message. Press the **i** button (2) for more information about the error message and ways to solve the problem.

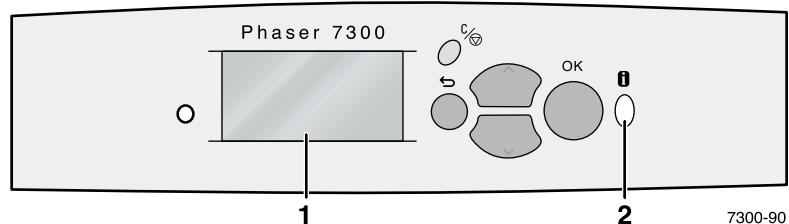

PHASER® 7300 COLOR PRINTER

Menu Map

