

**AMW 393**

**AMW 436**

**AMWR 483**

**AMW 497**

**AMW 498**

**Gebrauchsanweisung**  
Instructions for use  
**Mode d'emploi**  
Gebruiksaanwijzing  
Istruzioni per l'uso



**Brugsanvisning**  
Bruksanvisning  
**Käyttöohje**  
Manual de utilização  
Instrucciones para el uso



**Οδηγίες Χρήσης**  
Instrukcje użytkowania  
**Használati utasítás**  
Инструкция за употреба



**Návod k použití**  
Návod na použitie  
**Instrucțiuni de utilizare**  
Инструкции по эксплуатации



SENSING THE DIFFERENCE



 
## INSTALLATION



### MOUNTING THE APPLIANCE




**FOLLOW THE SUPPLIED** separate mounting instructions when installing the appliance.

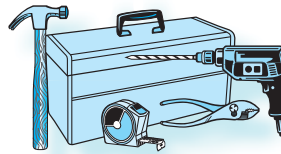

### PRIOR TO CONNECTING

**CHECK THAT THE VOLTAGE** on the rating plate corresponds to the voltage in your home.

 **DO NOT REMOVE THE MICROWAVE INLET PROTECTION PLATES** located on the side of the oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.

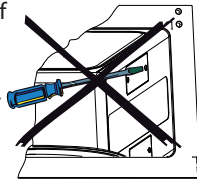

**ENSURE** the oven cavity is empty before mounting.

**ENSURE THAT THE APPLIANCE IS NOT DAMAGED.** Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.

**DO NOT OPERATE THIS APPLIANCE** if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

**DO NOT USE EXTENSION CORD:**



**IF THE POWER SUPPLY CORD IS TOO SHORT,** have a qualified electrician or serviceman install an outlet near the appliance.

### AFTER CONNECTING

**THE OVEN CAN BE OPERATED ONLY** if the oven door is firmly closed.

**THE EARTHING OF THIS APPLIANCE** is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

**The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.**



## IMPORTANT SAFETY INSTRUCTIONS



### READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

**DO NOT HEAT, OR USE FLAMMABLE MATERIALS** in or near the oven. Fumes can create a fire hazard or explosion.

**DO NOT USE YOUR MICROWAVE** oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.

**IF MATERIAL INSIDE / OUTSIDE THE OVEN SHOULD IGNITE OR SMOKE IS OBSERVED**, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.

**DO NOT OVER-COOK FOOD.** Fire could result.

**DO NOT LEAVE THE OVEN UNATTENDED**, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

**DO NOT USE** corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

**SERVICE ONLY TO BE CARRIED OUT BY A TRAINED SERVICE TECHNICIAN.** It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.

**DO NOT REMOVE ANY COVER.**



 
**ONLY ALLOW CHILDREN** to use the appliance under adult supervision and after adequate instructions have been given, so that the child is able to use the appliance in a safe way and understands the hazards of improper use.

**THIS APPLIANCE IS NOT INTENDED FOR** use by persons (including children) with reduced physical, sensory or mental capabilities, unless used under the supervision of a person responsible for their safety.

**WARNING!**

**ACCESSIBLE PARTS MAY BECOME HOT** during use, young children should be kept away.

**DO NOT USE YOUR MICROWAVE** oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.



**THE DOOR SEALS AND THE DOOR SEAL AREAS** must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.

### EGGS

**DO NOT USE YOUR MICROWAVE** oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.





## IMPORTANT PRECAUTIONS



**THIS APPLIANCE IS DESIGNED FOR DOMESTIC USE ONLY!**

**THE APPLIANCE SHOULD NOT BE OPERATED** without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

**IF YOU PRACTICE OPERATING** the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

**DO NOT USE THE CAVITY** for any storage purposes.

**REMOVE WIRE TWIST-TIES** from paper or plastic bags before placing bag in the oven.



### DEEP-FRYING

**DO NOT USE YOUR MICROWAVE** oven for deep-frying, because the oil temperature cannot be controlled.



**USE HOT PADS OR OVEN MITTS** to prevent burns, when touching containers, oven parts, and pan after cooking.

### LIQUIDS

**E.G. BEVERAGES OR WATER.** Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.



To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

### CAREFUL

**ALWAYS REFER** to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

**AFTER HEATING BABY FOOD** or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving.



This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

**Ensure the Lid and the Teat is removed before heating!**



## ACCESSORIES



### GENERAL

**THERE ARE** a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

**ENSURE THAT THE UTENSILS YOU USE** are oven proof and allow microwaves to pass through them before cooking.



**WHEN YOU PUT FOOD AND ACCESSORIES** in the microwave oven, ensure that they do not come in contact with the interior of the oven.

 
**This is especially important with accessories made of metal or metal parts.**

**IF ACCESSORIES CONTAINING METAL** comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

**ALWAYS ENSURE** that the turntable is able to turn freely before starting the oven.

### TURNTABLE SUPPORT


**USE THE TURNTABLE SUPPORT** under the Glass turntable. Never put any other utensils on the turntable support.



☞ Fit the turntable support in the oven.

### GLASS TURNTABLE

 
**USE THE GLASS TURNTABLE** with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.



☞ Place the Glass turntable on the turntable support.

### CRISP HANDLE

 **USE THE SUPPLIED SPECIAL CRISP HANDLE** to remove the hot Crisp plate from the oven.



### CRISP-PLATE

**PLACE THE FOOD DIRECTLY ON THE CRISP-PLATE.**

Always use the Glass turntable as support when using the Crisp-plate.



**DO NOT PLACE ANY UTENSILS** on the Crisp-plate since it will quickly become very hot and is likely to cause damage to the utensil.

**THE CRISP-PLATE** may be preheated before use (max. 3 min..). Always use the Crisp function when preheating the crisp-plate.



## START PROTECTION / KEY LOCK



**THIS AUTOMATIC SAFETY FUNCTION IS ACTIVATED ONE MINUTE AFTER** the oven has returned to "stand by mode". (The oven is in "stand by" when the 24-hour clock is displayed or if the clock has not been set, when the display is blank).



 
**THE DOOR MUST BE OPENED AND CLOSED** e.g. putting food into it, before the safety lock is released. Else the display will show "DOOR".

DOOR

## PAUSE OR STOP COOKING

### TO PAUSE COOKING:

**THE COOKING CAN BE PAUSED** to check, turn or stir the food by opening the door. The setting will be maintained for 10 minutes.



**IF YOU DON'T WANT TO CONTINUE COOKING:** REMOVE THE FOOD, close the door and press the STOP button



### TO CONTINUE COOKING:

**CLOSE THE DOOR** and press the Start button ONCE. The cooking is resumed from where it was paused.



**PRESSING THE START BUTTON TWICE** will increase the time by 30 seconds.

**A BEEP WILL SIGNAL** once or twice a minute for 10 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.



**NOTE:** The oven will only hold the settings for 60 seconds if the door is opened and then closed after the cooking is finished.



## COOLING DOWN

 




**WHEN A FUNCTION IS FINISHED,** the oven may carry out a cooling procedure. This is normal. After this procedure the oven switches off automatically.


**THE COOLING PROCEDURE** can be interrupted without any harm to the oven by opening the door.

## DOOR OPENING

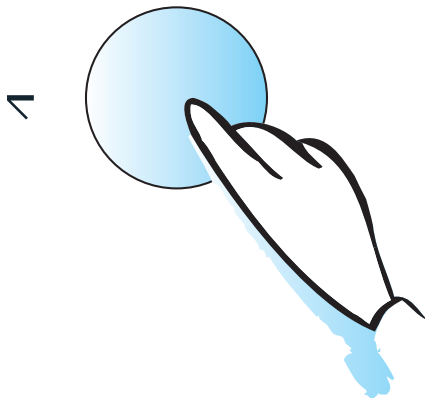**PRESS THE BUTTON TO OPEN THE DOOR.**







 **KITCHEN TIMER** 

 


**USE THIS FUNCTION** when you need a kitchen timer to measure exact time for various purposes such as cooking eggs, pasta or letting the dough rise before baking etc.

- 1 **PRESS THE +/- BUTTONS** to set the time to measure.
- 2 **PRESS THE POWER BUTTON** repeatedly to set the power to 0 W.
- 3 **PRESS THE START BUTTON.**

 **AN ACOUSTIC SIGNAL** will be heard when the timer has finished to count down. 

 **CLOCK** 




**WHEN THE APPLIANCE IS FIRST PLUGGED IN** or after a power failure, the display is blank. If the clock is not set, the display will remain blank until the cooking time is set.

- 1 **PRESS THE STOP BUTTON** (3 seconds) until the left-hand digit (hour's) flicker.
- 2 **PRESS THE +/- BUTTONS** to set the hours.
- 3 **PRESS THE START BUTTON.** (The two right hand digits (minutes) flicker).
- 4 **PRESS THE +/- BUTTONS** to set the minutes.
- 5 **PRESS THE START BUTTON AGAIN.**

**THE CLOCK IS SET** and in operation.

**NOTE:**

 **KEEP THE DOOR OPEN WHILE SETTING THE CLOCK.** This gives you 10 minutes to complete the setting of the Clock. Otherwise, each step must be accomplished within 60 seconds.

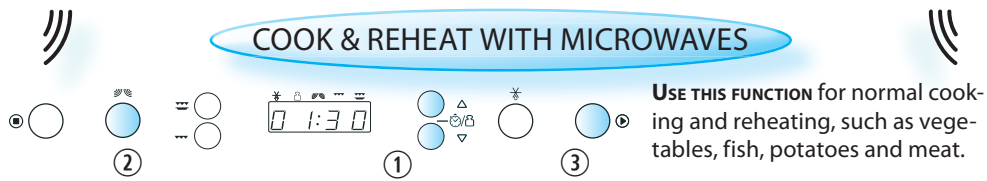

- 1 PRESS THE +/- BUTTONS to set the time.
- 2 PRESS THE POWER BUTTON repeatedly to set the power.
- 3 PRESS THE START BUTTON.

**ONCE THE COOKING PROCESS HAS BEEN STARTED:**

The time can easily be increased in 30-second steps by pressing the Start button. *Each press* increases the time with 30 seconds. You may also alter the time by pressing the +/- buttons to increase or decrease the time.

**PRESSING THE POWER BUTTON** may also change the power level. The first press will show you the current power level. Press the power button repeatedly to change power level.

POWER LEVEL

MICROWAVES ONLY	
POWER	SUGGESTED USE:
750 W	<b>REHEATING OF BEVERAGES</b> , water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power. Cooking of fish, meat, vegetables etc.
500 W	<b>MORE CAREFUL COOKING</b> e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	<b>SIMMERING STEWS</b> , melting butter.
160 W	<b>DEFROSTING</b> . Softening butter, cheeses and ice cream.
0 W	<b>SETTING</b> the standing time (when using the timer only).

 


**JET START**

**THIS FUNCTION IS USED** for quick reheating of food with a high water content such as clear soups, coffee or tea.

**1** PRESS THE **START** BUTTON.

**THIS FUNCTION AUTOMATICALLY STARTS** with maximum microwave power level and the cooking time set to 30 seconds. *Each additional press* increases the time with 30 seconds. You may also alter the time by pressing the +/- buttons to increase or decrease the time after the function has started.

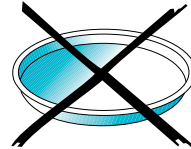

**MANUAL DEFROST**

**FOLLOW THE PROCEDURE** for "cook & reheat with microwaves" and choose power level 160 W when defrosting manually.

**CHECK AND INSPECT THE FOOD REGULARLY.** Experience will give you the times needed for various amounts.

**FROZEN FOOD IN PLASTIC BAGS,** plastic films or cardboard packages can be placed directly in the oven as long as the package has no metal parts (e.g. metal twist ties).

**TURN LARGE JOINTS** halfway through the defrosting process.

**THE SHAPE OF THE PACKAGE** alters the defrosting time. Shallow packets defrost more quickly than a deep block.



 
**BOILED FOOD, STEWS AND MEAT SAUCES** defrost better if stirred during defrosting time.

 
**WHEN DEFROSTING** it is better to under-thaw the food slightly and allow the process to finish during standing time.

**SEPARATE PIECES** as they begin to defrost. Individual slices defrost more easily.

**STANDING TIME AFTER DEFROSTING ALWAYS IMPROVES** the result since the temperature will then be evenly distributed throughout the food.

**SHIELD AREAS OF FOOD** with small pieces of aluminum foil if they start to become warm (e.g. chicken legs and wing tips).




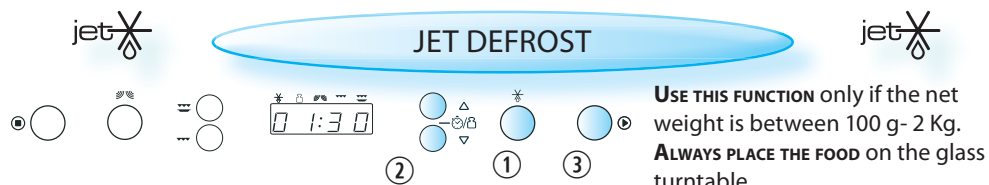

- 1 PRESS THE JET DEFROST BUTTON.
- 2 PRESS THE + / - BUTTONS to set the weight of the food.
- 3 PRESS THE START BUTTON.

**MIDWAY THROUGH THE DEFROSTING PROCESS** the oven stops and prompts you to *TURN FOOD*.

 - 🌀 Open the door.
- 🌀 Turn the food.
- 🌀 Close the door and restart by pressing the Start button.

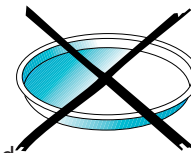

**NOTE:** The oven continues automatically after 2 min. if the food hasn't been turned. The defrosting time will be longer in this case.

#### WEIGHT:

**THIS FUNCTION NEEDS TO KNOW** the net weight of the food. The oven will then automatically calculate the needed time to finish the procedure.

 


**IF THE WEIGHT IS LESSER OR GREATER THAN RECOMMENDED WEIGHT:** Follow the procedure for "Cook & Reheat with microwaves" and choose 160 W when defrosting.


#### FROZEN FOODS:

**IF THE FOOD IS WARMER** than deep-freeze temperature (-18°C), choose lower weight of the food.

**IF THE FOOD IS COLDER** than deep-freeze temperature (-18°C), choose higher weight of the food.



FOOD		HINTS
	<b>MEAT</b> (100g - 2.0Kg)	Minced meat, cutlets, steaks or roasts. <b>TURN FOOD</b> when oven prompts.
	<b>POULTRY</b> (100g - 2.0Kg)	Chicken whole, pieces or fillets. <b>TURN FOOD</b> when oven prompts.
	<b>FISH</b> (100g - 2.0Kg)	Whole, steaks or fillets. <b>TURN FOOD</b> when oven prompts.
<b>FOR FOOD NOT LISTED IN THIS TABLE</b> and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Cook and reheat with microwaves" and choose 160 W when defrosting.		

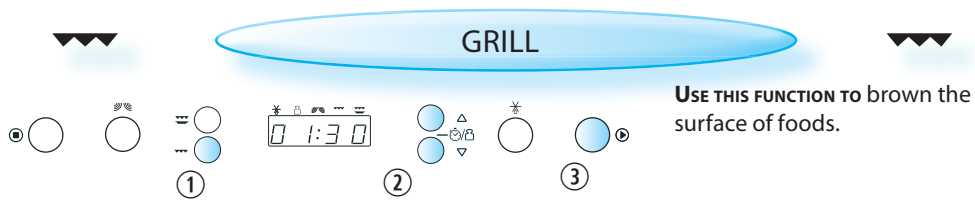 

- 1 **PRESS THE GRILL BUTTON.**
- 2 **PRESS THE +/- BUTTONS** to set the time.
- 3 **PRESS THE START BUTTON.**


**DO NOT LEAVE THE OVEN DOOR OPEN** for long periods when the Grill is in operation, as this will cause a drop in temperature.

**NOTE:**

 **PRESSING THE GRILL BUTTON** during cooking switches the Grill element on and off. The timer will continue to count down when the Grill element is turned off.

**ENSURE THAT THE UTENSILS** used are heat resistant and ovenproof before grilling with them.

**DO NOT USE PLASTIC** utensils when grilling. They will melt. Items of wood or paper are not suitable either.

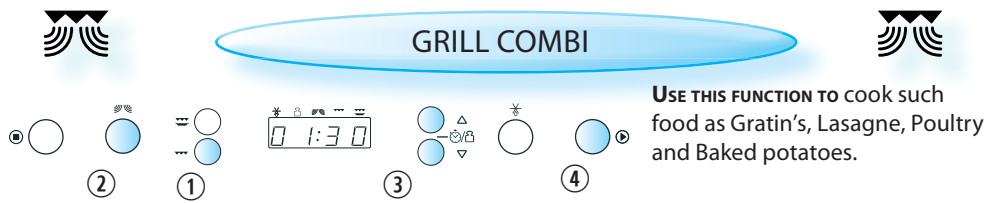

- 1 PRESS THE **GRILL** BUTTON.
- 2 PRESS THE **POWER** BUTTON to set the microwave power.
- 3 PRESS THE **+/-** BUTTONS to set the time.
- 4 PRESS THE **START** BUTTON.


**DURING OPERATION** you can switch the Grill element on/off by pressing the Grill button.


**THE MAX. POSSIBLE MICROWAVE POWER LEVEL** when using the Grill is limited to a factory-preset level.

It is possible to switch the microwaves off by reducing the microwave power level to 0 W. When 0 W is reached, the oven switches to Grill only mode.

#### POWER LEVEL

  GRILL COMBI	
POWER	SUGGESTED USE:
350 - 500 W	<b>COOKING</b> Poultry, Lasagne & Vegetables
160 - 350 W	<b>COOKING</b> Fish & frozen gratins
160 W	<b>COOKING</b> Meat
0 W	<b>BROWNING</b> only during cooking

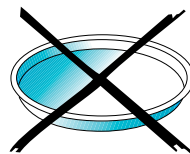

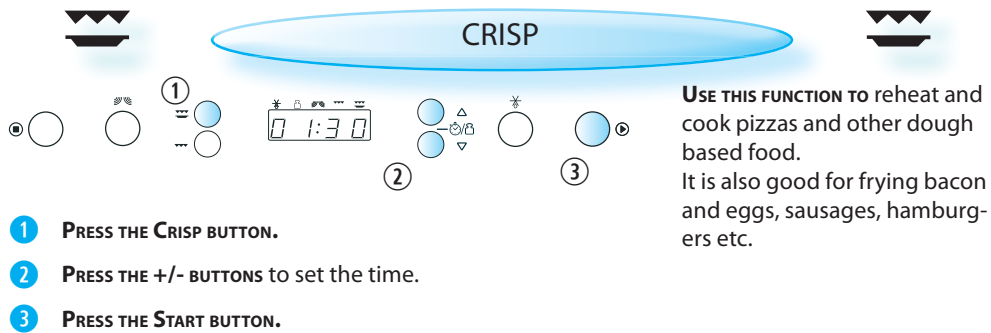

**IT IS NOT POSSIBLE TO CHANGE OR SWITCH**, the Power level or Grill, on/off, when using the Crisp function.

**THE OVEN AUTOMATICALLY** use Microwaves and Grill in order to heat the Crisp-plate. This way the Crisp-plate will rapidly reach its working temperature and begin to brown and crisp the food.

 
**ENSURE** that the Crisp-plate is correctly placed in the middle of the Glass turntable.

**THE OVEN AND THE CRISP-PLATE** become very hot when using this function.

 
**DO NOT PLACE THE HOT CRISP-PLATE** on any surface susceptible to heat.

**BE CAREFUL, NOT TO TOUCH** the ceiling beneath the Grill element.

**USE OVEN MITTENS** or **the special Crisp handle** supplied when removing the hot Crisp-plate.

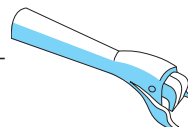


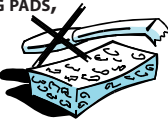 
**ONLY USE** the supplied Crisp plate with this function. Other available Crisp plates on the market will not give the correct result when using this function.




## MAINTENANCE & CLEANING


**CLEANING IS THE ONLY MAINTENANCE** normally required.

**FAILURE TO MAINTAIN THE OVEN** in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.


 **DO NOT USE METAL SCOURING PADS, ABRASIVE CLEANSERS, steel-wool pads, gritty wash-cloths, etc. which can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel. Do NOT SPRAY directly on the oven.** 

**AT REGULAR INTERVALS**, especially if spills have occurred, remove the turntable, the turntable support and wipe the base of the oven clean. 


**THIS OVEN IS DESIGNED** to operate with the turntable in place.

 **DO NOT** operate the microwave oven when the turntable has been removed for cleaning.

**USE A MILD DETERGENT**, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

 **DO NOT ALLOW GREASE** or food particles to build up around the door.

**FOR STUBBORN STAINS**, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

 **DO NOT USE STEAM CLEANING APPLIANCES** when cleaning your microwave oven.

**ADDING SOME LEMON JUICE** to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.

**THE GRILL ELEMENT** does not need cleaning since the intense heat will burn off any splashes, but the cavity ceiling below it may need regular cleaning. This should be done with warm water, detergent and a sponge. If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes.

 
**DISHWASHER SAFE:**

**TURNTABLE SUPPORT.** 


**GLASS TURNTABLE.** 


**CRISP HANDLE.** 

**CAREFUL CLEANING:**

**THE CRISP-PLATE** should be cleaned in mild, detergent water. Heavily soiled areas can be cleaned with a scouring sponge and a mild cleanser. 

**ALWAYS** let the crisp-plate cool off before cleaning.

 **DO NOT** immerse or rinse with water while the crisp-plate is hot. Quick cooling may damage it.

 **DO NOT USE STEEL-WOOL PADS.** This will scratch the surface.

## TROUBLE SHOOTING GUIDE

**IF THE OVEN DOES NOT WORK**, do not make a service call until you have made the following checks:

- ❏ The Turntable and turntable support is in place.
- ❏ The Plug is properly inserted in the wall socket.
- ❏ The Door is properly closed.
- ❏ Check your Fuses and ensure that there is power available.
- ❏ Check that the oven has ample ventilation.
- ❏ Wait for 10 minutes, then try to operate the oven once more.
- ❏ Open and then close the door before you try again.

**THIS IS TO AVOID** unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.



**IF THE MAINS CORD NEEDS REPLACING** it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.

 


**SERVICE ONLY TO BE CARRIED OUT BY A TRAINED SERVICE TECHNICIAN.** It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy. **DO NOT REMOVE ANY COVER.**




## ENVIRONMENTAL HINTS

**THE PACKING BOX** may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.

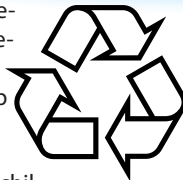

**THIS APPLIANCE** is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

 **THE SYMBOL** on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

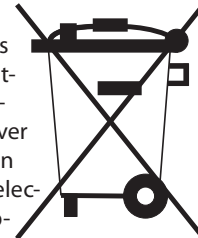

**DISPOSAL** must be carried out in accordance with local environmental regulations for waste disposal.

**FOR MORE DETAILED INFORMATION** about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**BEFORE SCRAPPING**, cut off the mains cord so that the appliance cannot be connected to the mains.

## DATA FOR TEST HEATING PERFORMANCE

**IN ACCORDANCE WITH IEC 60705.**

**THE INTERNATIONAL ELECTROTECHNICAL COMMISSION** has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

TEST	AMOUNT	APPROX. TIME	POWER LEVEL	CONTAINER
12.3.1	750 G	10 MIN	750 W	PYREX 3.220
12.3.2	475 G	5 ½ MIN	750 W	PYREX 3.827
12.3.3	900 G	15 MIN	750 W	PYREX 3.838
13.3	500 G	2 MIN 40 SEC	JET DEFROST	

## TECHNICAL SPECIFICATIONS

SUPPLY VOLTAGE	230 V/50 Hz
RATED POWER INPUT	1900 W (UK 2030 W)
FUSE	10 A (UK 13 A)
MW OUTPUT POWER	750 W
	H x W x D
OUTER DIMENSIONS (HxWxD)	382 x 595 x x320
INNER DIMENSIONS (HxWxD)	187 x 370 x 290



© Whirlpool Sweden AB 2009. All rights reserved. Made in Sweden.

Whirlpool is a registered trademark of Whirlpool, USA.