

SRU 540/05

 
 
 
**GB** Instructions for use 4

 
**Quick, Clean & Easy Setup**  
[www.philips.com/urc](http://www.philips.com/urc)



**Quick, Clean & Easy Setup**  
[www.philips.com/urc](http://www.philips.com/urc)

**PHILIPS**



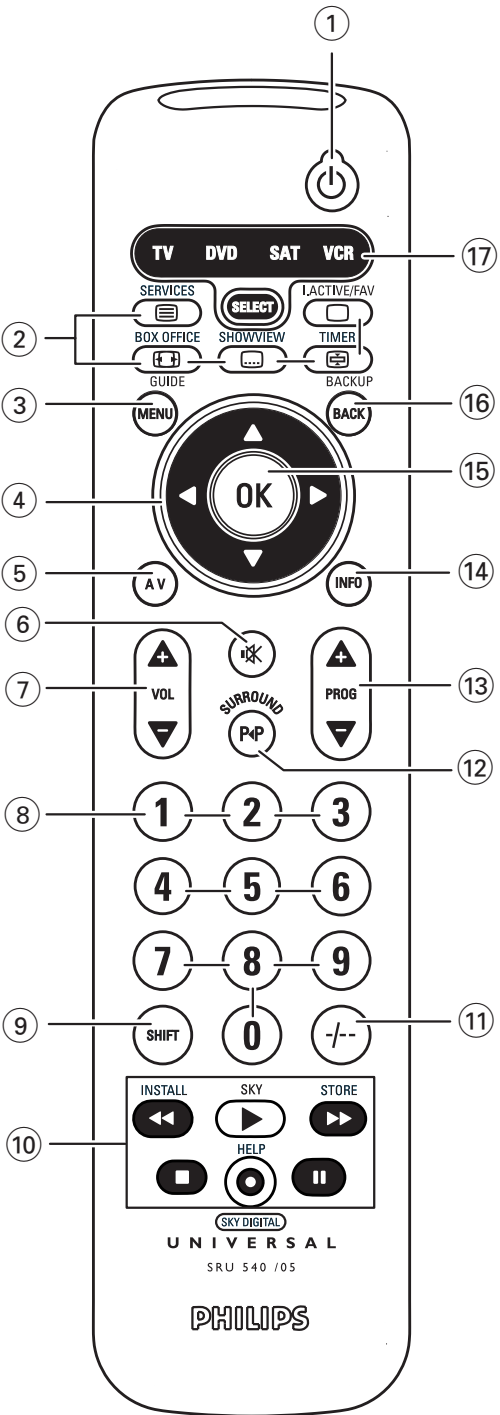

## Instructions for use

English

### Contents

<b>1. Introduction</b> .....	4
<b>2. Installing the remote control</b> .....	4-6
Inserting the batteries .....	4
Testing the remote control .....	4-5
Setting the remote control .....	5-7
<b>3. Keys and functions</b> .....	7
<b>4. Extra possibilities</b> .....	8-9
Adjusting device selection (Mode-selector) .....	8
Adding a remote control function .....	8
Restoring the original remote control settings .....	9
<b>5. Troubleshooting</b> .....	9
<b>6. Need help?</b> .....	10
Code list of all brands / equipment .....	12-20

 
## 1. Introduction

Congratulations on your purchase of the Philips SRU540 universal remote control. After installing the remote control you can operate a maximum of 4 different devices with it: TV, DVD player/recorder, video recorder and SAT (settop box, satellite or cable decoder). You can find information about how to prepare this remote control for use in the chapter 'Installing the remote control'.

## 2. Installing the remote control

### Inserting the batteries

- 1 Press the cover inwards and slide it in the direction of the arrow.
- 2 Place two AAA type batteries into the battery compartment, as shown.
- 3 Slide the cover back and click it firmly into place.

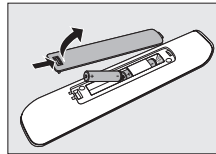

*Note: If the device indicators in the selector window (TV, DVD, SAT and VCR) blink four times after every key press, the remote control is indicating that its batteries are running low. Replace the old batteries with two new AAA batteries.*

### Testing the remote control

The remote control has been programmed to operate most Philips devices. Because the SRU540 may use different signals for each brand and even for different models of the same brand, it is advisable to test whether your device responds to the SRU540. The example below (TV) instructs you how to do this. You can repeat the same steps for other devices (DVD player/recorder, video recorder, etc.) which you want to operate using the SRU540.

Example of TV:

- 1 Turn your TV on manually or use the original remote control.  
Tune to channel 1.

 
 
## Instructions for use

English

- 2 Press the SELECT key to select TV.  
Press the key until TV lights up in the selector window.

*If TV does not light up, check whether the batteries are properly inserted (see 'Inserting the batteries').*

- 3 Check whether all keys are working.  
For an overview of the keys and their functions see '3. Keys and functions'.
- If the TV responds as it should to all of the key commands the SRU540 is ready for use.

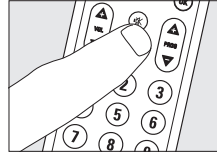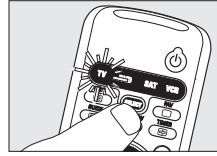

- **If the device does not respond at all or not to all of the key commands, follow the instructions under 'Setting the remote control', or for online setup go to: [www.philips.com/urc](http://www.philips.com/urc).**

### Setting the remote control

This is only necessary if your device does not respond to the SRU540.

If that is the case, the SRU540 does not recognize the brand and/or model of your device and you need to program the remote control to do so.

 
The example below (TV) instructs you how to do this. You can repeat the same steps for other devices (DVD player/recorder, video recorder, etc.) which you want to operate using the SRU540.

#### Automatically setting the remote control

The remote control will now automatically search for the right code for your device.

Example of TV:


- 1 Make sure the TV is switched on and select a channel using the original remote control or the keys on the TV (for example channel 1).  
The SRU540 emits the 'switch off TV' signal for all models of TV that are stored in the memory.
- If the device is a DVD player/recorder or video recorder, insert a disk or tape and start playback.
- 2 Press the SELECT key to select TV.  
Press the key until TV lights up in the selector window.

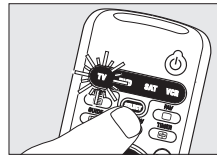

- 3 Then keep keys 1 and 3 pressed simultaneously for five seconds until TV in the selector window flashes twice and then remains lit.



 - 4 Press and hold the Standby key of the SRU540.

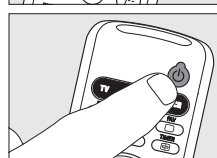

## Instructions for use

English

- The SRU540 now starts emitting all known 'TV off' signals, one by one.  
Each time a code is sent, TV in the selector window lights up.



- 5** When your TV switches off (stand-by), release the Standby key of the SRU540 immediately.
- The SRU540 has now found a code that works on your TV.
- 6** Check if you can operate all functions on your TV with the SRU540.

 
- **If this is not the case, you can redo the automatic setting. The SRU540 will then search for a code that works better.**

- After the SRU540 has run through all the known codes, the search will stop automatically and TV in the selector window will stop flashing.
- Automatic programming of a TV takes a maximum of 5 minutes. For DVD, VCR and SAT this time is 2 minutes

### Manually setting the remote control

Example of TV:

- 1** Turn on the TV manually or use the original remote control.  
Tune in to channel 1.
- 2** Look up the brand of your TV in the code list at the back of this manual. One or more four-figure codes are shown for each brand. Note the first code.  
*Be careful! There are separate tables for TV, video, DVD, etc.*

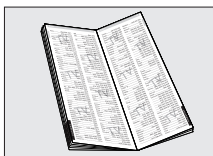

On our website [www.philips.com/urc](http://www.philips.com/urc) you can directly select your device typenumber to find the right code.

Make sure you use the codes from the correct table.

- 3** Press the SELECT key to select TV.  
Press the key until TV lights up in the selector window.



- 4** Keep keys 1 and 3 **pressed simultaneously for five seconds** until TV in the selector window flashes twice and then remains lit.














 


- 5** Then enter the code noted in step 2 using the digit keys.
  - TV in the selector window will now flash twice.
  - If TV flashes once for an extended period, the code has not been entered properly or the wrong code has been entered. Start again from step 2.
- 6** Point the SRU540 at the TV and check that it responds as it should.
  - If the TV responds to all of the key commands, the SRU540 is ready for use. Do not forget to note your code.

- **If the device does not respond at all, or not to all of the key commands, start again from step 2 and try the next code from the list.**

### 3. Keys and functions

The illustration on page 3 gives an overview of all keys and their functions.






 

 




- ① **Standby** . . . . . switches TV, VCR, DVD or SAT on or off.
- ②   . . . . . - teletext on/off (  );  
   . . . . . - text off (  );  
 . . . . . - wide screen TV (  );  
 . . . . . - subtitle (  );  
 . . . . . - text hold (  ).
- ③ **MENU** . . . . . turns the menu on and off.
- ④ **Cursor keys** . . . . . cursor up, down, left, right in a menu.
- ⑤ **AV** . . . . . switches between external inputs of your equipment.
- ⑥  . . . . . mutes the sound of the TV.
- ⑦ **- VOL +** . . . . . adjusts the TV volume.
- ⑧ **Digit keys** . . . . . direct choice of channels and other functions.
- ⑨ **SHIFT** . . . . . for extra functions. When pressed at the same time as a second key, the second key will get another function. All blue labelled keys can be used together with SHIFT. For example:

**SHIFT + INSTALL** . . . . . installs your TV

**SHIFT + STORE** . . . . . stores TV settings

Try out other combinations with the SHIFT-key on your device in order to find out which functions are available.

  Only functions featured on the original remote control are available.

- ⑩  . . . . . - red teletext key  
 . . . . . - rewind (VCR/DVD)  
 . . . . . - index  
 . . . . . - play (VCR/DVD)  
 . . . . . - blue teletext key  
 . . . . . - wind (VCR/DVD)  
 . . . . . - green teletext key  
 . . . . . - stop (VCR/DVD)  
 . . . . . record  
 . . . . . - yellow teletext key  
 . . . . . - pause (VCR/DVD)
- ⑪  . . . . . selects between one- and two-figure channel numbers.
- ⑫ **PP / SURROUND** . . . . . selects previous programme/channel.  
. . . . . selects surround modes.
- ⑬ **- PROG +** . . . . . selects a previous or following channel.
- ⑭ **INFO** . . . . . turns menu info on and off.
- ⑮ **OK** . . . . . confirms your selection.
- ⑯ **BACK** . . . . . jumps back one level in the menu or turns off the menu.
- ⑰ **SELECT** . . . . . selects TV, DVD, SAT or VCR mode.

If you use the (↔) 'memory off' key to get to the next teletext page on your Philips TV, you can press the Subtitle key for this. See also 'Troubleshooting'.

**If the device does not respond at all, or not to all of the key commands, follow the instructions under 'Setting the remote control'. It is possible that you must enter another code for the device.**

## Instructions for use

 
 
 
 
English

### 4. Extra possibilities

#### Adjusting device selection (Mode selector)

The SRU540 is default set for operating TV, VCR, SAT (settop box, satellite or cable decoder) and DVD. You can select the device you wish to operate with the SELECT key (mode selector). Each option allows operation of one device only. If desired, you can program the SELECT key (mode selector) to select a different kind of device. For example, if you want to operate a second TV. In the following example you will see how to configure the SAT mode for a second TV.

- 1** Switch on the second TV.
- 2** Press the SELECT key to select SAT.  
Press the key until SAT lights up in the selector window.
- 3** Then keep keys 1 and 6 on the SRU540 pressed **simultaneously for five seconds**, until SAT in the selector window lights up.
- 4** Press keys 9, 9 and 2, in that order.
- 5** Press the SELECT key to select TV.  
Press the key until TV lights up in the selector window.
- 6** Press the 1 key.  
– SAT in the selector window flashes twice.  
SAT will now allow you to operate your second TV.
- 7** Program the SRU540 to operate the second TV.  
See 'Setting the remote control'.

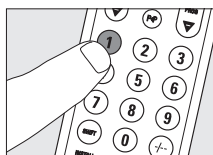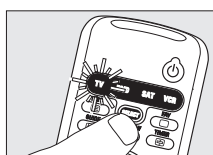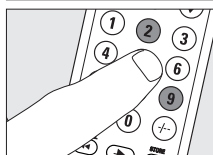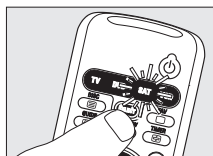



## Restoring the original functions of your remote control

- 1** Keep keys 1 and 6 on the SRU540 pressed **simultaneously for five seconds**, until one of the device indicators (TV, DVD, SAT, VCR) lights up in the selector window.



- 2** Press keys 9, 8 and 1, in that order.
- The device indicator in the selector window flashes twice. All original functions have now been restored and any extra functions have been deleted.



## 5. Troubleshooting

- Problem
- Solution
- The device indicators in the selector window (TV, DVD, SAT and VCR) blink four times after every key press.
  - The remote control is indicating that its batteries are running low. Replace the old batteries with two new AAA batteries.
- The device you want to operate does not respond and its indicator in the selector window does not flash when you press a key.
  - Replace the old batteries with two new AAA batteries.
- The device you want to operate does not respond but its indicator in the selector window does flash when a key is pressed.
  - Point the SRU540 at the device and make sure that there are no obstructions between the SRU540 and the device.
- The SRU540 does not respond properly to commands.
  - Maybe you are using the wrong code. Try programming the SRU540 again using another code, which is mentioned under the brand of your device, or reset for automatic search to find the right code. If the device still does not respond, call our helpline.
- The Teletext keys do not work.
  - Find out whether your TV is equipped with Teletext.
- You have difficulties operating all of the functions on your device.
  - Maybe the SRU540 has to be adapted to the model of the device. Call our helpline for details.
- Your brand of device is not in the code list.
  - Try to set the SRU540 automatically. See 'Automatically setting the remote control'.
- None of the codes works during manual setting of the remote control.
  - If that is the case, follow the instructions under 'Automatically setting the remote control'.

## Instructions for use

English

### 6. Need help?

If you have any questions about the SRU540, you can always contact us. You will find our contact details after the code list at the back of this manual.

Read this manual carefully before you make a call. You can solve most of the problems yourself. If you cannot find any answers to your problems, write down the details of your device shown in the code list at the back of this manual. This will help our operators to assist you better and more quickly. Look up the numbers of the models in the instructions accompanying the device or on the back of your device. When you call our helpline, make sure the device is to hand so that our operators can help you determine whether your remote control is working properly.

The model number of your Philips universal remote control is SRU540/10.

Date of purchase:       ...../...../.....  
(day/month/year)

Instructions for use

English

## Codes

## TV

## SETUP CODES FOR TV

ASA.....	0114, 0131, 0322	Clarivox.....	0064
AWA.....	0036	Clatronic.....	0397, 0103, 0274
Acura.....	0036	Condor.....	0397, 0347
Admiral.....	0114, 0190, 0240	Contec.....	0063, 0036, 0243
Adyson.....	0244	Continental Edison.....	0223, 0360, 0426, 0528, 0595
Aiwa.....	0728	Crosley.....	0101, 0103, 0111, 0114, 0240, 0374
Akai.....	0388, 0245, 0036, 0235, 0378, 0475	Crown.....	0064, 0397, 0036, 0103, 0445
Akito.....	0299	Crystal.....	0458
Akura.....	0245	Cybertron.....	0245
Alba.....	0064, 0695, 0245, 0063, 0036, 0262, 0398	Daewoo.....	0064, 0661, 0036, 0401, 0526
Allorgan.....	0321	Dainichi.....	0245
Amplivision.....	0244, 0427	Dansai.....	0064
Amstrad.....	0064, 0036, 0204, 0389, 0398	Dayton.....	0036
Anitech.....	0036, 0103	De Graaf.....	0575, 0235
Arc En Ciel.....	0528, 0595	Decca.....	0064, 0099, 0299
Arcam.....	0243, 0244	Digatron.....	0064
Asberg.....	0103	Dixi.....	0064, 0036
Asuka.....	0245	Dual.....	0363, 0379
Atlantic.....	0233	Dual Tec.....	0244
Audiosonic.....	0064, 0136	Dumont.....	0114, 0322, 0374
Autovox.....	0103, 0114, 0233, 0264, 0322, 0363	Elbe.....	0286
BPL.....	0309	Elin.....	0064, 0575
BSR.....	0321	Elite.....	0245, 0347
BTC.....	0245	Elta.....	0036
Baird.....	0370	Emerson.....	0388, 0114, 0240
Bang & Olufsen.....	0114, 0592	Erres.....	0064
Barco.....	0579	Expert.....	0233
Basic Line.....	0245, 0036	Ferguson.....	0064, 0136, 0265, 0314, 0362, 0370
Baur.....	0064, 0388, 0037, 0376, 0539, 0562, 0581	Fidelity.....	0388, 0243
Beko.....	0741, 0513, 0742, 0397	Finlandia.....	0235, 0373, 0386
Beon.....	0064	Finlux.....	0064, 0099, 0114, 0131, 0132, 0206, 0322, 0373, 0374
Binatone.....	0244	Firstline.....	0695, 0036, 0243, 0244, 0274, 0321, 0348
Blaupunkt.....	0222, 0240, 0354, 0355, 0562, 0581	Fisher.....	0397, 0131, 0235, 0244, 0582
Blue Sky.....	0695, 1064, 0245	Flint.....	0482
Blue Star.....	0309	Formenti.....	0064, 0114, 0240, 0347, 0374, 0579
Bondstec.....	0274	Frontech.....	0190, 0274, 0458, 0475
Boots.....	0244	Fujitsu.....	0099, 0233
Brandt.....	0136, 0223, 0360, 0362	Funai.....	0206, 0321
Brandt Electronic.....	0528, 0595	GBC.....	0579
Briovvega.....	0114, 0389	GEC.....	0064, 0099, 0244
Britannia.....	0243	GPM.....	0245
Bruns.....	0114	Geloso.....	0036, 0240, 0374
Bush.....	0064, 0695, 1064, 0725, 0245, 0063, 0036, 0299, 0309, 0321, 0376, 0398, 0401, 0579	Genexxa.....	0245, 0190
CGE.....	0101, 0103, 0111, 0274, 0579	GoldStar.....	0064, 0136, 0244, 0317
CS Electronics.....	0243	Goodmans.....	0064, 0661, 0063, 0099, 0206, 0244, 0262, 0344, 0370, 0398, 0401, 0526
CTC.....	0274	Gorenje.....	0397
Carrefour.....	0063	Graetz.....	0388, 0190, 0374
Cascade.....	0036	Granada.....	0064, 0099, 0235, 0244, 0366, 0378, 0386
Cathay.....	0064	Grandin.....	0637, 0309
Centurion.....	0064	Grundig.....	0583, 0883, 0222, 0514, 0264, 0562, 0581
Century.....	0114, 0240	HCM.....	0036, 0309
Cimline.....	0036		

Codes	TV
Hanseatic.....	0583, 0883, 0064, 0388, 0347, 0455
Havermy.....	0120
Hifivox.....	0528, 0595
Hinari.....	0064, 0245, 0063, 0036, 0206
Hisawa.....	0482, 0309, 0427
Hitachi.....	0575, 0063, 0252, 0132, 0136, 0190, 0223, 0244, 0374, 0376, 0383
Huanyu.....	0243, 0401
Hypson.....	0064, 0309
ICE.....	0244, 0398
ICeS.....	0245
IR.....	0101
ITC.....	0579
ITS.....	0398
ITT.....	0575, 0388, 0190, 0374, 0378
Imperial.....	0397, 0101, 0103, 0111, 0274, 0445, 0579
Indesit.....	0264
Indiana.....	0064
Ingelen.....	0190
Inno Hit.....	0099
Interfunk.....	0064, 0388, 0190, 0274, 0528, 0539, 0595
Intervision.....	0064, 0129, 0244
Isukai.....	0245
JVC.....	0633, 0063, 0680, 0121, 0219, 0398
Kaisui.....	0245, 0036, 0243, 0244, 0309
Kapsch.....	0190, 0233
Karcher.....	0637
Kathrein.....	0583, 0883
Kendo.....	0064, 0262, 0389
Kennedy.....	0579
Kingsley.....	0243
Kneissel.....	0286, 0462
Korpel.....	0064
Korting.....	0114
Koyoda.....	0036
LG.....	0064, 0741
Leyco.....	0064, 0099, 0321
Liesenk & Tter.....	0064
Loewe.....	0102, 0114, 0316, 0539, 0397, 0064, 0319
Luma.....	0233, 0332
Luxor.....	0388, 0264, 0376, 0383, 0384
M Electronic.....	0064, 0036, 0131, 0132, 0136, 0190, 0244, 0314, 0373, 0401, 0507
MTC.....	0376, 0539
Magnadyne.....	0114, 0129, 0274, 0374
Magnafon.....	0103, 0129, 0240
Manesth.....	0244, 0262, 0347
Marantz.....	0583, 0883, 0064
Marelli.....	0114
Mark.....	0064
Matsui.....	0064, 0514, 0063, 0036, 0038, 0099, 0204, 0235, 0244, 0262, 0299, 0321, 0398
Mediator.....	0064
Medion.....	0695, 1064
Memorex.....	1064, 0036
Memphis.....	0364
Metz.....	0114, 0240, 0266, 0302, 0394, 0562
Minerva.....	0514, 0264, 0562, 0581
Mitsubishi.....	0063, 0135, 0114, 0264, 0539, 0562
Mivar.....	0397, 0243, 0317, 0318, 0319, 0636, 0244
Motion.....	0103
Multitech.....	0036, 0103, 0129, 0243
Myryad.....	0583, 0883
NAD.....	0388
NEC.....	0197
NEI.....	0064, 0364, 0458
National.....	0264
Neckermann.....	0583, 0883, 0064, 0114, 0240, 0376, 0581
Nesco.....	0206
Nikkai.....	0064, 0245, 0099, 0243, 0364
Noblisko.....	0103, 0129
Nogamatic.....	0528, 0595
Nokia.....	0575, 0633, 0388, 0500, 0507, 0658
Nordmende.....	0136, 0223, 0240, 0314, 0370, 0528, 0595
Oceanic.....	0388, 0190, 0374
Orion.....	0064, 0204, 0262, 0321, 0347, 0348
Osaki.....	0245, 0099, 0244
Oso.....	0245
Osume.....	0099
Otake.....	0344
Otto Versand.....	0583, 0883, 0064, 0063, 0037, 0240, 0244, 0347, 0370, 0374, 0376, 0539, 0562, 0579, 0581
Palladium.....	0397, 0445
Panama.....	0244
Panasonic.....	0677, 0253, 0153, 0190, 0240, 0264, 0267, 0301, 0374, 0394
Pathe Cinema.....	0240, 0243, 0265, 0347, 0579
Pathe Marconi.....	0223, 0360, 0528, 0595
Pausa.....	0036
Perdio.....	0347
Philco.....	0101, 0103, 0111, 0114, 0240, 0274, 0579
Philex.....	0378
Philips.....	0583, 0883, 0064, 0114, 0350, 0359, 0401, 0581, 0632
Phoenix.....	0114
Phonola.....	0064, 0114
Pioneer.....	0136, 0190, 0314
Profex.....	0388, 0036, 0103
Proline.....	0348
Protech.....	0064, 0695, 0036, 0129, 0244, 0274, 0364, 0445, 0458, 0579

## Codes

## TV

TV

Quelle.....	0064, 0388, 0037,	Tandberg.....	0322
.....	0038, 0101, 0111, 0131,	Tandy.....	0245, 0099, 0120, 0190, 0244
.....	0240, 0322, 0354, 0355,	Tashiko.....	0063, 0244, 0386
.....	0539, 0562, 0579, 0581	Tatung.....	0064, 0099, 0244
Questa.....	0063	Teac.....	0064, 0695, 1064, 0725,
R-Line.....	0064	.....	0482, 0036, 0309, 0445
RFT.....	0114, 0455	Tec.....	0244, 0274, 0579
Radiola.....	0064, 0350	Technema.....	0347
Radiomarelli.....	0114	Technics.....	0677
Rank Arena.....	0063	Technol Ace.....	0206
Rediffusion.....	0388, 0378	Teleavia.....	0360, 0370,
Reoc.....	0741	.....	0517, 0528, 0595
Revox.....	0064	Telefunken.....	0652, 0101, 0111, 0128,
Rex.....	0190, 0233, 0286, 0332	.....	0136, 0240, 0289, 0362, 0370,
Roadstar.....	0245, 0036, 0445	.....	0498, 0525, 0528, 0593, 0595
Rowa.....	0725	Telemeister.....	0347
SBR.....	0064	Teletch.....	0036
SEG.....	0695, 0063, 0103, 0244, 0579	Teleton.....	0063, 0233, 0244, 0376
SEI.....	0037, 0114, 0129,	Tensai.....	0245, 0321, 0344, 0347
.....	0204, 0240, 0321, 0374	Textet.....	0245, 0243
Saba.....	0102, 0114, 0136, 0190,	Thomson.....	0652, 0136, 0223, 0264,
.....	0223, 0240, 0314, 0362,	.....	0314, 0360, 0370, 0376,
.....	0370, 0374, 0528, 0595	.....	0426, 0517, 0528, 0595
Saccs.....	0265	Thorn.....	0064, 0388, 0099, 0101,
Sagem.....	0637	.....	0111, 0131, 0219, 0370,
Saisho.....	0036, 0038, 0204, 0262, 0458	.....	0526, 0539, 0562, 0580
Salora.....	0575, 0388, 0190,	Thorn-Ferguson.....	0370
.....	0376, 0383, 0386	Tomashi.....	0309
Sambers.....	0103, 0129, 0240	Toshiba.....	0063, 0270, 0580
Samsung.....	0583, 0883, 0064, 0397,	Towada.....	0579
.....	0036, 0244, 0317, 0671	Transonic.....	0725
Sandra.....	0243	Triumph.....	0204, 0270
Sanyo.....	0063, 0038, 0099,	Uher.....	0233, 0347
.....	0131, 0235, 0240, 0366	Ultra.....	0219
Schaub Lorenz.....	0388, 0374	Ultravox.....	0129, 0378
Schneider.....	0064, 0695, 1164,	Universon.....	0064, 0397, 0101,
.....	0245, 0274, 0350,	.....	0131, 0132, 0373,
.....	0363, 0379, 0398	.....	0448, 0519, 0562, 0579
Seleco.....	0190, 0233, 0286, 0332, 0389	Vestel.....	0064
Sharp.....	0063, 0120	Videosat.....	0274
Shorai.....	0321	Videotechnic.....	0244
Siarem.....	0114, 0129, 0240, 0374	Vision.....	0347
Siemens.....	0064, 0222, 0240, 0354,	Voxson.....	0114, 0190
.....	0355, 0374, 0562, 0581	Waltham.....	0244, 0383
Silver.....	0063	Watson.....	0064, 0347
Singer.....	0114	Watt Radio.....	0129, 0579
Sinudyne.....	0037, 0114, 0129, 0204,	Wega.....	0063, 0114
.....	0240, 0262, 0321, 0374	White Westinghouse.....	0064,
Skantic.....	0383, 0384	.....	0243, 0347
Solavox.....	0190, 0378	Yoko.....	0064, 0244, 0458
Sonitron.....	0235	Zanussi.....	0233, 0332
Sonoko.....	0064, 0036		
Sonolor.....	0190, 0235		
Sontec.....	0064		
Sony.....	1532, 0063, 0037,		
.....	0038, 0256, 1678		
Soundwave.....	0064, 0445		
Standard.....	0245, 0036, 0244		
Stern.....	0190, 0233, 0286, 0332		
Sunkai.....	0321, 0348		
Susumu.....	0245		
Sysline.....	0064		

CODELIST

Codes

DVD

## SETUP CODES FOR DVD

Afreey .....	0725
Alba .....	0744
Bush .....	0717
Daewoo .....	0797
Dansai .....	0797
Decca .....	0797
Denon .....	0517
DiViDo .....	0732
GoldStar .....	0768
Greenhill .....	0744
Grundig .....	0566, 0722, 0732
Harman/Kardon .....	0729
JMB .....	0722
JVC .....	0650
Jaton .....	0692
Kenwood .....	0517, 0561
Kiss .....	0692
LG .....	0768
Lecson .....	0723
Monyka .....	0692
Onkyo .....	0639
Oritron .....	0678
Panasonic .....	0517
Philco .....	0717
Philips .....	0566, 0673
Pioneer .....	0598
REC .....	0716
Revoy .....	0726
Roadstar .....	0716
Rotel .....	0650
SM Electronic .....	0717
Samsung .....	0600
Sharp .....	0657
Sony .....	0560
Tatung .....	0797
Teac .....	0598, 0744
Technics .....	0517
Thomson .....	0578, 0549
Tokai .....	0692
Toshiba .....	0530
Umax .....	0717
Wesder .....	0726
Wharfedale .....	0723
XBox .....	0549
Yamakawa .....	0692

DVD

CODELIST

## Codes

## VCR

## SETUP CODES FOR VCR

ASA.....	0108, 0064	Graetz.....	0131, 0068, 0267
Aiwa.....	0375, 0027, 0334, 0379	Granada.....	0108, 0131, 0073, 0312
Akai.....	0342, 0133, 0068, 0080, 0312	Grandin.....	0064, 0027, 0099
Akiba.....	0099	Grundig.....	0108, 0099, 0253, 0222, 0320, 0374, 0376, 0430
Alba.....	0305, 0099, 0379, 0342, 0047, 0236, 0320, 0322, 0360, 0361	HCM.....	0099, 0320
Ambassador.....	0047	Hanseatic.....	0064
Amstrad.....	0027, 0352, 0359	Hinari.....	0099, 0379, 0031, 0235, 0267, 0320
Anitech.....	0099	Hitachi.....	0027, 0069, 0031, 0068, 0132, 0193, 0267, 0312
Asuka.....	0064	Hypson.....	0099
Baird.....	0027, 0131, 0068, 0134	ITT.....	0411, 0131, 0133, 0068, 0073, 0267
Basic Line.....	0305, 0099, 0047	ITV.....	0305, 0064, 0047
Blaupunkt.....	0253, 0061, 0181, 0189, 0222, 0254, 0430	Imperial.....	0027
Brandt.....	0347, 0214, 0348, 0520	Ingersol.....	0031
Brandt Electronic.....	0068	Interfunk.....	0108
Bush.....	0305, 0099, 0379, 0236, 0320, 0360, 0361	JVC.....	0411, 0094, 0035, 0068, 0233
CGE.....	0027	Kaisui.....	0099
Catron.....	0047	Kendo.....	0133, 0236
Cimline.....	0099	Kenwood.....	0068
Clatronic.....	0047	Korpel.....	0099
Combitech.....	0379	Lenco.....	0305
Condor.....	0047	Leyco.....	0099
Crown.....	0305, 0099, 0047	Loewe.....	0108, 0064, 0031, 0189, 0481
Cyrus.....	0108	Logik.....	0031, 0267
Daewoo.....	0305, 0047	Luxor.....	0131, 0075, 0070, 0133, 0073, 0089
Dansai.....	0099	M Electronic.....	0027, 0065
De Graaf.....	0069, 0193	Manesth.....	0099, 0072
Decca.....	0108, 0027	Marantz.....	0108, 0089, 0173, 0322
Denon.....	0069	Matsui.....	0375, 0379, 0031, 0063, 0115, 0235, 0236, 0322
Dual.....	0068	Matsushita.....	1189
Dumont.....	0108, 0027, 0131, 0132	Medion.....	0375
ESC.....	0305, 0267	Memorex.....	0064, 0027, 0131, 0073
Elbe.....	0065	Memphis.....	0099
Elcatech.....	0099	Metz.....	0064, 0189, 0222, 0254, 0374, 0481
Ferguson.....	0347, 0068, 0134, 0348, 0520	Minerva.....	0222
Fidelity.....	0027	Mitsubishi.....	0108, 0094, 0070
Finlandia.....	0108, 0131	Multitech.....	0027, 0099
Finlux.....	0108, 0027, 0131, 0069, 0132	Murphy.....	0027
Firstline.....	0064, 0099, 0072, 0070, 0236	Myryad.....	0108
Fisher.....	0131, 0073, 0074, 0081	NAD.....	0131
Frontech.....	0047	NEC.....	0131, 0094, 0065, 0068
Fujitsu.....	0027	Neckermann.....	0108
Funai.....	0027	Nesco.....	0099
GEC.....	0108	Nokia.....	0131, 0133, 0068, 0073, 0267
General.....	0047	Nordmende.....	0347, 0411, 0068, 0348, 0521
GoldHand.....	0099	Oceanic.....	0027, 0068
GoldStar.....	0064, 0252	Okano.....	0375, 0342
Goodmans.....	0305, 0064, 0027, 0099, 0047, 0089, 0430	Optimus.....	1189

VCR

CODELIST



Codes	VCR
Orion.....0375, 0379, 0031, 0063, 0115, .....0235, 0236, 0322, 0360, 0361	Sunkai.....0375 Sunstar .....0027
Osaki.....0064, 0027, 0099	Suntronic .....0027
Otto Versand.....0108	Tandy .....0027, 0131
Palladium.....0064, 0099, 0068	Tashiko .....0027
Panasonic.....0253, 0189, .....0254, 0481, 1189	Tatung.....0108, 0027, 0068 Teac.....0305, 0027, 0334, 0430
Pathe Cinema.....0063	Tec.....0047
Pathe Marconi.....0068	Technics.....0253, 0189
Pentax.....0069, 0132	Teleavia.....0068, 0520
Perdio.....0027	Telefunken.....0652, 0347, 0411, 0068, .....0214, 0348, 0520, 0521
Philco.....0065	Tenosal.....0099
Philips.....0108, 0411, 0173, 0430, 0494	Tensai.....0027, 0349
Phonola.....0108	Thomson.....0347, 0411, 0094, .....0068, 0348, 0520, 0521
Pioneer.....0108, 0094	Thorn.....0131, 0063, 0068
Portland.....0047	Toshiba...0108, 0411, 0072, 0070, 0068
Profex.....0349	Towada.....0349
Profitronic.....0267	Triumph.....0235
Proline.....0027, 0320	Uher.....0267
Pye.....0108	Universum.....0108, 0064, 0027, .....0133, 0222, 0267, 0352
Quartz.....0073	Videomagic.....0064
Quasar.....1189	Villain.....0027
Quelle.....0108	Yamishi.....0099
RFT.....0430	Yokan.....0099
Radiola.....0108	Yoko.....0047, 0267
Reoc.....0375	
Rex.....0411, 0068	
Roadstar.....0305, 0064, 0099, 0267	
SBR.....0108, 0173	
SEG.....0267, 0349	
SEI.....0108, 0031	
Saba.....0347, 0411, 0068, .....0233, 0348, 0521	
Saisho.....0031, 0063, 0115, 0235, 0236	
Salora.....0070, 0133, 0073	
Samsung.....0459, 0267	
Sansui.....0094, 0068	
Sanyo.....0131, 0073	
Saville.....0379	
Schaub Lorenz.....0027, 0131, 0068	
Schneider.....0108, 0027, 0099	
Seleco.....0068, 0233, 0253, 0286, 0389	
Sentra.....0047	
Sharp.....0075, 0089, 0321, .....0120, 0063, 0184	
Shintom.....0099, 0131	
Shorai.....0031	
Siemens.....0108, 0064, 0131, .....0081, 0173, 0222	
Silva.....0064	
Singer.....0072	
Sinudyne.....0108, 0031	
Solavox.....0047	
Sonolor.....0073, 0089	
Sontec.....0064	
Sony.....0059, 0060, 0061, 1059	

VCR

CODELIST

## Codes

## SAT

## SETUP CODES FOR SAT

ABsat .....	0150, 0859	FTE .....	0358, 0438, 0890
AST .....	0348, 0378	Ferguson .....	0210, 0363
Akai .....	0542	Fidelity .....	0279
Alba .....	0389, 0448, 0482, 0542	Finlux .....	0135, 0424, 0441, 0482
Aldes .....	0315	Foxtel .....	0906
Allantide .....	0360	Fracarro .....	0898
Amstrad .....	0874, 0240, 0279, 0365, 0372, 0488, 0528	Freecom .....	0362, 0448, 0761
Ankaro .....	0244, 0247, 0315, 0396, 0546, 0740	Fuba .....	0199, 0244, 0396, 0423, 0441, 0444, 0448
Antron .....	0210, 0448	G-Sat .....	0210
Arcon .....	0395	Galaxis .....	1138, 0310, 0315, 0391, 0393, 0683, 0840, 0860, 0890
Armstrong .....	0270	Galaxisat .....	0348
Asat .....	0400	Gardiner .....	0845
Astra .....	0135, 0400, 0545, 0566	Gold Box .....	0880
Astro .....	0200, 0385, 0528, 0547	GoldStar .....	0362
AudioTon .....	0391	Gooding .....	0598
Avalon .....	0423	Grandin .....	0872
Axis .....	0393, 0396	Grothusen .....	0362
BT .....	0542, 0695, 0737	Grundig .....	0874, 0200, 0166, 0167, 0355, 0598, 0777, 0832
Barcom .....	0244	Harting und Helling .....	0360
Best .....	0244, 0396	Hinari .....	0210
Blaupunkt .....	0200	Hirschmann .....	0200, 0314, 0360, 0423, 0424, 0522, 0528, 0529, 0600, 0825, 0909
Boca .....	0270, 0540, 0856	Hitachi .....	0482
Brain Wave .....	0359	Houston .....	0695
British Sky Broadcasting .....	0874, 1202	Humax .....	0310, 0890, 1075
CNT .....	0547	Huth .....	0247, 0270, 0315, 0373, 0391, 0395, 0821
Cambridge .....	0542	ITT .....	0135, 0199
Canal Digital .....	0880	Ikusi Allsat .....	0395
Canal Satellite .....	0880	InVideo .....	0898
Canal+ .....	0880	Intervision .....	0619
Channel Master .....	0389	JOK .....	0737
CityCom .....	0142, 0421, 0845	JSR .....	0391
Commlink .....	0315	JVC .....	0542, 0598
Connexions .....	0423, 0485	Johansson .....	0359
Conrad .....	0142, 0634	Kathrein .....	0200, 0227, 0119, 0150, 0358, 0385, 0421, 0469, 0507, 0531, 0649, 0685, 1084
Contec .....	0393	KeyWest .....	0821
Crown .....	0270	Kosmos .....	0358, 0362
Cyrus .....	0227	Kreismeyer .....	0200
D-box .....	1154, 0750, 0900	Kyostar .....	0448
DDC .....	0389	LaSAT .....	0540, 0547, 0634
DNT .....	0227, 0423, 0485	Lemon .....	0147
Daewoo .....	0400	Lenco .....	0362, 0400, 0438, 0448
DirecTV .....	0126	Lennox .....	0619
Diskxpress .....	0244	Lupus .....	0396
Distratel .....	0111, 0912	Luxor .....	0135, 0199, 0600
EIF .....	0444	Macab .....	0551, 0878, 0908
Echostar .....	0880, 0194, 0423, 0740, 0898	Manhattan .....	0482, 0547, 0619, 1110
Elta .....	0391	Marantz .....	0227
Emanon .....	0448	Maspro .....	0119, 0355, 0363, 0522, 0777
Eurodec .....	0551		
Eurostar .....	1052, 1053		
Eutra .....	0825		

SAT

CODELIST

Codes	SAT
Matsui .....	0598
MediaSat.....	0880
Mediamarkt.....	0270
Memphis.....	0393
Metronic.....	0111, 0740
Micro Technology.....	0360, 0566
Micronik.....	1030
Minerva.....	0598
Morgan's.....	0159, 0270, 0540, 0856, 1130
Multichoice.....	0906
Multistar.....	0358
Muratto.....	0362
Myryad.....	0227
Navex.....	0359
Neuhaus.....	0247, 0528
Nikko.....	0740
Nokia.....	0778, 1154, 0750, 0900, 0135, 0199, 0355, 0424, 0482, 0600, 0848, 1050, 1337, 1338, 1365
Nordmende.....	0389
Orbitech.....	0528
PTT Telecom.....	0240
Pace.....	0874, 0914, 0747, 1202, 0210, 0266, 0268, 0355, 0363, 0482, 0524, 0818, 0822, 0894
Palladium.....	0598
Palsat.....	0528
Panasat.....	0906, 0642
Panasonic.....	0874
Panda.....	0482
Patriot.....	0542
Philips.....	0880, 0227, 0319, 0126, 0160, 0161, 0355, 0482, 0598, 0737, 0777, 0832, 0925, 1145
Phoenix.....	0393
Phonotrend.....	0315, 0619, 0815
Pioneer.....	0880
Pixx.....	0579
Polytron.....	0421
Preisner.....	0159, 0289, 0540
Promax.....	0482
Prosat.....	0315
Pyxis.....	0858
Quadral.....	0389, 0546, 0655
RFT.....	0227, 0247, 0315
Radiola.....	0227
Radix.....	0423, 0909
SAT.....	0348, 0378, 0488
SEG.....	0396, 0448, 0545, 0566, 0769
SKY.....	0874, 0883, 0914, 1202
SM Electronic.....	0740
STVI.....	0444
Saba.....	0363, 0547, 0737, 0761, 0912
Sabre.....	0482
Sagem.....	0847, 1141
Sakura.....	0393
Salora.....	0135, 0199
Samsung.....	0314
SatPartner.....	0359, 0362, 0448, 0529, 0547, 0761
Satcom.....	0240, 0373
Satec.....	0210, 0355
Satmaster.....	0373
Satstation.....	1110
Schneider.....	0832
Schwaiger.....	1138, 0210, 0421, 0531, 0579
Seemann.....	0423
Siemens.....	0200
Skymaster.....	0315, 0546, 0655, 0740, 0907
Smart.....	0159
Sony.....	0874
Strong.....	0906, 0159, 0152, 0899, 1132
Sunstar.....	0540, 0821
Supernova.....	0914
TPS.....	0847
Tantec.....	0363, 0482
TechniSat.....	0289, 0485, 0528
Techniland.....	0373
Teco.....	0400
Telefunken.....	0448
Teleka.....	0270, 0825
Telestar.....	0141, 0528
Thomson.....	0880, 0482, 1073
Tonna.....	0373, 0695
Toshiba.....	0164
Triad.....	0348, 0360, 0362, 0378
Triasat.....	0441, 0528
Triax.....	0142
Twinner.....	0163
Uniden.....	0221, 0819, 0858
Unisat.....	0393
Unitor.....	0244, 0359
Universum.....	0200, 0598
VTech.....	0378
Vector.....	0360, 0545
Ventana.....	0227
Vortec.....	0448
Wevasat.....	0360
Winersat.....	0359
Wisi.....	0200, 0348, 0378, 0399, 0423, 0482, 0665
XSat.....	0150, 0916
Xcom Multimedia.....	0916
Yes.....	0914
Zehnder.....	0141, 0348, 0358, 0547, 0579, 0845
Zenith.....	0883
Zwergnase.....	0821

SAT

CODELIST

Codes

CABLE

**SETUP CODES FOR CABLE**

Birmingham Cable Communications .....	0303
British Telecom .....	0030
Cable & Wireless .....	1095
Cabletime .....	0298
Decsat .....	0450
Filmnet .....	0470
France Telecom .....	0478
HyperVision .....	0646
Jerrold .....	0303, 0030
MNet .....	0046, 0470
NTL .....	1095
Nokia .....	0708
Noos .....	0844
Ono .....	1095
PVP Stereo Visual Matrix .....	0030
Pace .....	1095, 1087
Philips .....	0646, 1175
Sagem .....	0844
Scientific Atlanta .....	0304, 0035
Supercable .....	0303
Tele+1 .....	0470
Telewest .....	1095
Torx .....	0030
Tudi .....	0313
United Cable .....	0030

CABLE

CODELIST

**Note your codes!****TV**

Equipment

Brand

Model number

Number of original remote

Code

**VCR**

Equipment

Brand

Model number

Number of original remote

Code

**SAT**

Equipment

Brand

Model number

Number of original remote

Code

**DVD**

Equipment

Brand

Model number

Number of original remote

Code

**HELPLINE**

<b>Country</b>	<b>Phone number</b>	<b>Tariff</b>
België/Belgique	070 253 011	€ 0,17
Danmark	35258758	Local tariff
France	08 9165 0007	€ 0,23
Deutschland	0180 5 007 533	€ 0,12
España	902 889 343	€ 0,15
Ελλάδας	00800 3122 1219	Local tariff
Ireland	01 6011158	Local tariff
Italia	199 404 043	€ 0.25
Luxemburg	40 6661 5645	Local tariff
Nederland	0900 0400 062	€ 0,20
Norge	22 70 82 58	Local tariff
Österreich	0820 901116	Local tariff
Portugal	2 1359 1441	Local tariff
Suomi	09 2294 8258	Local tariff
Sverige	08 7505196	Local tariff
Suisse/die Schweiz	01 212 0045	Local tariff
United Kingdom	0906 1010 018	£ 0.15

**HELPLINE**

**Guarantee  
certificate  
Certificat de  
garantie  
Garantiebewijs  
Záruční list**

**Garantieschein  
Certificado de  
garantía  
Certificato di  
garanzia  
Karta  
gwarancyjna**

**Certificado de  
garantia  
Garantibevis  
Takuutodistus  
Εγγύηση  
Гарантия**

# 1

year

année

jaar

Jahr

año

rok

warranty

garantie

garantie

Garantie

garantía

gwarancyjna

anno

ano

år

vuosi

χρόνος

год

garanzia

garantia

garanti

takuu

εγγύηση

гарантия

Type: \_\_\_\_\_

Serial nr.: \_\_\_\_\_

Date of purchase - Date d'achat - Koopdatum - Kaufdatum -  
Fecha de compra - Data di acquisto - Data da compra - Inköpsdat -  
Køpedatum - Kjøpedato - Ostopäivä - Ημερομηνία αγοράς -  
Datum nákupu - Data zakupu - Дата приобретения

\_\_\_\_\_ 20 \_\_\_\_\_

Dealer's name, address and signature

Nom, adresse et signature du revendeur

Naam, adres en handtekening v.d. verkoper

Name, Anschrift und Unterschrift des Händlers

Nombre, dirección y firma del distribuidor

Nome, indirizzo e firma del fornitore

Nome, endereço e assinatura da loja

Återförsäljarens namn, adress och namnteckning

Forhandlerens navn, adresse og underskrift

Myyjän nimi, osoite ja allekirjoitus

Jméno prodejce, adresa a podpis

Nazwa, adres punktu sprzedaży i podpis sprzedawcy

Jméno prodejce, adresa a podpis

Όνοματεπώνυμο, διεύθυνση και υπογραφή του εμπ. προμηθευτή



**PHILIPS**