 

Cub Cadet[®]

ILLUSTRATED PARTS MANUAL

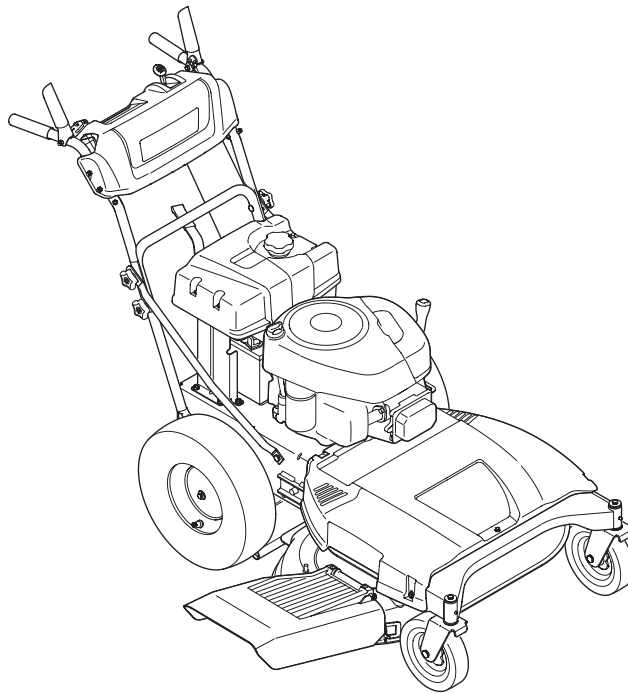

33" Wide Cut Mowers — CC 760 ES, CC 760

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

To The Owner

Thank You

Thank you for purchasing a Cub Cadet Wide Cut Mower. It was carefully engineered to provide excellent performance when properly operated and maintained.

All information in this manual is relative to the most recent product information available at the time of printing. Please be aware that this Illustrated Part's Manual may cover a range of product specifications for various models.

Components listed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs and equipment without notice and without incurring obligation.

Throughout this manual, all references to *right* (RH) and *left* (LH) are observed from the operating position.

Table of Contents

<i>Drive and Deck</i>	4
<i>CC 760 ES Dash</i>	6
<i>CC 760 Dash</i>	8
<i>CC 760 ES Label Map</i>	10
<i>CC 760 Label Map</i>	11
<i>Transmission</i>	12
<i>CC 760 ES Engine</i>	14
<i>CC 760 Engine</i>	22

Record Product Information

To ease in ordering replacement parts, please locate the model plate on the equipment and record the information in the provided area to the right. You can locate the model plate by looking beneath the seat.

MODEL NUMBER

--	--	--	--	--	--	--	--	--	--	--	--

SERIAL NUMBER

--	--	--	--	--	--	--	--	--	--	--	--


Painted Parts

When ordering painted service parts, a four digit color suffix must be added to the part number (e.g. 783-XXXX-0637). Please refer to the table below for current color codes:

0637	Black	0685	Blue (Cub Cadet)
4021	Yellow (Cub Cadet)	0691	Black Jack (Cub Cadet Commercial)
0499	Beige (Cub Cadet)		

This page intentionally left blank.

 Drive and Deck

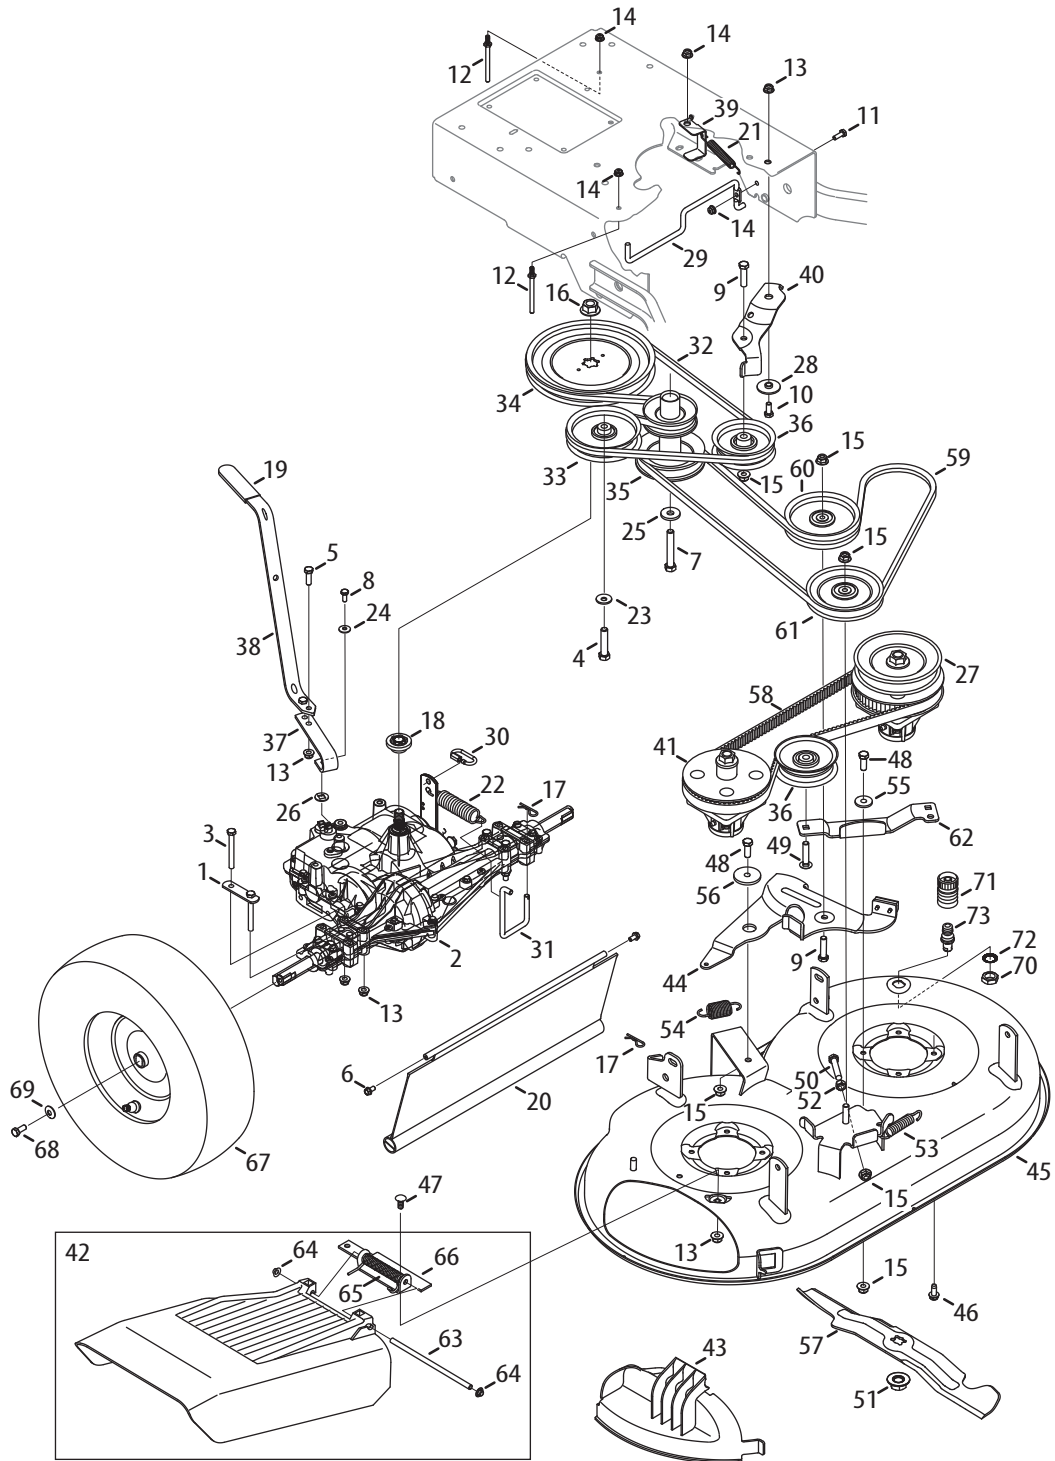


Drive and Deck

Ref.	Part Number	Description
1	17840	Transaxle Mounting Bracket
2	918-04639	4 Speed Drive Assembly, Tecumseh
3	710-0176	Hex Head Cap Screw, 5/16-18 x 2.75
4	710-0347	Hex Head Cap Screw, 3/8-16 x 1.75
5	710-0376	Hex Head Cap Screw, 5/16-18 x 1.00
6	710-04187	Screw, 1/4-15 x 0.50
7	710-04377	Hex Head Cap Screw, 7/16-20 x 2.75
8	710-0513	Hex Head Cap Screw, 1/4-28 x .625
9	710-0520	Hex Head Cap Screw, 3/8-16 x 1.50
10	710-3008	Hex Head Cap Screw, 5/16-18 x .75
11	710-3015	Hex Head Cap Screw, 1/4-20 x .75
12	911-1000	Belt Keeper, .25 DIA X 3.0
13	712-04063	Flangelock Nut, 5/16-18
14	712-04064	Flangelock Nut, 1/4-20
15	712-04065	Flangelock Nut, 3/8-16
16	712-0700	Flange Nut, 9/16-18
17	914-0145	Click Pin, .092 x 1.64 LG
18	718-04407	Spline Pulley Hub, 5/8
19	720-0142	Grip, Black
20	731-05766	Trailshield, 8.35 x 19.17
21	732-04409	Extension Spring, Wheel Drive
22	732-04443A	Extension Spring, Brake
23	736-0105	Washer, Spring, .401 x .870 x .063
24	736-0270	Washer, Bell, .265 x .75 x .062
25	736-0322	Washer, Flat, .450 x 1.250 x .164
26	736-04256	Washer, Flat, .39 x .87 x .06
27	918-04438B	Drive Spindle Assembly
28	738-04166	Spacer, Shoulder, .5000 x .1475
29	747-04635A	Belt Keeper Rod
30	747-04673	Coupling Link, .188
31	747-04678A	Brake Spring Mounting Rod
32	954-04145A	V Belt, 4L 64.2
33	756-04129B	Idler Pulley, 4.25 DIA
34	756-04258	Flat Sheave, DIA 7.75
35	756-04260	Engine Pulley, 3.20 x 4.35 DIA
36	756-04280	Idler Pulley, 3.50 DIA
37	787-01469B	Lower Shaft Lever


Ref.	Part Number	Description
38	787-01470A	Upper Shaft Lever
39	787-01473	Belt Keeper, .375 x 2.00
40	787-01523A	Wheel Drive Idler Bracket
41	918-04439B	Spacer Spindle Assembly
42	931-04244	Chute Deflector Assembly
43	631-04252	Mulch Cover
44	987-02420	Idler Arm Assembly
45	687-02476	Deck Assembly
46	710-04484	Screw, 5/16-18 x .750
47	710-0451	Bolt, Carriage, 5/16-18 x .750
48	710-0514	Hex Head Cap Screw, 3/8-16 x 1.00
49	710-0560	Screw, Carriage, 3/8-16 x 1.75
50	710-3184A	Hex Head Cap Screw, 3/8-16 x 2.00
51	712-0417A	Flange Nut, 5/8-18
52	912-3017	Hex Nut, 3/8-16
53	732-04406	Extension Spring, Timing Belt
54	732-04452	Extension Spring, Deck Brake
55	938-0347	Shoulder Spacer, .625 ID x .169
56	738-04162A	Shoulder Spacer, .8840 x .190
57	942-04154A	2 in 1 Blade
58	754-04136	Timing Belt, .315 x .787
59	954-04139	Aramid V Belt, 72.2
60	756-04129B	Idler Pulley, 4.25" DIA
61	756-0616	Idler Pulley, V-Type, 5.0 DIA
62	787-01440	Timing Idler Bracket
63	711-04027	Deflector Pin
64	726-04009	Push Cap
65	732-04012	Deflector Torsion Spring
66	787-01017A	Deflector Hinge Bracket
67	634-04349-0931	Wheel, 16 x 4 x 8
68	710-0627	Hex Screw, 5/16-24 x .750
69	736-0242	Washer, Bell, .340 x .872 x .060
70	912-0641	Nut, Hex, M16-1.5
71	921-04041	Water Nozzle Adaptor
72	736-0225	Washer, Lock, 5/8
73	737-04003D	Deck Water Nozzle
—	977S30145	Danger Label (Not Shown)

 CC 760 ES Dash

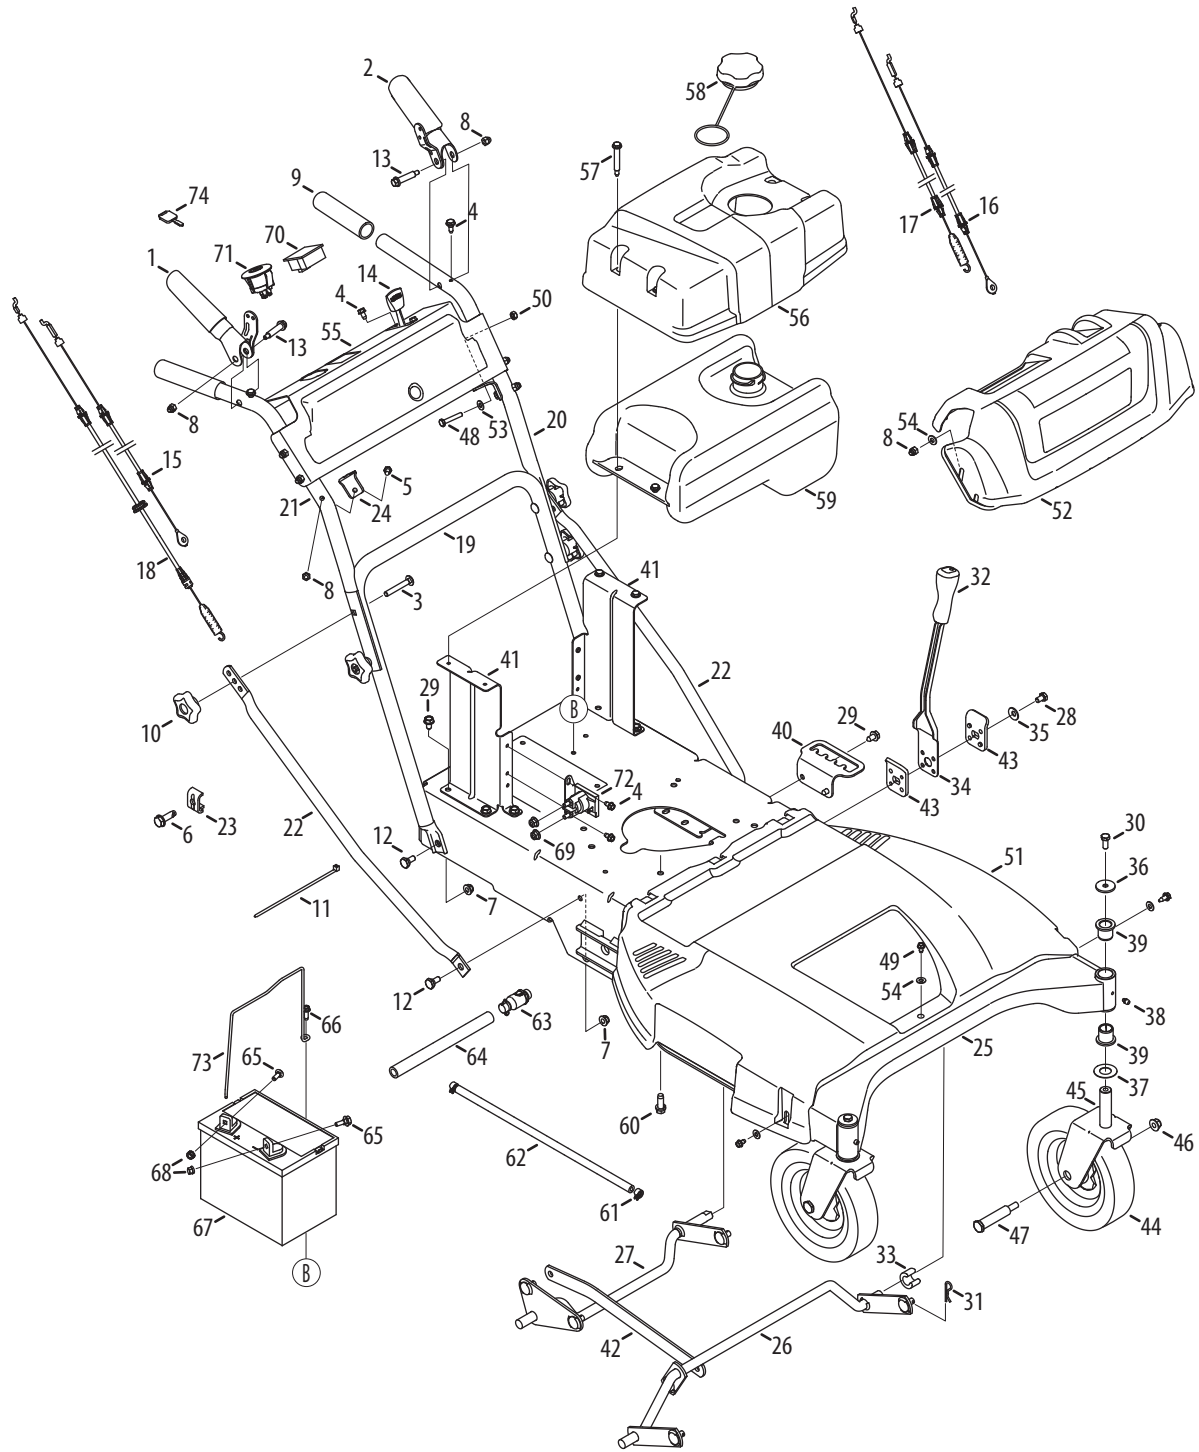

Ref.	Part Number	Description	Ref.	Part Number	Description
1	687-02426	RH Lever Assembly Bracket	40	787-01496	Height Adjustment Bracket
2	687-02427	LH Lever Assembly Bracket	41	787-01507	Fuel Tank Mount Bracket
3	710-0572	Screw, Carriage, 5/16-18 x 2.25	42	787-01510	Link Pivot Bracket
4	710-0599	Screw, 1/4-20 x 0.500	43	787-01521	Lever Pivot Bracket
5	710-0606	Hex Screw, 1/4-20 x 1.50	44	734-04263	Caster, Wheel, 8 x 1.75
6	710-1237	Screw, #10-32 x 0.625	—	941-0706	Bearing, Flange w/ftg
7	712-04063	Nut, Flangelock, 5/16-18	45	687-02263	Wheel Caster Bracket
8	912-0442	Lock Nut Cap, 1/4-20	46	712-04065	Nut, Flangelock, 3/8-16
9	720-0274	Grip, 1.0 ID x 5.0 LG	47	738-04216A	Bolt, Shoulder, .625 x 2.515 x 3/8-16
10	720-04072A	Star Knob, 5/16-18	48	710-0136	Hex Screw, 1/4-20 x 1.75
11	725-0157	Cable Tie, 3/16 x .05 x 7.4	49	710-0896	Screw, 1/4-14 x 0.625
12	938-0140	Screw, Shoulder, .435 x .178-5/16 x .56	50	712-3006	Nut, Hex, 1/4-20
13	938-1226	Screw, Shoulder, .375 x 1.355 x 1/4-20	51	931-05684	Belt Cover
14	946-04604	Throttle/Choke Cable, 38.0 x 1.1 EXT	52	731-05937	Handle Panel, Black
15	946-04606	RH Brake Cable, Tecumseh Trans.	53	736-0270	Washer, Bell, .265 x .75 x .062
16	946-04608	LH Brake Cable, Tecumseh Trans.	54	936-0463	Washer, Flat, .25 x .630 x .0515
17	946-04609	Wheel Clutch Cable	55	787-01548	Hour Meter and Key Handle Panel
18	946-04610	Deck Clutch Cable	56	731-05927	Fuel Tank Cover
19	749-04330	Lower Handle	57	738-04282	Screw, Shoulder, 1/4-20 x .32 x 1.8
20	749-04331	Upper LH Handle	58	951-10514	Fuel Cap
21	749-04332	Upper RH Handle	59	951-10541	Fuel Tank
22	749-04333	Adjustable Handle Brace	60	710-1315	Screw, 3/8-16 x 1.250
23	751B221535	Casing Clamp	61	726-0205	Hose Clamp, .490 DIA.
24	787-01490A	RH Cable Mount Bracket	62	751-10349	Fuel Hose, Low Permeation, 1/4
—	787-01491A	LH Cable Mount Bracket	63	951-10517A	Oil Drain
25	687-02255B	Frame Assembly, Tecumseh	64	751-3141-14	Extension Hose
26	687-02265	Front Deck Lift Assembly	65	710-04666	Hex Head Flange, 1/4-20 x .75
27	687-02419	Rear Deck Lift Assembly	66	710-0642	Screw, 1/4-20 x 0.750
28	710-04312	Hex Screw, 5/16-18 x .50	67	925-1707D	Battery, 155 CCA WET
29	710-0604A	Screw, 5/16-18 x 0.625	68	712-0271	Sems Nut, 1/4-20
30	710-0627	Hex Screw, 5/16-24 x .750	69	712-04064	Nut, Flangelock, 1/4-20
31	914-0145	Click Pin, .092 x 1.64 LG	70	925-04022B	Hour Meter
32	720-0311	Grip Handle, 1/2	71	925-04228	Key Switch
33	731-05791	Plastic Spacer, .63 ID x .75 LG	72	725-04439	Solenoid, 12V, 100 AMP
34	732-04418A	Deck Height Lever	73	747-04657	Battery Hold Down Strap
35	736-0242	Washer, Bell, .340 x .872 x .060	74	925-1745A	Key
36	736-0343	Washer, Flat, .330 x 1.25 x .120	—	925-2054A	Key, Yellow
37	936-0351	Washer, Flat, .760 ID x 1.50 OD	—	925-04476	Wiring Harness (Not Shown)
38	937-3000	Drive Lube Fitting, 3/16	—	725-04478	Starter Wire (Not Shown)
39	741-0660A	Flange Bearing, .760 x .941 x 1.0	—	712-0266A	Nut, Jamlock, 3/8-16 (Not Shown)

 CC 760 Dash

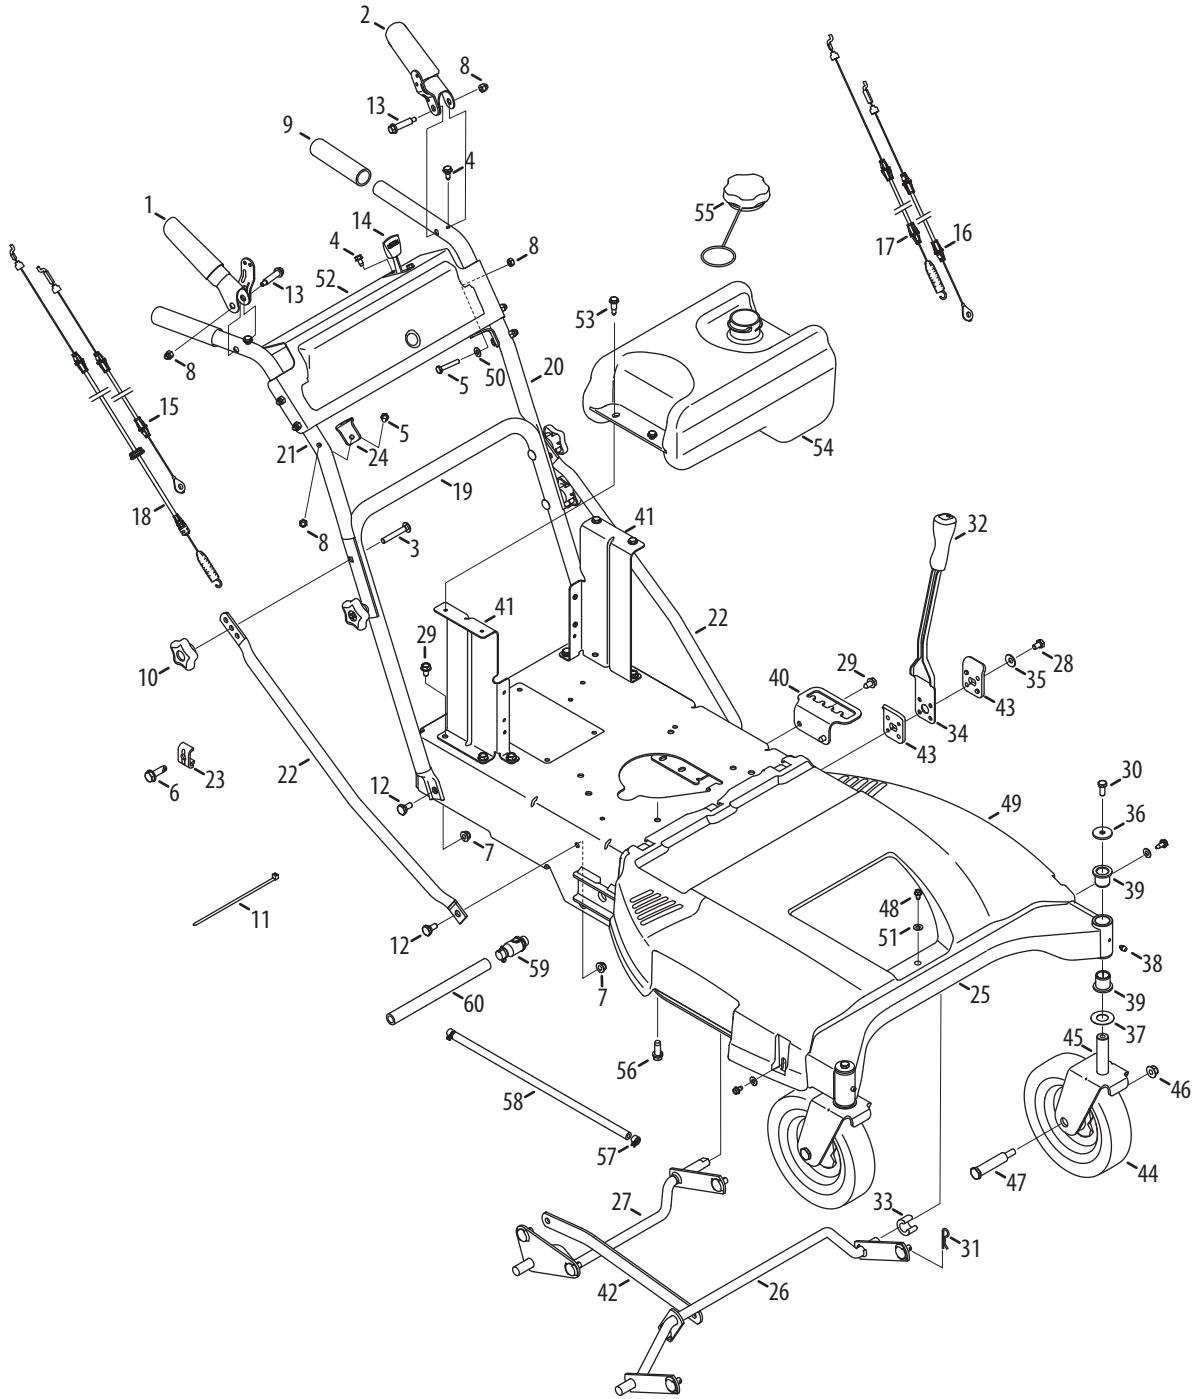

Ref.	Part Number	Description
1	687-02426	RH Lever Assembly Bracket
2	687-02427	LH Lever Assembly Bracket
3	710-0572	Screw, Carriage, 5/16-18 x 2.25
4	710-0599	Screw, 1/4-20 x 0.500
5	710-0606	Hex Screw, 1/4-20 x 1.50
6	710-1237	Screw, #10-32 x 0.625
7	712-04063	Nut, Flangelock, 5/16-18
8	912-0442	Lock Nut Cap, 1/4-20
9	720-0274	Grip, 1.0 ID x 5.0 LG
10	720-04072A	Star Knob, 5/16-18
11	725-0157	Cable Tie, 3/16 x .05 x 7.4
12	938-0140	Screw, Shoulder, .435 x .178-5/16 x .56
13	938-1226	Screw, Shoulder, .375 x 1.355 x 1/4-20
14	946-04604	Throttle/Choke Cable, 38.0 x 1.1 EXT
15	946-04606	RH Brake Cable, Tecumseh Trans.
16	946-04608	LH Brake Cable, Tecumseh Trans.
17	946-04609	Wheel Clutch Cable
18	946-04610	Deck Clutch Cable
19	749-04330	Lower Handle
20	749-04331	Upper LH Handle
21	749-04332	Upper RH Handle
22	749-04333	Adjustable Handle Brace
23	751B221535	Casing Clamp
24	787-01490A	RH Cable Mount Bracket
—	787-01491A	LH Cable Mount Bracket
25	687-02255B	Frame Assembly, Tecumseh
26	687-02265	Front Deck Lift Assembly
27	687-02419	Rear Deck Lift Assembly
28	710-04312	Hex Screw, 5/16-18 x .50
29	710-0604A	Screw, 5/16-18 x 0.625
30	710-0627	Hex Screw, 5/16-24 x .750

Ref.	Part Number	Description
31	914-0145	Click Pin, .092 x 1.64 LG
32	720-0311	Grip Handle, 1/2
33	731-05791	Plastic Spacer, .63 ID x .75 LG
34	732-04418A	Deck Height Lever
35	736-0242	Washer, Bell, .340 x .872 x .060
36	736-0343	Washer, Flat, .330 x 1.25 x .120
37	936-0351	Washer, Flat, .760 ID x 1.50 OD
38	937-3000	Drive Lube Fitting, 3/16
39	741-0660A	Flange Bearing, .760 x .941 x 1.0
40	787-01496	Height Adjustment Bracket
41	787-01507	Fuel Tank Mount Bracket
42	787-01510	Link Pivot Bracket
43	787-01521	Lever Pivot Bracket
44	734-04263	Caster, Wheel, 8 x 1.75
—	941-0706	Bearing, Flange w/ftg
45	687-02263	Wheel Caster Bracket
46	712-04065	Nut, Flangelock, 3/8-16
47	738-04216A	Bolt, Shoulder, .625 x 2.515 x 3/8-16
48	710-0896	Screw, 1/4-14 x 0.625
49	931-05684	Belt Cover
50	736-0270	Washer, Bell, .265 x .75 x .062
51	936-0463	Washer, Flat, .25 x .630 x .0515
52	787-01540	Handle Panel
53	938-1225	Screw, Shoulder, .3175 x .188, 1/4-20
54	951-10480	Fuel Tank
55	951-10514	Fuel Cap
56	710-1315	Screw, 3/8-16 x 1.250
57	726-0205	Hose Clamp, .490 DIA.
58	751-10349	Fuel Hose, Low Permeation, 1/4
59	951-10517A	Oil Drain
60	751-3141-14	Extension Hose

Model CC 760 ES

777122760



777013924



777122759



777X43688



777122809



1. Insert Mulch Plug's front tab into slot on outside of deck.
2. Pivot Mulch Plug inboard into discharge opening.
3. Slide rearward until slot bottoms out against edge of discharge opening.
4. Lower Discharge Chute to lock Mulch Plug in place.

 
777122793



777122815



777122808

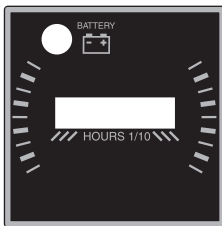

777530117



 
777D14227



777530145



777122814

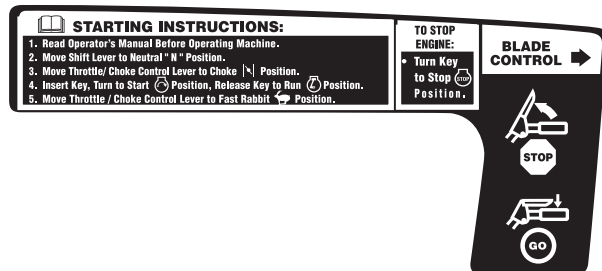

777D14283



777X43688



777122793



777122809



1. Insert Mulch Plug's front tab into slot on outside of deck.
2. Pivot Mulch Plug inboard into discharge opening.
3. Slide rearward until slot bottoms out against edge of discharge opening.
4. Lower Discharge Chute to lock Mulch Plug in place.

777122759



777013924



777122760



777530145



 
777014227



777530117



777122782

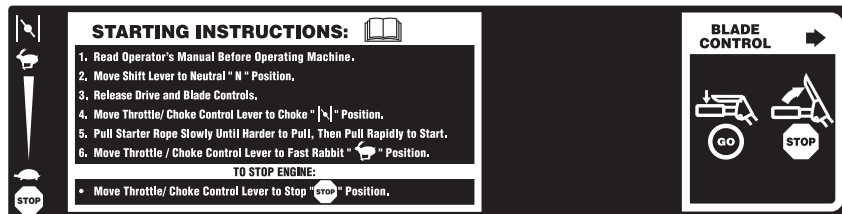


777014296



777122758



 Tecumseh Transmission

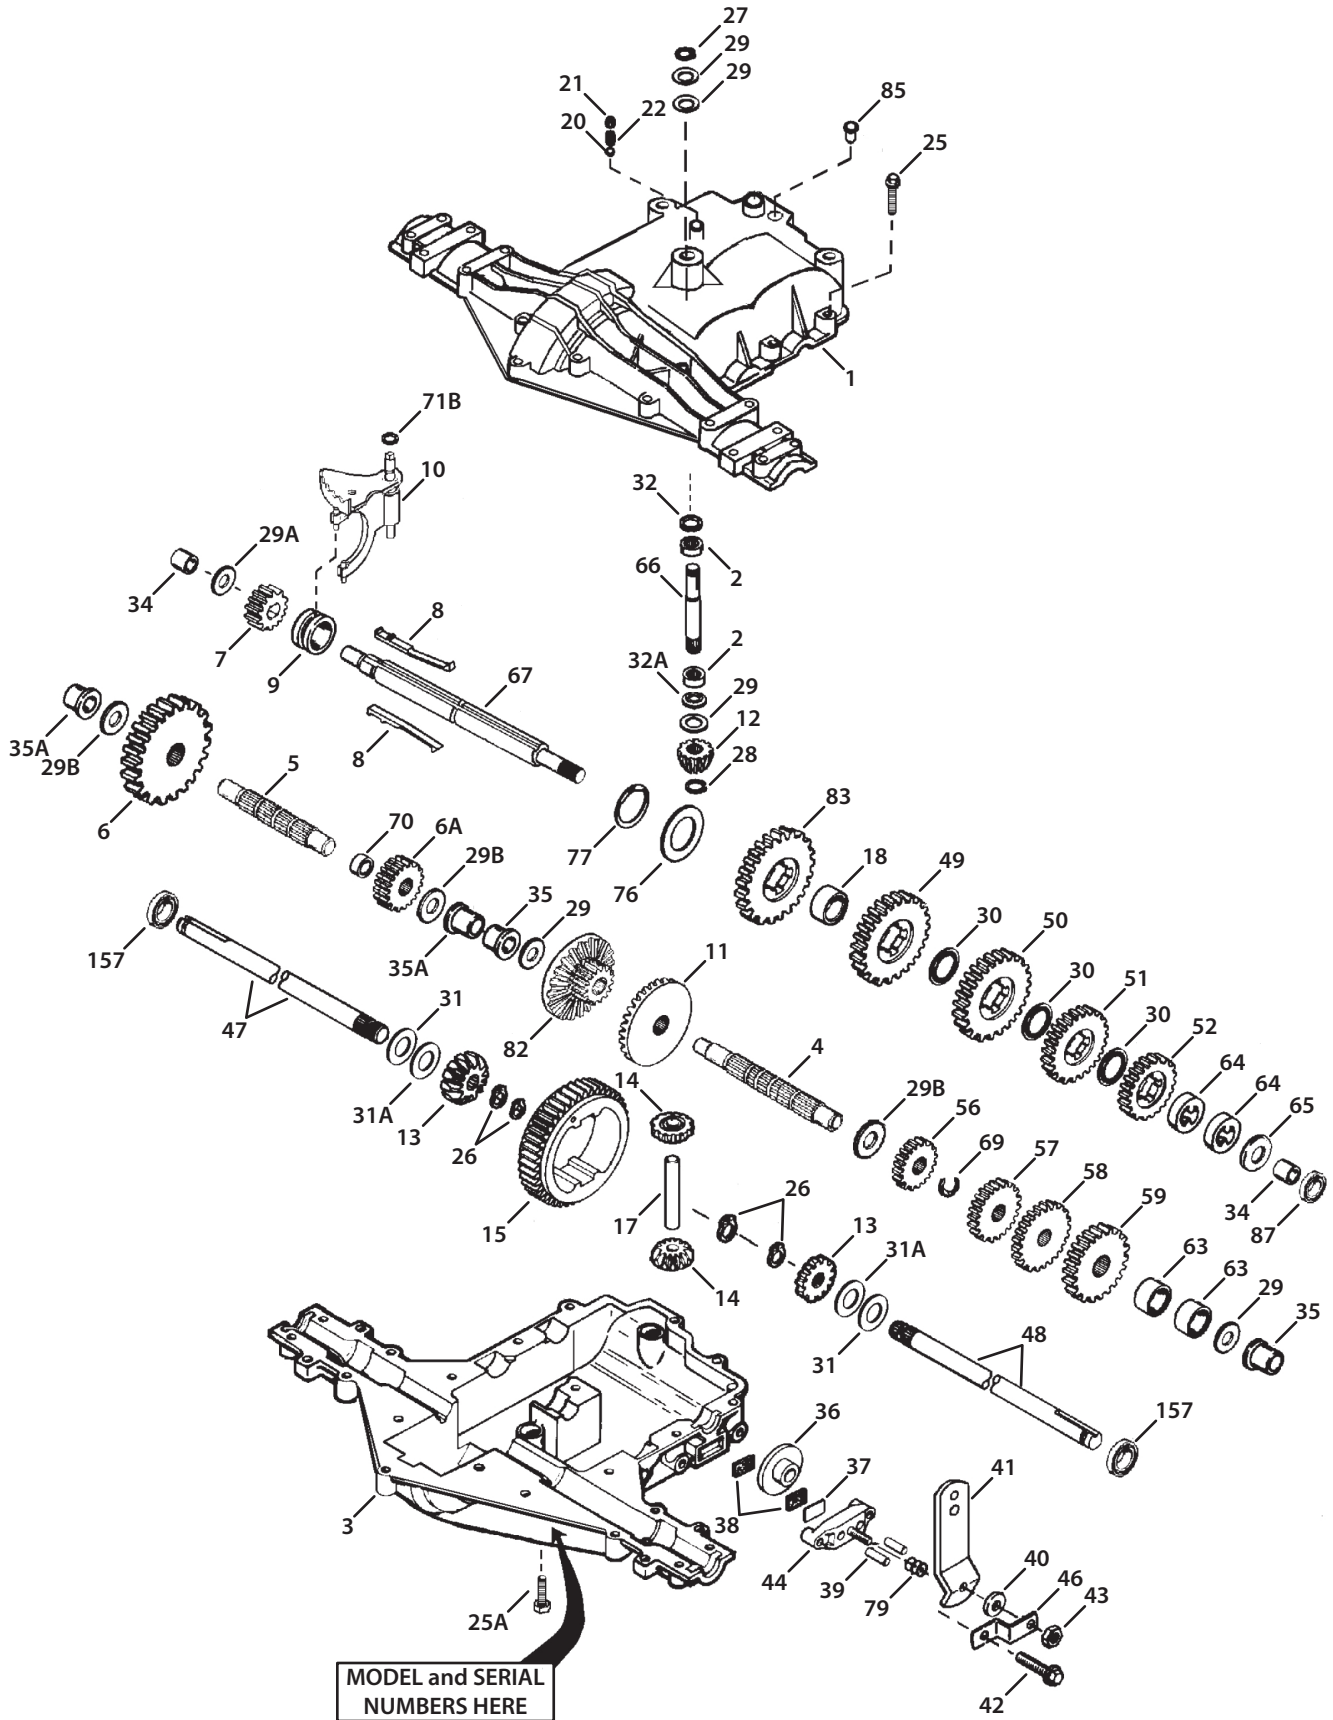






Tecumseh Transmission

Ref. No.	Part No.	Description
1	TC-772147	Transaxle Cover
2	TC-780086A	Needle Bearing (1/2" long)
3	TC-770128A	Transaxle Case
4	TC-776395	Countershaft
5	TC-776409	Output Shaft
6	TC-778364	Spur Gear (38T-PM/SER)
6A	TC-778369	Spur Gear (15T-PM/SER)
7	TC-778330	Spur Gear (11T-PM/SER)
8	TC-792180A	Shift Key Set (Qty. 2)
9	TC-784352	Shift Collar
10	TC-784378	Shift Rod & Fork Assembly
11	TC-778334	Bevel Gear (30T-PM)
12	TC-778309	Input Bevel Pinion (13T-PM)
13	TC-778368	Bevel Gear 13T (Incl. ref. 13 & 14)
14	TC-778368	Bevel Gear 13T (Incl. ref. 13 & 14)
15	TC-778370	Ring Gear (43T)
17	TC-786188	Drive Pin
18	TC-786102	Spacer (1.130" x .695")
20	TC-792077A	Ball (Stainless Steel 5/16" dia.)
21	TC-792211	Screw, 3/8-16 x 3/8"
22	TC-792079	Spring
25	TC-792073A	Screw, 1/4-20 x 1-1/4"
25A	TC-792177	Screw, 1/4-20 x 1-3/8"
26	TC-792125	Retaining Ring-package of 2
27	TC-792035	Retaining Ring
28	TC-788040	Retaining Ring
29	TC-780072	Washer .627" ID .031"
29A	TC-780160	Thrust Washer (.563" ID x .031")
29B	TC-780051	Thrust Washer (.762" ID X .031")
30	TC-780108	Shift Washer (Cupped)
31	TC-780001	Washer .750" ID .56"
31A	TC-780195	Washer .750" ID .062
32	TC-788083	Oil Seal 5/8"
32A	TC-792001	O Ring (.823" OD)
34	TC-780194	Bushing (.563")
35	TC-780193	Flanged Bushing (.625" ID)
35A	TC-780197	Flanged Bushing (.751" ID)

Ref. No.	Part No.	Description
36	TC-790075	Brake Disk
37	TC-790007	Brake Pad Plate
38	TC-799021A	Brake Pad (pkg. of 2)
39	TC-786026	Dowel Pin .3125" x .750"
40	TC-792076A	Washer .312" ID .059"
41	TC-790104	Brake Lever
42	TC-792177	Screw 1/4-20 x 1-3/8"
43	TC-792075	Lock Nut 5/16-24
44	TC-790025	Brake Pad Holder
46	TC-786086	Bracket
47	TC-775146	Axle (10.719" long) (Incl. 26)
48	TC-775147	Axle (15.312" long) (Incl. 26)
49	TC-778338	Spur Gear (27T-PM/IC)
50	TC-778342	Spur Gear (22T-PM/IC)
51	TC-778313	Spur Gear (19T-PM/IC)
52	TC-778350	Spur Gear (16T-PM/IC)
56	TC-778337	Spur Gear (13T-PM/SER)
57	TC-778341	Spur Gear (18T-PM/SER)
58	TC-778351	Spur Gear (21T-PM/SER)
59	TC-778349	Spur Gear (24T-PM/SER)
63	TC-786071	Countershaft Spacer 1-1/8" x 3/8"
64	TC-786072	Brake Shaft Spacer 1-3/8" x 3/8"
65	TC-780189	Washer .563" ID .062
66	TC-776472	Input Shaft
67	TC-776396	Brake Shaft
69	TC-792170	Retaining Ring (.75" x .042")
70	TC-786187	Spacer (.890")
71B	TC-788092	O-Ring
76	TC-780090	Flat Washer (1.128" ID x .058")
77	TC-788078A	Retaining Ring (1.125" x .050")
79	TC-792144	Spring
82	TC-778333	Bevel (30T) & Spur Gear
83	TC-778338	Spur Gear (27T-PM/IC)
85	TC-792154	Oil Fill Plug
87	TC-788089A	Oil Seal 9/16" ID
157	TC-788088A	Oil Seal 3/4" ID

     Briggs & Stratton Engine Model 215807

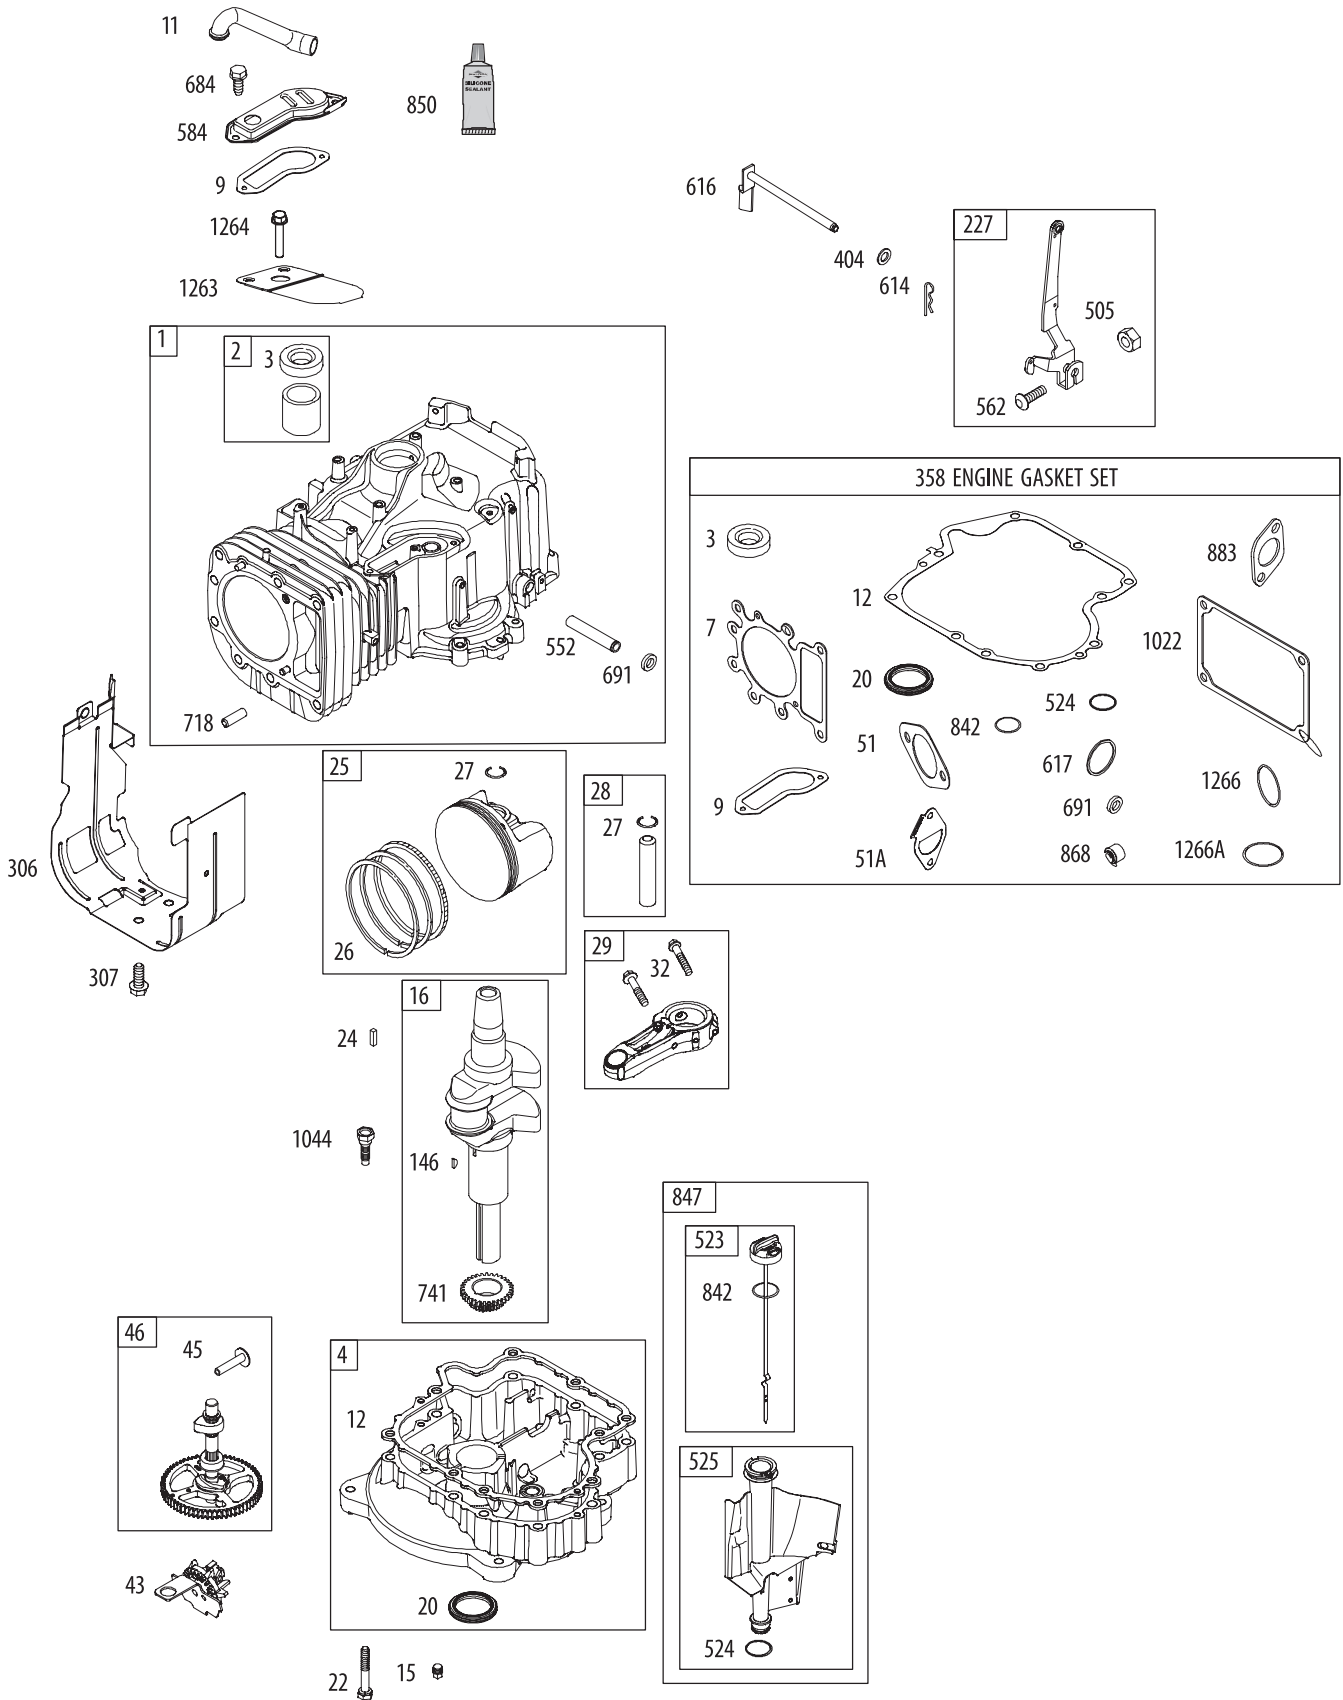

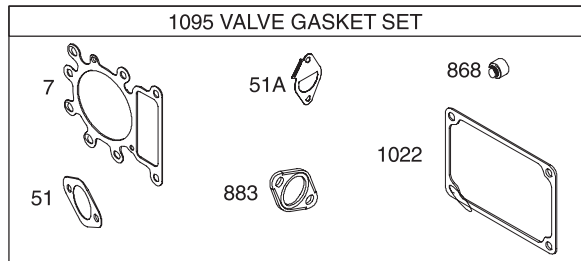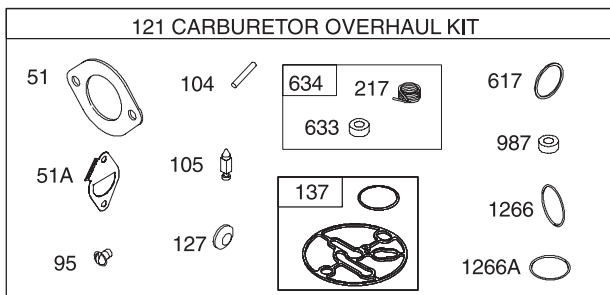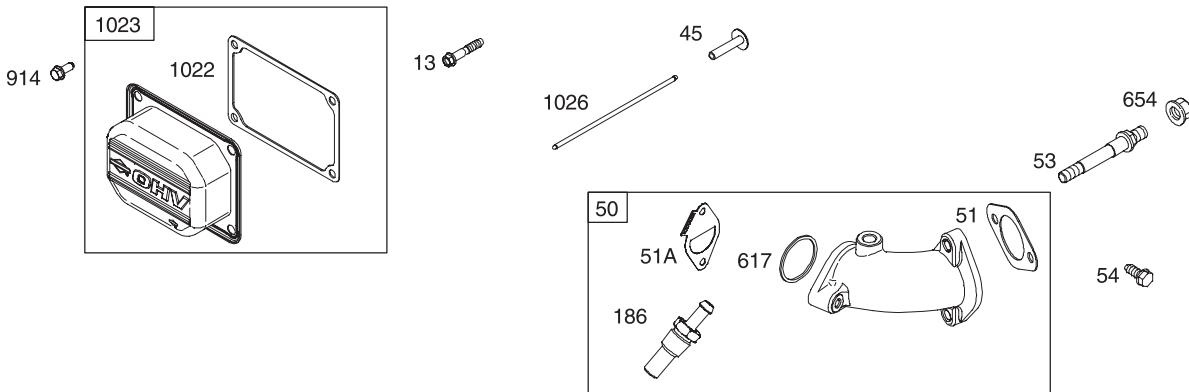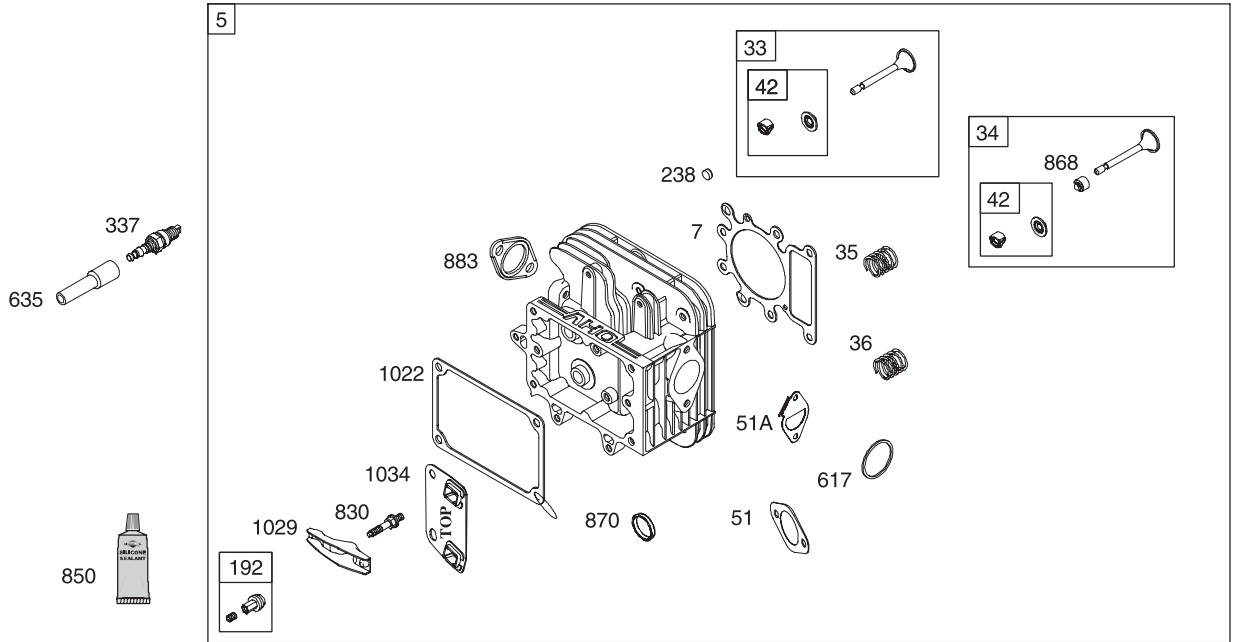





Briggs & Stratton Engine Model 215807

48 SHORT BLOCK


1058 OPERATOR'S MANUAL

1329 REPLACEMENT ENGINE

    1330 REPAIR MANUAL

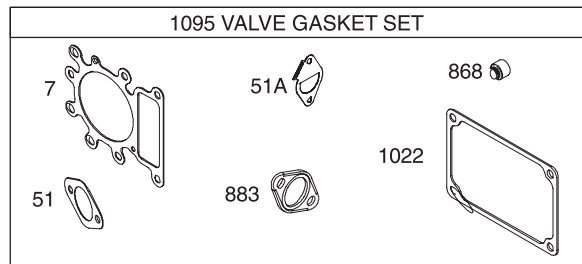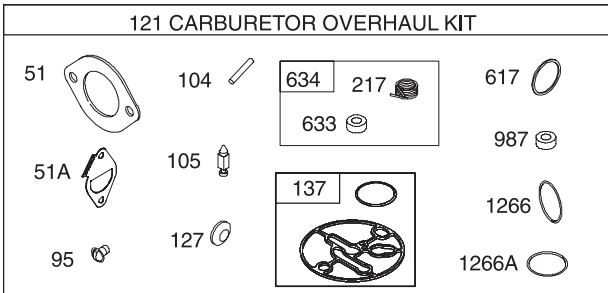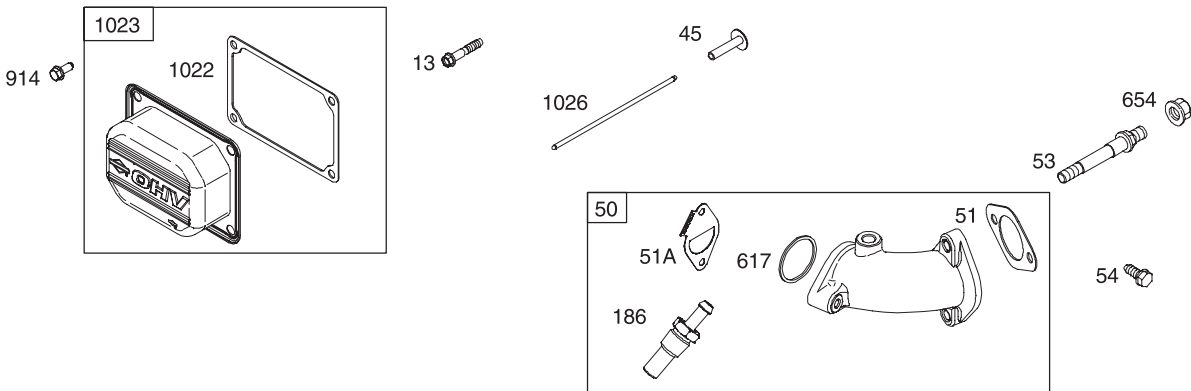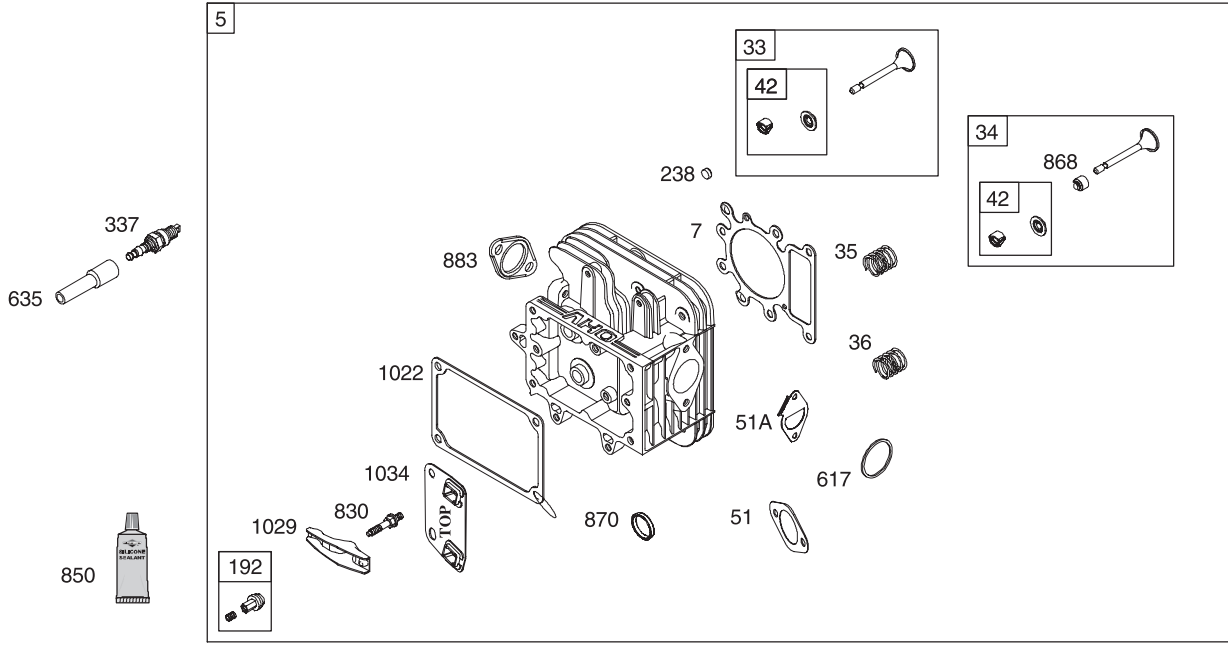

Briggs & Stratton Engine Model 215807

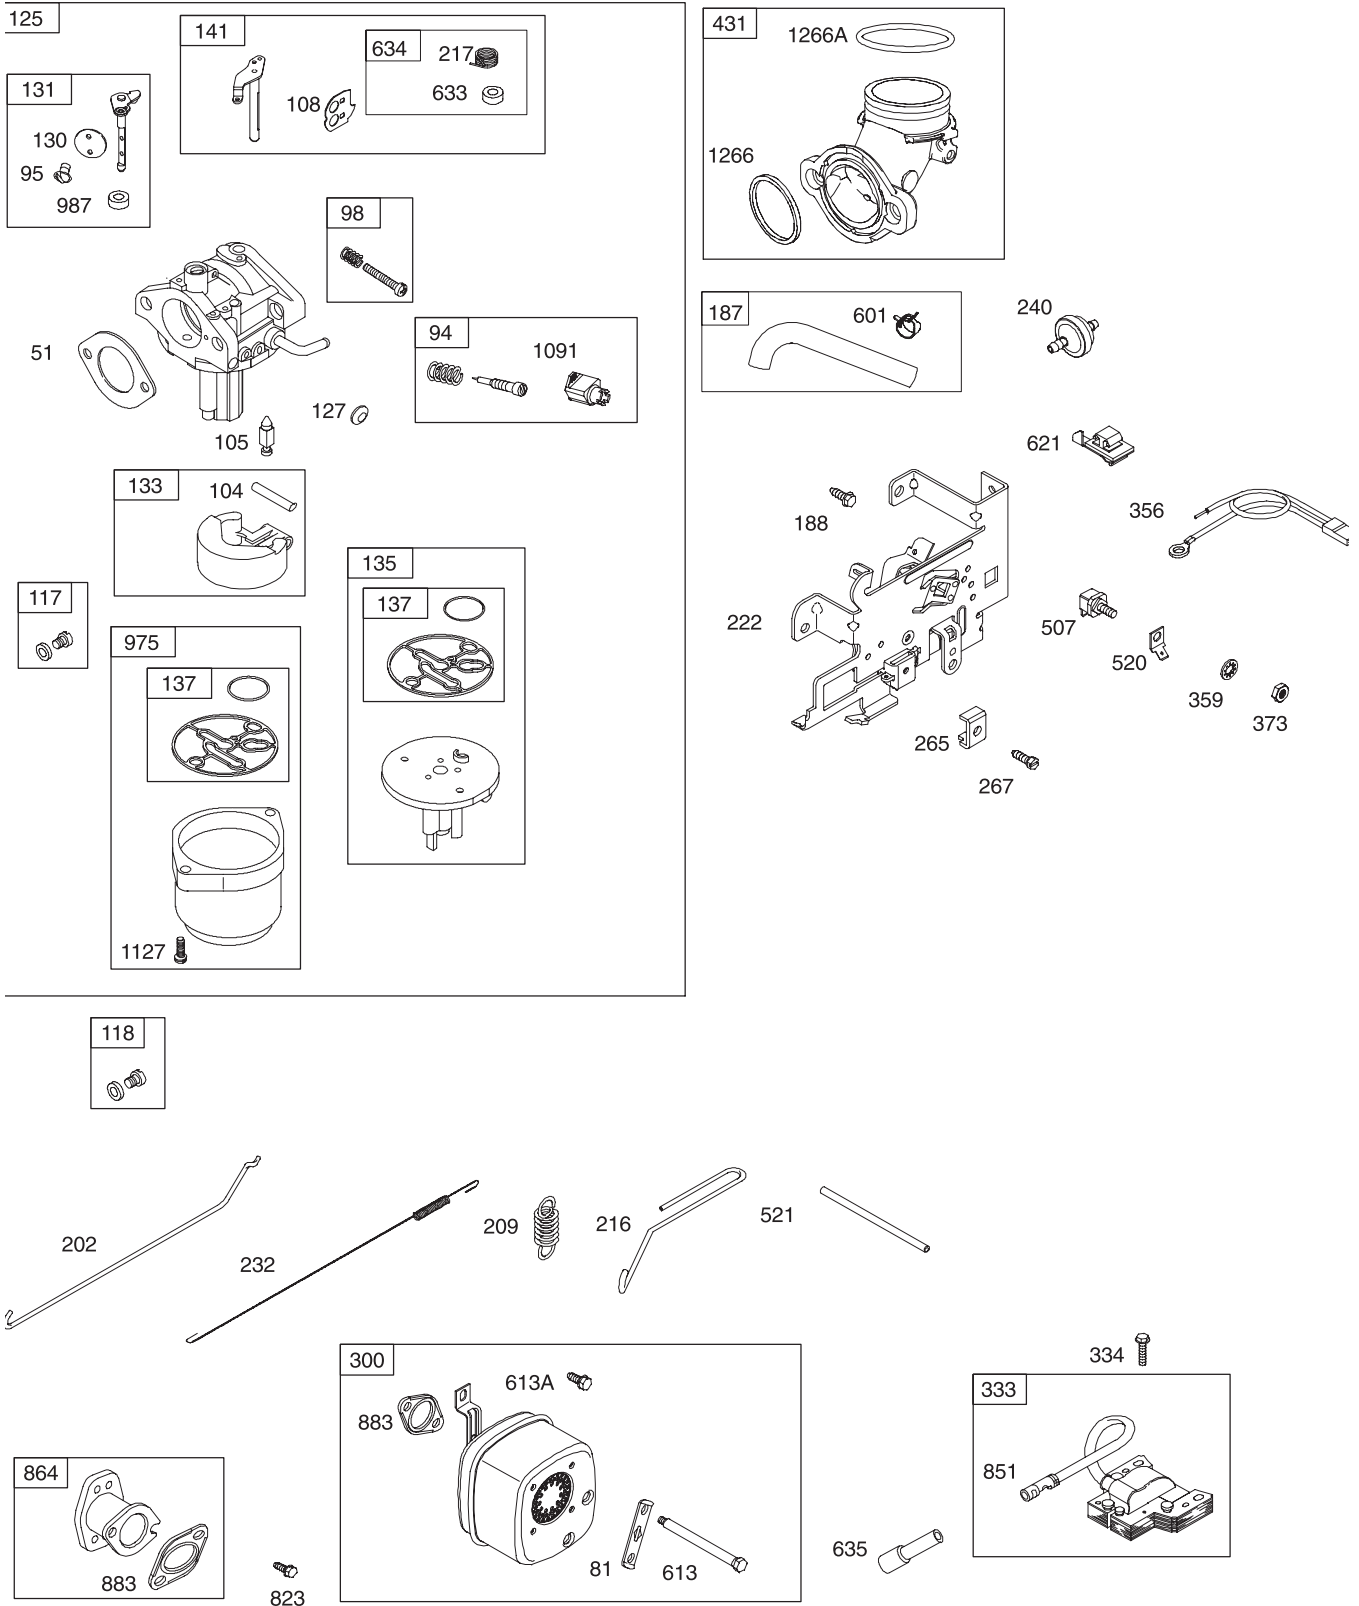 

Briggs & Stratton Engine Model 215807

Ref.	Part No.	Description
1	BS-697377	Cylinder Assembly
2	BS-399265	Kit-Bushing/Seal (Magneto Side)
3	BS-391086s	Seal-Oil (Magneto Side)
4	BS-697106	Sump-Engine
5	BS-796183	Head-Cylinder
7	BS-273280s	Gasket-Cylinder Head
9	BS-697109	Gasket-Breather
10	BS-697157	Screw (Breather Assembly)
11	BS-794683	Tube-Breather
12	BS-697110	Gasket-Crankcase
13	BS-690360	Screw (Cylinder Head)
15	BS-690946	Plug-Oil Drain
16	BS-796146	Crankshaft
20	BS-795387	Seal-Oil (PTO Side)
22	BS-692125	Screw (Crankcase Cover/Sump)
23	BS-698281	Flywheel
24	BS-222698s	Key-Flywheel
25	BS-797009	Piston Assembly (Standard)
	BS-797010	Piston Assembly (.020" Oversize)
26	BS-797011	Ring Set (Standard)
	BS-797012	Ring Set (.020" Oversize)
27	BS-698469	Lock-Piston Pin
28	BS-797013	Pin-Piston
29	BS-791633	Rod-Connecting
32	BS-791118	Screw (Connecting Rod)
33	BS-791934	Valve-Exhaust
34	BS-791935	Valve-Intake
35	BS-691279	Spring-Valve (Intake)
36	BS-691279	Spring-Valve (Exhaust)
37	BS-697352	Guard-Flywheel
42	BS-499586	Keeper-Valve
43	BS-691968	Slinger-Governor/Oil
45	BS-690564	Tappet-Valve
46	BS-793880	Camshaft
48	BS-697740	Short Block
50	BS-796188	Manifold-Intake
51	BS-692137	Gasket-Intake
51A	BS-796081	Gasket-Intake
53	BS-690227	Stud (Carburetor)
54	BS-691148	Screw (Intake Manifold)
78	BS-691003	Screw (Flywheel Guard)
81	BS-691178	Lock-Muffler Screw

Ref.	Part No.	Description
94	BS-793610	Kit-Idle Mixture
95	BS-690718	Screw (Throttle Valve)
98	BS-695408	Kit-Idle Speed
104	BS-694918	Pin-Float Hinge
105	BS-696136	Valve-Float Needle
108	BS-698773	Valve-Choke
117	BS-796079	Jet-Main (Standard)
118	BS-796332	Jet-Main (High Altitude)
121	BS-796184	Kit-Carburetor Overhaul
125	BS-794653	Carburetor
127	BS-690727	Plug-Welch
130	BS-698774	Valve-Throttle
131	BS-698776	Kit-Throttle Shaft
133	BS-694914	Float-Carburetor
135	BS-698780	Tube-Fuel Transfer
137	BS-698781	Gasket-Float Bowl
141	BS-698778	Kit-Choke Shaft
146	BS-691639	Key-Timing
186	BS-794873	Connector-Hose
187	BS-791805	Line-Fuel (Cut to required length)
187A	BS-791744	Line-Fuel (Formed) (Blower Housing)
188	BS-691693	Screw (Control Bracket)
192	BS-691986	Adjuster-Rocker Arm
202	BS-691841	Link-Mechanical Governor
209	BS-792813	Spring-Governor (Brown)
216	BS-691840	Link-Governor
217	BS-695409	Spring-Choke Return
222	BS-694042	Bracket-Control
227	BS-691374	Lever-Governor Control
232	BS-691842	Spring-Governor Link
238	BS-691843	Cap-Valve
240	BS-394358s	Filter-Fuel
265	BS-691024	Clamp-Casing
267	BS-794904	Screw (Casing Clamp)
300	BS-796000	Muffler
304	BS-796414	Housing-Blower
305	BS-697102	Screw (Blower Housing) (1/4-20x1.2)
305A	BS-793376	Screw (Blower Housing) (1/4-20x.81)
306	BS-697359	Shield-Cylinder
307	BS-691003	Screw (Cylinder Shield)
309	BS-693551	Motor-Starter
310	BS-690323	Screw (Starter Motor)

Briggs & Stratton Engine Model 215807


Ref.	Part No.	Description
311	BS-497608	Brush Set
324	BS-796308	Screen/Cup Assembly
333	BS-795315	Armature-Magneto
334	BS-691061	Screw (Magneto Armature)
337	BS-491055s	Plug-Spark
356	BS-398808	Wire-Stop
358	BS-796181	Gasket Set-Engine
359	BS-691077	Washer (Ground Terminal)
373	BS-691612	Nut (Ground Terminal)
404	BS-691691	Washer (Governor Crank)
415	BS-794129	Plug (Rotating Screen)
431	BS-697122	Elbow-Intake
445	BS-698413	Filter-Air Cleaner Cartridge
474	BS-696578	Alternator
505	BS-691251	Nut (Governor Control Lever)
507	BS-691972	Insulator
510	BS-693699	Drive-Starter
513	BS-692024	Clutch-Drive
520	BS-691084	Terminal-Ground
521	BS-690581	Shield-Cable
523	BS-699908	Dipstick
524	BS-691032	Seal-Dipstick Tube
525	BS-697184	Tube-Dipstick
544		Armature-Starter
552	BS-697144	Bushing-Governor Crank
562	BS-691119	Bolt (Governor Control Lever)
579	BS-691029	Nut (Starter Cable)
584	BS-794682	Cover-Breather Passage
597	BS-691696	Screw (Pawl Friction Plate)
601	BS-791850	Hose-Clamp (Green)
613	BS-691416	Screw (Muffler) (5/16x4.1)
613A	BS-691678	Screw (Muffler) (5/16x.625)
614	BS-691620	Pin-Cotter (Governor Crank)
616	BS-692012	Crank-Governor
617	BS-692138	Seal-O Ring (Intake Manifold) (Red)
621	BS-692310	Switch-Stop
633	BS-699813	Seal-Choke/Throttle Shaft (Choke Shaft)
634	BS-698779	Spring/Seal Assembly (Choke Shaft)
635	BS-691909	Boot-Spark Plug
643	BS-697155	Retainer-Air Filter
654	BS-690958	Nut (Carburetor)
691	BS-692407	Seal-Governor Shaft






Ref.	Part No.	Description
697	BS-690372	Screw (Drive Cap)
718	BS-690959	Pin-Locating
729	BS-691224	Clip-Wire
741	BS-697128	Gear-Timing
773	BS-796448	Retainer
783	BS-693713	Gear-Pinion
797	BS-693167	Nut (Brush Retainer)
801	BS-691283	Cap-Drive
802	BS-691286	Cap-End
803		Housing-Starter
823	BS-698941	Screw (Muffler Adapter)
830	BS-691095	Stud-Rocker Arm
842	BS-691031	Seal-O Ring (Dipstick Tube)
847	BS-790442	Dipstick/Tube Assembly
850	BS-100106	Sealant-Liquid
851	BS-692424	Terminal-Spark Plug
864	BS-796002	Adapter-Muffler
868	BS-690968	Seal-Valve
883	BS-692236	Gasket-Exhaust
914	BS-691108	Screw (Rocker Cover)
967	BS-697292	Filter-Pre Cleaner
968	BS-697420	Cover-Air Cleaner
975	BS-698783	Bowl-Float
987	BS-698777	Seal-Throttle Shaft
1005	BS-796082	Fan-Flywheel
1022	BS-272475s	Gasket-Rocker Cover
1023	BS-797421	Cover-Rocker
1026	BS-794573	Rod-Push (Exhaust)
	BS-697394	Rod-Push (Intake)
1029	BS-691751	Arm-Rocker
1034	BS-690822	Guide-Push Rod
1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
1040	BS-697381	Plate-Trim
1044	BS-698139	Screw (Flywheel)
1051	BS-691265	Ring-Retaining
1058	BS-276344	Operator's Manual
1059	BS-698516	Kit-Screw/Washer (Alternator)
1090	BS-691293	Retainer-Brush
1091	BS-691333	Cap-Limiter
1095	BS-795807	Gasket Set-Valve
1119	BS-691183	Screw (Alternator)

Briggs & Stratton Engine Model 215807






Ref.	Part No.	Description
1127	BS-695407	Screw (Float Bowl)
1263	BS-697124	Reed-Breather
1264	BS-697104	Screw (Breather Reed)
1266	BS-691917	Seal-O Ring (Intake Elbow) (Red)
1266A	BS-697123	Seal-O Ring (Intake Elbow) (Large)
1267	BS-697419	Latch-Blower Housing
1270	BS-793243	Plug-AVS Counterweight
1330	BS-276781	Repair Manual
1397	BS-796449	Washer (Blower Housing)
1329	BS-215807-0026-G1	Replacement Engine

      Briggs & Stratton Engine Model 215802




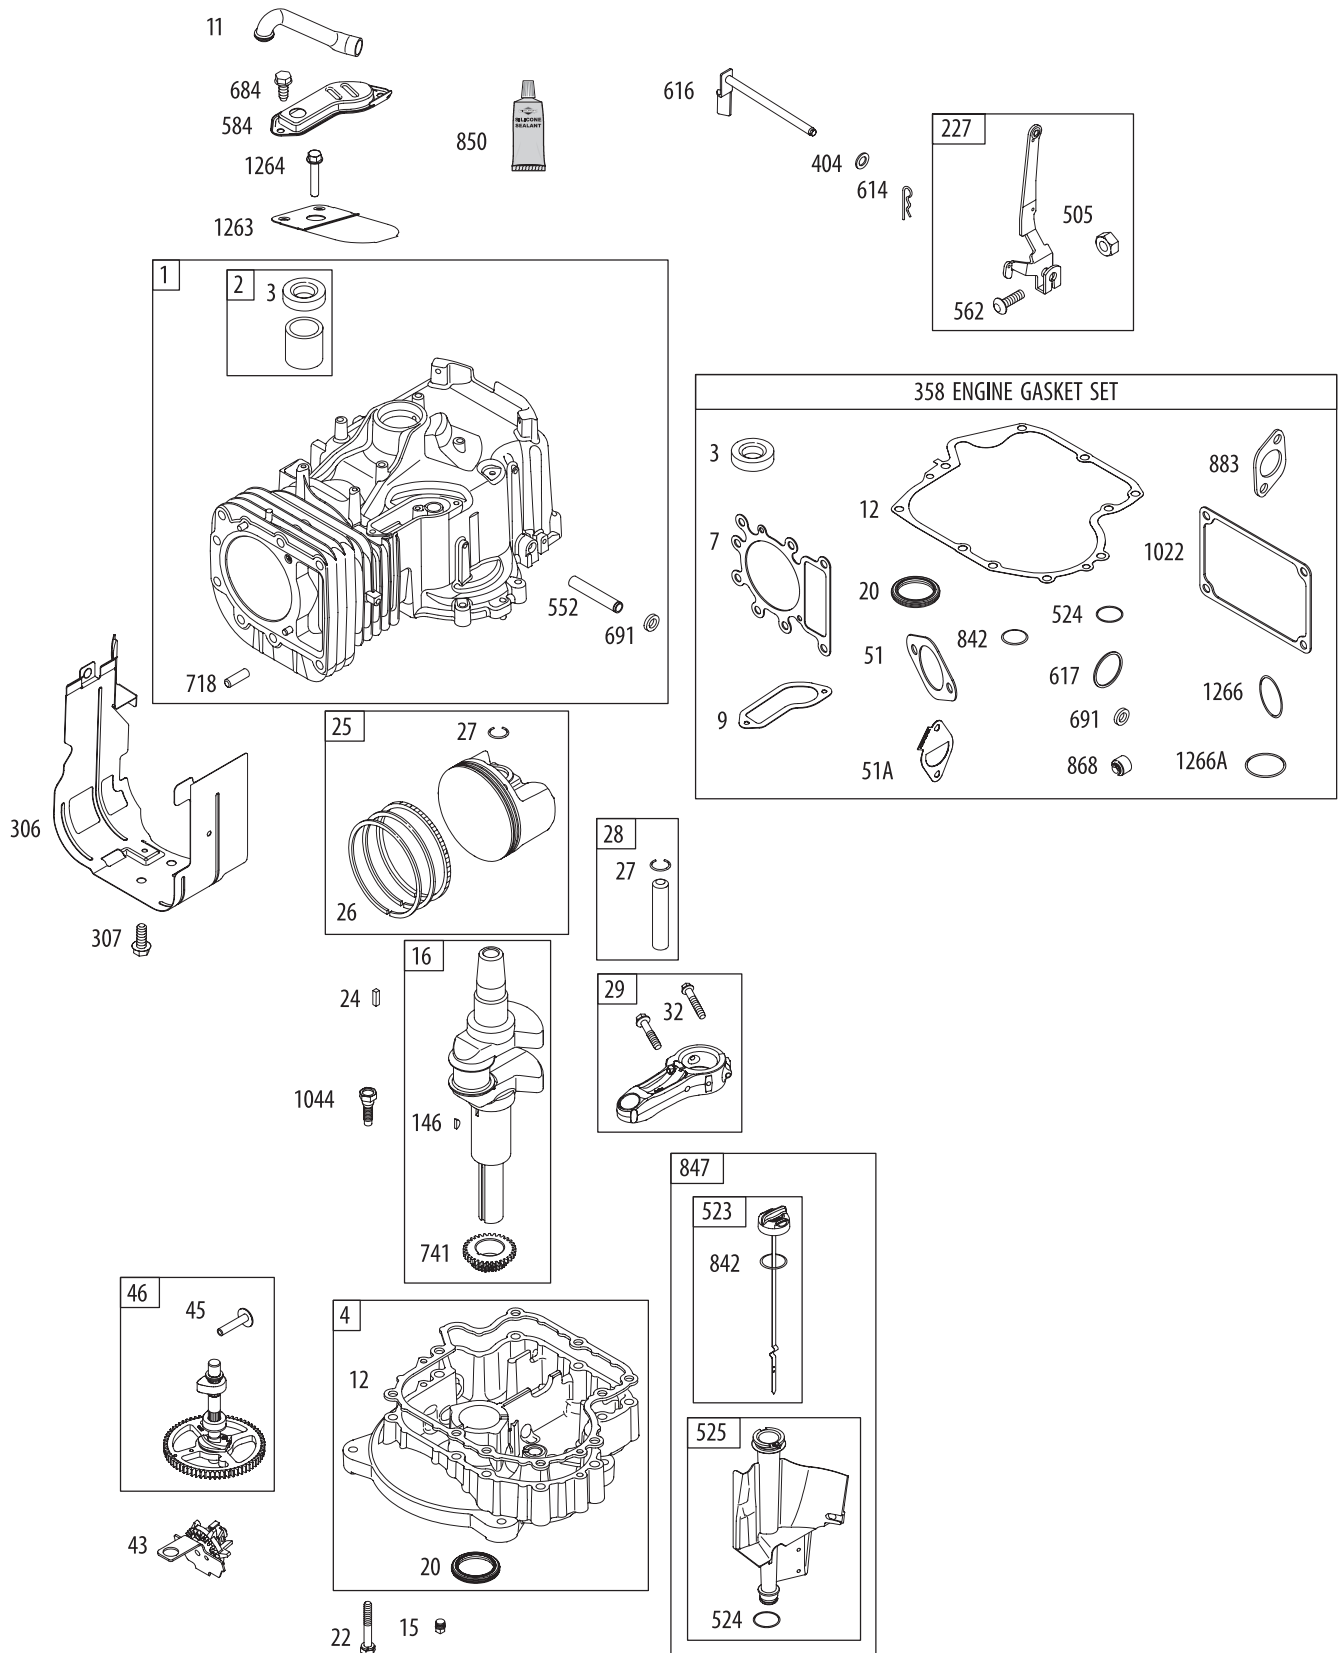


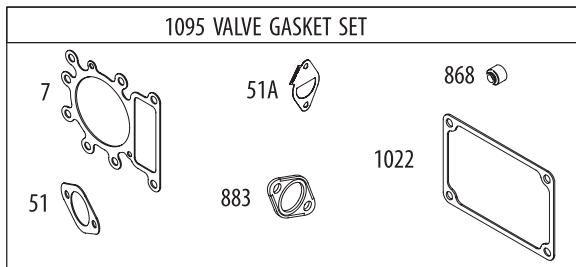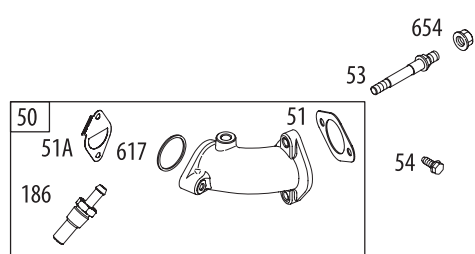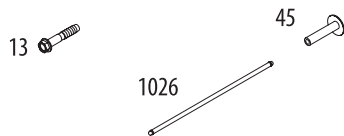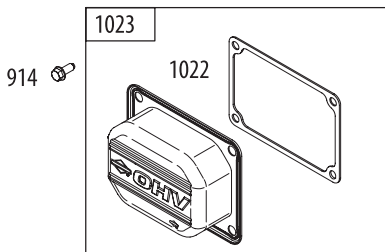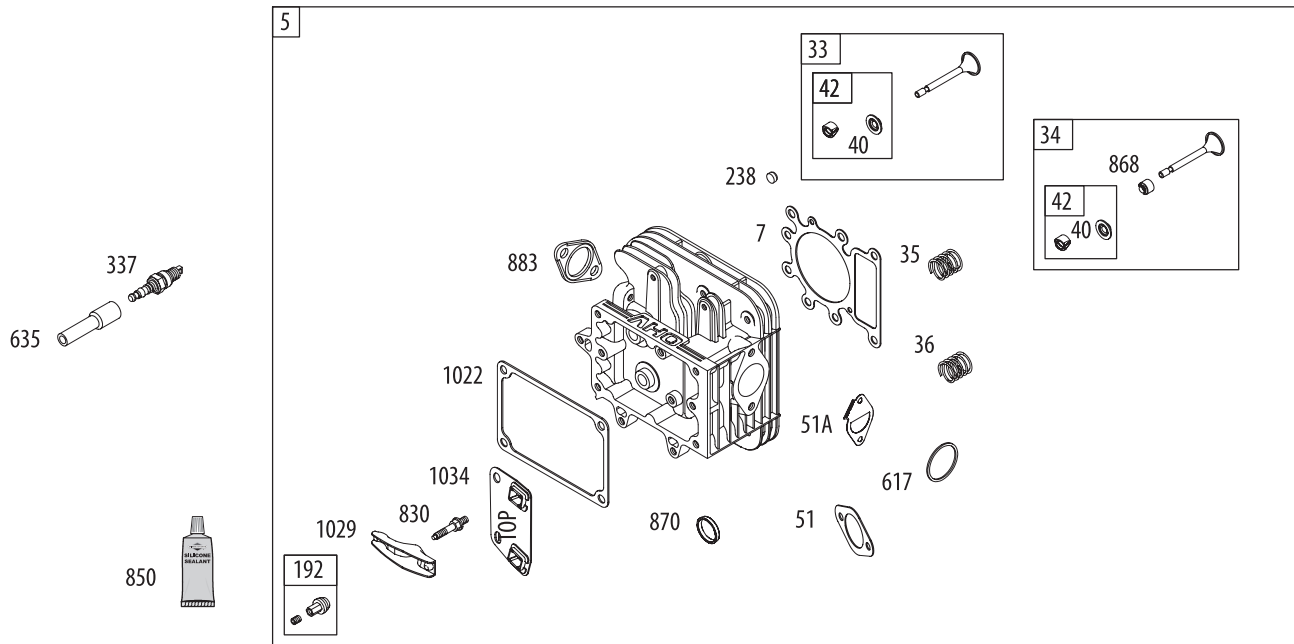


Briggs & Stratton Engine Model 215802

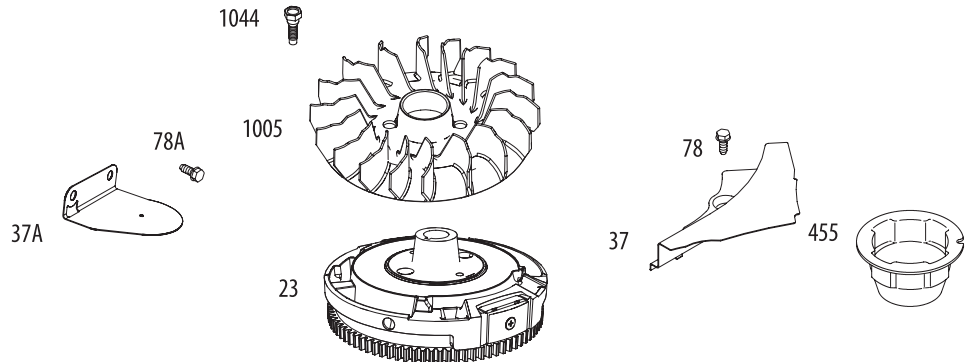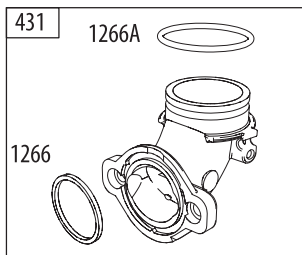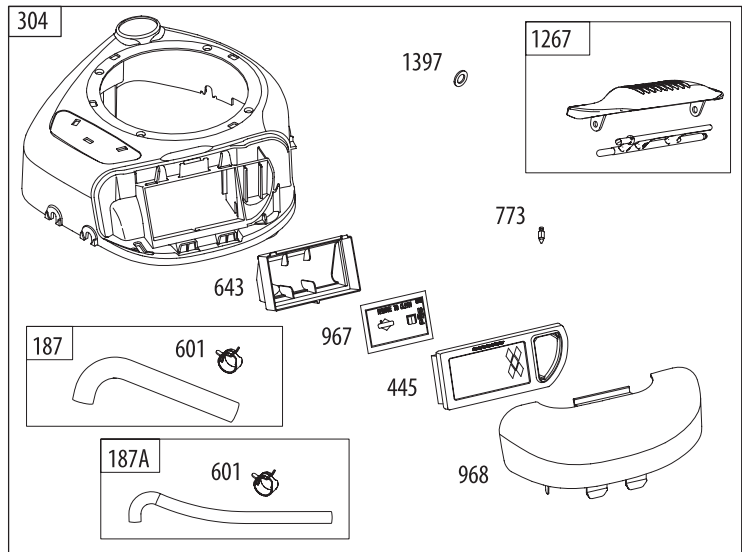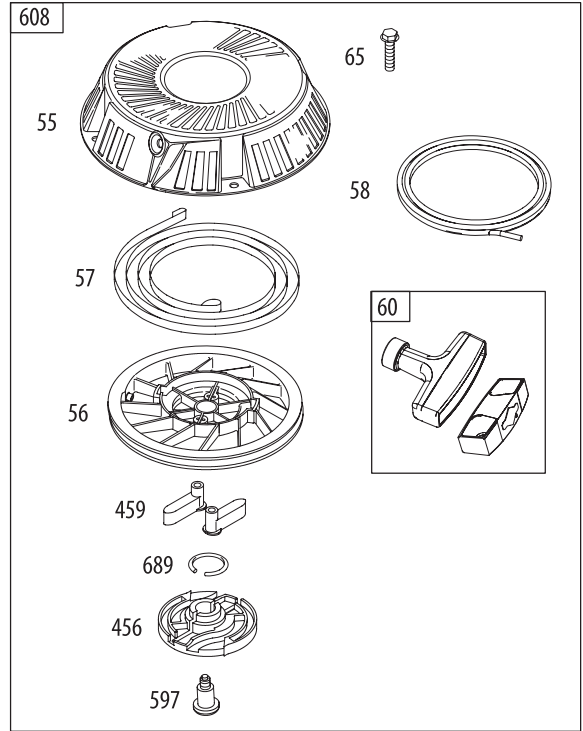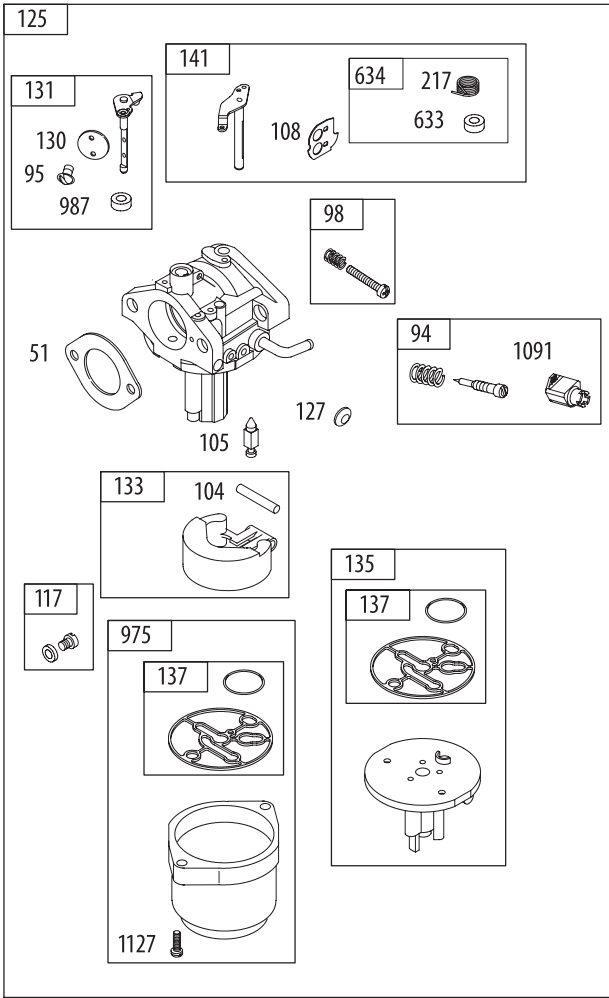     

Briggs & Stratton Engine Model 215802

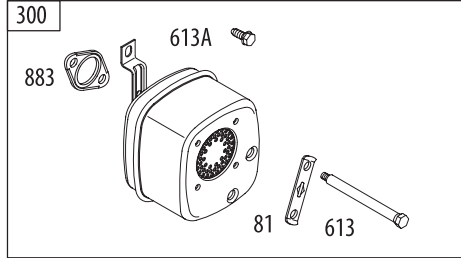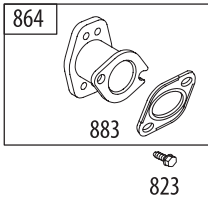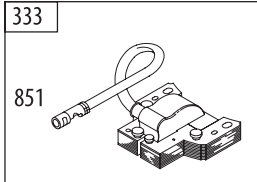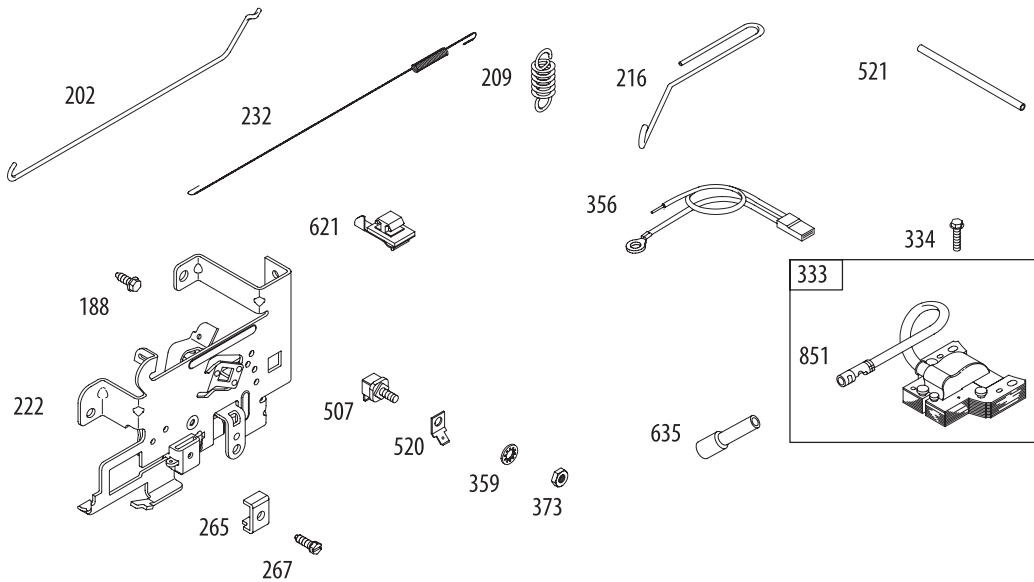    

1036 EMISSIONS LABEL

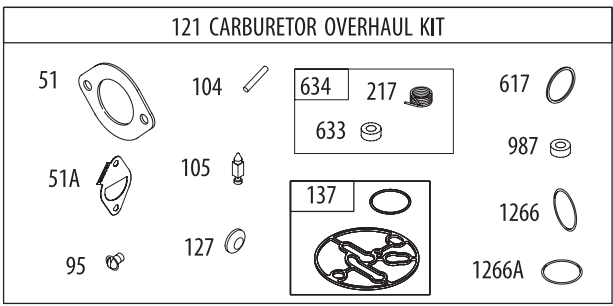 

Briggs & Stratton Engine Model 215802

Ref.	Part No.	Description
1	BS-697377	Cylinder Assembly
2	BS-399265	Kit-Bushing/Seal (Magneto Side)
3	BS-391086s	Seal-Oil (Magneto Side)
4	BS-697106	Sump-Engine
5	BS-796183	Head-Cylinder
7	BS-273280s	Gasket-Cylinder Head
9	BS-697109	Gasket-Breather
10	BS-697157	Screw (Breather Assembly)
11	BS-794683	Tube-Breather
12	BS-697110	Gasket-Crankcase
13	BS-690360	Screw (Cylinder Head)
15	BS-690946	Plug-Oil Drain
16	BS-796146	Crankshaft
20	BS-795387	Seal-Oil (PTO Side)
22	BS-692125	Screw (Crankcase Cover/Sump)
23	BS-695774	Flywheel
24	BS-222698s	Key-Flywheel
25	BS-797009	Piston Assembly (Standard)
—	BS-797010	Piston Assembly (.020" Oversize)
26	BS-797011	Ring Set (Standard)
—	BS-797012	Ring Set (.020" Oversize)
27	BS-698469	Lock-Piston Pin
28	BS-797013	Pin-Piston
29	BS-791633	Rod-Connecting
32	BS-791118	Screw (Connecting Rod)
33	BS-791934	Valve-Exhaust
34	BS-791935	Valve-Intake
35	BS-691279	Spring-Valve (Intake)
36	BS-691279	Spring-Valve (Exhaust)
37	BS-697352	Guard-Flywheel
37A	BS-697626	Guard-Flywheel
40	BS-690964	Retainer-Valve
42	BS-499586	Keeper-Valve
43	BS-691968	Slinger-Governor/Oil
45	BS-690564	Tappet-Valve
46	BS-793880	Camshaft
48	BS-697740	Short Block
50	BS-796188	Manifold-Intake
51	BS-692137	Gasket-Intake
51A	BS-794312	Gasket-Intake
53	BS-690227	Stud (Carburetor)
54	BS-691148	Screw (Intake Manifold)

Ref.	Part No.	Description
55	BS-695130	Housing-Rewind Starter
56	BS-695129	Pulley-Starter
57	BS-695131	Spring-Rewind Starter
58	BS-695132	Rope-Starter
60	BS-494212	Grip-Starter Rope
65	BS-690759	Screw (Rewind Starter)
78	BS-691003	Screw (Flywheel Guard) (10/24x.43)
78A	BS-690364	Screw (Flywheel Guard) (5/16-18x.37)
81	BS-691178	Lock-Muffler Screw
94	BS-793610	Kit-Idle Mixture
95	BS-690718	Screw (Throttle Valve)
98	BS-695408	Kit-Idle Speed
104	BS-694918	Pin-Float Hinge
105	BS-696136	Valve-Float Needle
108	BS-698773	Valve-Choke
117	BS-796079	Jet-Main (Standard)
118	BS-796332	Jet-Main (High Altitude)
121	BS-796184	Kit-Carburetor Overhaul
125	BS-794653	Carburetor
127	BS-690727	Plug-Welch
130	BS-698774	Valve-Throttle
131	BS-698776	Kit-Throttle Shaft
133	BS-694914	Float-Carburetor
135	BS-698780	Tube-Fuel Transfer
137	BS-698781	Gasket-Float Bowl
141	BS-698778	Kit-Choke Shaft
146	BS-691639	Key-Timing
187	BS-791805	Line-Fuel (Cut to required length)
187A	BS-791744	Line-Fuel (Formed)
188	BS-691693	Screw (Control Bracket)
192	BS-691986	Adjuster-Rocker Arm
202	BS-691841	Link-Mechanical Governor
209	BS-792813	Spring-Governor (Brown)
216	BS-691840	Link-Governor
217	BS-695409	Spring-Choke Return
222	BS-694042	Bracket-Control
227	BS-691374	Lever-Governor Control
232	BS-691842	Spring-Governor Link
238	BS-691843	Cap-Valve
240	BS-394358s	Filter-Fuel
265	BS-691024	Clamp-Casing
267	BS-794904	Screw (Casing Clamp)

Briggs & Stratton Engine Model 215802

Ref.	Part No.	Description
300	BS-796000	Muffler
304	BS-796414	Housing-Blower
305	BS-697102	Screw (Blower Housing) (Long)
305A	BS-793376	Screw (Blower Housing) (Short)
306	BS-697359	Shield-Cylinder
307	BS-691003	Screw (Cylinder Shield)
333	BS-795315	Armature-Magneto
334	BS-691061	Screw (Magneto Armature)
337	BS-491055s	Plug-Spark
356	BS-398808	Wire-Stop
358	BS-796181	Gasket Set-Engine
359	BS-691077	Washer (Ground Terminal)
373	BS-691612	Nut (Ground Terminal)
404	BS-691691	Washer (Governor Crank)
431	BS-697122	Elbow-Intake
445	BS-698413	Filter-Air Cleaner Cartridge
455	BS-695113	Cup-Flywheel
456	BS-695128	Plate-Pawl Friction
459	BS-281505s	Pawl-Ratchet
505	BS-691251	Nut (Governor Control Lever)
507	BS-691972	Insulator
520	BS-691084	Terminal-Ground
521	BS-690581	Shield-Cable
523	BS-699908	Dipstick
524	BS-691032	Seal-Dipstick Tube
525	BS-697184	Tube-Dipstick
552	BS-697144	Bushing-Governor Crank
562	BS-691119	Bolt (Governor Control Lever)
584	BS-794682	Cover-Breather Passage
597	BS-691696	Screw (Pawl Friction Plate)
601	BS-791850	Hose-Clamp (Green)
608	BS-695058	Starter-Rewind
613	BS-691416	Screw (Muffler) (Long)
613A	BS-691678	Screw (Muffler) (Short)
614	BS-691620	Pin-Cotter (Governor Crank)
616	BS-692012	Crank-Governor
617	BS-692138	Seal-O Ring (Intake Manifold) (Red)
621	BS-692310	Switch-Stop
633	BS-699813	Seal-Choke/Throttle Shaft (Choke Shaft)
634	BS-698779	Spring/Seal Assembly (Choke Shaft)
635	BS-691909	Boot-Spark Plug
643	BS-697155	Retainer-Air Filter

Ref.	Part No.	Description
654	BS-690958	Nut (Carburetor)
689	BS-691855	Spring-Friction
691	BS-692407	Seal-Governor Shaft
718	BS-690959	Pin-Locating
741	BS-697128	Gear-Timing
773	BS-796448	Retainer
823	BS-698941	Screw (Muffler Adapter)
830	BS-691095	Stud-Rocker Arm
842	BS-691031	Seal-O Ring (Dipstick Tube)
847	BS-790442	Dipstick/Tube Assembly
850	BS-100106	Sealant-Liquid
851	BS-692424	Terminal-Spark Plug
864	BS-796002	Adapter-Muffler
868	BS-690968	Seal-Valve
883	BS-692236	Gasket-Exhaust
914	BS-691108	Screw (Rocker Cover)
967	BS-697292	Filter-Pre Cleaner
968	BS-697420	Cover-Air Cleaner
975	BS-698783	Bowl-Float
987	BS-698777	Seal-Throttle Shaft
1005	BS-796082	Fan-Flywheel
1022	BS-272475s	Gasket-Rocker Cover
1023	BS-797421	Cover-Rocker
1026	BS-794573	Rod-Push (Exhaust)
—	BS-697394	Rod-Push (Intake)
1029	BS-691751	Arm-Rocker
1034	BS-690822	Guide-Push Rod
1036		Label-Emissions (Available from a Briggs & Stratton Authorized Dealer)
1044	BS-698139	Screw (Flywheel)
1091	BS-691333	Cap-Limiter
1095	BS-796189	Gasket Set-Valve
1127	BS-695407	Screw (Float Bowl)
1263	BS-697124	Reed-Breather
1264	BS-697104	Screw (Breather Reed)
1266	BS-691917	Seal-O Ring (Intake Elbow) (Red)
1266A	BS-697123	Seal-O Ring (Intake Elbow) (Large)
1267	BS-697419	Latch-Blower Housing
1397	BS-796449	Washer (Blower Housing)
1329	BS-215802-0015-G1	Replacement Engine



To order replacement parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
