



E320VL / E370VL / E420VL / E420VO / E470VL / E550VL LCD **HDTV** QUICKSTART GUIDE

5 SETUP (Cont.)

1. The Initial Setup menu should appear on-screen. Use your remote control to follow the directions on the HDTV. Be sure to insert the batteries in your remote first.
2. Select your desired language (see Fig. 1).
3. Choose Home Mode for optimal energy savings (see Fig. 2).

IF YOU USE A CABLE OR SATELLITE BOX:

1. Exit the Setup Wizard.
2. Select the input source for the device you are connecting to your HDTV.
3. You're done! Enjoy the show.

IF YOU USE A CABLE FROM THE WALL OR AN ANTENNA TO RECEIVE TV CHANNELS:

1. Choose between Cable or Antenna to match your input source (see Fig. 3).
2. Begin the scan for channels (see Fig. 4).

Note: Your Service Provider may provide access to HD channels during the channel scan. Please be patient and wait for 100% completion.

3. Once the scan is complete, follow the on-screen instruction to exit the Initial Setup menu (see Fig. 5).

Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



EXTENDED WARRANTIES

Protect your VIZIO product with up to 5 years of added repair service! Extended coverage begins when the manufacturer's warranty expires so you'll receive maximum protection!

Visit us online at:
www.VIZIO.com

or Call:
(888) 849. 4623
For more info on Extended Warranties

LEARN MORE

Refer to your User Manual for in-depth descriptions or more information.

REGISTER NOW

Register your product today and receive the latest VIZIO news and special offers.

www.VIZIO.com

HELP TOPICS

PROGRAM YOUR CABLE OR SATELLITE REMOTE

Call your Cable or Satellite provider to determine if you need a 3, 4 or 5-digit code. Refer to the following chart of VIZIO codes and follow your provider's instructions to program your Cable or Satellite remote.

SERVICE PROVIDER	5-DIGIT CODES	4-DIGIT CODES	3-DIGIT CODES
CABLE	11758, 10178, 10128	1758, 0178, 0128	
DIRECT TV	11758, 10178, 10128	1758, 0178, 0128	
DISH NETWORK			627

PROBLEM



SOLUTION

No Power

Make sure the power button is ON . Make sure the AC power cord is securely connected to the AC socket and try plugging the TV directly into the wall. Plug another electrical device (like a radio) to the outlet to verify the outlet is supplying power.

Picture is blurry or fuzzy/ image quality issues

For the best image quality, view HD wide screen programs where possible. If HD content is not available, view Standard Definition from a digital source. Standard analog TV will always be noticeably inferior to HD because your digital flat panel TV has video that is many times better than old TVs, and thus you can see interference and deficiencies you did not know you had.

Cannot change channels up and down with direct cable hookup from wall or antenna

Press the MENU button. Use the arrows to navigate to the TV TUNER MENU. Highlight the first option, called Tuner Mode. Select the appropriate input by using the left and right arrows. Once Tuner Mode is correct, highlight "AutoSearch", then press the right arrow.

Cannot return to the Setup Wizard

The Setup Wizard is no longer accessible after being run once, but all of the same settings can still be changed. Press the MENU button to access them. For channel scan, see the above topic.

Screen is displaying blue/no signal and/or turning off after a few seconds

Your TV may be on an inactive input. After powering on the TV, press the INPUT button on your remote repeatedly until a picture re-appears. If this does not work, try it a second time but press the button slower this time; it can take as long as 30 seconds for the image to reappear.

Panoramic mode is not available

When the TV displays an HD resolution the Panoramic viewing mode will not be available.

Black or gray bars on top, bottom, and/or sides of picture

Try setting your TV to wide or zoom mode; the image should fill the screen. If you still see bars, they are part of the image the TV is receiving. Cable and satellite boxes may add black bars to the picture, especially when HDMI cables are used. For more information, please contact your service provider.