

GRUNDIG

made for you

4 IN 1 MULTI HAIR TRIMMER

MT 6740

de

en

fr

pt

es


pl

cs

tr

el






DEUTSCH	4 - 17
ENGLISH	18 - 29
FRANÇAIS	30 - 41
PORTUGUÊS	42 - 53
ESPAÑOL	54 - 65
POLSKI	66 - 77
ČESKY	78 - 89
TÜRKÇE	90 - 101
ΕΛΛΗΝΙΚΑ	102 - 113

SAFETY

Please note the following instructions when using the appliance:

- The appliance is designed for domestic use only.
 - Observe these instructions in order to prevent damage to the appliance or danger arising from improper use. Keep them in a safe place.
 - Never use the appliance in the bath, shower or over a wash basin filled with water; nor should it be operated with wet hands.
- 
- Do not immerse the appliance in water or let it come into contact with water, even during cleaning.
 - Do not drop the appliance.
- Always disconnect the power supply unit if the appliance is not being charged or used.
 - If not already present, for additional protection it is recommended to install a residual-current-operated protective device (RCD) with a rated residual operating current not exceeding 30 mA in the electrical circuit of your bathroom. Ask your electrician for advice.
 - Never use the appliance if it is visibly damaged.
 - Keep the appliance away from children.
 - Do not open the appliance under any circumstances. No warranty claims are accepted for damage caused by incorrect handling.

OVERVIEW

See the illustrations on page 2.

Controls

- A** Professional cutting head made from industrial ceramic (width 38 mm).
- B** Side catches for removing attachments.
- C** On/off switch.
- D** Charging display (LED). Lights up red when charging and green when it is fully charged.
- E** Socket for plugging into the charging unit or connecting the power supply unit.
- F** Charging unit.

Accessories

- G** Beard trimming attachment (width 30 mm).

- H** Extendable plug-in comb system suitable for both cutting widths, with precise trimming grade display for hair lengths of 2, 4, 6, 8, 10, 12, 14 and 16 mm.
- I** Thinning comb for 2 mm cutting length.
- J** Shaving attachment with single blade foil for a smooth shave.
- K** Power supply unit.

Other accessories

- 1 x two combs.
- 1 x cleaning brush.
- 1 x oil for cutting head.

Rechargeable battery operation

When operating the appliance with the built-in nickel metal hydride battery, only use the power unit supplied for charging.

Check if the mains voltage on the type plate of the power supply unit supplied corresponds to your local mains supply.

- 1 Plug the power cord into the appliance socket **E** and the power supply unit into the wall socket.

Notes

- Charge up the batteries completely before you use them for the first time or if you have not used them for a long time (approx. 12 hours' timer-controlled charging).
 - The charging display **D** lights up red when charging and changes to green when it is fully charged.
- Charging time is approx. 12 hours when the appliance is switched off. If you switch on the appliance while it is charging, charging will stop.
 - The charging display **D** disappears.
- The ambient temperature should be between 5 °C and 40 °C.
- When fully charged, the appliance works for around 60 minutes. It is not advisable to charge the batteries after every use, especially if you do not use the appliance for the full 60 minutes. Only charge the batteries when they are completely discharged. This increases their service life. Do not charge it every day.

POWER SUPPLY

Using the charging unit

- 1 Put the socket **E** of the appliance into the charging unit.
- 2 Plug the power cord into the socket on the charging unit.
- 3 Plug the power supply unit into the wall socket.

Mains operation (with the power supply unit)

Check if the mains voltage on the type plate of the power supply unit supplied corresponds to your local mains supply.

The only way to disconnect the device from the mains is to unplug the power supply unit.

- 1 Plug the power supply unit into the socket **E** on the appliance.
- 2 Plug the power supply unit into the wall socket.

Caution

- When in the bathroom or beside a water connection, you must only use the appliance in battery mode; never run it from the mains.

OPERATION

Special features

This appliance has four separate functions:

- Function 1: precise hair trimming at a width of 38 mm.
- Function 2: precise beard trimming at a width of 30 mm.
- Function 3: hair or beard trimming with various cutting lengths (2, 4, 6, 8, 10, 12, 14, 16 mm) at widths of 38 mm or 30 mm.
- Function 4: close shaving.

Switching on and off

- 1 Press the button **C** to switch on the appliance.
- 2 Press the button **C** to switch off the appliance.

Function 1

Trimming hair ...

... using the ceramic cutting head **A** (width 38 mm).



- 1 If necessary, remove the attachment by pressing in both side catches **B** and lifting off.
- 2 Insert ceramic cutting head **A** carefully at the top and press down until it clicks into place.
- 3 Place a towel around the neck and shoulder of the person whose hair you are trimming.

- 4 Make sure the person is seated so that their head is roughly at your eye level. Before trimming, comb the hair so that it falls naturally and you can see the direction in which it grows.

Function 2

Beard trimming ...

... using the beard trimming attachment **G** (width 30 mm).



- 1 If necessary, remove the attachment by pressing in both side catches **B** and lifting off.
- 2 Insert beard trimming attachment **G** carefully at the top and press down until it clicks into place.
- 3 Loosen the beard hair by combing the beard in the direction the hair grows.

OPERATION

Function 3

Trimming hair or beards at certain cutting lengths ...

... using the extendable attachment **F**.



- 1 If necessary, remove the attachment by pressing in both side catches **B** and lifting off.
- 2 Insert attachment **A** (width 38 mm) or **G** (width 30 mm) carefully at the top and press down until it clicks into place.
- 3 Push the extendable attachment **F** carefully and firmly onto the rounded rear half of the cutting head from above and let it click into place.
- 4 Adjust the cutting length (2, 4, 6, 8 or 10 mm) by pressing on the lock next to the cutting length display and then move the comb to the setting you want.
- 5 After use, remove extendable attachment **F** by pressing the locking tab at the back.

OPERATION

Function 4

Close shaving ...

... using the shaving attachment **J**.



- 1 If necessary, remove the attachment by pressing in both side catches **B** and lifting off.
- 2 Insert shaving attachment **J** carefully at the top and press down until it clicks into place.

Note

- Do not apply a lot of pressure when shaving, as this could damage the single blade foil.

Note

- You can remove the single blade foil of the shaving attachment. To do this, press both side catches on the shaving attachment. Clean the blade head with the cleaning brush supplied.

OPERATION

Function 5

Thinning out hair ...

... using the thinning comb **L** (thinning at a length of 2 mm).



- 1 If necessary, remove the attachment by pressing in both side catches **B** and lifting off.
- 2 Insert attachment **A** (width 38 mm) or **G** (width 30 mm) carefully at the top and press down until it clicks into place.
- 3 Push the thinning comb **L** carefully and firmly onto the rounded rear half of the cutting head from above and let it click into place.
- 4 After use, remove thinning comb **L** by pressing the locking tab at the back.

CLEANING AND CARE

Cleaning and care

- 1 Switch off the appliance and unplug it from the mains.
- 2 Remove the attachment and clean the blade head with the brush supplied.

Caution

- If cleaning with the brush is not sufficient, you can also rinse the attachment under running water. However, only do this once the attachment has been removed.
- The cutting head on the attachment does not normally need to be oiled. If you clean the attachment under running water regularly but you also want to maintain the original condition of the cutting head for as long as possible, it is worth oiling it at regular intervals with the oil provided.

- 3 Use a soft, dry cloth or the brush supplied to clean the appliance housing and the charging unit.

Caution

- Never put the appliance, charging unit or power supply unit in water or any other liquid.
- 4 Before using the appliance again, dry all the attachments properly using a soft towel.
 - 5 Do not use any cleaning agents.

Note

- Remove any clippings after each use.

CLEANING AND CARE

Storage

If you do not want to use the appliance for a long period of time, please store it carefully.

- 1 Make sure it is unplugged, has completely cooled down and all the accessories are completely dry.
- 2 Store the parts in the original box in a cool, dry place.
- 3 Make sure the appliance is kept out of reach of children.

Environmental note

This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not throw the product away with normal household waste at the end of its service life. Take it to a collection point for recycling electrical and electronic devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

Technical data



This product fulfils the European directives 2004/108/EC and 2006/95/EC.

Power supply

Batteries: Nickel metal hydride
Power supply unit



Ni-MH



Technical and design modifications reserved.

Grundig Multimedia B.V.

Atrium, Strawinskylaan 3105 • NL-1077 ZX Amsterdam • <http://www.grundig.com>

72011 903 8000