



---

***Portable Stereo Speaker System  
with AM/FM Digital Tuner  
and Digital Alarm Clock***



**OWNER'S MANUAL  
iP105BK**



Made for all iPod® models including iPod® nano, iPod® shuffle and iPod® mini



Visit our web site at [www.emersonradio.com](http://www.emersonradio.com)





## CAUTION

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrow-head symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p style="text-align: center;"><b>CAUTION</b></p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p><b>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

The Caution Marking maybe located at the bottom enclosure of the apparatus.

## IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
- 2.) Do not use this apparatus near water.
- 3.) Clean only with dry cloth.
- 4.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 5.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 6.) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 7.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 8.) Only use attachments / accessories specified by the manufacturer.
- 9.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 10.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 11.) This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
- 12.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13.) Do not overload wall outlet. Use only power source as indicated.
- 14.) Use replacement parts as specified by the manufacturer.
- 15.) The product may be mounted to a wall only if recommended by the manufacturer.
- 16.) Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.





## **fi.....For Your iPod®**

Thank you for purchasing this portable speaker system for your iPod® by Emerson Research. This compact system is perfect for those times when you want to share the music with your friends, or when using ear buds or headphones is not convenient.

This system includes a digital tuning AM/FM stereo radio with 40 preset station memories, and a full featured digital alarm clock that can wake you to the radio, a buzzer, or even to your iPod®. It is compatible with all dockable Apple iPod® models, and will also charge the batteries of all dockable iPod® models when the system is operated on AC power. We've even included an Auxiliary Input jack so that you can connect an iPod® shuffle, older non-dockable iPod® models, other brands of MP3 players, or a personal CD player.

This model also features a large clear acrylic, hinged cover to protect your iPod® from raindrops or splashes. You can control the key functions of your iPod® without opening the protective cover.

Every component in this system was in perfect working order when the system left our factory. If you experience any problems with the set up or operation of this system please do not return it to the retail store.

Please call the Emerson Customer Service Hotline, toll free, at **1-800-898-9020**, Monday through Friday from 9:00 AM to 5:00 PM Central Time. One of our technicians will try to trouble shoot and solve your problem by phone.

The serial number of your system is located on a label on the bottom cabinet. Please take a moment now to locate this number and write the number in the space provided on the warranty page of this manual. This number provides information regarding the date of manufacture of your unit. You may be asked to provide this number when calling for customer service.

Once again, thank you for purchasing this portable iPod® speaker system from Emerson Research.

iPod® is a trademark of Apple Computer Inc., registered in the U.S. and other countries.



## IMPORTANT NOTES

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC power cord is properly installed.
- When moving the set, be sure to first disconnect the AC power cord.

---

### FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



## PREPARATION FOR USE

### Unpacking and Set-Up

- The display carton contains the main unit, the AC power cord, and 5 separate dock adapters for use with older iPod® models. Make sure that all the components are removed from the carton and that nothing is accidentally discarded. We recommend that you save the carton and packing materials in the event that your unit even needs to be returned for service. Using the original carton and packing materials is the only way to protect your unit from damage during shipment. If you do dispose of the carton or the carton and packing materials please do so properly and recycle. Emerson cares about our environment.
- Open the clear protective cover and remove the 'dummy iPod' from the iPod® compartment.



### Power Source

This system is designed to operate on 6 "C" batteries or 120V 60Hz AC house current.

 
In addition, 2 "AAA" back-up batteries are required to maintain the clock, alarm and tuner preset station memories in the event that the primary power supply is interrupted.






## Installing The Batteries

There are two battery compartments on the back cabinet. Remove the battery compartment covers by pressing down on the 'arrow' marks and sliding the covers downward in the direction of the arrows as shown.

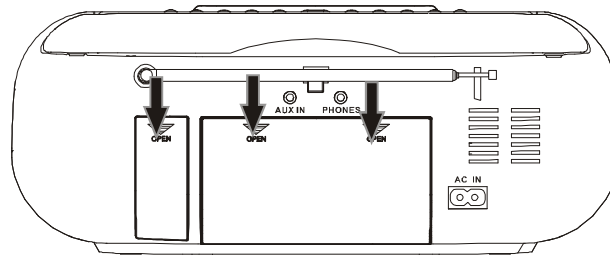

 Install 6 "C" batteries in the main compartment as shown. Place the battery ribbon into the compartment before inserting the batteries to make removing the batteries easier.

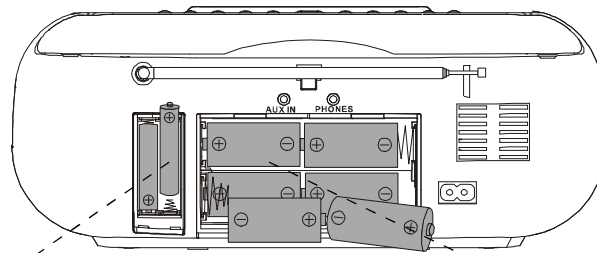


(2 "AAA" Batteries)

(6 "C" Batteries)

Install 2 "AAA" batteries in the back up battery compartment as shown in the above illustration.

**NOTE:** If the back-up batteries are not installed, the clock, alarm, and tuner memories will have to be reset after every power interruption.

We recommend that you always use a well-known brand of alkaline batteries for longest life and best performance. Be sure to install the batteries correctly, according to the polarity markings engraved on the cabinet. If the batteries are inserted incorrectly the unit will not work.

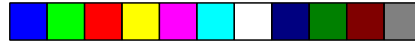

## Replacing The Batteries

When the sound of the system becomes weak or distorted during battery operation it is probably time to replace the 6 “C” batteries. The life expectancy of the batteries depends on a number of factors including the temperature and the volume level at which the system is operated. If the system is always played at or near the maximum level, the batteries will become exhausted faster than if the system is played at low to medium volume levels. Be sure to replace all 6 batteries at the same time and do not mix different types of batteries, such as carbon-zinc, alkaline, and lithium together.

If the system will not be used for periods of a few weeks or longer, it is a good idea to remove the 6 “C” batteries. If exhausted batteries are left in the battery compartment they may eventually leak, and the corrosion from leaking battery fluid may cause damage to your unit. Corrosion damage from leaking batteries is not covered by your warranty.

The 2 “AAA” back up batteries are only supplying power to the clock and tuner memories so they will last longer than the 6 “C” batteries. We recommend replacing the 2 “AAA” batteries every 12 months.

 
### Battery Precautions

- Replacement of batteries must be done by an adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- The supply terminals are not to be short-circuited.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed.
- Only batteries of the equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Dispose of batteries properly. Do not dispose of batteries in fire. The batteries may explode or leak.




## Power Source

This system is designed to operate on 120V AC 60Hz house current only. Connecting this system to any other power source may cause damage to the system and such damage is not covered by your warranty.

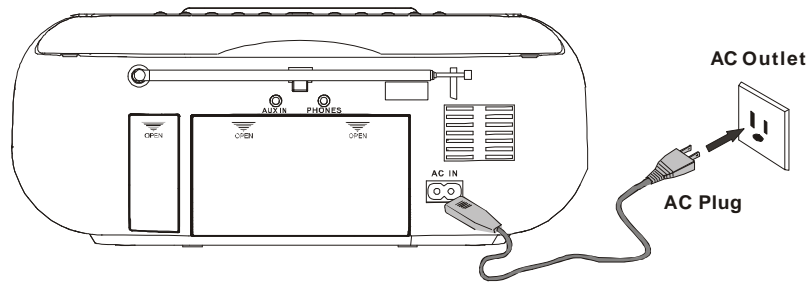

**NOTE:** The system has a polarized AC plug with one wide blade and one narrow blade. The plug will only fit into matching polarized AC outlets.

 This is a safety feature to reduce the possibility of electric shock. If the plug will not fit in your AC outlet, you probably have an outdated non-polarized outlet. You should have your outdated outlet changed by a qualified, licensed electrician. Do not file the wide blade on the plug, or use an adapter to make the plug fit into your outlet. This defeats the safety feature and could expose you to electric shock.

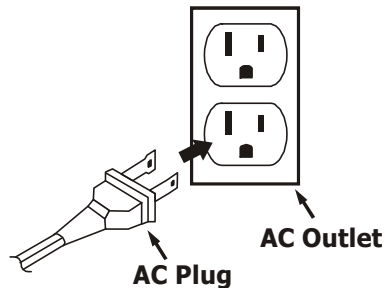

## Protect Your Furniture

 
This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.






# LOCATION OF CONTROLS AND INDICATORS


## Front Panel

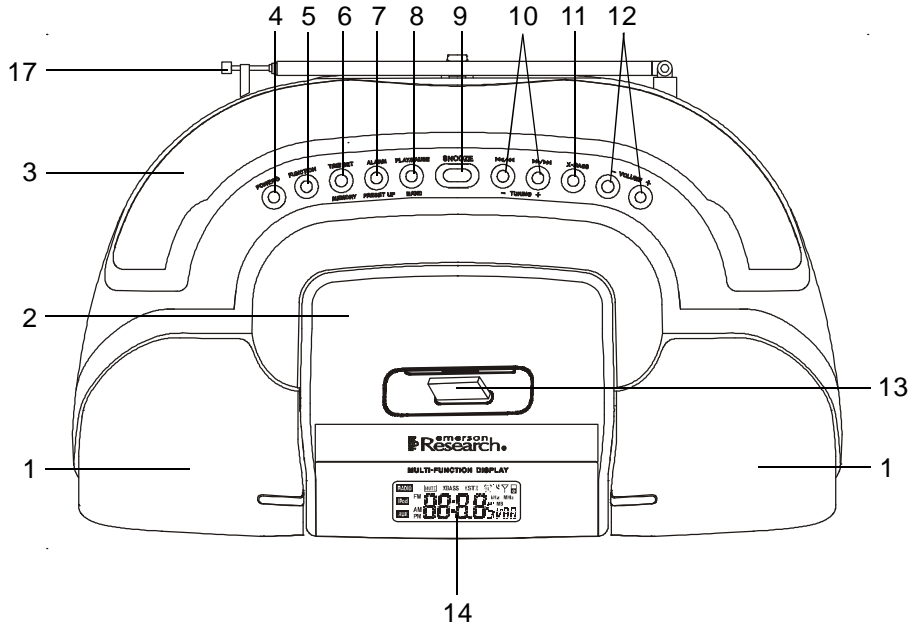

## Back Panel

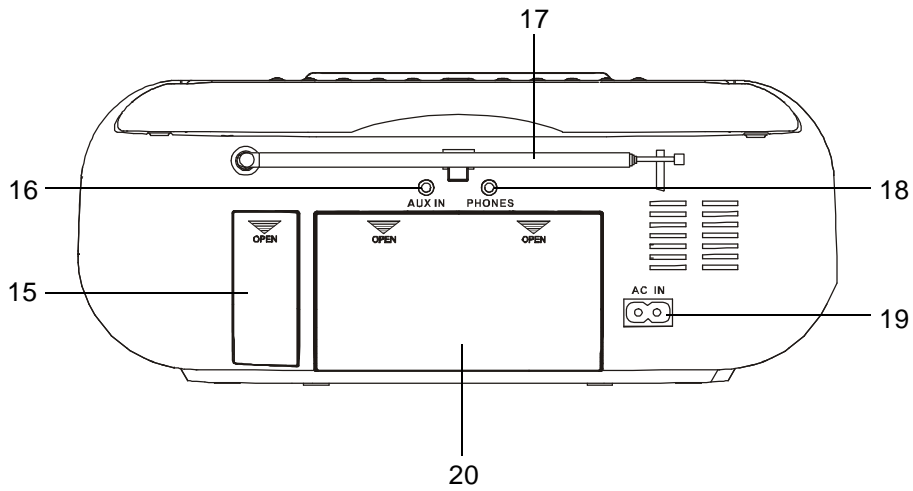 








- 1.) Speakers.
- 2.) Clear Protective Cover.
- 3.) Carrying Handle.
- 4.) **POWER**  Button - Press to turn the unit 'On' or 'Off'.
- 5.) **FUNCTION** Button - Press repeatedly to switch among **iPod**, **AUX**, and **RADIO** modes.
- 6.) **TIME SET/MEMORY** Button - To set time in power 'Off' mode. Saves radio stations in the memory in radio mode.
- 7.) **ALARM/PRESET UP** Button - To set alarm time and select the Alarm mode. In radio mode, selects the desired preset station.
- 8.) **PLAY/PAUSE-BAND** Button - Press to start iPod® playback. Press again to pause. Press and hold to shut iPod® 'Off'. In radio mode, to select between FM and AM bands.
- 9.) **SNOOZE** Button.
- 10.) **TUNING – (◀◀/◀)** / **TUNING + (▶/▶▶)** Buttons - In radio mode, tunes to the desired station. In iPod mode, skips tracks or performs high-speed search. In power 'Off' mode, used to adjust the time; or press and hold to display the seconds.
- 11.) **X-BASS** Button - To enhance the bass response.
- 12.) **VOLUME – / VOLUME +** Buttons - Used to adjust volume level.
- 13.) iPod® Dock - For all dockable iPod® models with 30-pin connector.
- 14.) **MULTI-FUNCTION DISPLAY**.
- 15.) Back Up Battery Compartment.
- 16.) **AUX IN** (Auxiliary Input) Jack - For connection of external audio sources.
- 17.) FM Telescopic Antenna.
- 18.) **PHONES** (Stereo Headphone) Jack.
- 19.) **AC IN** Power Cord Socket.
- 20.) Battery Compartment.

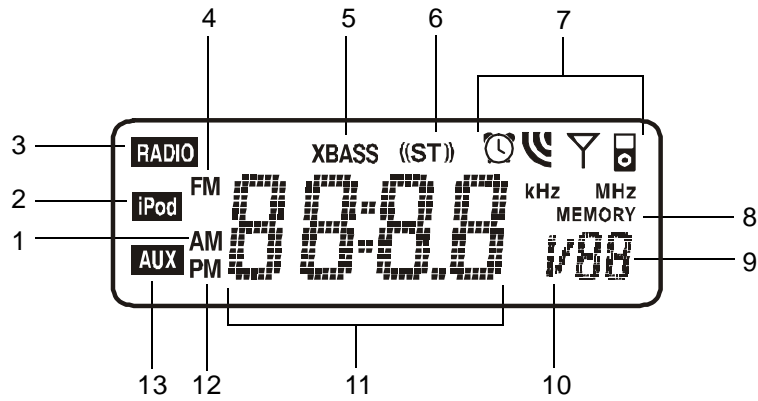 

## LCD Display



- 1.) Radio Band and Clock **AM** Indicator.
- 2.) **iPod** Select Indicator.
- 3.) **RADIO** Select Indicator.
- 4.) Radio Band **FM** Indicator.
- 5.) **XBASS** Indicator.
- 6.) **((ST))** FM Stereo Indicator.
- 7.)  ,  (Buzzer, Radio, iPod) Alarm Indicators.
- 8.) **MEMORY** Indicator.
- 9.) Volume Level (**00-30**), Radio Channel (**1-20**) Display.
- 10.)  Volume Indicator.
- 11.) Clock, Radio Frequencies Display.
- 12.) Clock **PM** Indicator.
- 13.) **AUX** Select Indicator.



## OPERATING INSTRUCTIONS


- Regardless of whether you will be using the system on AC or battery power, make sure that you have installed the 2 “AAA” back-up batteries.
- If the system will be used on AC power make sure that the AC power cord is properly connected to the socket on the back cabinet and to your AC outlet. Make sure that your AC outlet is ‘live’.
- If the system will be used on battery power make sure that you have correctly installed the 6 “C” batteries in the battery compartment, and that the AC cord is completely disconnected from the AC socket on the back cabinet.

### Setting The Clock

The first time that the batteries are installed in the unit, or the unit is connected to your AC outlet the front panel display will show “**AM 12:00**”.



The time will always appear on the display when the unit is in the power ‘Off’ mode, the **iPod** mode, or the **AUX** mode.

**NOTE:** The time can only be set when the unit is in the power ‘Off’ mode with the display back lighting ‘Off’. If the blue color display back lighting is ‘On’, press the **POWER**  button to turn the power ‘Off’ and then follow the steps below.

 


- 1.) Press the **TIME SET/MEMORY** button once. “12: Hr” appears on the display and the “12” flashes. This indicates that the display is set for the 12-Hour format with **AM/PM** indicators.

This is the factory default setting. You also have the option of displaying the time in 24-Hour format, also referred to as “Military Time”.


In the 24-Hour format midnight is displayed as “0:00”, “1:00 PM” is displayed as “13:00”, “6:00 PM: is displayed as “18:00”, etc.

There are no AM or PM indicators in the 24-Hour format. To switch between the 12-Hour and 24-Hour formats if necessary, press either the **◀◀/◀◀** or **▶▶/▶▶** buttons while the “12” indicator is flashing.

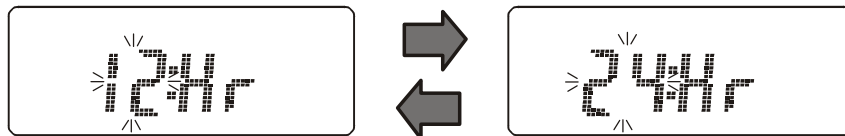

**NOTE:** You must begin making adjustments within 5 seconds after pressing the **TIME SET/MEMORY** button, while the display is flashing. If no adjustments are made within 5 seconds the display stops flashing and returns to the Time display.

 - 2.) While the “12” indicator is flashing, press the **TIME SET/MEMORY** button once more. The hours and minutes display returns and the hour digits flash.



- 3.) While the hour digits are flashing press either the **◀◀/◀◀** or **▶▶/▶▶** buttons to move the hour display back or forward to the correct hour. Be sure to observe the **AM/PM** indicator to make sure you have set the hour correctly.





4.) Press the **TIME SET/MEMORY** button again.

The hour digit stop flashing and the minute digits begin to flash.

Press either the **◀◀/◀◀** or **▶▶/▶▶** buttons to move the display back or forward to the correct minute.



5.) When the correct time is showing on the display press the **TIME SET/MEMORY** button once more.

The minute digits stop flashing and the clock begins to run.

Only the colon ( : ) continues to flash. The flashing colon acts as a seconds counter.







## Display Viewing Angle – IMPORTANT

 The display in this portable system is designed to be the clearest and most visible when you are looking down at the display from above. If you are looking at the display 'head-on', or looking up at the display from below, the numbers on the display may seem to fade or may become completely invisible.


This is a common characteristic of all liquid crystal displays and is not an indication of any problem with your unit. The display in this unit was designed to be clearest when viewed from above.

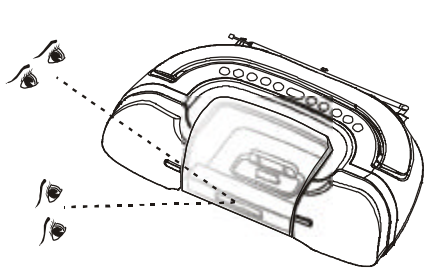


Correct View Angle

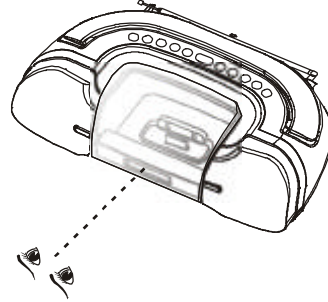 

Incorrect View Angle

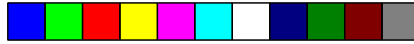

## Listening To The Radio

- 1.) Press the **POWER**  button to turn the power 'On'. The display back lighting comes on and the display appears as:



Press the **BAND** button to switch the radio between **FM** and **AM** bands if necessary.



When listening to the FM band, raise the telescoping FM rod antenna and extend it to its full length.

- 2.) Tune to the desired station as follows:

- **Automatic Tuning**

Depress and hold the **TUNING + / -** buttons until the display begins to move, then release the buttons. The display will move up or down and stop on the next strong station. Repeat this procedure until the display stops on the frequency of your desired station.

If it is an FM Stereo station the **((ST))** indicator will appear in the display.



 
- **Manual Tuning**

Repeatedly press the **TUNING + / -** buttons to manually move the display up or down to the exact frequency of your desired station.


**NOTE:** Use the Manual Tuning method to tune to weaker stations that might be bypassed by the Automatic Tuning method.

- 3.) Press the **VOLUME + / -** buttons to adjust the Volume to the desired level.

The Volume Level indicator appears in the display as you adjust the volume level. The adjustment range is from "V 01" to "V 30".






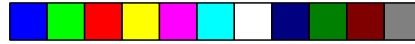


- 4.) To increase the bass response, especially at lower volume levels, press the **X-BASS** button. The **XBASS** indicator appears in the display.

 **NOTE:** if you experience any distortion when listening to music with strong bass at higher volume levels, switch the Bass Boost circuit 'Off'.



- 5.) When you are finished listening press the **POWER** button to shut the power 'Off'.

 The display back lighting turns off and the display changes from radio frequency back to the current time.




## Last Station Memory

The tuner remembers the last FM and AM station that you listened to before shutting the power off. It will automatically return to that station the next time you turn the power on and select the **RADIO** function.




## Antenna Information

 **FM** - Raise the telescoping FM rod antenna and adjust its direction until you find the position that provides the best reception.

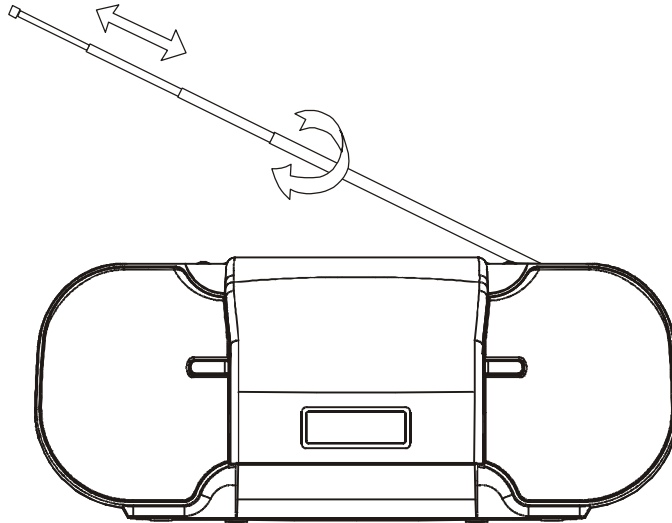

 **AM** - The AM bar antenna is inside the cabinet. If AM reception is unsatisfactory try turning the entire unit slowly until you find the position that provides the best reception.

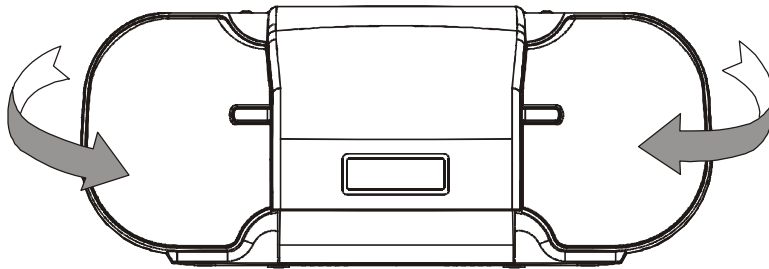





## Presetting Stations In The Tuner Memory

The tuner in this system has 40 preset station memories that allow you to store up to 20 of your favorite AM and 20 of your favorite FM stations.

 
- 1.) Tune to the first station that you wish to memorize by either the Automatic or Manual method above.  
Example: **FM 93.5 MHz**.



 
- 2.) Press the **TIME SET/MEMORY** button once.  
The preset number "1" appears and the **MEMORY** indicator 'flashes' indicating that you can store your station in memory number 1.



 - 3.) Press the **TIME SET/MEMORY** button once more. The **MEMORY** indicator stops flashing and your station is stored in memory number "1".



 - 4.) Tune to the next FM station you wish to store and press the **TIME SET/MEMORY** button. The preset number "2" appears and the **MEMORY** indicator 'flashes'.



- To store the station in preset memory number 2, press the **TIME SET/MEMORY** button again.
- To store the station in a different preset memory number press the **ALARM/PRESET UP** button to advance the display to the desired memory number before you press the **TIME SET/MEMORY** button.

- 5.) Repeat Step 4 until you have stored up to **20 FM** stations in the tuner memory, then press the **BAND** button to switch to the AM band and follow the same procedure to store up to **20 AM** stations in the tuner memory.

**NOTE:** After you press the **TIME SET/MEMORY** you must enter a station in the memory within 5 seconds while the **MEMORY** indicator is 'flashing'. If the **MEMORY** indicator stops flashing the station cannot be memorized. If this occurs press the **TIME SET/MEMORY** button again and be sure to enter your station in the memory within 5 seconds.



## Recalling Stations In The Tuner Memory

Turn the system 'On' and select the Radio function as usual.

Press the **ALARM/PRESET UP** button repeatedly to scroll through all of the station in the tuner memory.

## Changing A Station In The Tuner Memory

Tune to the new station that you wish to memorize, press the **TIME SET/MEMORY** button and then press the **ALARM/PRESET UP** button until the display is showing the memory that you wish to change.

Press the **TIME SET/MEMORY** button once more. The new station is stored in that memory and the previously stored station will be deleted.



## iPod® ADAPTER INFORMATION

This system includes 5 different adapters designed to allow you to securely connect any 'dockable' iPod® model to the docking station. Refer to the chart below to select the proper adapter for your particular iPod® model and insert that adapter into the docking station before connecting your iPod®.

**NOTE:** No adapter is provided for the 5G (Fifth Generation) 30GB and 60GB iPod® models with video capability. Please use the adapter that was included with this iPod® at time of purchase. It will fit properly into the docking station of this system.

iPod® Versions iPod® Capacities	4G		3G			mini		photo			nano (1G)		nano (2G)		5G		
	20 GB	40 GB	10 GB	15 GB	30 GB	40 GB	4 GB	6 GB	20 GB	30 GB	40 GB	60 GB	2 GB	4 GB	2, 4, 8 GB	30 GB	60 GB
iPod photo(40GB) iPod photo(60GB)																	
3G iPod(30/40GB) 4G iPod(40GB)																	
3G iPod(10/16GB) 4G iPod(20GB) iPod photo(20/30GB)																	*
iPod mini																	
iPod nano																	

\* No adapter provided. Please use the adapter that was included with your 5G iPod® model at time of purchase.



## Docking And Playing Your iPod®

The docking station in this system was designed in accordance with Apple's Universal Well design. Any model of dockable iPod® can be used with this system including the audio only models, iPod® photo models, the iPod® mini, the iPod® nano, and the iPod® models with video capability.

 
To properly support your iPod® in the docking station you must use the adapter specifically designed for your model. If you have an iPod® nano or an iPod® video model that included a docking adapter, you may use that adapter in this system.

We have also included 5 separate docking adapters for older iPod® models including 10GB, 15GB, 20GB, 30GB, 40GB, 60GB models, the iPod® mini, and the original first generation iPod® nano. Each of the adapters is engraved with the name or the size of the appropriate iPod®. Please note two of the adapters are used with more than one iPod® model.


### **IMPORTANT!**

***To avoid damaging your iPod® we recommend that you do not carry this system around when your iPod® is connected to the docking station. If this system is dropped or severely bumped, both the system itself and your iPod® may be damaged. You should place the system on a stable, level surface before connecting your iPod® to the docking station.***

- 1.) Open the splash resistant cover, select the correct adapter for your particular iPod® model from among the 5 supplied with this system, or the adapter supplied with your iPod®, and insert the adapter into the dock as shown.

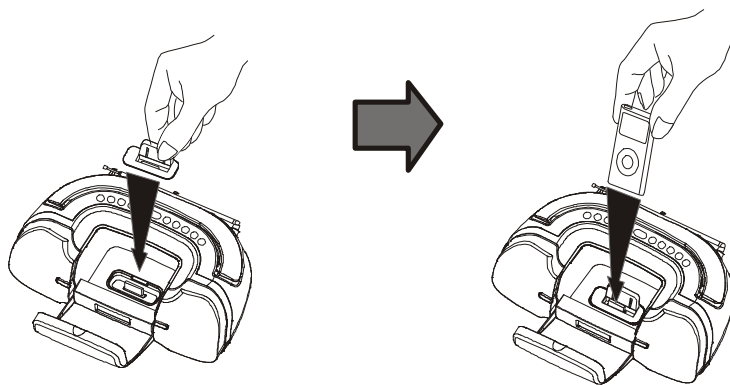


Make sure that the adapter is fully inserted into the dock. If the adapter is inserted incorrectly the system may not recognize the iPod®.

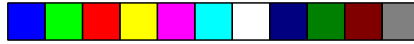


- 2.) Place your iPod® into the docking adapter. Make sure that your iPod® is fully inserted into the docking adapter and that the HOLD switch on your iPod® is set to the 'Off' position. Close the splash resistant cover.

If you are operating this system on AC power your iPod® display may come on and show the 'Charging' or 'Charged' battery icons.

If you are operating this system on the batteries, your iPod® screen will go blank. The batteries in this system will not charge the iPod's internal battery.

 - 3.) Press the **POWER**  button of this system to turn the power 'On' and then press the **FUNCTION** button to select the iPod® function if necessary.



Your iPod® may begin playing the last song that it was playing before it was turned off, or it may show the Main Menu screen.


If you press the **PLAY/PAUSE** button on this system with the Main Menu screen on your iPod®, your iPod® will begin playing all of the songs in alphabetical order.

- 4.) Press the **⏮/⏪** or **⏩/⏭** buttons on this system to skip back or forward through your iPod® Songs library.

- 5.) Adjust the **VOLUME + / -** and **X-BASS** controls on this system as desired.



- 6.) If you want to select a different Album or Artist from your iPod® menu you must use the iPod® click wheel as usual, then use the **PLAY/PAUSE** button and the **⏮/⏪** or **⏩/⏭** buttons on this system to control the playback of the songs in that particular Album or from that particular Artist.

- 7.) When you are finished listening press the **POWER**  button on this system to shut the power 'Off'.


If you were using AC power your iPod® will enter the Charging mode.

If you were operating this system on battery power your iPod® will switch 'Off'.




## Listening To An iPod® Shuffle Or Other External Sources

 - 1.) Connect the headphone jack from your iPod® Shuffle, MP3 player, personal CD player to the **AUX IN** (Auxiliary Input) jack on the back panel of this unit.

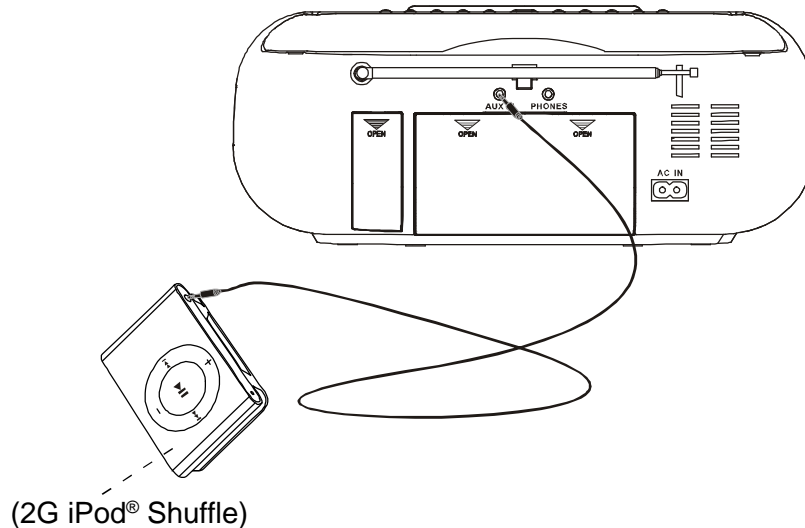

**NOTE:** The connection cable is not included.

- 2.) Press the **POWER**  button of this system to turn the power 'On' and press the **FUNCTION** button until the **AUX** indicator appears in the display.



- 3.) Start playback on your external device as usual and adjust the volume controls on your external device and on this system for the desired output. Remember that if you set the Volume of this system to a low level and set the volume control of your external device to a high level the sound may be distorted.

We recommend that you start by setting the volume level of this system to "**V20**" and then adjust the volume level of your external device.













## Setting The Alarm Time And Alarm Mode (Buzzer/Radio/iPod)

**NOTE:** We suggest that you set the Alarm time with the power 'On' and the Function set to the **AUX** mode. This will keep the display backlighting 'On' and make the settings easier.





- 1.) Depress and hold the **ALARM/PRESET UP** button for **3 seconds**. This display changes to wake up time and the Hour digits and the Buzzer indicator   begin to flash.



- 2.) While the hour digits are flashing press either the   or   buttons to move the hour display back or forward to the correct wake up hour. Be sure to observe the **AM/PM** indicator to make sure you have set the wake up hour correctly.





- 3.) Press the **ALARM/PRESET UP** button again. The hour digits stop flashing and the minute digits begin to flash.

Press either the   or   buttons to move the display back or forward to the correct wake up minute.






- 4.) When the correct wake up time is showing on the display press the **ALARM/PRESET UP** button once more.

The minute digits stop flashing and the display returns to the current time, but the Buzzer indicator   remains in the display to show that the Alarm is 'On' and set for the Buzzer mode.





5.) To change the alarm mode or to cancel the alarm, continue to press the **ALARM/PRESET UP** button. The alarm indicator changes from Buzzer  to Radio  to iPod  mode.




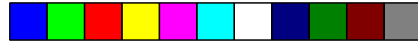
Press the **ALARM/PRESET UP** button once more and the alarm indicator disappears to confirm that the Alarm is 'off'.



6.) At the selected wake up time the system will turn on to the Buzzer, the Radio, or the iPod depending on the mode you selected.



**NOTE:** If you selected the iPod mode but there is no iPod® in the docking station the alarm will automatically default to the Buzzer mode. The alarm will continue for one hour and then shut off automatically and reset itself for the following day. To stop the alarm sooner, press the **POWER**  button. To cancel the alarm completely, press the **ALARM/PRESET UP** button until no alarm indicator appears in the display.



## Snooze Control

When the alarm turns 'on' in the morning you may press the **SNOOZE** button for a few minutes extra sleep. The unit turns 'Off' and the Alarm indicators flash faster.



The alarm will stop for 9 minutes and then turn on again. The snooze operation may be repeated several times, but after one hour the alarm will not turn on again.

## Stereo Headphone Jack

For private listening without disturbing others you may connect a set of stereo headphones, not included, to the **PHONES** jack on the back cabinet. The built-in speakers are automatically shut off when headphones are in use.

**CAUTION!** When using headphones always set the Volume control to a low level first. Then put the headphones on and gradually increase the volume to a comfortable listening level.



## CARE AND MAINTENANCE

**There are no user serviceable parts inside this radio.**

**Please refer all service problems to a qualified service facility.**

### Care Of Cabinet

If the cabinet becomes dusty, wipe the exterior with a soft dust cloth only.

Never use dusting sprays or polishes on the cabinet.

If the cabinet becomes dirty or smudged with fingerprints it may be wiped with a soft cloth that has been slightly dampened with a mild soap and water solution.

Always disconnect the AC power cord from the AC outlet before cleaning, and never allow any liquid to get inside the cabinet.

 **emerson  
Research**  
SERVICE

TO FIND THE LOCATION AND PHONE  
NUMBER OF YOUR NEAREST SERVICE  
CENTER PERMITTED TO PERFORM  
WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE  
PLEASE CALL:  
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:  
Emerson Radio Corp.,  
Consumer Affairs Dept.,  
5101 Statesman Drive,  
Irving, TX 75063.



**LIMITED WARRANTY**

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.,  
5101 Statesman Drive,  
Irving, TX 75063.

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

**AU898M**

The Serial Number can be found on the bottom cabinet. We suggest that you record the Serial Number of your unit in the space below for future reference.

**Model Number: iP105BK**

**Serial Number:** \_\_\_\_\_



 **emerson**  
**Research**®



iP105-052207-01

Printed in China



iP105\_052207.p65

29



22/5/2007, 11:37

